



VOLVO XC90

# QUICK GUIDE

WEB EDITION



## WELCOME TO YOUR NEW VOLVO!

Getting to know your new car is an exciting experience.

Look through this Quick Guide so that you learn some of the most common functions quickly and easily.

All warning texts, and other important and detailed information, are only available in the owner's manual – this folder only contains a small selection.

In addition, the owner's manual contains the latest and most current information

Options are marked with an asterisk (\*).

There is further information concerning your car at [www.volvocars.com](http://www.volvocars.com)

## REMOTE CONTROL KEY



**LOCK** Locks doors and tailgate and arms the alarm\*.

**UN-LOCK** Unlocks the doors<sup>A</sup> and tailgate, and disarms the alarm.



Unlocks the tailgate – it does not open.



Approach lighting. Switches on the lamps in the side mirrors\*, the direction indicators and parking lamps, at the number plate, passenger compartment and floor.



"Panic" button. Press and hold for approx. 3 seconds in an emergency to trigger the alarm.

<sup>A</sup> Automatic relocking takes place if a door/tailgate is not opened within 2 minutes after unlocking.

## COLD START



### **i** NOTE

After a cold start the idling speed is high irrespective of outside temperature. A period of raised idling speed is part of Volvo's efficient emissions system.

## AUTOSTART



– Depress the clutch and/or brake and turn the remote control key to the end position **III** and release it directly – the engine starts automatically.

Diesel engines must always be preheated in key position **II** before they are started.

## WINDSCREEN WIPERS AND RAIN SENSOR\*



- 1** Rain Sensor On/Off, with the lever in position **0**.
- 2** Regulates the sensor sensitivity or the intermittent delay.
- 3** Wiper, rear window – intermittent/normal.

**A** Single sweep

**0** Off


**B** Intermittent wiper, see also (2).

**C** Normal sweep speed.

**D** High sweep speed.

**E** Washer, windscreen and headlamps.

**F** Washer, rear window.

 Illuminates when the rain sensor is active.

## LIGHT SWITCHES



- O** Automatic dipped beam. Main beam flash works but not the fixed main beam.
- ☰☑** Parking lamps
- ☷** Dipped beam. Switches off when the engine is switched off. Main beam can be activated.
- ☷** Manual headlamp levelling (automatic for Dual Xenon lights\*).
- ☹** Display and instrument lighting.
- ☷** Front fog lamps
- ☷** Fog lamp rear (only driver's side).
- A** Main beam flash
- B** Main/dipped beam switching and Home safe lighting.

## PARKING BRAKE



### Applying

1. Depress the foot brake firmly – then the parking brake pedal (1).
2. Release the foot brake. If the car rolls – depress the parking brake pedal further.
3. When parking – select gear position 1 (manual) or P (automatic).


### Releasing

1. Depress the foot brake firmly and then pull the handle (2) – the parking brake pedal rises.
2. The foot brake can be released.

## CAR CARE



Washing by hand is gentler to the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

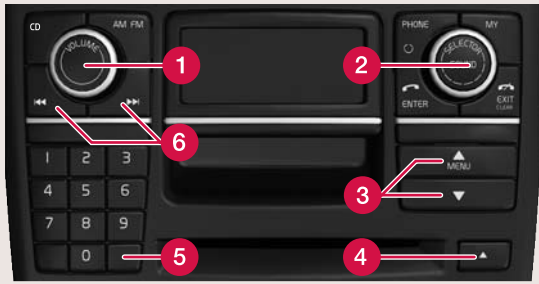

- 1 Press for On/Off. Turn to adjust the volume.
- 2 Sound pattern: Press to select e.g. **BASS**, **Dolby Pro Logic II\*** or **SUBWOOFER** – turn to adjust.  
Audio source: Turn to select **FM1**, **FM2**, **AM**, **CD** or **AUX**<sup>A</sup>.

CD PLAYER

- 3 Change CD or select with 1–6<sup>B</sup>.
- 4 One short press ejects the current disc. One long press ejects all discs<sup>B</sup>.
- 6 Changes CD track.

RADIO

- 5 Press for about 2 seconds to autostore the 10 strongest stations. The display shows **AUTOSTORING** during the search. Select stored station with 0–9.
- 6 Short presses search for the next strong station. Store up to 20 stations by holding in 0–9 on **FM1** or **FM2** at the desired station until the display confirms the selection.

<sup>A</sup> AUX input for e.g. MP3 player (set volume at medium for optimum audio reproduction).

<sup>B</sup> Only CD changer\*.

REFUELLING




Hang up the fuel cap during refuelling.

REGENERATION (DIESEL)



In certain conditions the instrument panel display may show **SOOT FILTER FULL**. At which point the exhaust system's particle filter requires cleaning. This takes place automatically by driving for approx. 20 minutes at an even main road speed. When the message clears the so-called regeneration is complete.

## ELECTRONIC CLIMATE CONTROL – ECC\*

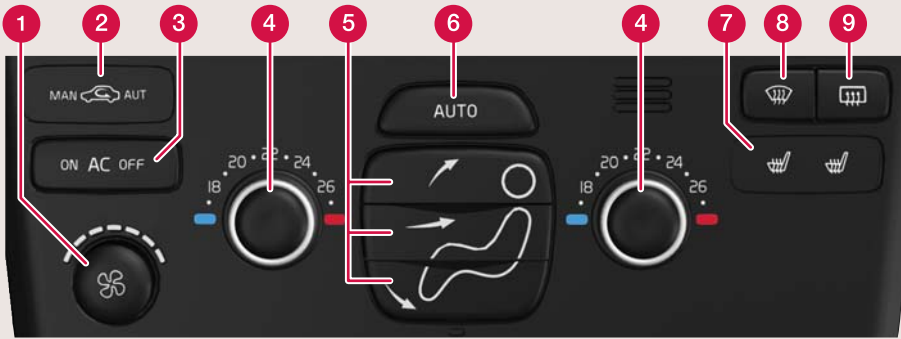

### AUTOMATIC CONTROL

In **AUTO** mode the ECC system controls all functions automatically making driving simpler with optimum air quality.

- 4 Turn for individual temperature, left or right-hand side.
- 6 Press for automatic control of selected temperature and other functions.

### MANUAL CONTROL

- 1 Turn to change the fan speed.
- 2 **MAN** – Recirculation On/Off.  
**AUT** – Air quality system\* On/Off.
- 3 **AC** – Air conditioning On/Off. Cools the passenger compartment and demists the windows.
- 5 Air distribution
- 7 Heated front seats.
- 8 Defroster. Quickly removes mist on the windscreen and side windows.
- 9 Rear window and door mirror defrosters.

## DEACTIVATING THE AIRBAG – PACOS\*



### PACOS (Passenger Airbag Cut Off Switch)

Use the key blade to switch **ON/OFF**.

**OFF** – The airbag is deactivated. **PASSENGER AIRBAG OFF** is shown in the warning lamp above the interior rearview mirror.


A child can sit on a booster cushion or child seat in the front seat but never passengers taller than 140 cm.

**ON** – The airbag is activated.

Passengers taller than 140 cm can sit in the front seat but never a child on a booster cushion or in a child seat.

### **WARNING**

Incorrect use could endanger life. Consult the Owner's Manual if you have the slightest doubt about its use.

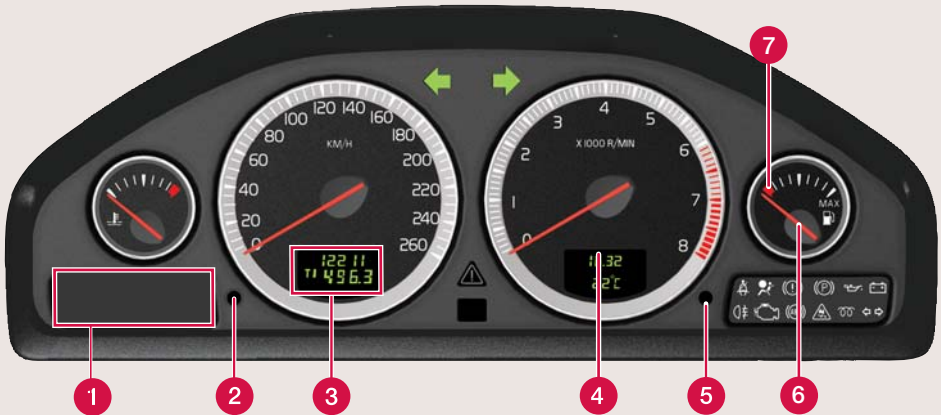

- 1 Display, trip computer. Select function with (9).
- 2 One short press switches between T1 & T2. One long press resets the current meter.
- 3 Display row 1: Odometer.  
Display row 2: T1 & T2 – independent trip meters, which are always active.
- 4 Display row 1: Clock.  
Display row 2: Outside temperature.
- 5 Turn to end position and hold to set the clock.

- 6 Fuel gauge
- 7 Low fuel level. When the lamp is illuminated, fill with fuel as soon as possible.



- 8 Press to show/clear message.
- 9 Turn to see the trip computer's options.
- 10 One short press resets the trip computer's current function.  
One long press resets all trip computer functions.

**NOTE**

Display text **KILOMETRES TO EMPTY TANK** is an estimate of possible distance based on earlier driving conditions.

INDICATOR AND WARNING LAMPS



	Read in information display.		Fault in brake system. Stop safely, check the brake fluid <sup>A</sup> .
	Stop safely. Rectify the fault as per the information display.		DSTC* stability system – flashes when the system is operating.
	Low oil level. Stop safely, check the oil level <sup>A</sup> .		Engine preheater (diesel). The engine can be started once the symbol has gone out.


<sup>A</sup> Have the car recovered if the symbol remains visible.

## DIRECTION INDICATORS



- A** Short sequence – 3 flashes.
- B** Continuous flashing sequence.

## ADJUSTING THE STEERING WHEEL

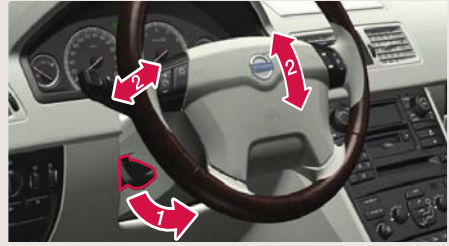

### WARNING

Adjust the steering wheel before setting off – never while driving.

## BLIS – BLIND SPOT INFORMATION SYSTEM\*



If the BLIS' indicator lamp illuminates despite there being no vehicle within the blind spot, the cause could be for example, reflection from shiny wet road surface, own shadow on light road surface or low sun in the camera.

In the event of a direct fault in the system the display shows the text **BLIND-SPOT SYST SERVICE REQUIRED**.

## EBA – EMERGENCY BRAKE ASSIST



Emergency Brake Assistance helps to increase brake force and so reduce braking distance. EBA is activated when the driver brakes suddenly. When EBA is activated the brake pedal depresses a little further.


– Press (hold) down the brake pedal for as long as necessary – all braking ceases if the pedal is released.

## LOWERING REAR SEAT BACKRESTS



### Third row of seats\* (cars seating-7)

1. Slide the second row of seats to its front position.
2. Lift the handle upwards (A).
3. Slide the seat cushion to its rearmost position (B) and fold in the lashing eyelets.
4. Fold down the backrest (C).

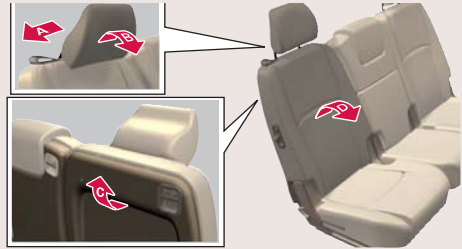

### Second row of seats

1. Set the seats in the rearmost position (cars seating 7).
2. Pull out the eyelet (A).
3. Fold down the head restraint (B).
4. Release the catch (C).
5. Fold the backrest (D) forward and press down to lock the backrest in lowered position.



### NOTE

The front passenger seat can also be lowered. See ADJUSTING THE FRONT SEAT (6).

## ADJUSTING THE FRONT SEAT



- 1 Lumbar support
- 2 Backrest rake.
- 3 Raise/lower seat.
- 4 Raise/lower the front of the seat cushion.
- 5 Forwards/backwards.
- 6 Lowering the passenger seat backrest.

## BAG HOLDER



## STORAGE SPACES, 12 V SOCKET & AUX/USB\*



The 12 V sockets in the passenger compartment work in key position I or II. The 12 V socket\* in the cargo area is always active.

The car's audio system can playback music from an MP3 player etc. using the AUX/USB\* output.

### ! IMPORTANT

Using the 12 V socket in the cargo area when the engine is switched off could discharge the battery.

