



WEB EDITION

QUICK GUIDE – RSE

REAR SEAT ENTERTAINMENT SYSTEM

– DUAL SCREEN

Your car is equipped with an exclusive multimedia system. The Rear Seat Entertainment system expands the normal audio system in the car with: DVD player, two screens, DUAL Screen, wireless headphones and RSE-AUX input for connection of e.g. iPod/MP3, video or games console.

This system shows the same image on both screens or images from two different video sources simultaneously using the RSE/AUX input.

More information about the system is available in the owner's manual for the car, chapter "RSE - Rear Seat Entertainment system".

Volvo reserves the right to make changes without prior notice.

Options are marked with an asterisk (*).

REMOTE CONTROL

	On/Off
DVD AUX 	Select between DVD or AUX
	Navigate up/down
	Navigate to left/right
OK	Confirm selection with OK
	Stop
	To previous (continued press gives direct exit)
	Day/Night mode, brightness of the screen
	Scrolls backwards (continued press gives rewind)
	Scrolls forwards (continued press gives fast forward)
	Play/Pause
	Selection of RSE audio channel (A or B) in the car's loudspeakers when the radio is in AUX mode
MEDIA MENU	Menu overview ^A
SYSTEM MENU	System settings
	Subtitles

^A **MEDIA MENU** - the button handles the settings in the selected media, e.g. the DVD disc's own menu.



PLAYBACK

Aim the remote control at the desired screen during use. The remote control can only be used from the rear seat.

AUDIO SYSTEM



You can listen with headphones or activate the car's loudspeakers.

Activate the wireless headphones with **POWER**, select **CH A** (channel A) or **CH B** (channel B) and adjust the volume. An indicator lamp illuminates.

Activate the car's audio system in **MODE AUX** mode.

- Aim the remote control at the desired screen and press .

The headphones will be switched off automatically after 3 minutes if not in use.

HEADPHONE JACK IN THE REAR SEAT*.

Adjust the volume using the volume control next to the headphone jack.

SYSTEM OVERVIEW



- 1 Headphones
- 2 Remote control
- 3 DVD/CD player
- 4 Screens

- 5 IR (infrared) transmitter/receiver
- 6 RSE/AUX – see the owner's manual for the car

For 12 V sockets – see the owner's manual for the car.

PLAYING BACK A DVD/CD DISC



The DVD player can play back one disc at a time.



On/Off



Stop/Eject, disc eject.



Scrolls backwards. (Continued press gives rewind.)



Scrolls forwards. (Continued press gives fast forward.)



DVD disc menu. Same function as MEDIA MENU. on the remote control

If smaller children are travelling alone in the rear seat, activate the system before departure.

1. Activate the RSE system with a press on



2. Aim the remote control at the desired screen and press **DVD I AUX** and select **DVD**.
3. Insert the disc with the label side facing away from the buttons. The disc starts to play back automatically.

PAUSING A DVD FILM, IN THE EVENT OF A LONGER STOP

1. Press on  and switch off the car. The car can now be locked and left for a longer period of time.
2. Start car and press  to continue watching the film where it was before the **break**.

WATCH A DVD AND LISTEN TO MUSIC AT THE SAME TIME

Insert a DVD disc and start the film.

- Start the music by aiming the remote control at any screen, press **DVD I AUX** and select **AUX**.

For information on music discs and privately-copied discs, see the owner's manual.

ADVANCED SYSTEM SETTINGS

The player must be empty to make advanced settings.

1. Press **MEDIA MENU**.
2. Make selections by scrolling with the navigation buttons.
3. Confirm with .
4. Exit the menu by pressing **MEDIA MENU**.

Further information about these settings is available in the owner's manual for the car.


E.g. aspect ratio NTSC, PAL or to register DivX(R).
(The menu is in English.)

PLAYING BACK AUDIO/VIDEO VIA RSE-AUX INPUT



SCREEN A

SCREEN B

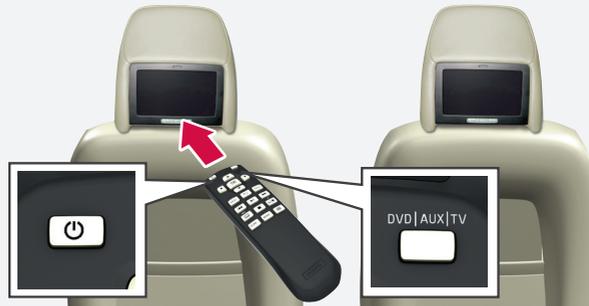

CONNECTING EQUIPMENT VIA RSE/AUX

External equipment, iPod, MP3 player, video camera, DVD, games console or VCR can be connected via the AUX input.

- Yellow connector - video cable
- White connector - left channel for audio
- Red connector - right channel for audio

Connect the power cable to the electrical socket if your equipment is designed for 12 V.

Always follow the instructions for the external equipment when connecting.


PLAYING BACK AUDIO/VIDEO VIA RSE-AUX INPUT

1. Activate the RSE system with a press on



2. Aim the remote control at the desired screen and press **DVD | AUX | TV** and select **AUX**.
3. Confirm with **OK**.
4. Switch on the device (e.g. iPod) and press **PLAY** or equivalent.

ADJUSTING THE PICTURE AND SOUND

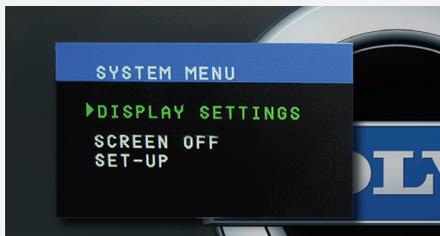

Selected/active menu is shown in the blue field with white text.

Menus that are not active have grey text.

Your selection is highlighted with green text and an arrow.

- Confirm with **OK**.

PICTURE SETTING:

COLOUR
CONTRAST
BRIGHTNESS
ASPECT RATIO

SWITCH OFF SCREEN:

The screen is switched off, but the system is still active.

SETTINGS:

MENU LANGUAGE

The language in which the menus are shown.

RESTORE DEFAULT SETTINGS.

Reset factory settings here.

GENERAL INFO

The RSE system is intended for passengers in the rear seat. The remote control cannot be used from the front seats.

POWER CONSUMPTION, IGNITION POSITIONS

The RSE system can be activated in ignition position **I** or **II**, as well as when the engine is running. When the car is started the film stops temporarily, and then continues when the engine starts.

Note that there is a 10-minute timer for use without ignition position **I**.

PICTURE QUALITY AND ANGLE

Small children sitting low down may have difficulty seeing the screen clearly.

- Seat a child on a booster seat if possible
- Set day/night mode according to the prevailing light conditions with .



IMPORTANT

Store the equipment safely while car is in motion.

TROUBLESHOOTING

SYSTEM BLOCKED

The RSE system will be blocked after it has been used once without the ignition being in position **I**. Ignition position **I** must be activated in order to start the RSE system.

THE RSE SYSTEM'S AUDIO IS NOT HEARD IN THE LOUDSPEAKERS

If equipment belonging to the car's audio system is connected to the AUX input then it must first be disconnected to enable the RSE system's audio to be played back through the loudspeakers.

TROUBLESHOOTING WIRELESS HEADPHONES

The system needs a clear line of sight to transmit the audio signal to the wireless headphones. For this reason, do not cover the screens with clothing or other objects since this results in poorer audio reception.

THE SYSTEM DOES NOT START

Check the car's fuses and the remote control's batteries.

1. Try to start the system by pressing  on the DVD player. If the system starts, replace the batteries in the remote control.
2. If the system still does not start, check the fuses.

FUSES

If an electrical component stops working, it may be because the fuse has tripped due to a temporary overload (see the owner's manual for the car in order to locate the fuse).

Always replace a blown fuse with one that has the same colour and amperage designation.



WARNING

Never fit a fuse with a higher value than that indicated in the table.