



# VOLVO QUICK GUIDE - RSE

WEB EDITION



## REAR SEAT ENTERTAINMENT SYSTEM

Your car is equipped with an exclusive multimedia system.

The Rear Seat Entertainment system augments the car's normal audio system with:

- Two TV screens
- A/V-AUX input that enables the connection of e.g. video or games console
- Wireless headphones
- Remote control

This system makes it possible to watch video, play back music, listen to radio, watch TV\* or connect other external devices (e.g. a games console).









 



The system can be controlled from the front TV screen (parental control).

Further information on the system is available in the normal owner's manual for the car in the chapter, "RSE - Rear Seat Entertainment system".

Volvo retains the right to make modifications without prior notice.

Options are marked with an asterisk (\*)

## REMOTE CONTROL

	Switch between: L = TV screen rear left F = TV screen front R = TV screen rear right
<b>NAV</b>	Switch to navigation* <sup>A</sup>
<b>RADIO</b>	Switch to radio
<b>MEDIA</b>	Switch to media
<b>TEL</b>	Switch to Bluetooth <sup>®</sup> handsfree* <sup>A</sup>
	Scroll/fast rewind, change track/song
	Play/Pause
	Stop
	Scroll/fast forward, change track/song
<b>DVD MENU</b>	Menu
<b>EXIT</b>	To previous, cancels function, deletes input characters
	Navigate up/down
	Navigate right/left
<b>OK MENU</b>	Confirm selection
	Volume, decrease
	Volume, increase
<b>0 - 9</b>	Channels, number and letter input
<b>FAV *</b>	Shortcut for favourite setting
<b>INFO #</b>	Information on current programme
	Selection of language for audio track
	Subtitles, selection of language for text
	Teletext*, On/Off


<sup>A</sup> The function is not available in the rear TV screens.



**1** Scroll wheel, corresponds to **TUNE** in the centre console.

### OPERATION


The remote control can be used for all functions in the infotainment system, including the front TV screen. To use:

1. First press the button  to select TV screen.
2. Then aim the remote control at the TV screen.

### **WARNING**

Store loose objects such as mobile phones, cameras, remote controls for accessories, etc. in the glovebox or other compartments. Otherwise they may injure people in the car in the event of sudden braking or a collision.

## AUDIO SYSTEM

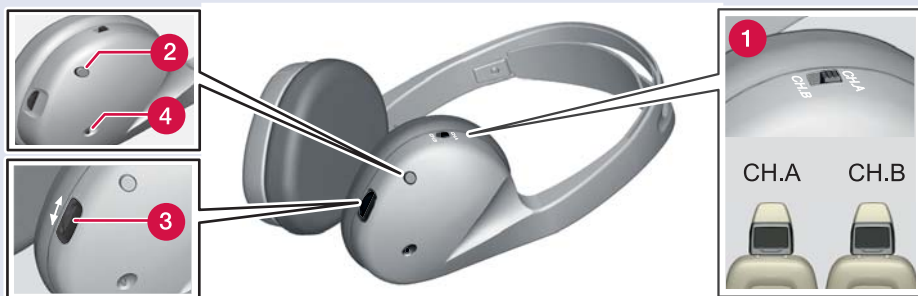


You can listen to the system's wireless headphones or you can plug your own headphones into the headphone jack.

The wireless headphones are activated with the **On/Off** button (2), an indicator lamp illuminates (4). Select **CH.A** (channel A) or **CH.B** (channel B) using the control (1). Adjust the volume using the volume control (3). The headphones are automatically switched off after about 3 minutes if they are not used.

### HEADPHONE JACK IN HEAD RESTRAINT

The volume is adjusted with the remote control.

## SYSTEM OVERVIEW

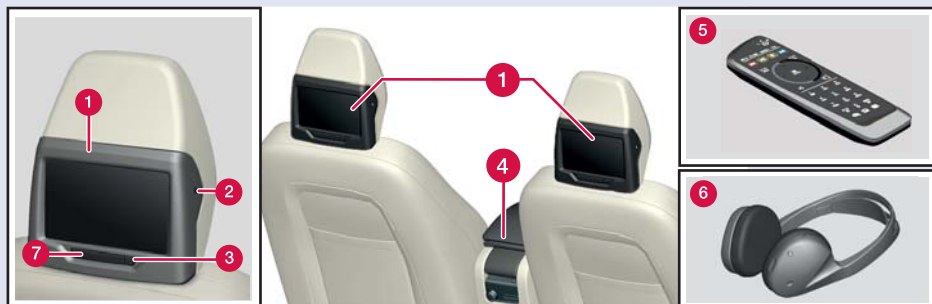

- 1 TV screen
- 2 Headphone jack
- 3 On/Off button
- 4 USB port, AUX and A/V-AUX inputs

- 5 Remote control
- 6 Headphones
- 7 IR receiver/transmitter


For media player and 12 V socket, see the owner's manual for the car.

## ACTIVATING TV SCREEN AND HEADPHONES

Switch on the rear TV screen by pressing the On/Off button on the TV screen.

1. Switch on the wireless headphones, select **CH.A** for left-hand TV screen or **CH.B** for right-hand TV screen, or plug the headphones included into the headphone jack on the side of the head restraints.
2. Select the required TV screen to be controlled by button  $\text{L} \text{R}$  on the remote control.

## PLAYING BACK AUDIO/VIDEO VIA THE A/V-AUX INPUT

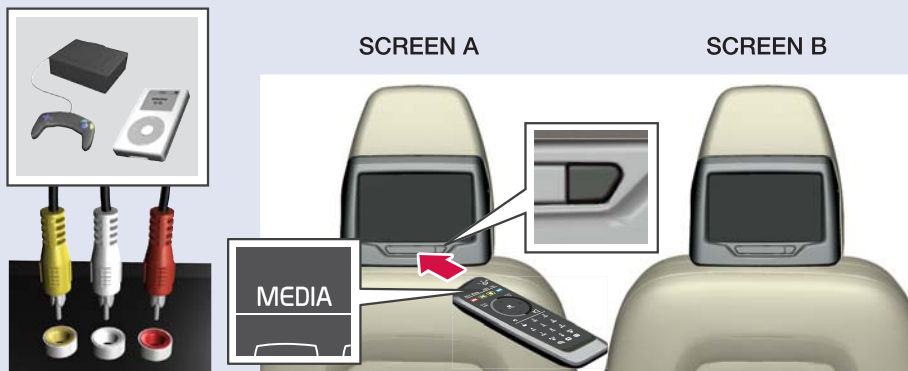

### CONNECTING DEVICES VIA A/V-AUX

External devices, such as a game console, can be connected via the A/V-AUX input.

- Yellow connector – video cable
- White connector – left-hand audio channel
- Red connector – right-hand audio channel

Connect the equipment to the electrical socket if it is designed for 12 V.

Always follow the external equipment's instructions when connecting.

### PLAYING BACK AUDIO/VIDEO VIA THE A/V-AUX INPUT

1. Aim the remote control at the IR receiver on the TV screen and press repeatedly on **MEDIA** to the source **A/V-AUX**, release and wait a few seconds and the selection is accepted.
2. Switch on the connected device and press **PLAY** or equivalent on the connected device.

## LISTENING TO MUSIC AND RADIO/WATCHING VIDEO


### PLAYING BACK MUSIC



 
It is possible to play back music from disc tracks/audio files via the car's media player, USB port/AUX input or via streaming audio files from a Bluetooth\* connected phone.

1. Aim the remote control at the IR receiver on the TV screen and press repeatedly on **MEDIA** to the desired source (**Disc**, **USB**, **AUX** etc.), release and wait a few seconds and the selection is accepted.
2. Insert a CD disc in the car's media player or connect an external audio source via the car's USB port/AUX input or via Bluetooth\*.

### Playback and navigation in playlists

1. Rotate the scroll wheel or use the up/down arrow on the scroll wheel on the remote control to access the playlist/folder structure.



Use  to confirm either selection of sub-folder or start of playback of the selected disc track/audio file.

It is also possible to play back the disc track/audio file using  on the remote control and change the disc tracks/audio file using  / .

Stop playback using .

### LISTENING TO RADIO

It is possible to listen to radio via the car's radio.

1. Aim the remote control at the IR receiver on the TV screen and press repeatedly on **RADIO** to the desired source (**AM**, **FM1**, **DAB1\*** etc.), release and wait a few seconds and the selection is accepted.
2. Select a station with one of the preset buttons **0 – 9** on the remote control or press  / , the radio will search for the next/previous available station.





### WATCHING VIDEO

It is possible to watch video from disc tracks/video files via the car's media player and USB port.

 

Aim the remote control at the IR receiver on the TV screen and press repeatedly on **MEDIA** to the desired source (**Disc** or **USB**), release and wait a few seconds and the selection is accepted.

1. Insert a DVD disc in the car's media player or connect an external source via the car's USB port.





### Playback and navigation

Play back a disc track/video file using  on the remote control and change disc track/video file using  / . Stop the playback using .

### Fast forward/rewind

Start fast forward/rewind by means of a long press on the buttons  / . Then increase fast forward/rewind speed by short presses the buttons.

Audio files are fast forwarded/rewound at one speed, while video files can be fast forwarded/rewound at four different speeds.

Fast forward/rewind is stopped by pressing ,  or the equivalent opposite  /  button.

## WATCHING TV\*

It is possible to watch TV via the car's media player.

1. Aim the remote control at the IR receiver on the TV screen and press repeatedly on **MEDIA** to **TV**, release and wait a few seconds and the selection is accepted.
2. Select a channel with one of the preset buttons **0 – 9** on the remote control or press **◀** / **▶**, the next/previous channel available in the area is displayed.

## SETTING THE PICTURE AND SOUND

### Menus, rear TV screens

Press **OK MENU** on the remote control when a source (e.g. **Disc**) is selected in order to access the menus for the rear TV screen.

Menu options are selected using the scroll wheel and the buttons on the remote control.

### Day/Night mode

Set according to prevailing light conditions. Select between **Auto**, **Day** and **Night**.

### Screen off

The screen is switched off, but the system is still active.

### Pop-up menu RSE<sup>A</sup>

Press **OK MENU** on the remote control when a video file is being played back or the TV\* is shown in order to access the pop-up menu.

### Screen format

Select between **Normal**, **Zoom 1** and **Zoom 2**.

### Display settings

Adjust the settings for brightness, contrast, shade and colour.

### Day/Night mode

Set according to prevailing light conditions. Select between **Auto**, **Day** and **Night**.

### Source menu

What is shown in the pop-up menu for the Source menu depends on what is being played back or shown, it can be e.g. **Disc menu** or **USB menu**. **Screen off** (see left) is available as a menu option under these menus.

<sup>A</sup> Only applies when playing back videos or watching TV\*.