



# XC90

EXCELLENCE LOUNGE

SUPPLEMENT



# VÄLKOMMEN!

Here you can read about the functions for the rear seat in your Volvo XC90 Excellence Lounge. More detailed owner's information is available in the car, in the app and on the web. At the time of publication, all known types of option/accessory are marked with an asterisk: \*.



## THE CAR'S CENTRE DISPLAY

The owner's manual is available in the car's centre display, where it can be accessed via the top view.



## MOBILE APP

The owner's manual is available as an app (Volvo Manual) for smartphones and tablets. The app also contains video tutorials for selected functions.



## VOLVO'S SUPPORT SITE

The Volvo Cars support site ([support.volvocars.com](http://support.volvocars.com)) contains manuals and video tutorials, as well as additional information and assistance for your Volvo and your car ownership.



## PRINTED INFORMATION

There is a supplement to the owner's manual in the glovebox that contains information on fuses and specifications, as well as a summary of important and practical information. A printed owner's manual and associated supplement can be ordered.





## CONTROL DISPLAY IN THE REAR SEAT

The control display is located in the tunnel console between the rear seats and from here you can control the seat functions, the heating and cooling of drinks, as well as the functions in the Lounge Console.

### **Raising the screen**

- Press the top of the screen. The screen rises and starts automatically.

The light is dimmed after a certain time. Touch the screen to reactivate it.

### **Lowering the screen**

The screen is lowered manually:

- Push on the top of the screen until it is fully retracted into the tunnel console. The screen is switched off when it is lowered.



## NAVIGATING IN THE CONTROL DISPLAY

The control display is a touch-sensitive screen that consists of different views. Tap on a button in the screen to activate or change the settings for a function.

### Buttons in the home view



Heating of the left and right-hand seat respectively.



Cooling/heating of cup holder.



Ventilation of the left and right-hand seat respectively.



Adjustment of the Lounge Console from the rear seat.

### Returning to home view from another view

The control display automatically returns to the home view after a certain time.



## ADJUSTING THE REAR SEAT

The car's rear seats can be adjusted using the controls on the side of the seats.

Adjust the backrest inclination by adjusting the control forward/backward.

Raise/lower the seat by means of adjusting the rear section of the control up/down. Move the seat forward/backward by adjusting the control forward/backward.

Raise/lower the seat cushion front edge by means of adjusting the front section of the control up/down.

Settings for massage, side support, lumbar support and seat cushion extension are linked to the multi-function control.

Only one movement (forward/back/up/down) can be made at a time. Seat adjustment can be made while the car is running and a certain time after the doors have been unlocked without the car running. Adjustment is also possible for a period of time after the car has been switched off.

The seats have overload protection which is triggered if a seat is blocked by an object. If this happens, remove the object and then operate the seat again.

To adjust the sleeping/comfort position, it may be necessary to first move the seat forward slightly.





## ADJUSTING THE SETTINGS FOR THE SEAT

To adjust the lumbar support, side support in the backrest, seat cushion length and massage settings, use the multi-function control on the side of the seat. Settings made with the multi-function control are shown in the control display. The display only shows settings for one seat at a time.

1. Raise the control display.
2. Activate seat adjustment by turning or pressing the multi-function control in any direction. The seat settings view opens in the control display.
3. Select the desired function in the control display by tapping on the display or turning the multi-function control up/down.
4. Change the setting by pressing on the control in the desired direction.

### Message



Tap on the screen button or select the function using the multifunction control to activate the massage function. It is not possible to use the massage function when the car is switched off.

The following setting options are available for massage:



**On/Off:** Choose between On or Off to activate/deactivate the massage function.

1

**Program 1-5:** There are five preset massage programs. Choose between 1 (Swell), 2 (Tread), 3 (Advanced), 4 (Lumbar) and 5 (Shoulder).



**Intensity:** Choose between low, normal and high.



**Speed:** Choose between slow, normal and fast.



### Side support



Tap on the screen button or select the function using the multi-function control to activate adjustment of side support in the backrest.

- Press the front section of the seat button on the multi-function control to increase side support.
- Press the rear section of the seat button in order to reduce the side support.

### Lumbar support



Tap on the screen button or select the function using the multi-function control to activate adjustment of lumbar support.

- Press the seat button up/down on the multi-function control to move the lumbar support up/down.
- Press the front section of the seat button to increase lumbar support.
- Press the rear section of the seat button in order to reduce the lumbar support.

### Seat cushion extension



Tap on the screen button or select the function using the multi-function control to activate adjustment of seat cushion length.

- Press the front section of the seat button on the multi-function control to extend the seat cushion.
- Press the rear section of the seat button to retract the seat cushion.



## LOUNGE CONSOLE

Lounge Console consists of a 12.9-inch touch-screen and a combined footrest and storage space. The Lounge Console can be adjusted forwards/backwards via the control display in the rear seat.



In the control display, tap on the button to access the view where adjustment of the Lounge Console can be made.



Tap on the button to extend the screen to reading mode or retract it. In reading mode, the angle of the screen can be adjusted manually. To stop the screen extending/retracting, tap on the button for retracting/extending. Pay attention to the risk of pinching when adjusting.



For increased comfort, the console can be adjusted forward/backward. Pay attention to the risk of pinching when adjusting.



Tap on the button to retract the screen (if it is extended) and adjust the console forward to maximum. To stop, tap on the button again.

It is possible to adjust the footrest to three different positions, as well as to close it. The footrest is opened with your foot using the button in the lower edge of the Lounge Console, and then its position is adjusted manually. Adjust the footrest to the desired position. To lower it to closed position, first raise it to the top position to then lower it fully.



Tap on the button to activate and adjust the built-in heating function in the footrest.

### **Locking the cover to the storage space**

In closed position, the cover for the storage space in the console can be locked using the associated lock card. To lock/unlock, hold the card still in front of the key reader on the right-hand side of the console, marked with a key symbol. A muffled clicking sound can be heard during locking/unlocking. The cylindrical part of the lock card must be turned toward the key symbol. To change between locked and unlocked mode, move the lock card away from the key reader for a few seconds and then show it again.

### **App for Lounge Console**

The Excellence Lounge app can be found in the Lounge Console screen. It provides you with assistance to investigate the possibilities in the car, information on unique Excellence Lounge functions and assistance to e.g. connect to Wi-Fi or Bluetooth.



## HEATED/VENTILATED SEATS

The seats can be heated in order to increase comfort when it is cold. The seat heater is controlled from the control display.



- Tap repeatedly on the button for the left or right-hand seat to change between the four levels: off, high, medium and low. The button shows the set level.

The seats can also be ventilated, for example, to remove moisture from clothes.



- Tap repeatedly on the button for the left or right-hand seat to change between the three positions: high, medium and low. The button shows the set position.



## HOLDER FOR TABLET\*

There is a holder on the rear of the front seat's head restraint that fits most tablets.

### Place the tablet in the holder:

1. Press down the tab and fold it forward against the head restraint to open the cover.
2. Slide the tablet into the holder and close the cover.

### Remove the holder from its bracket:

1. Depress the button on the underside of the fixed section, in the head restraint.
2. Pull the holder backward/upward.



## MOUNTING POINTS FOR CHILD SEATS

The car is equipped with mounting points for child seats in the rear seat row.

The upper mounting points are primarily intended for use with front-facing child seats.

1. Slide the seat forward and adjust the backrest forward in order to access the mounting point.
2. Always follow the manufacturer's mounting instructions for correct assembly.



## FOLDING OUT THE TABLES

There are two tables under the armrest in the rear seat that can be folded out over the rear seats.

1. Fully open the armrest cover.
  2. Lift the table up out of the armrest using the leather tab and swing it out to a completely vertical position.
  3. Fold down the table top across the seat and slide it to the side.
- Repeat the steps in reverse order to fold the table back in.



## COOLER BOX

There is a cooler box behind the armrest in the rear seat with space for two bottles and the enclosed crystal glasses.

- Press the button located above the cover to open the box.
- On the inside of the box there is a control for setting the temperature.

The cooling function is active when the car is running or when the car has been set to ignition position **II**.



## HOT AND COLD DRINKS

There are two cup/glass holders in front of the armrest, as well as a heating/cooling holder for e.g. a bottle or tea/coffee mug.

- Press on the cover to open the holder. Heating or cooling is controlled from the control display. Blue LEDs indicate that cooling is active, red LEDs indicate that heating is active.

Heating or cooling can be activated when the car is running or set in ignition position **II**.



- Tap repeatedly on the button in the control display to change between the two functions of cooling and heating. The button shows the set position.





## USB PORTS AND ELECTRICAL SOCKETS

**USB ports:** There are two USB ports under the armrest in the rear seat. The ports can be used to e.g. charge a mobile phone or tablet. The screen bracket\* on the rear of the driver's seat head restraint also includes two USB ports. The ports can be used to e.g. charge a mobile phone or tablet.

It is not possible to playback media in the car's audio system via the USB ports.

**Electrical sockets:** There is one 12 V socket and one 230 V socket under the armrest in the rear seat.

**230 V:** The socket can be used for various accessories requiring a 230 V supply, such as chargers or laptop computers (maximum power output 150 W).

- Plug in the accessory's connector. Disconnect the accessory by unplugging the connector.

**12 V:** The socket can be used for various accessories requiring a 12 V supply, such as music players or mobile phones (maximum power output 120 W).

- Remove the cigarette lighter from the socket and plug in the accessory's connector. Unplug the accessory's connector and refit the cigarette lighter when the socket is not in use.

The car's electrical system must be in at least ignition position I for the USB ports and electrical sockets to supply power.





## STORAGE SPACES

Depending on the equipment level selected, the driver's seat is equipped with either a privacy screen\* with a clothes hanger, or a holder for a tablet\*.

There is a storage space under the armrest between the seats.


There are ashtrays in the door sides.

There is a storage pocket on the driver's seat backrest.

There are storage compartments in the door sides.

There are storage pockets on the sides of the tunnel console.

There is a small pocket in the front part of the seat cushion.

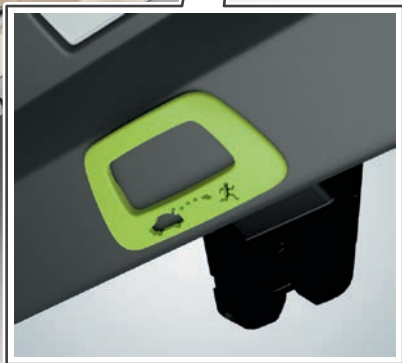

## HANDLE IN THE CARGO AREA

The car is equipped with a self-illuminating handle on the inside of the tailgate. It can be used to open the tailgate from the inside in an emergency situation.

- Pull down the handle to open the tailgate.

After use, the handle must be pressed back into its original position manually.

## SPECIAL TEXTS

The owner's manual and other manuals contain safety instructions and all warning, important and note texts, which must be read. Some functions only apply to certain markets.

### WARNING

#### Storage spaces

Keep loose objects such as mobile phones, cameras, remote controls for accessories, etc. in the glove compartment or other compartments. Otherwise these could cause injury to occupants in the car in the event of sudden braking or a collision.

#### Hot and cold drinks

Store bottles, Thermos flasks, glasses and mugs in the holders or in the cooler box while driving.

#### Lounge Console

Risk of pinching when the screen in the Lounge Console is extended and retracted. See decal on passenger side sun visor.

#### Heated rear seats

The control for the heated seat must not be used by people who find it difficult to perceive an increase in temperature due to numbness or who otherwise have difficulty in operating the controls. This is to prevent burn injuries.

#### Mounting points for child seats

The child seat's upper straps must be routed through the hole in the head restraint leg before they are tensioned at the mounting point. If this is not possible, follow the recommendations from the seat manufacturer.

#### Handle in the cargo area

Make sure you keep the doors and tailgate locked and keep the keys out of the reach of children. Unsupervised children can lock themselves in and risk injury.

On hot days the temperature inside the car can rise quickly and exposure to the high temperature can lead to serious injury and death. Small children are particularly susceptible.

### IMPORTANT

#### Navigating in the control display

Do not use sharp objects on the screen as they may scratch it.

#### Ventilated rear seats

The seat ventilation cannot be started if the passenger compartment temperature is too low. This is to avoid making it too cold for the seat occupant.

#### Holder for tablet\*

The tablet should have protective plastic on the screen when it is fitted in the holder. This is to avoid glass splinters in the event of a collision.

#### Fuses

Always replace a blown fuse with one that has the same colour and amperage designation. Never fit a fuse with a higher value than that indicated in the table in the owner's manual.

If an electrical component is not working then it may be due to the fuse having blown, caused by a temporary overload. For information on fuses, see the normal owner's manual for the car.

#### Power output

The 12 V socket has a maximum power output of 120 W and the 230 V socket has 150 W.

#### Lounge Console

Do not put a load on the top of the Lounge Console, such as kneeling on it while vacuum cleaning the car. Do not place any objects on the Lounge Console either. See decal on passenger side sun visor.

### Note

#### Cooler box

The cooler box needs to have free circulation of air for optimal function. For this reason, you should leave at least 5 cm of space at the air intake for the cooler box in the cargo area.

The temperature setting may need to be adjusted depending on the ambient temperature. The maximum position is recommended to quickly lower the temperature.

Due to negative temperature in the bottom of the refrigerator for faster cooling, condensation may occur which sometimes needs to be wiped away. For optimum drying/cleaning, you need to remove the transparent bottle holder.

#### Privacy screen\*

The clothes hanger on the privacy screen on the driver's seat may be loaded with max. 1.2 kg.

#### Ventilated rear seats

The seat ventilation should be used carefully by people sensitive to draughts. A low level is recommended for long-term use.

#### Lounge Console

The Lounge Console may not be able to operate in low passenger compartment temperatures.

The screen in the Lounge Console may not be able to operate in high passenger compartment temperatures. Extend the screen and cool it using the air vents between the front and rear doors.

**V O L V O**

