



VOLVO XC90

QUICK GUIDE

WEB EDITION



WELCOME TO YOUR NEW VOLVO!

Getting to know your new car is an exciting experience.

Look through this Quick Guide for a quick and easy guide to some of the most common functions.

All warning texts, and other important and detailed information, are only available in the owner's manual – this folder only contains a small selection.




In addition, the owner's manual contains the latest and most current information.

Options are marked with an asterisk (*).

There is further information concerning your car at www.volvocars.com

REMOTE CONTROL KEY



LOCK	Locks doors and tailgate and arms the alarm*.
UN-LOCK	Unlocks the doors ^A and tailgate, and disarms the alarm.
	Unlocks the tailgate – it does not open.
	Approach lighting. Switches on the lamps in the side mirrors*, the direction indicators and parking lamps, at the number plate, passenger compartment and floor.
	Panic function. Press and hold for approx. 5 seconds in an emergency to trigger the alarm. Switch off with a double press on the lock or unlock button.

^AAutomatic relocking takes place if a door/tailgate is not opened within 2 minutes after unlocking.

The key blade can be used to lock/unlock the glovebox.

COLD START



NOTE

Idling speed is higher for a short time after a cold start so that the engine shall reach normal operating temperature as soon as possible. This means that the emission system can function optimally.

STARTING THE ENGINE




3.2 petrol: Depress the clutch and/or brake pedal, turn the remote control key to position **III** and release it directly – the engine starts automatically.







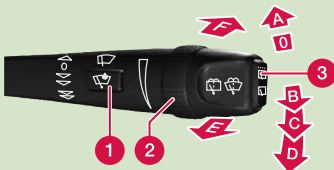

All other engines: Depress the clutch and/or brake pedal, turn the remote control key to position **III** and release it when the engine starts.

Diesel: Preheat the engine by turning the key to position **II** until the control symbol in the instrument panel goes out.

WINDSCREEN WIPERS AND RAIN SENSOR*



- 1** Rain Sensor On/Off, with the lever in position **0**.
- 2** Regulates the sensor sensitivity or the intermittent delay.
- 3** Wiper, rear window – intermittent/normal.

A 	Single sweep
O 	Off
B 	Intermittent wiper, see also (2).
C 	Normal sweep speed.
D 	High sweep speed.
E 	Washer, windscreen and headlamps.
F 	Washer, rear window.
	A green LED in the button "1" illuminates when the rain sensor is active.

LIGHT SWITCHES



- O** Automatic dipped beam. Main beam flash works but not the fixed main beam.
- ☰☷** Parking lamps
- ☰☷** Dipped beam. Switches off when the engine is switched off. Main beam can be activated.
- ☰☷** Manual headlamp levelling (automatic for Xenon lights*).
- ☰☷** Display and instrument lighting.
- ☰☷** Daytime Running Lights (DRL). Press to switch on the LED daytime running lights.
- ☰☷** Fog lamp rear (only driver's side).
- A** Main beam flash
- B** Main/dipped beam switching and Home safe lighting.

PARKING BRAKE



Applying

1. Depress the foot brake firmly – then the parking brake pedal (1).
2. Release the foot brake. If the car rolls – depress the parking brake pedal further.
3. When parking – select gear position 1 (manual) or P (automatic).

Releasing

1. Depress the foot brake firmly and then pull the handle (2) – the parking brake pedal rises.
2. The foot brake can be released.

REGENERATION (DIESEL)



In certain conditions the instrument panel display may show **SOOT FILTER FULL**. At which point the exhaust system's particle filter requires cleaning. This takes place automatically by driving for approx. 20 minutes at an even main road speed.



When the message clears the so-called regeneration is complete.

REFUELLING



– Hang up the fuel cap during refuelling.

AUDIO SYSTEM

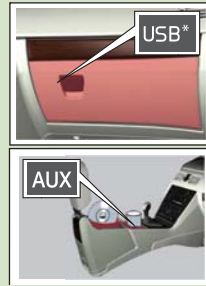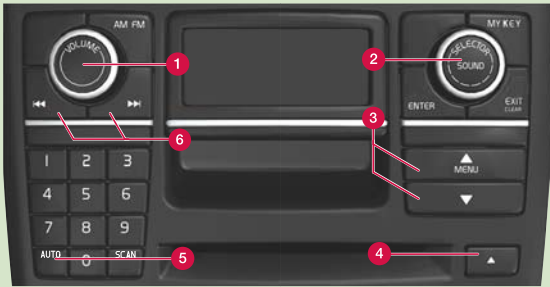

- 1 Press for On/Off. Turn to adjust the volume.
- 2 Sound pattern: Press to select e.g. **BASS**, **Dolby Pro Logic II*** or **SUBWOOFER** – turn to adjust.
Audio source: Turn to select e.g. **CD**, streaming audio via Bluetooth® or **AUX/USB*^A**.

CD PLAYER^B

- 3 Change CD^C or select with 1–6.
- 4 One short press ejects the current disc. One long press ejects all discs^C.
- 6 Changes CD track.

RADIO

- 5 Press for about 2 seconds to autostore the 10 strongest stations. The display shows **AUTOSTORE** during the search. Select stored station with 0–9.
- 6 Short presses search for the next strong station. Store up to 20 stations by holding in 0–9 on **FM1** or **FM2** at the desired station until the display confirms the selection.

^A AUX/USB connection for e.g. MP3 player. Set the player's volume at medium for optimum audio quality. An iPod® which is connected to the USB connection is also charged.

^B CDs with MP3 and WMA files can also be played back.

^C Only CD changer*.

INTEGRATED BOOSTER CUSHION



Raising


1. Pull the handle in front edge of the booster cushion forward.
2. Lift the rear edge of the cushion, and with both hands push the cushion back and down until it is locked. Push aside the seatbelt's lock if necessary.

Lowering

1. Pull the handle in front edge of the booster cushion forward.
2. Pull the cushion forward and press down in the middle until it is locked.

The booster cushion must be locked in the fully lowered position so that the rear seat's backrest can be folded down.

ELECTRONIC CLIMATE CONTROL – ECC*

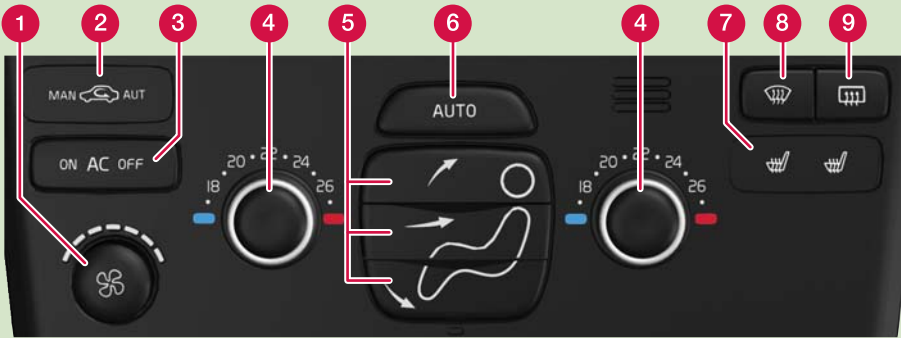

AUTOMATIC CONTROL

In **AUTO** mode the ECC system controls all functions automatically making driving simpler with optimum air quality.

- 4 Rotate for individual temperature settings in the left and right parts of the passenger compartment.
- 6 Press for automatic control of selected temperature and other functions.

MANUAL CONTROL

- 1 Turn to change the fan speed.
- 2 **MAN** – Recirculation On/Off.
AUT – Air quality system* On/Off.
- 3 **AC** – Air conditioning On/Off. Cools the passenger compartment and demists the windows.
- 5 Air distribution. Direct the airflow towards e.g. the floor, vents in the instrument panel, windscreen, etc.
- 7 Heated front seats On/Off.
- 8 Max. defroster. Directs all air towards the front windscreen and side windows, with maximum air flow.
- 9 Rear window and door mirror defrosters.

DEACTIVATING THE AIRBAG – PACOS*



PACOS (Passenger Airbag Cut Off Switch)

Use the key blade to switch **ON/OFF**.

OFF – The airbag is deactivated. **PASSENGER AIRBAG OFF** is shown in the warning lamp above the interior rearview mirror.

A child can sit on a booster cushion or child seat in the front seat but never passengers taller than 140 cm.

ON – The airbag is activated. Passengers taller than 140 cm can sit in the front seat but never a child on a booster cushion or in a child seat.



WARNING

Incorrect use could endanger life. Consult the Owner's Manual if you have the slightest doubt about its use.



- 1 Display trip computer. Select the function with (9).
- 2 One short press switches between T1 & T2. One long press resets the current meter.
- 3 Display row 1: Odometer.
Display row 2: T1 & T2 – independent trip meters, which are always active.
- 4 Display row 1: Clock.
Display row 2: Outside temperature.
- 5 Setting the clock: Turn clockwise/anticlockwise to the end position and hold to set the clock (4).
- 6 Fuel gauge
- 7 Low fuel level. When the lamp is illuminated, fill with fuel as soon as possible.
- 8 Press to show/clear message.
- 9 Turn to see the trip computer's options.
- 10 One short press resets the trip computer's current function.
One long press resets all trip computer functions.



NOTE

Display text --- KILOMETRES TO EMPTY TANK is an estimate of possible distance based on earlier driving conditions.

INDICATOR AND WARNING LAMPS



Read in information display.



Yellow symbol: Note - follow the prompt in the display.

Red symbol: WARNING - Stop safely in a location safe from traffic, follow the prompt in the display.



Low oil level. Stop safely, check the oil level^A.



Fault in brake system. Stop safely, check the brake fluid^A.



DSTC* stability system – flashes when the system is operating.



Engine preheater (diesel). The engine can be started once the symbol has gone out.

^A Have the car recovered if the symbol remains visible.

DIRECTION INDICATORS



- A Short sequence – 3 flashes.
- B Continuous flashing sequence.

ADJUSTING THE STEERING WHEEL



WARNING

Adjust the steering wheel before setting off – never while driving.

BLIS – BLIND SPOT INFORMATION SYSTEM*



If the BLIS' indicator lamp illuminates despite there being no vehicle within the blind spot, the cause could be for example, reflection from shiny wet road surface, own shadow on light road surface or low sun in the camera.

In the event of a direct fault in the system the display shows the text **BLIND-SPOT SYST SERVICE REQUIRED**.

ENTRY INTO THE THIRD ROW OF SEATS



Lowering the outer backrests in the second row of seats

1. Lift the handle (1) while folding the backrest forward in order to move the seat.
2. Lift the handle (1) and fold back the backrest to its upright position in order to move the seat back.

CAR CARE



Washing by hand is gentler to the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

Use clean water and a sponge. Remember that dirt and gravel may scratch the paintwork.

BAG HOLDER*



SETTING POWER FRONT SEAT



- 1 Lumbar support
- 2 Raise/lower the front of the seat cushion.
- 3 Forwards/backwards.
- 4 Raise/lower seat.
- 5 Backrest rake.


REMOTE CONTROL KEY AND POWER DRIVER'S SEAT*

All remote control keys can be used by different drivers to store the settings for the driver's seat. Proceed as follows:

- Adjust the seat as you want it.
- Lock the car by pressing the lock button on the remote control key that you normally use. This stores the seat's position in the remote control key's memory^A.
- Unlock the car (by pressing the unlock button on the **same** remote control key) and open the driver's door. The driver's seat will automatically adopt the position that is stored in the remote control key's memory (if the seat has been moved since you locked the car).

^A This setting does not affect settings that have been stored in the power seat's* memory function*. See the owner's manual for more information.

STORAGE SPACES

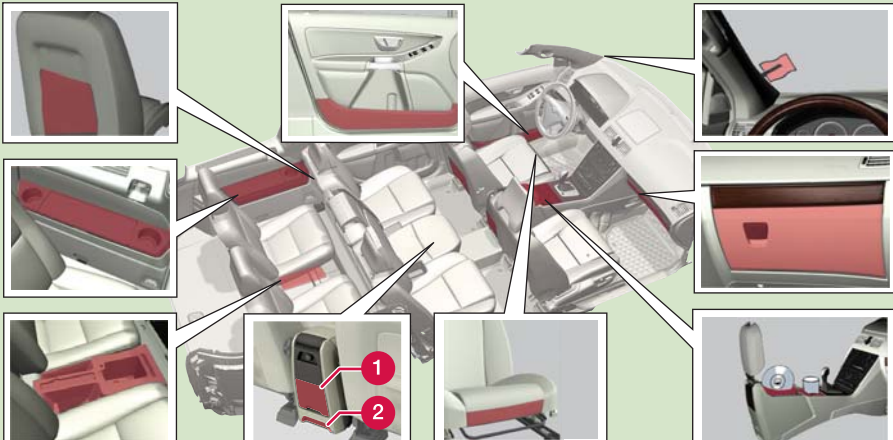

- 1 Cup holder.
- 2 Ratchet handle for lifting the centre console's rear section (not applicable for models with the Rear Seat Entertainment system*).