



# XC60

TWIN ENGINE

QUICK GUIDE



 
# VÄLKOMMEN!

This Quick Guide describes a selection of features and functions in your Volvo. Additional owner's information is available in your vehicle, in an app and on the Internet.



## THE CENTER DISPLAY

The Owner's Manual is available in the center display in Top view.

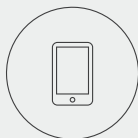

## MOBILE APP

The Owner's Manual is available as an app (Volvo Manual) for smartphones and tablets. The app also contains instructional videos for certain functions.



## VOLVO'S SUPPORT SITE

Go to Volvo Cars' support site ([support.volvocars.com](http://support.volvocars.com)) for manuals and instructional videos. Additional assistance and information about your vehicle and owning a Volvo is also available on the support site.



## PRINTED INFORMATION

The glove compartment contains a printed supplement to the Owner's Manual containing information about fuses and specifications as well as a summary of other important and practical information. A complete printed version of the owner's information (or a new Owner's Manual supplement) can be ordered.

# CONTENT

## 01. GETTING TO KNOW YOUR VOLVO

This chapter gives you information on some of Volvo's systems and services, and an overview of the inside and outside, and the center display.

## 02. CHARGING

This chapter describes the vehicle's charging status, how to handle the charge module, and the meaning of the symbols in the instrument panel.

## 03. INTERIOR AND CONNECTIONS

This chapter provides information about features and functions in the passenger compartment e.g. seat settings and Internet connection.

## 04. CENTER DISPLAY VIEWS

This chapter contains information about the center display's main views, which control many of the vehicle's functions.

## 05. SMART DRIVING

 
This chapter describes several driver support functions and offers tips on how to drive more economically.

## 06. VOICE CONTROL

This chapter provides a list of commands/phrases you can use with the voice control system.

## 07. SUPPLEMENTARY INFORMATION

Warning, caution and note texts, which must be read.

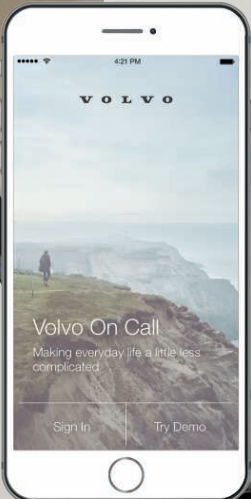

## GETTING STARTED

The following concepts, functions, and tips are intended to help you familiarize yourself with your Volvo as quickly as possible.

### Volvo ID

Volvo ID is a personal ID that gives you access to a number of online services<sup>1</sup>. Some examples are Volvo On Call, navigation and the opportunity to schedule service and repairs. You can create a Volvo ID via the Volvo On Call app or directly in your vehicle.

### Sensus

Sensus is your vehicle's intelligent interface and includes all of its solutions relating to entertainment, connecting to the Internet, navigation\* and information services. Sensus enables communication between you, the vehicle and the digital world around you.

### Volvo On Call

Volvo On Call is an integrated assistance system with an app that enables you to control some of your vehicle's functions remotely. The Volvo On Call app enables you to e.g. see bulbs that need to be replaced, or if oil or coolant needs to be filled. You can lock and unlock the vehicle, check the fuel level and find your nearest service station. It is also possible to set parking climate's preconditioning<sup>2</sup>. Download the Volvo On Call app to get started.

Volvo On Call also gives you access to roadside and emergency assistance by pressing the **ON CALL** and **SOS** buttons in the ceiling console.

### Driver profiles

Many of the vehicle's settings can be adapted to the driver's personal preferences and saved in one or more driver profiles. Each of the remote keys can be linked to a driver profile. See the section "Top view" in this Quick Guide for more information on driver profiles.

 
### Preconditioning before driving

Make it a habit to always precondition the vehicle before driving. This can help increase the driving range, reduce wear on the vehicle and


maintain a comfortable passenger compartment temperature. From the center display's climate view, select the **Parking climate** tab or activate the function via the Volvo On Call app. Full preconditioning is only available when the vehicle is connected to an electrical outlet.

<sup>1</sup> These services vary depending on vehicle configuration and market.


<sup>2</sup> Only ventilation is possible in vehicles without parking heaters, not preheating.

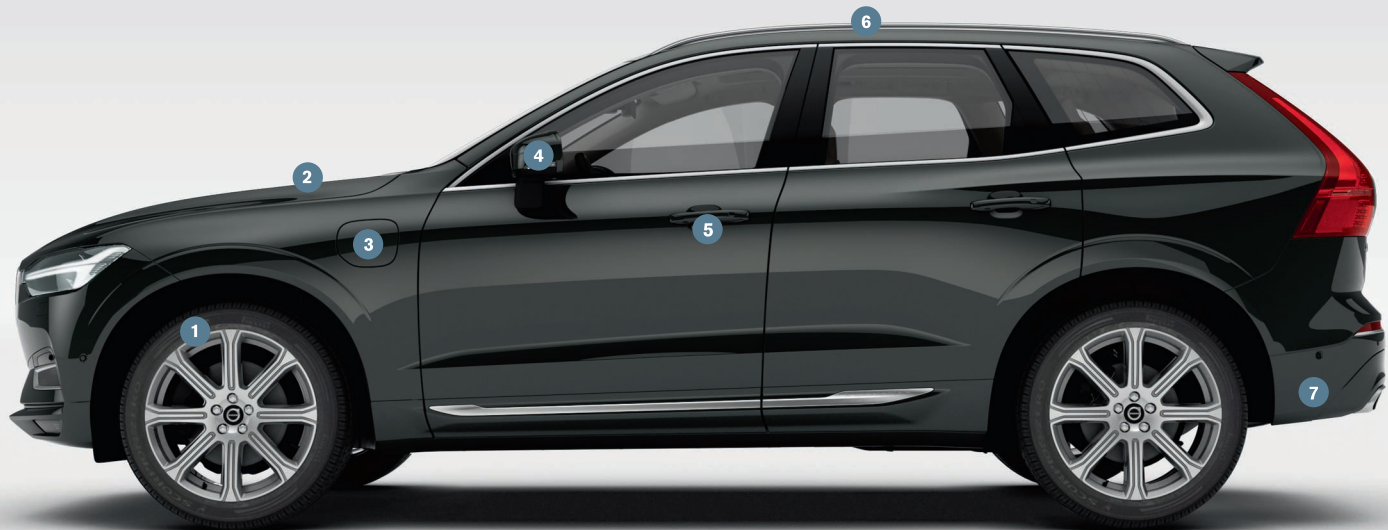


## EXTERIOR OVERVIEW

 - 1 **Checking and calibration of tire pressure (TPMS)\*** is performed via **TPMS** in the **Car status** app in the center display's app view. If inflation pressure is too low, the  symbol will be steadily illuminated in the instrument panel. If inflation pressure is low, check and adjust the inflation pressure in all four tires and tap the calibration button to start TPMS calibration.
- 2 The **Car status** app is used to **check engine oil level**. In **Car status**, you can also view any status-related messages and schedule service and repairs\*.
- 3 **Charging the hybrid battery** is done using the charging socket in the front of the vehicle. Open the charger door by pressing it lightly. To help maximize driving range, begin each trip with a fully charged battery.
- 4 **Door mirrors** can be automatically\* tilted down when reverse gear is engaged. When the vehicle is locked/unlocked, the door mirrors can be automatically folded in/out\*. Activate these functions under **Settings → My Car → Mirrors and Convenience** in the center display's top view.
- 5 **Keyless locking/unlocking\*** makes it possible to lock or unlock the vehicle simply by having a remote key in your possession, e.g. in a pocket. The remote key must be within approximately 1 meter (3 feet) from the vehicle.  
To unlock the vehicle, grasp one of the door handles or press the rubberized button under the tailgate's handle. To lock the vehicle, press one of the indentations on the outside of a door handle. Avoid touching both the outside and inside of the door handles at the same time.
- 6 **The panoramic roof\*** includes an opening glass section and sun shade and can be operated using a control above the rearview mirror when the vehicle is in at least ignition mode I. Open to ventilation position by pressing the control upward and close by pulling

the control downward. To fully open the panoramic roof, pull the control rearward twice. Close by pulling the control downward twice.

- 7 **The power operated tailgate\*** can, for example, be opened using the foot operated tailgate function\* by means of a slow forward kicking motion under the left-hand part of the rear bumper. Close and lock the tailgate by pressing the  button on the lower edge of the tailgate. You can also close the tailgate by moving your foot slowly under the rear bumper. To unlock the tailgate using the foot movement sensor, the vehicle must be equipped with keyless locking/unlocking\*. The remote key must be within a range of approximately 1 meter (3 feet) behind the vehicle for foot movement operation to be possible.





To prevent the tailgate from e.g. hitting the roof of a garage, a maximum opening height can be programmed. Set a maximum opening height by opening the tailgate to the desired opening position. Then press  for at least 3 seconds to store the position.





## LOCKING/UNLOCKING

### Remote key

-  Press briefly to lock doors, tailgate and fuel filler door and arm the alarm. A long press closes all side windows simultaneously.
-  One short press unlocks doors and tailgate and disarms the alarm. Press and hold to open all door windows at the same time.
-  Press briefly to unlock and disarm only the tailgate. Press and hold to open or close the power\* tailgate.
-  The panic alarm activates the turn signals and horn to attract attention in emergency situations. To activate, press and hold the button for three seconds or press the button twice within three seconds. The function can be switched off using the same button after it has been activated for at least five seconds. Otherwise, it will switch off automatically after three minutes.

### Charger door

Make sure the vehicle is unlocked and the ignition is off before connecting or disconnecting the charging cable.

1. Press the rear section of the door and release.
2. Open the charger door.

The charging cable's coupler will lock into the charging socket when charging has started. Charging is interrupted if the vehicle is unlocked but will restart after a short time if the cable is not disconnected.

### Private (valet) locking



Private locking locks the tailgate, which can be practical when, for example, the vehicle is taken in for service or at a hotel.

- In the center display's function view, tap **Private Locking** to activate/deactivate the function.

A pop-up window will appear showing whether the function is activated or deactivated. A four-digit code must be selected each time the function is activated. The first time the function is used, an extra security code must be selected.

Locking\* the glove compartment is performed manually using the enclosed key which is located inside the glove compartment.



3

2

1

7

4

5

6

## INTERIOR OVERVIEW

- 1 **Center display** is used to control many of the vehicle's main functions, e.g. media, navigation\*, climate control, driver support systems and in-vehicle apps.
- 2 **The instrument panel** displays most of the information related to driving such as speed, rpm, navigation\* and active driver support functions. Via the app menu, you can choose which information should be shown on the driver display. Open and navigate in the app menu using the steering wheel's right-hand keypad. Settings can also be made via **Settings → My Car → Displays** in the center display's top view.
- 3 **The head-up display\*** supplements the vehicle's instrument panel and projects information on the windshield. It can be activated in the center display's function view.
- 4 **Start knob** is used to start the vehicle. Turn clockwise and release into the ignition position **I**. Hold the brake pedal depressed and turn the start knob clockwise to start the vehicle. Switch off the vehicle by turning the start knob clockwise.
- 5 **Drive modes\*** are selected using the control in the tunnel console, between the front seats. Press the control and roll it to choose between **Pure**, **Off Road**, **AWD**, **Hybrid**, **Power** and **Individual** in the center display. Confirm your choice by pressing the control. **Individual** drive mode enables you to customize a drive mode's characteristics to your own preferences. To activate this drive mode, tap **Settings → My Car → Individual Drive Mode** in the center display's top view.
- 6 **The parking brake** is activated by pulling up the (P) control. A symbol will appear in the instrument panel. Release it manually by pressing the control down while depressing the brake pedal. Auto-hold brakes ((A)) keep the vehicle stationary when it is stopped, e.g. at a traffic light, even if the brake pedal is not depressed.

Before driving the vehicle into a car wash, deactivate the Automatic Braking and Automatic Parking Brake Application functions. This is

done in the center display's top view by tapping **Settings → My Car → Parking Brake and Suspension**.

- 7 **Passenger airbag**: a sensor system determines what is occupying the front passenger seat and activates/deactivates the front passenger side's airbag. See the Owner's Manual for important safety-related information regarding this.

### Storage compartments

Your vehicle has a number of different storage compartments. There is a storage compartment under the outboard seating positions in the rear seat that can be used to store objects such as tablets.

13:45



Ånäsvägen  
Current position



Lune - Leave The World...



Daniel's Phone  
Telenor



Studio  
Sound optimised for driver

22°C



22°C

## CENTER DISPLAY

**The center display** is used to adjust settings and control most of the vehicle's functions. The center display has three main views: home view, function view and app view. You can reach the function view and app view from the home view by swiping right or left. There is also a top view that you can access by swiping down the top section of the display.

**Change the appearance of the center display and the instrument panel** by choosing a theme in **Settings → My Car → Displays** in top view. You can also select a dark or light background for the center display.

**Return to the home view from another view** by means of a short press on the physical home button under the display. The last mode used for the home view will then be shown. A further short press on the home button sets all of the home view's tiles in standard mode.

**To clean** the center display, press and hold the home button under the display to lock the touchscreen function. Press the home button briefly to reactivate the display.

**The status bar** at the top of the display shows the status of current vehicle activities and functions. Shown on the left is network and connection information, with media-related information; the time and background activity indicator shown on the right.

**In the climate row** at the bottom you can set temperature and seat comfort by tapping on the respective icon. Open the climate view by tapping on the center button in the climate row.



## CHARGING THE HYBRID BATTERY

Your Volvo is equipped with an electric motor that primarily powers the vehicle at low speeds and a combustion engine that powers the vehicle at higher speeds and during more active driving. The time required to charge the hybrid battery depends on the charging current the wall socket can supply. The hybrid battery is also recharged during light braking or engine braking, e.g. on a downslope. All types of charging are indicated in the instrument panel.

### Storing the charging cable


The charging cable is located under the cargo compartment floor.

### Starting charging

When the hybrid battery is charged, the vehicle's start battery is also charged at the same time.

1. Connect the charging cable to a wall socket. Never use an extension cord.
2. Open the charger door by pressing it lightly.
3. Push the charging handle all the way into the vehicle's socket. The charging cable will automatically lock into the charging socket and charging will begin within approximately 5 seconds.

### Stopping charging

1. Press the  button on the remote key to unlock the vehicle. Charging will stop.
2. Press the lock button on the charging socket and then remove the charging cable from the vehicle.
3. Close the charger door.
4. Disconnect the charging cable from the wall socket.
5. Replace the charging cable under the cargo compartment floor.

If the charging cable is not removed from the socket, it will automatically relock into place after a short period after unlocking in order to help maximize charging and driving range, and to enable precondition-

ing of the vehicle before driving. The charging cable can be released from the socket again if the vehicle is unlocked using the remote key. For vehicles with the Passive Entry\* system, the vehicle can be locked and unlocked using the door handle.



- Flashing green - charging is in progress.
- Steady green - charging completed (the light will go out after a short time).
- Steady red - a fault has been detected.

#### Via the instrument panel

The symbol's color indicates the hybrid battery's charging status.



Blue light - charging is in progress.

Green light - the battery is fully charged.

Red light - a fault has occurred. Check that the charging cable is properly connected to the vehicle's charging socket and to the 120/240-volt wall socket.

## HYBRID BATTERY CHARGE STATUS

The hybrid battery's charge status can be checked in the charging socket, via the charge module, in the instrument panel and in the Volvo On Call app.

#### Via the indicator lights in the charging module

When the charging cable is plugged into a wall socket, an indicator light on the charge module (the device connected to the wall socket) will flash red once. A safety check will be performed. When the charging cable is ready to be used, the indicator light will glow steadily blue. The light will flash blue while charging is in progress. When the light glows steadily blue, charging is complete. Flashing red - a fault has been detected.

#### Via the charging socket indicator lights

- White - courtesy light.
- Yellow - standby mode (waiting for charging to begin).



## HYBRID-RELATED INFORMATION IN THE INSTRUMENT PANEL

Various symbols and animations will be displayed in the instrument panel, depending on the drive mode selected.

Electrical current and fuel consumption are indicated in a gauge to the right. Consumption is affected by driving style. When the white indicator line passes the white arrow at the top of the gauge, the combustion engine will start. When the indicator line is in the orange section of the gauge, the hybrid battery is being charged, e.g. during light braking.

### Distance to discharged battery

➔ This indicator shows the approximate distance that can be driven before the hybrid battery is discharged. This distance is affected by a number of factors, e.g. driving style, speed and ambient temperature, and may vary during the course of a drive. In normal conditions, you can expect a range of 16-32 km (10-20 miles). The initial value displayed when the hybrid battery is fully charged shows a maximum possible distance instead of an estimate of the range on electrical power and is adjusted during your drive. When "—" is displayed in the instrument panel, there is no guaranteed electrical current remaining in the battery.

### Symbols in the instrument panel

- ⚡ A solid white symbol indicates which power source is being used. A "lightning" symbol indicates that the electric motor is being used and a "drop" symbol indicates the combustion engine is being used.
- 🔋 Indicates that the battery is being charged, e.g. during engine braking.
- 📱 This gauge indicates the current charge level in the hybrid battery. Electrical current is also used by the climate system.
- ⚡🔒 Indicates that the **Charge** or **Hold** functions are active. These are activated from the center display's function view. **Charge** means



that the hybrid battery is being charged if its charge level is low. **Hold** means that the battery level is being retained for later use.

### Starting and stopping the combustion engine

The vehicle calculates when the combustion engine, electric motor or both need to be used. When running on the electric motor, the vehicle may sometimes need to start the engine automatically due to external factors, e.g. low ambient temperatures. The combustion engine will always start when the hybrid battery has reached its lowest charge level.



03

## POWER\* FRONT SEATS

Use the controls on the outside of the seats to adjust the seat position, lumbar support\*, etc. One control is shaped like a seat so you can more easily understand how you change position; the other one, the multifunction control\*, is used for adjusting lumbar support, massage\*, etc.

### The seat-shaped control

Use the lower section of the control to adjust the height of the seat cushion or move the entire seat. Use the rear section of the control to adjust backrest tilt.

### The multifunction control\*

Settings for massage\*, side bolsters\*, lumbar support\* and seat cushion extension are adjusted using the multifunction control.

1. Turn the multifunction control to open the seat settings window in the center display.
2. Select the desired function in the center display by turning the control.
3. Adjust the setting by pressing the upper/lower/front/rear sections of the control.

### Storing settings

1. Adjust the seat, door mirrors and head-up display\* to the desired positions and press the **M** button on the door panel. The indicator light in the button will illuminate.
2. Press and hold down memory button **1** or **2** within three seconds. An audible signal will sound and the indicator light in the **M** button will go out.

To use your stored seat settings:

With door open - press one of the memory buttons and release.

With door closed - press and hold one of the memory buttons until the seat reaches the stored position.

## FOLDING DOWN THE REAR SEAT BACKRESTS

Make sure that the backrest and head restraint do not come into contact with the back of the seat in front when folding down. The front seats may need to be adjusted in order to fold down the backrests.

The backrest can be folded down manually using the handles in the upper sides of the outboard seats. If the vehicle is equipped with the electric backrest folding function\*, the buttons for this are located in the cargo compartment.

### Folding down the backrests electronically

The vehicle must be stationary and the tailgate must be open before a backrest can be folded down.

1. Fold down the center seat's head restraint manually.
2. Press and hold in the button to fold down the seats. The buttons are labeled **L** and **R** for the right-side and left-side backrests.
3. The backrest will automatically fold down to the horizontal position. The head restraint will also fold down automatically.

### Folding up backrests

1. Move the backrest upward/rearward manually until it locks into position.
2. Return the head restraint to the upright position manually.
3. If needed, adjust the center seat's head restraint.





## STEERING WHEEL

### Adjusting the steering wheel

You can adjust the position of the steering wheel for both height and depth.

1. Push the lever under the steering wheel forward and adjust the steering wheel to the desired position.
2. Pull the lever back to the locked position.

### Left-side steering wheel keypad



Driver support functions are selected in the instrument panel using the ◀ and ▶ arrow buttons on the left-side steering wheel keypad. When the driver support symbol is WHITE, the function is active. A GRAY symbol indicates that the function is in standby mode or has been canceled.

### Display symbols in the instrument panel:

- 🚗 **Speed limiter** helps to avoid exceeding a selected maximum speed.
- 🚗 **Cruise Control** helps the driver maintain a set speed.
- 🚗 **Adaptive Cruise Control\*** helps the driver maintain a constant speed and a set time interval to the vehicle ahead.
- 🚗 **Pilot Assist<sup>3</sup>** helps keep the vehicle between the traffic lane markings by providing steering assistance, and helps maintain a constant speed and a set time interval to the vehicle ahead.

Tap 🚗 to start or cancel the selected function.


Tap ⏩/⏪ to increase/decrease the set speed by 5 km/h (5 mph). Press and hold the button to change the speed in increments. Release the button when the desired speed is reached.

 /  decreases/increases the distance to the vehicle ahead when using Adaptive Cruise Control and Pilot Assist.



Pressing  also resumes the stored speed for the selected function.



### Right-side steering wheel keypad



The right-side steering wheel keypad controls the instrument panel.


 Open/close the app menu. From here, you can control the trip computer, media player, a connected cell phone and the navigation system.

 Press the left/right arrows to scroll among the available apps.

  Select/deselect or confirm a choice, e.g. select the trip computer's menu or erase a message from the instrument panel.

  Scroll among a selected app's functions by pressing the up/down arrows.

**Raise/lower the media volume** by pressing  or . If no other function is active, these buttons serve as volume control.

**Voice control** is activated by pressing the  button to give voice commands for e.g. media, navigation and climate systems. Say e.g. "Radio", "Raise temperature" or "Cancel".

See the chapter "Voice control" in this Quick Guide for additional voice commands.

### Trip computer

The trip computer shows e.g. mileage, fuel consumption and average speed. You can choose the type of trip computer information that will be displayed in the instrument panel. The trip computer calculates the remaining distance that can be driven on the amount of fuel remaining in the tank or until the hybrid battery is discharged. Use the buttons on the right-side steering wheel keypad to display the various options. When "----" is displayed in the instrument panel, there is no guaranteed electrical current remaining in the battery.

<sup>3</sup> Depending on market, this function can be either standard or optional.



**Approach lighting** is activated when you unlock the vehicle using the key and provides illumination to help you approach the vehicle safely in the dark.


**Home Safe Lighting** illuminates some of the exterior lights after the vehicle is locked to provide illumination around the vehicle in dark conditions. To activate the function, switch off the ignition and move the left-side steering wheel lever toward the dashboard and release. The length of time home safe lighting remains illuminated can be set in the center display.

#### **Resetting the trip odometers**

Reset all information in the manual trip odometer (TM) by pressing and holding the **RESET** button. Press the button briefly to reset only the mileage. The automatic trip odometer (TA) resets automatically when the vehicle is switched off for more than 4 hours.

## LEFT-SIDE STEERING WHEEL LEVER

**Headlight functions** are controlled using the left-side steering wheel lever.


If you select **AUTO** mode, the vehicle will automatically monitor lighting conditions and adjust headlight illumination accordingly, e.g. switch from daytime running lights to low beam when the sun goes down or when you drive into a tunnel. You can also turn the lighting ring on the lever to  to switch on the Active High Beam function, which automatically dims the headlights for approaching vehicles. Move the steering wheel lever forward to manually activate high beams. Move the lever rearward to switch back to low beams.

**Active Bending Lights\*** are designed to follow the movement of the steering wheel to help provide maximum illumination in turns and intersections. The function is automatically activated when the engine is started and can be deactivated in the center display's function view.


## RIGHT-SIDE STEERING WHEEL LEVER


The right-side steering wheel lever controls the wipers and the rain sensor.

- Move the lever downward for a single sweep of the windshield.
- Move the lever upward in steps for intermittent, normal speed and high speed.
- Use the lever's thumb wheel to adjust intermittent wiping speed.
- Move the lever toward the steering wheel to start the windshield and headlight washers and toward the dashboard to start the rear window washers.

 Press the rain sensor button to activate/deactivate the rain sensor. The rain sensor monitors the amount of water on the windshield and starts the windshield wipers automatically when needed. Turn the thumb wheel upward/downward for higher/lower sensitivity.

 Press for rear window intermittent wiping.

 Press for continuous rear window wiper speed.

 Use the windshield wipers service position when you e.g. replace, wash or lift the wiper blade. Tap **Wiper Service Position** in the center display's function view to activate or deactivate service position.





03



## PASSENGER COMPARTMENT CLIMATE

### Preconditioning

Preconditioning can be started from the vehicle's center display or from the Volvo On Call app. Preconditioning helps heat or cool the passenger compartment to a comfortable temperature prior to driving, which can help reduce wear and reduce energy consumption during a trip. Preconditioning can be started directly from the vehicle or set to start automatically using a timer.

### Preconditioning direct start

1. Open climate view in the center display by tapping the bottom of the display.
2. Tap the **Parking climate** tab, check the boxes for the desired options and then tap **Preconditioning**.

### Setting a preconditioning timer

- In climate view, select **Parking climate** → **Add timer** and set a date/day/time.

For preconditioning to have full functionality, the vehicle must be connected to an electrical outlet.

### Climate system settings

Climate system functions for the front and rear sections of the passenger compartment are controlled from the center display and from the buttons on the center console and the rear side of the tunnel console\*. Some functions can also be controlled using voice commands.



The icon for opening climate view is located at the center of the climate bar at the bottom of the center display. When the **Clean Zone** text is BLUE, this indicates that the conditions for good air quality in the passenger compartment have been met.

- Tap **AUTO** in climate view for automatic control of several climate system functions. Tap for automatic control of air recirculation, air conditioning and air distribution. Press and hold for automatic control of air recirculation, air conditioning and air distribution and to change temperature and blower speed to standard settings: 22 °C (72 °F) and speed 3. It is possible to change the temperature and blower speed without deactivating automatic climate control.
- Tap any of the icons in the climate bar at the bottom of the center display to set temperature, seat heating\* and blower speed.

To synchronize the temperature for all of the vehicle's zones with the driver side's temperature, tap the driver side's temperature icon and then tap **Synchronize temperature**.

### Interior Air Quality System IAQS\*

IAQS is part of the Clean Zone Interior Package\* and is a fully automatic system that filters passenger compartment air to help remove air contaminants such as particulates, hydrocarbons, nitric oxides and ground-level ozone. Tap **Settings** → **Climate** → **Air Quality Sensor** in the center display's top view to activate the function.



## CONNECTIONS

The vehicle's various types of connections can be used to play or voice-control media, send or receive text messages, make or receive phone calls, connect to the Internet, etc., from an external device such as a smartphone. In order to connect your devices to the vehicle, the ignition must be in at least mode **I**.

### Vehicle's modem<sup>4</sup>

The easiest and most efficient way to connect the vehicle to the Internet is to use its own modem. This provides the highest performance, is activated automatically each time the engine is started and does not require the use of a smartphone.

1. Insert a personal SIM card in the holder in the passenger-side floor-well.

2. Tap **Settings** → **Communication** → **Vehicle Modem Internet** in top view.

3. Activate by checking the box for **Vehicle modem Internet**.

### Sharing Internet connection (tethering)

When the vehicle is connected to the Internet via the vehicle's modem, you can share the vehicle's Internet connection (Wi-Fi hotspot) with other devices under **Settings** in top view. Tap **Communication** → **Vehicle Wi-Fi Hotspot**.

### Bluetooth

Use Bluetooth as first choice for handling phone calls, text messages and media from your phone to the vehicle's systems. Bluetooth can also be used to connect the vehicle to the Internet. Two Bluetooth devices can be connected at the same time but only one of them can be

used to stream media. The two most recently connected phones will connect automatically when the ignition is switched on (if the phone's Bluetooth function is activated). Up to 20 devices are saved in a list to facilitate connecting to these later.

1. Activate Bluetooth in your phone. Also activate tethering/personal hotspot if you would like to connect to the Internet.
2. Open the **Phone** tile in the center display's home view.
3. Tap **Add phone** or, if a phone is already connected, tap **Change** and then **Add phone**.
4. Select the phone to be connected and then follow the steps on the center display and in the phone. Note that in certain phones, the message function is activated.

### Wi-Fi

Wi-Fi connections can be used to connect the vehicle to the Internet at greater speeds than are possible using Bluetooth to stream online services such as web radio and music via apps in the vehicle, download/upload software, etc. A Wi-Fi connection from a smartphone acts as a hotspot for the vehicle and any external devices that may be in the vehicle.

1. Activate your smartphone's tethering/personal hotspot.
2. Tap **Settings** in the center display's top view.
3. Tap **Communication** → **Wi-Fi** and activate by checking the box for Wi-Fi connection.

Please note that in certain phones, tethering is closed after contact with the vehicle has been broken. The phone's tethering function will then need to be reactivated before it can be used again.

### USB

The USB ports can be used to connect an external device to e.g. play music. You can also use the USB ports for Apple CarPlay\* and Android Auto\*. Your external device will also be recharged while it is connected to the vehicle.

- 1 USB ports are located in the tunnel console armrest storage compartment between the seats.

### Electrical sockets

Your vehicle contains the following electrical sockets:

- 2 12-volt electrical socket.
- 3 12-volt electrical socket and 120-volt electrical socket\*. There is also a 12-volt socket\* in the cargo compartment.

4 Only vehicles with Volvo On Call. When the vehicle's modem is used to make the connection, the Volvo On Call services will use the connection.



## USING CONNECTED DEVICES


External devices can be connected to e.g. handle phone calls and play media in the vehicle's audio and media systems.

### Handling phone calls<sup>5</sup>

You can make and receive calls from a Bluetooth-connected phone.



#### Making calls using the center display


1. Open the **Phone** tile in home view. Select to make a call using the list of recent calls or your list of contacts, or enter a number using the keypad.

2. Tap .

#### Making a call using the right-side steering wheel keypad

1. Tap  and navigate to **Phone** by tapping  or .

2. Scroll through the list of calls using  and select using .

You can also handle calls using voice commands. Tap the voice control button () in the right-side steering wheel keypad. See the chapter "Voice control" in this Quick Guide for voice commands.

### Playing media

In order to listen to audio content from an external device, connect it to the vehicle using the connection of your choice; see the previous section for connection options.



#### Bluetooth-connected device

1. Start playback in the connected device.
2. Open the **Bluetooth** app in app view in the center display - playback will begin.



#### USB-connected device

1. Start the **USB** app in app view.
2. Select a song, track, etc. Playback will begin.

<sup>5</sup> For information about which phones are compatible with the vehicle, go to [support.volvocars.com](http://support.volvocars.com).

## iPod



### MP3 player or iPod

1. Start playback in the device.
2. Open the **iPod** or **USB** app, depending on connection method. For playback from iPod, select the **iPod** app regardless of connection method. Playback will begin.

### Apple® CarPlay®\*6 and Android Auto\*


CarPlay and Android Auto make it possible to use certain apps in your smartphone via the vehicle to e.g. play music or listen to podcasts. This interaction takes place via the vehicle's center display or your smartphone.

If you have an iPhone, Siri voice control must be activated before using CarPlay.



1. Connect your phone to the USB port. If the vehicle is equipped with more than one USB port, use the one with the white frame.
2. Tap **Apple CarPlay** or **Android Auto** in app view to activate.



Activate voice control with CarPlay and Android Auto by pressing and holding the  button in the right-side steering wheel keypad. Pressing this button briefly will activate the vehicle's own voice control system.

 
Bluetooth is deactivated when CarPlay is used. Use Wi-Fi or the vehicle's modem if you would like to connect the vehicle to the Internet.

04


13:45




1  
Ånäsvägen  
Current position

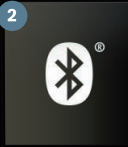

2  
Lune - Leave The World...

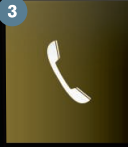 

3  
Daniel's Phone  
Telenor

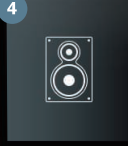 

4  
Studio  
Sound optimised for driver

22°C





22°C


## HOME VIEW

When the center display starts it shows the home view, from where you can access the tiles for Navigation, Media and Phone, as well as the last used app or vehicle function.

### 1 **Navigation** - Tap to access Sensus Navigation\*.

**Entering a destination with a free text search** - Expand the toolbar using the down arrow on the left side and tap . The map display will change to a screen where you can search by entering text. Enter a search word/phrase.

**Setting a destination on the map** - Tap  to maximize the map and press and hold a point on the map to set it as your destination.

**Deleting a destination** - Tap  to open the itinerary. Tap the recycling bin to delete an intermediate destination (waypoint) in the itinerary or tap **Clear itinerary** to delete the entire itinerary.

**Map updates**<sup>7</sup> - Tap **Download Center** in app view. **Maps** shows the number of available map updates. Tap **Maps** → **Install** to update maps or install a selected map. Maps can also be downloaded from support.volvocars.com to a USB flash drive and then transferred to the vehicle.

### 2 **Media** - this shows e.g. your music on an external device or **FM radio** if you have selected that in app view. Tap the tile to access settings. From here, you can see your music libraries, radio stations, etc.

### 3 **Phone** - this provides access to phone functions. Tap the tile to expand it. From here, you can e.g. make calls using your list of recent calls or your contact list, or by entering a number using the keypad. When you have selected a number, tap .

### 4 **Last used app or vehicle function** - here you can see the last used app or vehicle function that is not shown in any of the other tiles, e.g. **Car status** or **Driver performance**. You can also access a recently used function by tapping its tile.

<sup>7</sup> The function's availability may vary from market to market.

13:45

### Car functions

ESC Sport Mode	Lane Keeping Aid	Park Assist
Cross Traffic Alert	Distance Alert	
Camera	Park In	Park Out
Headrest fold	Head-up display adjustments	Road Sign Information
Head-up display	BLIS	Active Bending Lights

22°C AUTO 22°C



## FUNCTION VIEW AND APP VIEW

### Function view

In home view, swipe the screen from left to right<sup>8</sup> to access function view. From here, you can activate/deactivate various vehicle functions, such as **Head-up Display\***, **Park Assist** and **Lane Keeping Aid**. Activate/deactivate a function by tapping its symbol. Some functions open in their own windows.

### App view

In home view, swipe from right to left<sup>8</sup> to access app view. This displays the vehicle's factory-installed apps as well as any apps you have downloaded and installed.

### Managing and updating apps and systems



You can update many of the vehicle's systems in **Download Center** in app view. The vehicle must be connected to the Internet in order for this to be possible. Press **Download Center** to open a download application. Here, you can:

**Download apps** - Tap **New apps** and select the desired app. Select **Install** to download the app.

**Update apps** - Tap **Install all** to update all apps. Or tap **Application updates** to display a list of available updates. Select the desired app and tap **Install**.

**Uninstall apps** - Tap **Application updates** and select the desired app. Tap **Uninstall** to delete the app.

**Update system software** - Tap **System updates** to display a list of updates that can be installed in the vehicle. Tap **Install all** at the bottom of the list to update all software or **Install** to update specific software. If you do not wish to display a list, select **Install all** near the **System updates** button.

### Moving icons

The apps and buttons for vehicle functions in app view and function view can be moved to customize these views.

1. Press and hold an icon.
2. Drag the icon to the desired location in the view and release it.

<sup>8</sup> Applies for left-hand drive vehicles. For right-hand drive vehicles, swipe the opposite way.



Settings



Owner's manual



Profile



Car message stored in Car status application



Passenger

Restart



TuneIn is installing



New position received



22 °C



22 °C

## TOP VIEW

There is a tab in the upper part of the display that you can pull down to access top view. This view provides access to **Settings**, **Owner's manual**, **Profile** and the vehicle's stored messages.

### Personal settings

Many personal settings can be changed under **Settings**, e.g. displays, mirrors, front seat, navigation\*, audio and media systems, language and voice control.

### Driver profiles



If the vehicle is used by more than one driver, each driver can have a personal driver profile in the vehicle. Each time you enter the vehicle, you can select your driver profile where your personal settings are stored. The number of profiles displayed depends on how many keys are detected in the vehicle. The **Guest** profile is not connected to any specific key.

The most recently active driver profile will be activated when the vehicle is unlocked. To change the driver profile, select **Profile** in top view.

Driver profiles can be linked to specific vehicle keys and when the vehicle is unlocked, settings will be automatically adapted to your personal settings. To link a key, tap **Settings** → **System** → **Driver Profiles**. Select one of the driver profiles (the **Guest** profile cannot be linked). Home view will reappear. Pull top view down again, repeat the above procedure and select **Edit** for the selected profile and then **Connect key**.

### Individual drive mode

To adapt the **Hybrid**, **Pure** or **Power** drive modes to your personal preferences, activate the drive mode by tapping **Settings** → **My Car** → **Individual Drive Mode**.

### System volumes

To adjust or switch off the volume of system sounds, e.g. screen tap sounds, go to **Settings** → **Sound** → **System Volumes**.



## DRIVER SUPPORT

Your vehicle is equipped with a number of functions to help you drive safely and help prevent accidents. These functions are activated in the center display's function view. Keep in mind that these driver support functions are only aids. The driver always has full responsibility for operating the vehicle in a safe manner. A selection of these is listed below:

### City Safety™

City Safety<sup>9</sup> can help assist the driver in critical situations in order to help prevent or mitigate a collision with other vehicles, large animals, pedestrians or cyclists. Visual, acoustic and haptic signals are given to alert the driver of a collision and assist you to act in time to avoid it. If the driver does not react quickly enough and a collision is imminent, the system can automatically apply the brakes. City Safety steering assistance can also strengthen your steering movements if you have begun evasive action and the system detects that the steering movements are not sufficient to avoid a collision. City Safety is activated when the engine is started and cannot be disabled.

### Blind Spot Information (BLIS)\*



BLIS can notify the driver of vehicles in your blind spot and of rapidly approaching vehicles in adjacent lanes.

### Cross Traffic Alert (CTA)\*



CTA is a supplementary driver support system for BLIS that can alert drivers to crossing traffic behind the vehicle. CTA is activated when reverse gear is engaged or if the vehicle is rolling backward.

### Lane Keeping Aid



Lane Keeping Aid can help the driver reduce the risk of the vehicle unintentionally veering out of the lane. To select the type of assistance that should be provided, select **Settings → My Car → IntelliSafe → Lane Keeping Aid Mode** in the center display's top view.

### Steering assistance during collision risks

Steering assistance during collision risks can help the driver reduce the risk of the vehicle unintentionally veering out of the lane and/or colliding with another vehicle/obstacle by actively steering the vehicle back into the lane and/or swerving out of the way. The function consists of the sub-functions Run-Off Mitigation with steering assistance, Steering assistance during collision risks from oncoming traffic and Steering assistance during collision risks from behind\*. The function can be disabled by tapping **Settings → My Car → IntelliSafe → Collision Avoidance Assistance** in the center display's top view.

### Pilot Assist

Pilot Assist<sup>10</sup> is a convenience function that can assist the driver in keeping the vehicle in its own lane and at a set distance to the vehicle ahead. Pilot Assist is selected and activated using the left-side steering wheel keypad. For steering assistance to be possible, certain conditions must be met, e.g. the driver's hands must be on the steering wheel and the lane markings must be visible. When steering assistance is active, a GREEN steering wheel symbol will be displayed in the instrument panel.

<sup>9</sup> Not available on all markets.

<sup>10</sup> Depending on market, this function can be either standard or optional.



## PARKING ASSISTANCE SYSTEMS

### Park Assist Pilot\*

Park Assist Pilot can help detect if the vehicle will fit into a parking space and then helps guide the vehicle into the space. The driver's task is to check the area around the vehicle, follow the instructions provided in the center display, select the appropriate gear, control the vehicle's speed and be prepared to apply the brakes to stop the vehicle.

#### Parking with Park Assist Pilot



1. The vehicle's speed may not exceed 30 km/h (20 mph) when parallel parking or 20 km/h (12 mph) when perpendicular parking. The distance between the vehicle and the parking space should be about 1 meter (3 feet) when the function is looking for parking.
2. Tap **Park In** in function view or camera view.
3. Stop the vehicle when notified by a graphic and a message in the center display that a suitable parking space has been found. A pop-up window will appear.
4. Follow the instructions provided in the center display. Be prepared to stop the vehicle when prompted by information in the center display.

#### Pulling out of a parking space with Park Assist Pilot

This function can only be used when the vehicle has been parallel parked.



1. Tap **Park Out** in function view or camera view.
2. Use the turn signals to indicate the direction in which the vehicle will pull out of the parking space.
3. Follow the instructions in the center display.

### Park Assist Camera\*

The Park Assist Camera can help the driver detect potential obstacles around the vehicle using a camera image and graphics in the center display. Camera views and guiding lines can be selected in the center

display. The Park Assist Camera starts automatically when reverse gear is engaged. It can also be started manually from the center display.



- Tap the **Camera** button in function view to manually activate/deactivate the function.

05





## PURER DRIVING PLEASURE

Planning your trips and driving economically can help increase driving range using the electric motor while simultaneously reducing your environmental impact. The ability to maximize driving range varies depending on the circumstances and conditions in which the vehicle is driven. Some factors you can influence and others you cannot. Greatest range is achieved during very favorable conditions when all factors have a positive impact.

### **Plan your trips by always**

- Charging the hybrid battery before driving.
- Preconditioning the vehicle.

### **Drive economically by**

- Activating the **Pure** drive mode.
- Reducing the temperature in the passenger compartment and reducing blower speed.
- Maintaining a consistent speed and planning ahead to help minimize braking.
- Selecting **Hold** in function view at higher speeds on trips that exceed the hybrid battery's range.
- Maintaining the recommended tire inflation pressure and checking it regularly.
- Keeping the windows closed while driving.

### **Factors you cannot influence**

- The traffic situation.
- Road condition and topography.
- Ambient temperature and headwinds.

See your Owner's Manual for more tips on increasing driving range and driving economically.



## VOICE COMMANDS

The voice control system makes it possible to control<sup>11</sup> certain functions in the media player, Bluetooth-connected phones, climate system and the Volvo navigation system\* using voice commands. To activate voice control, press the voice control button in the right-side steering wheel keypad.

The following commands may always be used:

- Repeat
- Cancel
- Help

### Cell phone voice commands

- Call [contact]
- Call [phone number]

- Recent calls
- Read message
- Message to [contact]

### Radio and media voice commands

- Media
- Play [artist]
- Play [song title]
- Play [song title] from [album]
- Play [radio station]
- Tune to [frequency]
- Tune to [frequency] [waveband]
- Radio
- Radio FM
- SiriusXM\*
- CD\*
- USB
- iPod
- Bluetooth
- Similar music

### Climate system voice commands

- Climate
- Set temperature to X degrees
- Raise temperature/Lower temperature
- Sync temperature
- Air on feet/Air on body
- Air on feet off/Air on body off
- Set fan to max/Turn off fan

- Raise fan speed/Lower fan speed
- Turn on auto
- Air condition on/Air condition off
- Recirculation on/Recirculation off
- Turn on defroster /Turn off defroster
- Turn on max defroster/Turn off max defroster
- Turn on electric defroster/Turn off electric defroster\*
- Turn on rear defroster/Turn off rear defroster
- Turn steering wheel heat on/Turn steering wheel heat off\*
- Raise steering wheel heat/Lower steering wheel heat\*
- Turn on seat heat/Turn off seat heat\*
- Raise seat heat/Lower seat heat\*
- Turn on seat ventilation/Turn off seat ventilation\*
- Raise seat ventilation/Lower seat ventilation\*

#### Navigation voice commands\*

- Navigation
- Take me home
- Go to [city]
- Go to [address]
- Add intersection
- Go to [zip code]
- Go to [contact]
- Search [POI category]
- Search [POI category] [city]
- Search [POI name]
- Change country/Change state<sup>12, 13</sup>
- Show favorites
- Clear itinerary

- Repeat voice guidance
- Turn off voice guidance
- Turn on voice guidance

<sup>11</sup> Certain markets only.

<sup>12</sup> For European countries, "country" is used instead of "state".

<sup>13</sup> For Brazil and India, the search area is changed using the center display.

## SUPPLEMENTARY INFORMATION

The Owner's Manual and other manuals contain safety instructions and all warning, caution and note texts, which must be read. Some functions only apply to certain markets.



### WARNING

#### GETTING STARTED

**Volvo On Call** - For vehicles with Volvo On Call, the services only function in areas where the vehicle has adequate cellular coverage and on markets where the service is available. Just as with cellular phones, atmospheric disturbances or areas with fewer transmitters, e.g. sparsely populated rural areas, can make connection impossible.

For warning, caution and note texts for Volvo On Call services, see the Owner's Manual and the applicable agreement for the Volvo On Call subscription.

**Sensus Navigation\*** - Direct all your attention to the road and make sure that your concentration is focused on driving. Follow applicable traffic laws and use good judgment while driving. Road conditions can be affected by weather or season, which may make certain recommendations less reliable.

#### EXTERIOR OVERVIEW

**Tailgate** - Be aware of the risk of serious injury when operating the tailgate. Make sure that no one is in the path of the tailgate who could be injured by its movement. Always operate the tailgate with caution.

#### INTERIOR OVERVIEW

**Passenger airbag** - Volvo recommends that all occupants (adults and children) shorter than 140 cm (4 foot 7 inches) be seated in the rear seat of any vehicle with a front passenger side airbag and be properly restrained for their height and weight.

#### Occupant Weight Sensor (OWS)

- No objects that add to the total weight on the seat should be placed on the front passenger's seat. If a child is seated in the front passenger's seat with any additional weight, this extra weight could cause the OWS system to enable the airbag, which might cause it to deploy in the event of a collision, thereby injuring the child.
- The seat belt should never be wrapped around an object on the front passenger's seat. This could interfere with the OWS system's function.
- The front passenger's seat belt should never be used in a way that exerts more pressure on the passenger than normal. This could increase the pressure exerted on the weight sensor by a child, and could result in the airbag being enabled, which might cause it to deploy in the event of a collision, thereby injuring the child.

Always take along the **remote key** when leaving the vehicle and make sure that the vehicle's electrical system is in ignition mode **0** - especially if there are children in the vehicle.

Always apply the **parking brake** when parking on an incline. Selecting a gear or putting the automatic transmission in **P** may not be sufficient to keep the vehicle stationary in all situations.

#### CHARGING THE HYBRID BATTERY

- Charging the hybrid battery may only be done from approved, grounded 120/240 V outlets (AC, alternating current). If the electrical circuit or electrical socket's capacity is not known, let a licensed electrician inspect the electrical circuit's capacity. Using a charge level that exceeds the electrical circuit's or electrical outlet's capacity may start a fire or damage the electrical circuit.
- The charging cable must be grounded when in use. It is equipped with a cord with a grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances and is not damaged in any way.
- Children should be supervised when in the vicinity of the charging cable when it is plugged in.
- High voltage is present in your electric meter housing and power distribution service panel.

Contact with high voltage can cause death or serious personal injury.

- Do not use the charging cable if it is damaged in any way. A damaged or malfunctioning charging cable may only be repaired by a workshop - an authorized Volvo workshop is recommended.
- Always position the charging cable so that it will not be driven over, stepped on, tripped over or otherwise damaged, or cause personal injury.
- Disconnect the charger from the wall outlet before cleaning it.
- Never connect the charging cable to an extension cord or a multiple plug socket.
- Avoid visibly worn or damaged electrical outlets since they may lead to fire damage and/or personal injury if used.

Also, refer to the manufacturer's instructions for using the charging cable and its components.

#### POWER FRONT SEATS

Do not adjust the seat while driving. The seat must be positioned in a way that allows the driver to fully depress the brake pedal. Adjust the seat as far rearward as comfort and control allow. After adjusting the seat, make sure that it is securely locked into position before starting to drive.

#### FOLDING DOWN THE REAR SEAT BACKRESTS

Make sure the backrest is securely locked into position after it is folded down or up. Make sure the head restraint is securely locked into position after it is folded up.

#### DRIVER SUPPORT

The vehicle's driver support systems are designed to offer supplementary assistance to the driver, but cannot handle all situations in all traffic, weather and road conditions. They are never a substitute for the driver's attention and judgment. The driver is always responsible for ensuring the vehicle is driven in a safe manner, at the appropriate speed, with an appropriate distance to other vehicles, and in accordance with current traffic rules and regulations. The driver always has ultimate responsibility for braking and steering the vehicle.

Before driving your vehicle, read all sections of the Owner's Manual concerning driver support systems in the vehicle.

#### PARKING ASSISTANCE SYSTEMS

 
**Park Assist Pilot** is a supplementary driver support but cannot handle all situations. It is only intended to assist the driver when parallel and perpendicular parking. The driver bears full responsibility for parking the vehicle safely and braking when necessary. Objects located far into the parking space may not be detected when scanning. The driver is always responsible for assessing whether the space suggested by Park Assist Pilot is suitable for parking.

**Park Assist Camera** is supplementary driver support intended to assist when parking the vehicle. It is never a substitute for the driver's attention and judgment. The cameras have dead/blind spots where objects cannot be detected. Pay particular attention to people and animals near the vehicle. Objects/obstacles may be closer to the vehicle than they appear on the screen.

Before driving your vehicle, read all sections of the Owner's Manual concerning driver support systems in the vehicle.

#### VOICE COMMANDS

The driver is always responsible for ensuring that the vehicle is operated in a safe manner and that all applicable traffic regulations are followed.



### CAUTION

#### INTERIOR OVERVIEW

**Do not use the OFF ROAD** drive mode when towing a trailer without an electrical connection. This could result in damage to the pneumatic suspension system's bellows.

The information is projected from a **head-up display unit\*** located in the dashboard. To help prevent damage to the display unit's glass cover, do not place any objects on the glass and prevent objects from falling onto it.

#### CENTER DISPLAY

**When cleaning** the center display, use a microfiber cloth that is free from sand and similar debris. When cleaning the center display, apply only light pressure to the display. Pressing too hard could damage the display.

Do not spray liquid or corrosive chemicals directly onto the center display. Do not use window cleaners, cleaning agents, aerosol sprays, solvents, alcohol, ammonia or detergents that contain abrasives. Never use abrasive cloths, paper towels or tissue paper, as these may scratch the display.

#### CHARGING THE HYBRID BATTERY

**Charging cable** - Never connect the charging cable if there is a risk of a thunderstorm or there is lightning. Never detach the charging cable from the 120/240-volt outlet while charging is in progress – the 120/240-volt outlet could be damaged in such circumstances. Always interrupt charging first and then disconnect the charging cable – first from the vehicle's charging socket and then from the 120/240-volt outlet.

Power strips, extension cords, surge protectors or similar devices must not be used together with the charging cable since this may involve a risk of fire, electric shocks, etc. An adapter may not be used between the 120/240-volt outlet and the charging cable.

Wipe the charging cable with a clean cloth lightly moistened with water or a mild detergent. Do not use chemicals or solvents. Do not submerge the charging cable.

Only use the charging cable provided with your vehicle or a replacement cable purchased from a Volvo retailer.

**Charge module** - Avoid exposing the charge module and its plug to direct sunlight. In such cases, the overheating protection in the plug could reduce or cut off charging of the hybrid battery.

Check that the 120/240-volt outlet has a power supply sufficient for charging electric vehicles – if uncertain, you should have the outlet checked by a professional.

#### FOLDING DOWN THE REAR SEAT BACKRESTS

When the backrest is folded down, make sure there are no objects in the rear seat, and the seat belts are not buckled.

The armrest\* on the center seating position must be in the stowed position.

#### RIGHT-SIDE STEERING WHEEL LEVER

**Wiper blades in service position** - Before placing the wipers in service position, ensure that they have not frozen to the windshield. If the wiper arms in service position are raised from the windshield, they must be folded back against the windshield before activating wiping, washing or rain sensor as well as before departure. This is to prevent scratching the paint on the hood.

#### CONNECTIONS

**Electrical outlet** - Each 12-volt socket can supply a maximum of 120 W (10 A).

120-volt sockets can supply a maximum of 150 W.

#### NOTE

#### EXTERIOR OVERVIEW

**Foot-operated tailgate** - There is a risk of reduced or lost function if there are large amounts of snow, ice, dirt, etc. on the rear bumper. Make sure to keep the bumper clean.

**Setting maximum opening height** - If the system has been working continuously for a prolonged period of time, it will be switched off to avoid overload. It can be used again after approximately 2 minutes

Electromagnetic fields and obstructing objects may interfere with **remote key functions**. Avoid storing the remote key near metal objects or electronic devices, e.g. cell phones, tablets, laptops or chargers – preferably no closer than 10-15 cm (4-6 in.).

#### INTERIOR OVERVIEW

**OFF ROAD drive mode** is not designed to be used for normal street driving.

**With a cold start**, idling speed may be considerably higher than normal for certain engine types. This is done to get the emissions system up to normal operating temperature as quickly as possible, which minimizes exhaust emissions and helps protect the environment.

**Head-up display\*** - If City Safety is activated, the information in the head-up display will be replaced by a City Safety graphic. This graphic will illuminate even if the head-up display is turned off.

The driver's ability to see information in the head-up display may be impeded by the use of e.g. polarizing sunglasses, a driving posture in which the driver is not centered in the seat, objects on the display unit's glass cover and/or unfavorable lighting conditions. People with certain types of vision problems may experience headaches or eye strain when using the head-up display.

#### STEERING WHEEL

**Trip computer** - Calculation of driving range may vary if your driving style changes.

#### PASSENGER COMPARTMENT CLIMATE

Heating/cooling cannot be accelerated by choosing a higher/lower temperature than the desired temperature.

**Preconditioning** is only available when the vehicle is connected to an electrical outlet. A charging port that is not always active, for example because of a timer, can cause loss of function for preconditioning. If the vehicle is not connected to an electrical socket it is still possible in a warm climate to achieve brief cooling of the passenger compartment by direct starting preconditioning. The vehicle doors and windows should be closed during preconditioning of the passenger compartment.

#### CONNECTIONS

**Internet** - Data (data traffic) is transferred when using the Internet, which can incur additional costs. Activating data roaming and Wi-Fi hotspots can incur additional charges. Contact your network operator about data traffic costs. When downloading using a phone, pay extra attention to the data traffic costs.

**Data downloading** can affect other services that transfer data, e.g. web radio. If the affect on other services is experienced as problematic, the download can be interrupted. Alternatively, it may be appropriate to switch off or cancel other services.

**Updating** - If the phone's operating system is being updated, it is possible that the Bluetooth connection will be interrupted. Delete the phone from the vehicle and reconnect.

#### USING CONNECTED DEVICES

**Apple CarPlay and Android Auto** - Volvo is not responsible for the content of the CarPlay or Android Auto apps.

#### PARKING ASSISTANCE SYSTEMS

Keep the camera lens free of dirt, snow and ice to help ensure the best functionality. This is particularly important in poor light conditions.

**V O L V O**