



VOLVO XC90

# QUICK GUIDE

WEB EDITION



## WELCOME TO YOUR NEW VOLVO!

Getting to know your car is an exciting experience.

After looking through this Quick Guide you'll like your new Volvo even more. You can find detailed information in the Owner's Manual.

Warning texts and other important information are only available in the Owner's Manual, not in this folder. The Owner's Manual contains the most up-to-date information.

Options are marked with an asterisk (\*).

There is further information on your car at [www.volvocars.com](http://www.volvocars.com).



**LOCK** **Locks** the doors and fuel filler flap/tailgate and arms the alarm\*.

**UN-LOCK** **Unlocks** the doors and fuel filler flap/tailgate and disarms the alarm\*<sup>A</sup>.



**Unlocks** the tailgate – it does not open.



**Switches on lighting** for 30 seconds<sup>B</sup> in the side mirrors\*, in the passenger compartment, at the floor and on the number plate. Indicators and parking lamps illuminate.



**"Panic" button.** Press and hold for approx. 3 seconds in an emergency to trigger the alarm. Switch off the alarm with **UNLOCK**.

<sup>A</sup> Automatic relocking takes place if a door/tailgate is not opened within 2 minutes after unlocking.

<sup>B</sup> The time is adjustable to 30, 60 or 90 seconds, see the Owner's Manual.

## COLD START

### NOTE

After a cold start the idling speed is higher irrespective of the outside temperature. Raised idling speed is part of Volvo's efficient emissions system.

## AUTOSTART (ONLY 3.2 AND V8)

Depress the clutch and/or brake pedal. Turn the ignition key to end position **III** and release it immediately – the engine starts automatically.

**Diesel engine** Hold the key in position **II** until the symbol goes out, before the engine starts.

## WINDSCREEN WIPERS AND RAIN SENSOR\*



- C** Single sweep
- 0** Off
- D** Intermittent wiping. Turn (2) to adjust.
- E** Normal speed
- F** High speed
- G** Windscreen and headlamp washing
- H** Rear window washer
- 3** Rear window wiper. Intermittent/normal



**1** **Activates rain sensor.** Lamp indicates rain sensor On. Position **D–F** deactivates rain sensor.

**2** **Adjust sensitivity** using the thumb-wheel.

## LIGHT SWITCHES



**0** **Automatic dipped beam** and main beam flash. Main beam cannot be activated.

**☰** **Parking lamps**

**☰** **Dipped beam** – Switches off when the ignition is switched off. Main beam can be activated.

**☰** **Headlamp levelling** – Automatic for Bi-Xenon lights<sup>®\*</sup>

**☺** **Display and instrument lighting**

**☼** **Fog lamps (front)**


**☼** **Fog lamp (rear, only driver's side)**

**A** **Main beam flash**

**B** **Main/dipped beam switching and approach lighting.**



## PARKING BRAKE

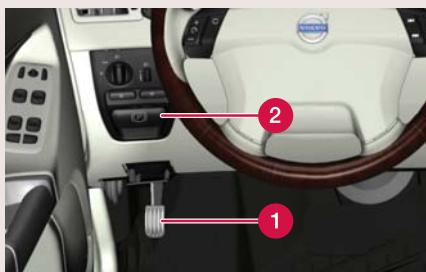

### Apply the parking brake:

1. Press the foot brake pedal down firmly – then the parking brake pedal (1).
2. Release the foot brake. If the car rolls – depress the parking brake pedal further.
3. Park – select gear position 1 (manual) or P (automatic).

### Release the parking brake:


- Press the foot brake pedal down firmly and then pull the handle (2).

## CAR CARE



Washing by hand is gentler to the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

Leather upholstery requires regular cleaning. Treat with leather care products, 1–4 times per year or as necessary. Leather care products are available at your Volvo dealer.

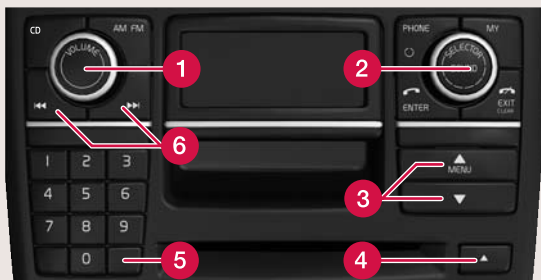

- 1 On/Off and audio volume.** Press for On/Off. Turn to adjust the volume. Audio volume settings for Radio, TP, phone\* and RT1\* are stored individually.
- 2 Sound pattern.** Press to select e.g. BASS, Dolby II\* or SUBWOOFER\*. Turn to adjust.
- 2 Audio source.** Turn for **FM1**, **FM2**, **AM**, **CD** or **AUX**<sup>A</sup>.

## RADIO

- 5 Autostoring stations.**  
Press **AUTO** for approx. 2 seconds. The ten strongest stations are stored. Press **0-9** to select a station.
- 6 Search for station automatically/ manually**  
One short press starts automatic search. One long press starts manual. One long press on **0-9** stores stations, FM1/FM2 store 10 stations each.

## CD PLAYER

- 3 Change CD disc**<sup>B</sup>. Also buttons **1-6** on the keypad (5).
- 4 Ejecting a disc.** One short press ejects the current disc. One long press ejects all<sup>B</sup>.
- 6 Change track**

<sup>A</sup> AUX input for e.g. MP3 player.

<sup>B</sup> Only CD changer\*.

## REFUELLING



Hang up the fuel cap during refuelling.

## REGENERATION (DIESEL)



In certain conditions the instrument panel display may show "SOOT FILTER FULL". At which point the exhaust system's particle filter requires cleaning. This takes place automatically by driving for approx. 20 minutes at an even main road speed. When the message clears the so-called regeneration is complete.



### AUTOMATIC CONTROL

In **AUTO** mode the ECC system controls all functions automatically making driving simpler with optimum climate comfort.

#### 1 Temperature

Turn to required passenger compartment temperature.

#### 2 Automatic

Press **AUTO** for automatic control of set temperature and other functions.

### MANUAL CONTROL



**Fan speed**



**Air distribution**



**Defroster.** To quickly remove misting from the windscreen and side windows.



**Air quality system On** – press **AUT.**  
**Recirculation On** – press **MAN.**



**AC Air conditioning On/Off.** Cools the passenger compartment and demists the windows.



**Rear window and door mirror defrosters.** Automatic deactivation<sup>^</sup>.

<sup>^</sup> Rear window 12 minutes. Mirrors 6 minutes.

### DEACTIVATING THE AIRBAG, PACOS\*



#### **WARNING**

Incorrect use could endanger life. Consult the Owner's Manual if you have the slightest doubt about its use.

### PACOS (Passenger Airbag Cut Off Switch)

Use the ignition key to switch **ON/OFF**.

**OFF:** The airbag is deactivated.

**PASS AIRBAG OFF** is shown in the warning lamp above the interior rearview mirror.

A child can sit on a booster cushion or child seat in the front seat **but never passengers taller than 140 cm.**

**ON:** The airbag is activated.

Passengers taller than 140 cm can sit in the front seat **but never a child on a booster cushion or in a child seat.**



**TRIP COMPUTER**



- 1** **Display for trip computer.** Set the trip computer using (9).
- 8** **Press** to clear a message.
- 9** **Turn** to show e.g. KILOMETRES TO EMPTY TANK in the display (1).
- 10** **Resets current function**

**FUEL**

- 6** **Fuel gauge**
- 7** **Low fuel level**  
When the symbol illuminates the level in the fuel tank is low, refuel as soon as possible.

**TRIP METERS**

- 3** **Display** shows two independent trip meters, **T1 & T2**.
- 2** **Switch between T1 & T2** with one short press. Reset the current meter with one long press.

**CLOCK**

- 4** **Clock and outside temperature gauge.**
- 5** **Turn to stop** and hold to set the clock.

**! IMPORTANT**

"Km to empty tank" is an estimate of possible distance based on earlier driving conditions.

**INDICATOR AND WARNING LAMPS**



	<b>Read in information display.</b>		<b>Fault in brake system.</b> Stop safely, check brake fluid <sup>A</sup> .
	<b>Stop safely.</b> Rectify the fault as per information display.		<b>DSTC* stability system.</b> Flashes when the system is operating.
	<b>Low oil level.</b> Stop safely, check oil level <sup>A</sup> .		<b>Engine preheater (diesel).</b> The car can be started once the symbol has gone out.


<sup>A</sup> Have the car towed if the symbol remains visible.

## DIRECTION INDICATORS



- A. Short sequence, **three flashes**.
- B. **Continuous** flash sequence.

## ADJUSTING THE STEERING WHEEL

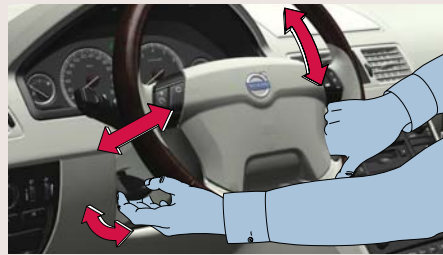

**WARNING!** Adjust the steering wheel before setting off - never while driving.

## BLIS – BLIND SPOT INFORMATION SYSTEM\*



If the BLIS' indicator lamp illuminates on isolated occasions despite there being no other vehicle within the blind spot then this does not mean that a fault has arisen in the system. In the event of a fault in the BLIS system the display shows the text **BLIND-SPOT SYST SERVICE REQUIRED**

## EBA – EMERGENCY BRAKE ASSIST



Emergency Brake Assistance helps to increase brake force and so reduce braking distance. EBA is activated when the driver brakes suddenly. When the EBA function is activated, the brake pedal sinks slightly more than usual, press (and hold) the brake pedal as long as necessary – all braking is discontinued if the pedal is released.


## LOWERING THE REAR SEAT BACKRESTS



### Third row of seats\* (cars seating-7)

Slide the second row of seats to its front position.

- A. Lift the handle up.
- B. Slide the seat cushion into its rearmost position and fold in the lashing eyelets.
- C. Fold the backrest forward.

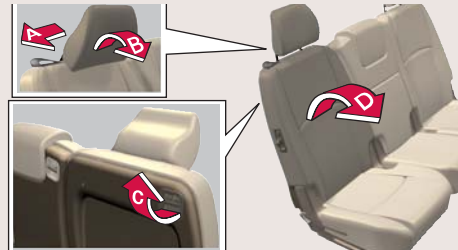

### Second row of seats

Set the seats in their rearmost positions (applies only to cars seating-7).

- A. Pull out the eyelet.
- B. Lower the head restraint.
- C. Release the catch.
- D. Fold the backrest forward and press down to lock the backrest in lowered position.


The front passenger seat can also be lowered. See ADJUSTING THE FRONT SEAT in point 6.

## ADJUSTING THE FRONT SEAT



- 1 Lumbar support
- 2 Backrest rake
- 3 Raise/lower seat
- 4 Seat cushion front edge raise/lower
- 5 Forwards/backwards
- 6 Lowering the passenger seat backrest

## BAG HOLDER

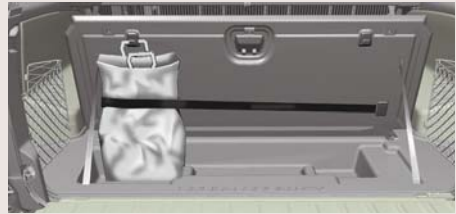

## STORAGE SPACES, 12 V SOCKET & AUX



**12 V sockets** in centre console **front/rear** work in key position I or higher. **12 V socket** on right-hand side in **cargo area** is always active.

The car's audio system can playback music from an MP3 player etc. using the **AUX input** (in the tunnel console).

### ! IMPORTANT

Using the 12 V socket in the cargo area when the engine is switched off could discharge the battery.

