



V40

WEB EDITION  
QUICK GUIDE

## WELCOME TO YOUR NEW VOLVO!

This folder contains a selection of the most common functions in your car. The owner's manual and other manuals contain important information with all warnings and safety instructions.

The following symbols mean:

-  Different parts are pointed out in the overview images.
  -  Step-by-step instructions.
  -  It is particularly important to read the owner's manual.
  -  Important information, warnings and safety instructions that must be read are listed on the last page.
- Options are marked with an asterisk \*.

In addition, learn more about your car at [www.volvocars.com](http://www.volvocars.com).

### 01 Starting and driving

- Remote control key
- Keyless key system\*
- Starting and switching off the engine
- Wipers

### 02 Driver support in your car

- Park Assist Pilot\*
- Lane Keeping Aid\*
- BLIS\* and CTA\*
- Start/Stop function\*

### 03 Your driving environment

- Adjusting the seat
- Adjusting the steering wheel

### 04 Functions in your car


- Climate system controls
- Headlamp control
- Combined instrument panel
- Infotainment system
- Phone\*
- External audio device
- Buttons in the centre console
- Settings in the menu system

### 05 Tips

- Owner's manual as mobile app
- Refuelling
- Car care
- Opening all windows
- Storage spaces
- AUX/USB\* and 12 V sockets

## How does the remote control key work?

01

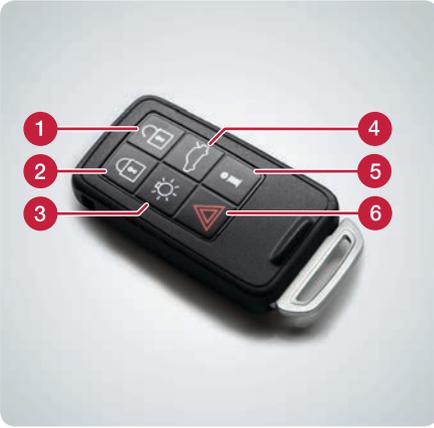

- 1 Unlocks doors and tailgate and disarms the alarm\*. Can be set in **MY CAR**.
- 2 Locks doors and tailgate and arms the alarm.
- 3 Approach light duration.
- 4 One press unlocks the tailgate, two presses open it slightly.
- 5 Information\* about the car.
- 6 Panic function.

The remote control key can store settings including door mirrors and power driver's seat\* – see the owner's manual.



## What do the remote control key indicator lamps\* show?

01



- 1 Green constant light: The car is locked.
- 2 Yellow constant light: The car is unlocked.
- 3 Red constant light: The alarm has been triggered.
- 4 Red light flashing alternately in both indicator lamps: The alarm was triggered less than 5 minutes ago.



## How does the Keyless key system\* work?

01



The key can remain in your pocket for example the whole time.

### Lock and arm the alarm

- Touch the rear section of one of the outer door handles or press lightly on the smaller of the tailgate's two rubberised buttons.

### Unlock and disarm the alarm

- Grip a door handle and open the door in the usual way or press lightly on the larger of the tailgate's two rubberised buttons.





### How do I start the engine?

01

- 1 Press the remote control key into the ignition switch.
- 2 Depress the clutch or brake pedal.
- 3 Briefly press the **START/STOP ENGINE** -button and release – the engine starts.



### How do I switch off the engine?

01

- 1 Briefly press the **START/STOP ENGINE** button – the engine stops.
- 2 Take the remote control key out from the ignition switch.



### How do I start the windscreen wipers and rain sensor\*?

01

Move the lever downward to start the windscreen wipers and upward for a single sweep.

- 1 Rain sensor On/Off.
- 2 Regulates the sensor sensitivity or the intermittent delay.
- 3 Wiper, rear window - intermittent/normal.

## How do I use Park Assist Pilot PAP\*? 02

02



PAP checks the available space, and then steers in the car. Your task is to select the gear, control the speed and brake/stop.

- 1 Activate PAP with a press of the button. Do not drive faster than 30 km/h.
- 2 Follow the instructions that are shown in the combined instrument panel.
- 3 Be prepared to stop the car when the graphics and text advise this.



## What is the function of Lane Keeping Aid LKA\*? 02

02




If the car is about to cross a side line the LKA will actively steer back into the lane with a slight steering torque in the steering wheel. If the car crosses a side line then LKA will warn you with pulsating vibration in the steering wheel.

- Activate LKA with a press of the button.



## What is the function of BLIS\* and CTA\*? 02

02

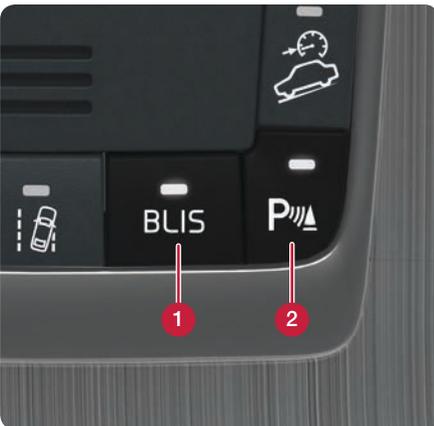

**Blind Spot Information System** advises about vehicles in the blind spot and rapidly approaching vehicles.

**Cross Traffic Alert** warns of crossing traffic during reversing.

BLIS and CTA are activated when the engine is started.

- 1 BLIS On/Off.
- 2 CTA On/Off – operated with the same button that is used for the parking sensors\*.



Parking sensors – see the owner's manual.



### Manual gearbox

Stop the engine: Declutch, move the gear lever into neutral position and release the clutch pedal.

Start the engine: Depress the clutch pedal.

### Automatic gearbox

Stop the engine: Stop the car with the foot brake and then maintain the brake pressure.

Start the engine: Release foot pressure on the foot brake. Illuminated button lamp indicates that the function is active.



### How do I adjust the seat?

## 03

- 1 Raise/lower the front of the seat cushion.
- 2 Raise/lower seat.
- 3 Move the seat forward/backward.
- 4 Tilt the backrest.
- 5 Store settings for power seat\*.
- 6 Memory buttons for power seat.

### Store setting:

Hold the button depressed to store settings while depressing one of the memory buttons.



Seat settings for a power seat can also be stored in the remote control key\* – see the owner's manual.



## How do I adjust the steering wheel?

03



- 1 Release the catch.
- 2 Adjust the steering wheel forward/backward and up/down.
- 3 Activate the catch.



## How do I regulate the temperature with the ECC\*?

04



- 1 Press for individual temperature. Press repeatedly to select the setting for the left, right or both sides. Turn to set the temperature. The centre console's screen shows the selected temperature for each side.
- 2 Press for automatic control of the temperature and other functions. Turn to adjust the fan speed.



## How do I defrost the windscreen?

04



- 1 Press to activate the windscreen's electric heating\* - symbol (1) in the screen illuminates.
- 2 The next press also activates maximum airflow against windscreen and side windows - symbols (1) and (2) illuminate.
- 3 The next press switches off both of the functions - no symbol illuminates.

Without electric heating: Press to activate/deactivate the air flow.



## How does the headlamp control's auto mode work? 04



**AUTO** mode provides the following options:

- The daytime running lights automatically switch between daytime running lights and dipped beam.
- Main beam can be activated when dipped beam is switched on.
- Active high beam (AHB)\* – that dims and activates main beam automatically – can be used.
- Tunnel detection\* is activated.



## How is the trip computer operated? 04



- 1 **OK** opens the trip computer's menus, activates selected option and extinguishes messages.
- 2 Thumbwheel scrolls between the trip computer options.
- 3 **RESET** resets data in the selected trip computer step and goes back in the menu structure.



## How do I reset the trip meter? 04



- 1 Turn the left-hand stalk switch thumbwheel to show trip meter T1 or T2.
- 2 Give a long press on the **RESET** button in order to reset the trip meter shown.



### How do I change the combined instrument panel's appearance?

04

Different themes can be selected with the digital\* combined instrument panel, such as Performance or Eco.

To change the theme:

- 1 Press the left-hand stalk switch **OK** button after the engine has been started.
- 2 Turn the lever's thumbwheel in order to select menu option **Themes** and press **OK**.
- 3 Turn the thumbwheel to select a theme and press **OK** to confirm.

The theme is stored in the remote control key memory\* – see the owner's manual.



### How does the range/"km to empty tank" work?

04

The combined instrument panel shows an estimation of the possible driving distance based on previous driving conditions and remaining fuel quantity.

No guaranteed range remains when "---- km" is shown. Refuel as soon as possible. The illustration shows the digital\* combined instrument panel.

Analogue combined instrument panel – see the owner's manual.



### How do I switch on and off the Infotainment system?

04

- 1 A short press activates the system.
- 2 A long press (until the screen switches off) deactivates.

To switch off the sound (MUTE): Give a short press - the next press reactivates.

Note that the whole of the Sensus system (including navigation\* and phone functions\*) starts/switches off at the same time.

## How do I navigate in the infotainment system? 04



- 1 Press **RADIO, MEDIA, MY CAR, NAV\*** or **TEL\*** to select main source.
- 2 Press **OK/MENU** or the thumbwheel\* in the steering wheel to access the selected source's main menu.
- 3 Turn **TUNE** or the thumbwheel to navigate in the menus.
- 4 Press **OK/MENU** or the thumbwheel to make a selection in the menus.  
Briefly press **EXIT** to go back in the menu system, cancel a function or delete entered characters.  
Give a long press on **EXIT** to go back to normal view, or to go from normal view to the main source view.

### Tips:

To go to the shortcut menu in the NAV or TEL mode, press once on **NAV** or **TEL**. Press again to go back to normal view.



## How do I connect a Bluetooth® phone? 04



- 1 Press **TEL\*** in the centre console.
- 2 Make the external device searchable/visible via Bluetooth®.
- 3 Press **OK/MENU** and follow the instructions on the screen. The device is now connected and can be controlled from the car.

In future the phone will be connected to the car automatically.

If the connection fails – see the owner's manual.





## How do I make a call?

04

- 1 Press **TEL\*** in the centre console.
- 2 Enter the required number or turn the thumbwheel on the steering wheel downward in order to access the phone book, and upward for the call register.
- 3 Press the thumbwheel to dial.

The call is interrupted with a press on **EXIT**.

For more ways to make a call with the phone – see the owner's manual.



## How do I answer the phone\*?

04

- Press the thumbwheel to accept incoming calls.

The call is rejected/interrupted with a press on **EXIT**.

For more ways to answer the phone – see the owner's manual.



## How do I connect an external audio device? 04

- 1 Connect an external device via the AUX input or USB\* port in the centre console.
- 2 Press **MEDIA**.
- 3 Turn **TUNE** to the desired audio source.
- 4 Press **OK/MENU**.

For other connections of an external device – see the owner's manual.



## How do I set a GPS\* destination?

04



- 1 Press **NAV** to start the navigation system – a map is shown.
- 2 Press once again on **NAV** and select **Enter address** with **OK/MENU**.
- 3 Enter a search criterion/search criteria using the daisy wheel or the centre console's numeric keypad.
- 4 Then select **Set single destination** or **Add as waypoint** and press **OK/MENU**.

For more information and market deviations – see the RTI manual\*.

## How do I store a function with the FAV button? 04



- 1 Select a main source (t.ex. **RADIO**, **MEDIA**).
- 2 Select source (e.g. **AM**, **DISC**).
- 3 Press and hold **FAV** depressed until the "favourites menu" is shown.
- 4 Turn **TUNE** to select an option from the list and press **OK/MENU** in order to save.

When the source is active, the stored favourite is accessible by means of a short press on **FAV**.

## What settings can be made in the menu system? 04



Many of the car's functions are handled in **MY CAR**, e.g. settings for clock, door mirrors and locks.

See the earlier heading "How do I navigate in the infotainment system?" for which buttons to use.



## How do I set the clock?

04



- 1 Navigate to **Settings > System options > Time in MY CAR.**
- 2 Press **OK/MENU** to activate the box for hour. Turn **TUNE** in order to set the hour and press **OK/MENU** to deactivate.
- 3 Turn **TUNE** to select the box for minute and press **OK/MENU**. Turn **TUNE** in order to set the minute and press **OK/MENU** to deactivate.
- 4 Turn **TUNE** to select **OK** and press **OK/MENU**.

## What can I do with the owner's manual app? 05

The owner's manual can be downloaded as an application to mobile devices. The mobile app contains the complete owner's manual as well as instruction films, and it has several search paths with text and images.

Download the mobile app from App Store or Google play, use the QR code below. Only available in certain languages and certain mobile devices.



For more information - [www.volvocars.com](http://www.volvocars.com).

## How do I refuel?

05



- 1 With the car unlocked, open the fuel filler flap by pushing lightly on the rear part of the flap and release.
- 2 Fold out the flap.
- 3 Insert the pump nozzle in the fuel filler opening.
- 4 After fuelling: Wait 5-8 seconds before removing the pump nozzle.

## How should I wash the car?

05



Handwashing is gentler on the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

Use clean water and a washing sponge. Remember that dirt and grit can scratch the paintwork.

## How should I clean the leather upholstery\*?

05



Leather requires regular care in order to maintain its appearance. For this reason, the leather upholstery should be treated using the Volvo Leather Care kit 1–4 times per year. The Volvo Leather Care kit is available for purchase from a Volvo dealer.



## How do I open all windows simultaneously?

05



**Remote control key** (see illustration)

- Give a long press on the remote control key's unlock button to open all side windows\* simultaneously.

**Central locking**

- Give a long press on the central locking button on the driver's door to open all side windows\* simultaneously.



## Where are the storage spaces located?

05

Shown here are some of the car's storage spaces.



The owner's manual shows the location of more storage spaces.



## Where are the AUX/USB\* and 12 V sockets located?

05

The remote control key must be at least in key position I in order for the 12V sockets in the passenger compartment to work. The 12V socket\* in the cargo area is always live.



#### How does the Keyless key system\* work?

 The use of gloves may prevent the Keyless function in the door handles. Electromagnetic fields and screening can interfere with the Keyless function. Do not place/store the remote control key near a mobile phone or metal object.

#### How do I start the engine?

 After a cold start the idling speed is high irrespective of outside temperature. It is part of Volvo's efficient emissions system. During cold starting, certain diesel engines may have a delayed start due to preheating.

#### How do I use Park Assist Pilot PAP\*?

 PAP does not work in all situations but is designed simply as a supplementary aid. The driver always bears ultimate responsibility for ensuring that the vehicle is driven safely, and for having an overview of the surroundings and other road users approaching or passing while parking.

#### How do I use Lane Keeping Aid LKA\*?

 LKA is only a driver tool, and does not work in all driving situations and traffic, weather and road conditions. The driver is always responsible that the vehicle is driven in a safe manner and that laws and traffic regulations in force are followed.

#### What is the function of BLIS\* and CTA\*?

 BLIS and CTA are supplements – not substitutes – for a safe driving style and the use of rearview and door mirrors. The assistance from BLIS and CTA can never replace the driver's responsibility and attention. Responsibility for changing lanes safely and reversing in a safe manner always rests with the driver. BLIS does not work in sharp bends. BLIS does not work when the car is reversing.

#### How do I adjust the seat?

 Adjust the driving position of the driver's seat correctly **before** setting off – never while driving. Make sure that the seat is in locked position in order to prevent personal injury in the event of sudden braking or an accident.

#### How do I adjust the steering wheel?

 Adjust the steering wheel (after adjusting the seat) **before** setting off – never while driving.

#### How does the range/"km to empty tank" work?

 A degree of incorrect indication may occur if the driving style is changed.

#### How should I clean the leather upholstery\*?

 Some coloured clothing (e.g. jeans and suede garments) may discolour the upholstery. Never use strong solvents – they could damage the upholstery.

#### Where are the AUX/USB\* and 12 V sockets located?

 Maximum current take-off is 10 A (120 W) in each socket.