



XC60

OWNERS MANUAL

WEB EDITION






DEAR VOLVO OWNER

THANK YOU FOR CHOOSING VOLVO

We hope you will enjoy many years of driving pleasure in your Volvo. The car has been designed for the safety and comfort of you and your passengers. Volvo is one of the safest cars in the world. Your Volvo has also been designed to satisfy all current safety and environmental requirements.

In order to increase your enjoyment of the car, we recommend that you familiarise yourself with the equipment, instructions and maintenance information contained in this owner's manual.

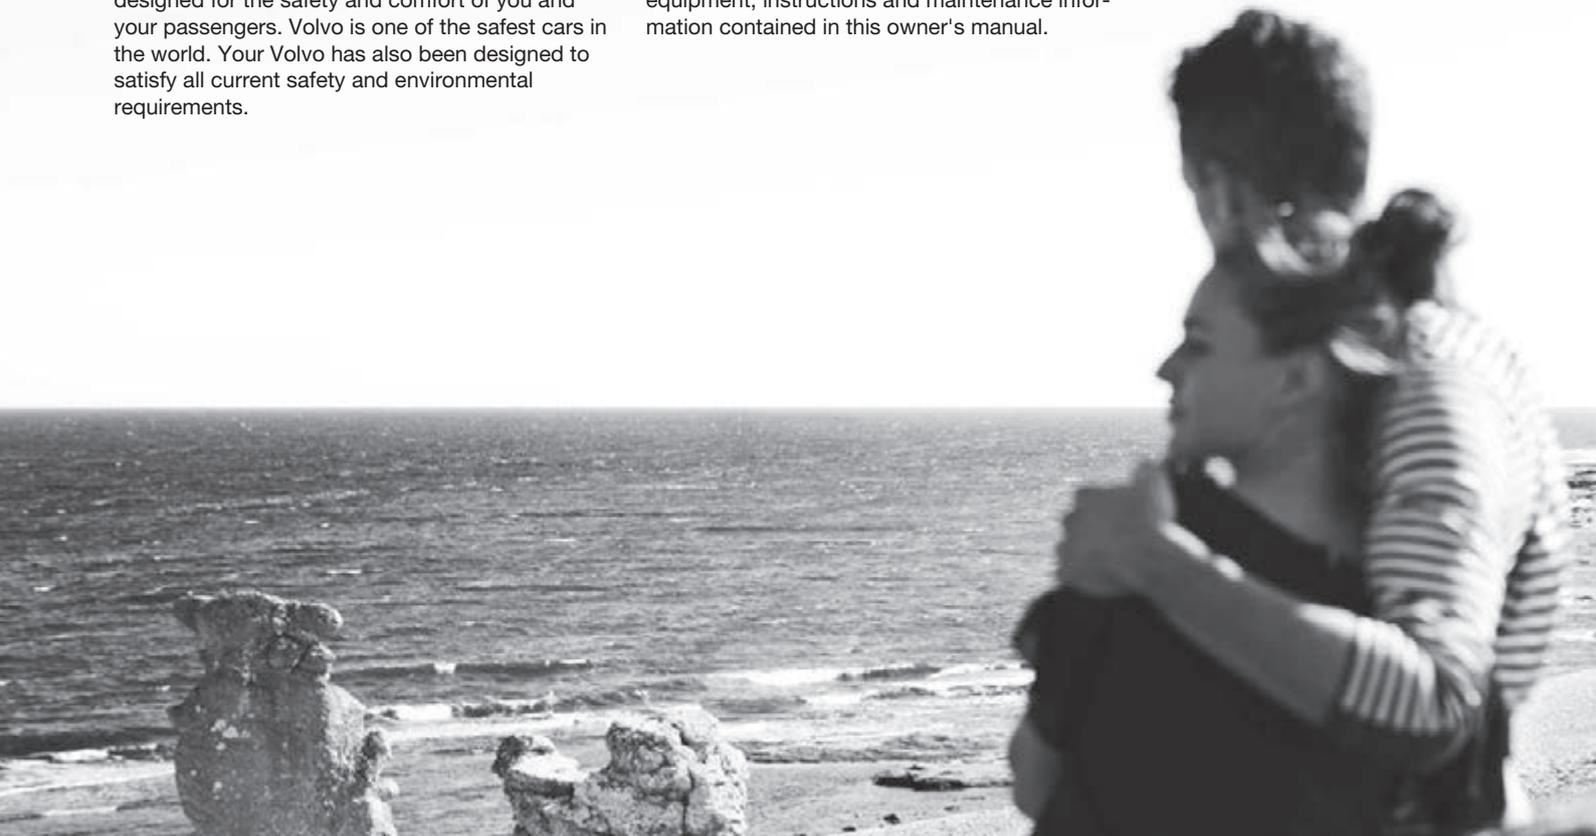



00 Introduction

| | |
|--------------------------------|----|
| Important information..... | 6 |
| Volvo and the environment..... | 10 |

00



01 Safety

| | |
|--|----|
| Seatbelts | 16 |
| Airbags..... | 19 |
| Activating/deactivating the airbag*..... | 22 |
| Side airbags (SIPS bags) | 24 |
| Inflatable Curtain (IC) | 25 |
| WHIPS | 26 |
| Roll-Over Protection System - ROPS..... | 28 |
| When the systems deploy | 29 |
| Safety mode..... | 30 |
| Child safety..... | 31 |

01



02 Locks and alarm

| | |
|---|----|
| Remote control key/key blade..... | 46 |
| Battery replacement, remote control key/PCC*..... | 52 |
| Keyless drive*..... | 54 |
| Locking/unlocking..... | 57 |
| Child safety locks..... | 63 |
| Alarm*..... | 64 |

02



03 Your driving environment

| | |
|---|-----|
| Instruments and controls..... | 68 |
| Volvo Sensus | 80 |
| Key positions..... | 81 |
| Seats..... | 83 |
| Steering wheel..... | 88 |
| Lighting..... | 90 |
| Wipers and washing..... | 100 |
| Windows, rearview and door mirrors..... | 103 |
| Compass*..... | 108 |
| Power panorama roof* | 110 |
| Alcolock*..... | 113 |
| Starting the engine..... | 117 |
| Starting the engine – external battery..... | 121 |
| Gearboxes..... | 123 |
| Start/Stop*..... | 131 |
| All Wheel Drive - AWD*..... | 137 |
| Foot brake..... | 138 |
| HDC Hill Descent Control..... | 140 |
| Parking brake..... | 142 |
| HomeLink® * | 146 |



04 Driver support

| | |
|---|-----|
| DSTC – Stability and traction control system..... | 152 |
| Road sign information - RSI*..... | 154 |
| Cruise control*..... | 157 |
| Adaptive cruise control*..... | 159 |
| Distance Warning*..... | 170 |
| City Safety™..... | 173 |
| Collision Warning with Auto Brake & Pedestrian Protection*..... | 179 |
| Driver Alert System*..... | 187 |
| Driver Alert System - DAC*..... | 188 |
| Driver Alert System - LDW*..... | 192 |
| Park assist syst*..... | 195 |
| Park assist camera*..... | 198 |
| BLIS*..... | 201 |



05 Comfort and driving pleasure

| | |
|---|-----|
| Menus and messages..... | 208 |
| Menu source MY CAR..... | 211 |
| Climate control..... | 219 |
| Engine and passenger compartment heater*..... | 230 |
| Additional heater*..... | 234 |
| Trip computer..... | 236 |
| Adapting driving characteristics..... | 244 |
| Comfort inside the passenger compartment..... | 245 |



06 Infotainment system

| | |
|--|-----|
| General information on infotainment..... | 252 |
| Radio..... | 264 |
| Media player..... | 271 |
| External audio source via AUX/USB* input..... | 275 |
| Media Bluetooth®* | 278 |
| Bluetooth® handsfree*..... | 281 |
| Voice recognition* mobile phone..... | 290 |
| TV*..... | 294 |
| Remote control* | 298 |
| RSE - Rear Seat Entertainment system* | 300 |



07 During your journey

| | |
|-------------------------------------|-----|
| Recommendations during driving..... | 312 |
| Refuelling..... | 315 |
| Fuel..... | 316 |
| Loading..... | 319 |
| Cargo area..... | 322 |
| Driving with a trailer..... | 325 |
| Towing and recovery..... | 331 |



08 Wheels and tyres

| | |
|--|-----|
| General | 336 |
| Changing wheels | 341 |
| Tyre pressure | 344 |
| Warning triangle and first-aid kit*..... | 345 |
| Emergency puncture repair (TMK)* | 346 |



09 Maintenance and service

| | |
|------------------------------------|-----|
| Engine compartment..... | 354 |
| Lamps..... | 362 |
| Wiper blades and washer fluid..... | 368 |
| Battery..... | 371 |
| Fuses..... | 376 |
| Car care..... | 387 |



10 Specifications

| | |
|--|-----|
| Type designations..... | 396 |
| Dimensions and weights..... | 398 |
| Engine specifications..... | 401 |
| Engine oil..... | 402 |
| Fluids and lubricants..... | 404 |
| Fuel..... | 406 |
| Wheel and tyres, dimensions and pressure | 408 |
| Electrical system..... | 409 |
| Type approval..... | 410 |
| Licenses..... | 419 |
| Symbols in the display..... | 422 |



11 Alphabetical Index

| | |
|-------------------------|-----|
| Alphabetical Index..... | 426 |
|-------------------------|-----|



Important information

Reading the Owner's Manual

Introduction

A good way of getting to know your new car is to read the owner's manual, ideally before your first journey. This will give you the opportunity to familiarise yourself with new functions, to see how best to handle the car in different situations, and to make the best use of all the car's features. Please pay attention to the safety instructions contained in the manual.

The specifications, design features and illustrations in this owner's manual are not binding. We reserve the right to make modifications without prior notice.

© Volvo Car Corporation

Option

All types of option/accessory are marked with an asterisk*.

In addition to standard equipment, this manual also describes options (factory fitted equipment) and certain accessories (retrofitted extra equipment).

The equipment described in the owner's manual is not available in all cars - they have different equipment depending on adaptations for the needs of different markets and national or local laws and regulations.

In the event of uncertainty over what is standard or an option/accessory, contact a Volvo dealer.

Special texts



WARNING

Warning texts advise of a risk of personal injury.



IMPORTANT

Important texts advise of a risk of material damage.



NOTE

NOTE texts give advice or tips that facilitate the use of features and functions for example.

Footnote

There is footnote information in the owner's manual that is located at the bottom of the page. This information is an addition to the text that it refers to via a number. If the footnote refers to text in a table then letters are used instead of numbers for referral.

Message texts


Text messages can be shown in the combined instrument panel and in the screen.

These text messages are highlighted in the owner's manual by means of the text being slightly larger and printed in grey. Examples of this are in menu texts and message texts in the screen (e.g. **Audio settings**).

Decals

The car contains different types of decal which are designed to convey important information in a simple and clear manner. The decals in the car have the following descending degree of importance for the warning/information.

Warning for personal injury

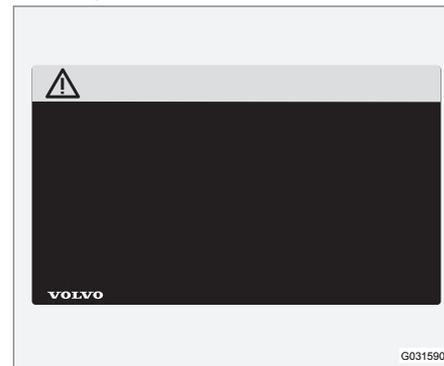

Black ISO symbols on yellow warning field, white text/image on black message field. Used to indicate the presence of danger

Important information

which, if the warning is ignored, may result in serious personal injury or fatality.

Risk of property damage



White ISO symbols and white text/image on black or blue warning field and message field. Used to indicate the presence of danger which, if the warning is ignored, may result in damage to property.

Information



White ISO symbols and white text/image on black message field.

 **NOTE**

The labels shown in the owner's manual are not provided as exact reproductions of those in the car. The purpose is to show their approximate appearance and location in the car. The information that applies to your car in particular is available on the label in question in your car.

Procedure lists

Procedures where action must be taken in a certain sequence are numbered in the owner's manual.

- 1 When there is a series of illustrations for step-by-step instructions each step is numbered in the same way as the corresponding illustration.
- A There are numbered lists with letters adjacent to the series of illustrations where the order of the instructions is not significant.
- ➔ Arrows appear numbered and unnumbered and are used to illustrate a movement.
- ➔A Arrows with letters are used to clarify a movement when the reciprocal order is of no relevance.

If there is no series of illustrations for step-by-step instructions then the different steps are numbered with normal numbers.

Position lists

- 1 Red circles containing a number are used in overview images where different components are pointed out. The number recurs in the position list featured in connection with the illustration that describes the item.



Important information

Bulleted lists

A bulleted list is used when there is a list of points in the owner's manual.

Example:

- Coolant
- Engine oil

Images

The manual's images are sometimes schematic and may deviate from the car's appearance depending on equipment level and market.

To be continued

▶▶ This symbol is located furthest down to the right when a section continues on the following page.

Recording data

Your vehicle contains a number of computers whose function is to continuously check and monitor the vehicle's operation and functionality. Some of the computers can record information during normal driving if they detect an error. In addition, information is recorded in the event of a collision or incident. Parts of the recorded information are required so that technicians can diagnose and rectify faults in the vehicle during servicing and maintenance and so that Volvo can

fulfil legal requirements and other regulations. In addition to this, the information is used for research purposes by Volvo in order to continually develop quality and safety, as the information can contribute to a better understanding of the factors that cause accidents and injuries. The information includes details of the status and functionality of various systems and modules in the vehicle with regard to engine, throttle, steering and brake systems, amongst other things. This information may include details regarding the way the driver drives the vehicle, such as vehicle speed, brake and accelerator pedal use, steering wheel movement and whether or not the driver and passengers have used their seatbelts. For the reasons given this information may be stored in the vehicle's computers for a certain length of time, but also as a result of a collision or incident. This information may be stored by Volvo as long as it can help to further develop and further enhance safety and quality and as long as there are legal requirements and other regulations that Volvo needs to consider.

Volvo will not contribute to the above-described information being disclosed to third parties without the vehicle owner's consent. However, due to national legislation and regulations Volvo may be required to disclose such information to authorities such as police

authorities, or others who may assert a legal right to have access to it.

To be able to read and interpret the information recorded by the computers in the vehicle requires special technical equipment that Volvo, and workshops that have entered into agreements with Volvo, have access to. Volvo is responsible that the information, which is transferred to Volvo during servicing and maintenance, is stored and handled in a secure manner and that the handling complies with applicable legal requirements. For further information - contact a Volvo dealer.

Accessories and extra equipment

The incorrect connection and installation of accessories can negatively affect the car's electrical system. Certain accessories only function when their associated software is installed in the car's computer system. Volvo therefore recommends that you always contact an authorised Volvo workshop before installing accessories which are connected to or affect the electrical system.

**Important information****Change of ownership for cars with Volvo On Call***

Volvo On Call is a supplemental service that consists of safety, security and comfort services. If the car has Volvo On Call and there is a change of owner, it is very important that these services are discontinued so that the former owner cannot access the services in the car. Contact an authorised Volvo dealer in the event of a change of ownership.

Information on the Internet

At www.volvocars.com there is further information concerning your car.

A QR code reader is required to read the QR code, which is available as a supplemental program for several mobile phones. The QR code reader can be downloaded from App Store or Google Play.



QR code



Volvo and the environment

Volvo Cars' environmental philosophy



Environmental care is one of Volvo Car Corporation's core values which influence all operations. We also believe that our customers share our consideration for the environment.

Your Volvo complies with strict international environmental standards and is also manufactured in one of the cleanest and most resource-efficient plants in the world. Volvo Car Corporation has global ISO certification, which includes the environmental standard ISO 14001 covering all factories and several of our other units. We also set requirements

for our partners so that they work systematically with environmental issues.

Fuel consumption

Volvo cars have competitive fuel consumption in each of their respective classes. Lower fuel consumption generally results in lower emission of the greenhouse gas, carbon dioxide.

It is possible for the driver to influence fuel consumption. For more information read under the heading, **Reducing environmental impact**.

Efficient emission control

Your Volvo is manufactured following the concept "Clean inside and out" – a concept that encompasses a clean interior environment as well as highly efficient emission control. In many cases the exhaust emissions are well below the applicable standards.

Clean air in the passenger compartment

A passenger compartment filter prevents dust and pollen from entering the passenger compartment via the air intake.



Volvo and the environment

A sophisticated air quality system, IAQS* (Interior Air Quality System) ensures that the incoming air is cleaner than the air in the traffic outside.

The system consists of an electronic sensor and a carbon filter. The incoming air is monitored continuously and if there is an increase in the level of certain unhealthy gases such as carbon monoxide then the air intake is closed. Such a situation may arise in heavy traffic, queues and tunnels for example.

The entry of nitrous oxides, ground-level ozone and hydrocarbons is prevented by the carbon filter.

Interior

The interior of a Volvo is designed to be pleasant and comfortable, even for people with contact allergies and for asthma sufferers. Extreme attention has been given to choosing environmentally-compatible materials.

Volvo workshops and the environment

Regular maintenance creates the conditions for a long service life and low fuel consumption for your car. In this way you contribute to a cleaner environment. When Volvo's workshops are entrusted with the service and maintenance of your car it becomes part of our system. Volvo makes clear demands regarding the way in which our workshops are designed in order to prevent spills and

discharges into the environment. Our workshop staff have the knowledge and the tools required to guarantee good environmental care.

Reducing environmental impact

You can easily help reduce environmental impact - here are a few tips:

- Avoid letting the engine idle - switch off the engine when stationary for longer periods. Pay attention to local regulations.
- Drive economically - think ahead.
- Perform service and maintenance in accordance with the owner's manual's instructions - follow the Service and Warranty Booklet's recommended intervals.
- If the car is equipped with an engine block heater*, use it before starting from cold - it improves starting capacity and reduces wear in cold weather and the engine reaches normal operating temperature more quickly, which lowers consumption and reduces emissions.
- High speed increases consumption considerably due to increased wind resistance - a doubling of speed increases wind resistance 4 times.
- Always dispose of environmentally hazardous waste, such as batteries and oils, in an environmentally safe manner. Consult

a workshop in the event of uncertainty about how this type of waste should be discarded - an authorised Volvo workshop is recommended.

Following this advice can save money, the planet's resources are saved, and the car's durability is extended. For more information and further advice, see the pages 312 and 406.

Recycling

As a part of Volvo's environmental work, it is important that the car is recycled in an environmentally sound manner. Almost all of the car can be recycled. The last owner of the car is therefore requested to contact a dealer for referral to a certified/approved recycling facility.

The owner's manual and the environment

The Forest Stewardship Council® symbol shows that the paper pulp in this publication comes from FSC® certified forests or other controlled sources.

* Option/accessory, for more information, see Introduction.



Volvo and the environment





| | |
|---|----|
| Seatbelts | 16 |
| Airbags..... | 19 |
| Activating/deactivating the airbag* | 22 |
| Side airbags (SIPS bags) | 24 |
| Inflatable Curtain (IC) | 25 |
| WHIPS | 26 |
| Roll-Over Protection System - ROPS..... | 28 |
| When the systems deploy | 29 |
| Safety mode..... | 30 |
| Child safety..... | 31 |



01


SAFETY





Seatbelts

General information

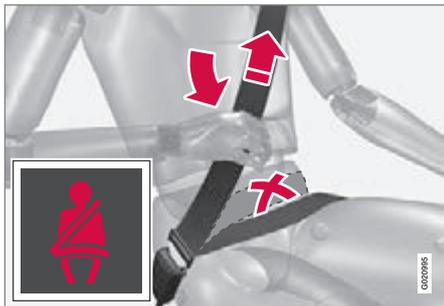

Heavy braking can have serious consequences if the seatbelts are not used. Ensure that all passengers use their seatbelts.

It is important that the seatbelt lies against the body so it can provide maximum protection. Do not lean the backrest too far back. The seatbelt is designed to protect in a normal seating position.

Putting on a seatbelt

Pull the belt out slowly and secure it by pressing its locking tab into the seatbelt buckle. A loud "click" indicates that the belt has locked.

The buckles only fit the intended lock in the rear seat¹.

¹ Certain markets.

Releasing the seatbelt

Press the red button on the seatbelt buckle and then let the belt retract. If the seatbelt does not retract fully, feed it in by hand so that it does not hang loose.

The seatbelt locks and cannot be withdrawn:

- if it is pulled out too quickly
- during braking and acceleration
- if the car leans heavily.

Make sure that you:

- do not use clips or anything else that can prevent the seatbelt from fitting properly
- ensure that the seatbelt is not twisted or caught on anything
- the hip strap must be positioned low down (not over the abdomen)
- tension the hip strap over the lap by pulling the diagonal shoulder belt up towards the shoulder.

WARNING

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

WARNING

Each seatbelt is designed for only one person.

WARNING

Never modify or repair the seatbelts yourself. Volvo recommends that you contact an authorised Volvo workshop.

If a seatbelt has been subjected to a major load, such as in conjunction with a collision, the entire seatbelt must be replaced. Some of the protective characteristics of the seatbelt may have been lost, even if it appears to be undamaged. In addition, replace the seatbelt if the belt is worn or damaged. The new seatbelt must be type-approved and intended for installation in the same position as the replaced seatbelt.



Seatbelts and pregnancy



The seatbelt should always be worn during pregnancy. But it is crucial that it be worn in the correct way. The diagonal section should wrap over the shoulder then be routed between the breasts and to the side of the abdomen.

The lap section should lay flat over the thighs and as low as possible under the abdomen. – It must never be allowed to ride upward. Remove the slack from the seatbelt and ensure that it fits as close to the body as possible. In addition, check that there are no twists in the seatbelt.

As the pregnancy progresses, pregnant drivers should adjust their seats and steering wheel such that they can easily maintain control of the vehicle as they drive (which means

that they must be able to easily operate the foot pedals and steering wheel). The aim should be to position the seat with as large a distance as possible between abdomen and steering wheel.

Seatbelt reminder



Unbelted occupants will be reminded to fasten their seatbelts by means of an audio and visual reminder. The audible reminder is speed dependent, and in some cases time dependent. The visual reminder is located in the roof console and in the combined instrument panel.

Child seats are not covered by the seatbelt reminder system.

Rear seat

The seatbelt reminder in the rear seat has two subfunctions:

- Provides information on which seatbelts are being used in the rear seat. A message appears in the combined instrument panel when the seatbelts are in use, or if one of the rear doors has been opened. The message is cleared automatically after driving for approximately 30 seconds or after pressing the indicator stalk's **OK** button.
- Provides a warning if one of the rear seatbelts is unfastened during travel. This warning takes the form of a message in the combined instrument panel along with the audio/visual signal. The warning stops when the seatbelt is re-fastened, or it can also be acknowledged manually by pressing the **OK** button.

The message in the combined instrument panel showing which seatbelts are in use is always shown. Press the **OK** button to see stored messages.



Seatbelts

Certain markets

An acoustic signal and indicator lamp remind the driver and front seat passenger to use a seatbelt if either of them is not wearing one. At low speed, the audible reminder will sound for the first 6 seconds.

Seatbelt tensioner

All the seatbelts are equipped with belt tensioners. A mechanism in the seatbelt tensioner tightens the seatbelt in the event of a sufficiently violent collision. The seatbelt then provides more effective restraint for the occupants.




WARNING


Never insert the tongue of the passenger's seatbelt into the buckle on the driver's side. Always insert the tongue of the seatbelt into the buckle on the correct side. Do not make any damages on seatbelts nor insert any foreign objects into a buckle. The seatbelts and buckles would then possibly not function as intended in the event of a collision. There is a risk of serious injury.



Warning symbol in combined instrument panel

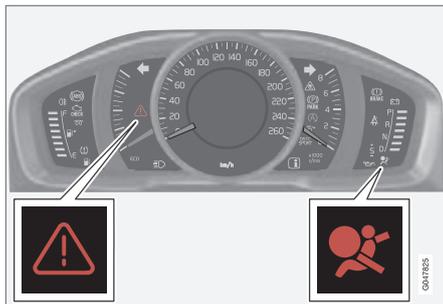

Analogue combined instrument panel.

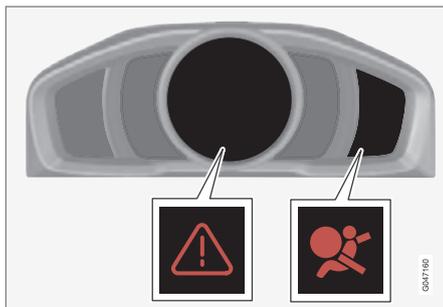

Digital combined instrument panel.

The warning symbol in the combined instrument panel illuminates when the remote con-


trol key is in key position II. The symbol clears after approx. 6 seconds provided the airbag system is fault-free.

WARNING


If the warning symbol for the airbag system remains illuminated or illuminates while driving, it means that the airbag system does not have full functionality. The symbol indicates a fault in the seatbelt tensioner system, SIPS, the IC system or some other fault in the system. Volvo recommends that you contact an authorised Volvo workshop immediately.

As well as the warning symbol, a message may appear on the information display in appropriate cases. If the warning symbol malfunctions, the warning triangle illuminates and **SRS airbag Service required** or **SRS airbag Service urgent** appears in the display. Volvo recommends that you contact an authorised Volvo workshop immediately.

Airbag system

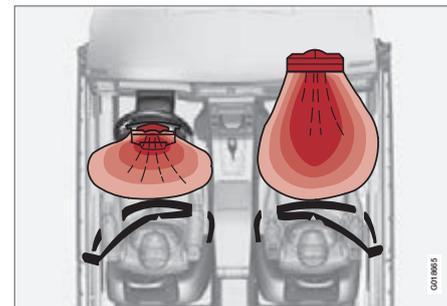

Airbag system, left-hand drive car.

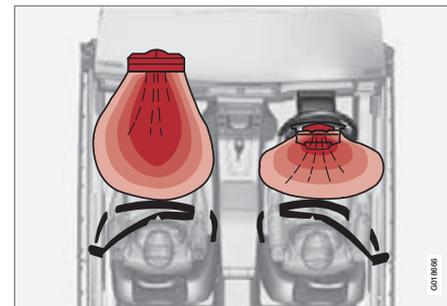

Airbag system, right-hand drive car.

The system consists of airbags and sensors. A sufficiently violent collision trips the sensors and the airbag(s) are inflated and become



Airbags

hot. To cushion the impact, the airbag deflates when compressed. When this occurs, smoke escapes into the car. This is completely normal. The entire process, including inflation and deflation of the airbag, occurs within tenths of a second.

WARNING

Volvo recommends that you contact an authorised Volvo workshop for repair. Defective work in the airbag system could cause malfunction and result in serious personal injury.

NOTE

The detectors react differently depending on the nature of the collision and whether or not the seatbelts are fastened. Applies to all belt positions.

It is therefore possible that only one (or none) of the airbags may inflate in a collision. The detectors sense the force of the collision on the vehicle and the action is adapted accordingly so that one or more airbags are deployed.

Airbag on the driver's side

The car has an airbag to supplement the protection afforded by the seatbelt on the driver's side. It is folded up into the centre of the steering wheel. The steering wheel is marked **AIRBAG**.

WARNING

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

Passenger airbag



Location of the front passenger airbag in a left-hand drive car.



Location of the front passenger airbag in a right-hand drive car.

The car has an airbag to supplement the protection afforded by the seatbelt on the passenger side. It is folded up into a compartment above the glovebox. Its cover panel is marked **AIRBAG**.

WARNING

The seatbelts and airbags interact. If the belt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

To minimise the risk of injury if the airbag deploys, passengers must sit as upright as possible with their feet on the floor and backs against the backrest. Seatbelts must be secured.

**! WARNING**

Do not put objects in front of or above the dashboard where the passenger airbag is located.

! WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag is activated.

Never allow anybody to stand or sit in front of the front passenger seat.

No one shorter than 140 cm should ever sit in the front passenger seat if the airbag is activated.

Failure to follow the advice given above can endanger life.



Activating/deactivating the airbag*

Key switch off - PACOS*

General information

The airbag for the front passenger seat can be deactivated if the car is equipped with a switch, PACOS (Passenger Airbag Cut Off Switch). For information on how to activate/deactivate, see under the heading Activating/deactivating.

Key switch off/switch

The switch for the passenger airbag (PACOS) is located on the passenger end of the instrument panel and is accessible when the passenger door is open (see under the heading below, Activating/deactivating).

Check that the switch is in the required position. The remote control key's key blade should be used to change position.

For information on the key blade, see page 50.

WARNING

Failure to follow the advice given above could endanger the life of passengers in the car.

WARNING

If the car is equipped with a front passenger airbag, but does not have a PACOS switch (Passenger Airbag Cut Off Switch), then the airbag will always be activated.

WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag is activated and the symbol  in the roof console is illuminated. Failure to follow this advice could endanger the life of the child.

WARNING

Do not allow anyone to sit in the front passenger seat if the message in the roof console (see page 23) indicates that the airbag is deactivated, and if the warning symbol for the airbag system is also displayed in the combined instrument panel. This indicates that there has been a severe malfunction. Visit a workshop as soon as possible. Volvo recommends that you contact an authorised Volvo workshop.

Activating/deactivating



Location of airbag label plus switch.

- A** The airbag is activated. With the switch in this position, persons taller than 140 cm can sit in the front passenger seat, but never children in a child seat or on a booster cushion.
- B** The airbag is deactivated. With the switch in this position, children in a child seat or on a booster cushion can sit in the front passenger seat, but never persons taller than 140 cm.



Activating/deactivating the airbag*

! WARNING

Activated airbag (passenger seat):

Never place a child in a child seat or on a booster cushion on the front passenger seat when the airbag is activated. This applies to everyone shorter than 140 cm.

Deactivated airbag (passenger seat):

No one taller than 140 cm should ever sit in the front passenger seat when the airbag is deactivated.

Failure to follow the advice given above can endanger life.

i NOTE

When the remote control key is in key position **II** the warning symbol for the airbag is shown in the combined instrument panel for approx. 6 seconds (see page 19).

Following which, the indicator in the roof console is illuminated showing the correct status for the front passenger seat airbag. For more information about the different key positions for the remote control key, see page 81.

Activated airbag



Indicator showing that the passenger airbag is activated.

A warning symbol in the roof console indicates that the airbag for the front passenger seat is activated (see preceding illustration).

Deactivated airbag



Indicator showing that the passenger airbag is deactivated.

A text message and a symbol in the roof console indicate that the airbag for the front passenger seat is deactivated (see preceding illustration).

* Option/accessory, for more information, see Introduction.



Side airbags (SIPS bags)


Side airbag




In a side impact collision a large proportion of the collision force is transferred by the SIPS (Side Impact Protection System) to beams, pillars, the floor, the roof and other structural parts of the body. The side airbags at the driver's and front passenger seats protect the chest area and the hip and are an important part of the SIPS.

The SIPS bag system consists of two main components, side airbag and sensors. The side airbags are located in the front seat backrests.

Location

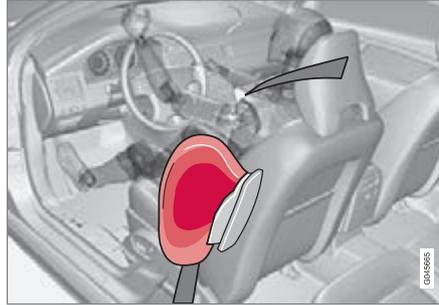

Driver's seat, left-hand drive.

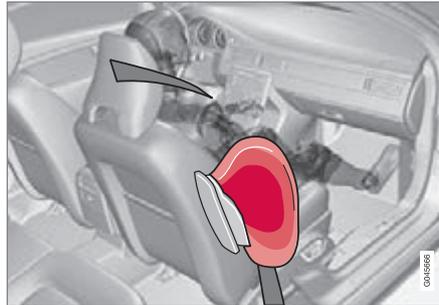

Front passenger seat, left-hand drive.

The SIPS bag system consists of side airbags and sensors. A sufficiently violent collision trips the sensors and the side airbags are inflated. The airbag inflates between the

occupant and the door panel and thereby cushions the initial impact. The airbag deflates when compressed by the collision. The side airbag is normally only deployed on the side of the collision.

Child seats and side airbags

The protection provided by the car to children seated in a child seat or on a booster cushion is not diminished by the side airbag.

WARNING

- Volvo recommends that repairs are only carried out by an authorised Volvo workshop. Defective work in the SIPS-bag system could cause malfunction and result in serious personal injury.
- Do not put objects in the area between the outside of the seat and the door panel, since this area is required by the side airbag.
- Volvo recommends the use only of car seat covers approved by Volvo. Other seat covers may impede the operation of the side airbags.
- Side airbags are a supplement the seatbelts. Always use a seatbelt.

**Inflatable Curtain (IC)****Properties**

The inflatable curtain IC (Inflatable Curtain) is a part of SIPS and the airbags. It is fitted in the headlining along both sides of the roof and protects the car's occupants sitting in the outer seats. A sufficiently violent collision trips the sensors and the inflatable curtain is inflated. The inflatable curtain helps to prevent the driver and passengers from striking their heads on the inside of the car during a collision.

⚠ WARNING

Never hang or attach heavy items onto the handles in the roof. The hook is only designed for light clothing (not for solid objects such as umbrellas for example).

Do not screw or install anything onto the car's headlining, door pillars or side panels. This could compromise the intended protection. Volvo recommends that you only ever use Volvo genuine parts that are approved for placement in these areas.

⚠ WARNING

Do not load the car higher than 50 mm under the top edge of the door windows. Otherwise, the intended protection of the inflatable curtain, which is concealed in the headlining, may be compromised.

⚠ WARNING


The inflatable curtain is a supplement to the seatbelts.

Always use a seatbelt.



WHIPS

Protection against whiplash injury – WHIPS

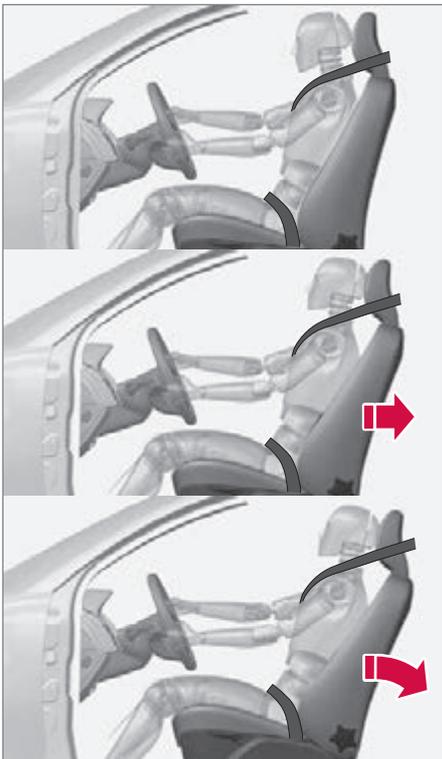

The whiplash protection system (WHIPS) consists of energy absorbing backrests and specially designed head restraints in the front seats. The system is actuated by a rear-end collision, where the angle and speed of the collision, and the nature of the colliding vehicle all have an influence.

WARNING

The WHIPS system is a supplement to the seatbelts. Always use a seatbelt.

Properties of the seat

When the WHIPS system is deployed, the front seat backrests are lowered backward to alter the seating position of the driver and front seat passenger. This reduces the risk of whiplash injury.

WARNING

Never modify or repair the seat or WHIPS system yourself. Volvo recommends that you contact an authorised Volvo workshop.

WHIPS system and child seats/booster cushions

The protection provided by the car to children seated in a child seat or on a booster cushion is not diminished by the WHIPS system.

Correct seating position

For the best possible protection, the driver and front seat passenger should sit in the centre of the seat with as little space as possible between the head and the head restraint.

Do not obstruct the WHIPS system



Do not leave any objects on the floor behind the driver's seat/passenger seat that may prevent the WHIPS system from functioning.

WARNING

Do not squeeze rigid objects between the rear seat cushion and the front seat backrest. Make sure you do not obstruct the function of the WHIPS system.



Do not place objects on the rear seat that may prevent the WHIPS system from functioning.

WARNING

If a rear seat backrest is folded down, the corresponding front seat must be moved forward so that it does not touch the folded backrest.

WARNING

If a seat has been subjected to extreme forces, such as due to a rear-end collision, the WHIPS system must be checked. Volvo recommends that it is checked by an authorised Volvo workshop.

Part of the WHIPS system's protective capacity may have been lost even if the seats appear to be undamaged.

Volvo recommends that you contact an authorised Volvo workshop to have the system checked even after a minor rear-end collision.



Roll-Over Protection System - ROPS

Function

Volvo's Roll-Over Protection System (ROPS) has been designed to reduce the risk of the car overturning and to provide the best possible protection in the event of such an accident.

The system consists of a stabiliser system, Roll Stability Control (RSC) that minimises the risk of overturning, for example, during sudden evasive manoeuvres or if the car skids.

The RSC system uses a sensor which registers changes in the car's lateral inclination angle. This information is used to calculate the risk of the car overturning. If a risk exists, the DSTC system engages, engine torque is lowered and one or more wheels are braked until the car has regained its stability.

For more information on the DSTC system, see page 152.



WARNING

Under normal driving conditions, the RSC system improves the car's road safety, but this must not be taken as a reason to increase speed. Always follow the usual precautions for safe driving.



When the systems deploy

When the systems deploy

| System | Triggered |
|--|---|
| Seatbelt tensioner, front seat | In the event of a frontal collision, and/or side-impact collision, and/or rear-end collision and/or overturning |
| Seatbelt tensioner, rear seat | In a frontal collision and/or side-impact accident and/or overturning |
| Airbags (Steering wheel and passenger airbag) | In a frontal collision ^A |
| Side airbags (SIPS) | In a side-impact accident ^A |
| Inflatable Curtain IC | In the event of a side impact and/or overturning and/or some frontal collisions ^A |
| Whiplash protection WHIPS | In a rear-end collision |

^A The bodywork of the car could be greatly deformed in a collision without airbag deployment. A number of factors such as the rigidity and weight of the object hit, the speed

of the car, the angle of the collision etc. affects how the different safety systems of the car are activated.

If the airbags have deployed, the following is recommended:

- Recovering the car. Volvo recommends that you have it conveyed to an authorised Volvo workshop. Do not drive with deployed airbags.
- Volvo recommends that you engage an authorised Volvo workshop to handle the replacement of components in the car's safety systems.
- Always contact a doctor.



NOTE

The airbags and belt tensioner system are deployed only once during a collision.



WARNING

The airbag system's control module is located in the centre console. If the centre console is drenched with water or other liquid, disconnect the battery cables. Do not attempt to start the car since the airbags may deploy. Recovering the car. Volvo recommends that you have it conveyed to an authorised Volvo workshop.




WARNING

Never drive with deployed airbags. They can make steering difficult. Other safety systems may also be damaged. The smoke and dust created when the airbags are deployed can cause skin and eye irritation/injury after intensive exposure. In case of irritation, wash with cold water. The rapid deployment sequence and airbag fabric may cause friction and skin burns.




Safety mode

Driving after a collision

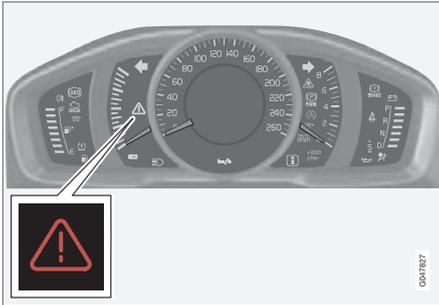

Warning symbol in analogue combined instrument panel.

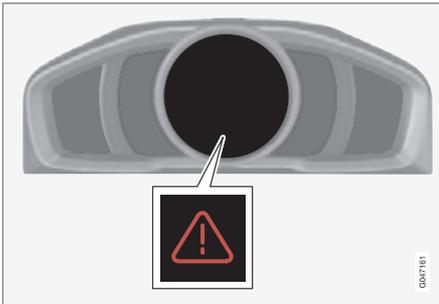

Warning symbol in digital combined instrument panel.

If the car is involved in a collision, the text **Safety mode See manual** may appear on

the information display. This means that the car has reduced functionality. Safety mode is a protective state that is enforced when the collision may have damaged any of the car's vital functions, such as the fuel lines, sensors for one of the safety systems, or the brake system.

Attempting to start the car

First, check that no fuel is leaking from the car. There must be no smell of fuel either.

If everything seems normal and you have checked for indications of fuel leakage, you may attempt to start the car.

Remove the remote control key and open the driver's door. If a message is now shown to the effect that the ignition is on, press the start button. Then close the door and reinsert the remote control key. The car's electronics will now try to reset themselves to normal mode. Then try to start the car.

If the message **Safety mode See manual** is still shown on the display then the car must not be driven or towed, but a vehicle recovery service used instead, see page 332. Hidden damage can make the car impossible to manoeuvre during the journey, even if the car seems driveable.

Moving the car

If **Normal mode** is shown after **Safety mode See manual** has been reset, the car can be moved carefully out of a dangerous position. Do not move the car further than necessary.

WARNING

Never attempt to repair your car or reset the electronics yourself if the car has been in safety mode. This could result in personal injury or the car not functioning as normal. Volvo recommends that you engage an authorised Volvo workshop to check and restore the car to normal status after **Safety mode See manual** has been displayed.

WARNING

Never, under any circumstances, attempt to restart the car if it smells of fuel when the **Safety mode See manual** message is displayed. Leave the car at once.

WARNING

If the car is in safety mode it must not be towed. It must be transported from its location. Volvo recommends that it is transported to an authorised Volvo workshop.



Child safety

Children should sit comfortably and safely

Volvo recommends that children travel in rear-facing child seats until as late an age as possible, at least until 3-4 years of age, and then front-facing booster cushions/child seats until up to 10 years of age.

The position of a child in the car and the choice of equipment are dictated by the child's weight and size, for more information, see page 32.

NOTE

Regulations regarding the placement of children in cars vary from country to country. Check what does apply.

Children of all ages and sizes must always sit correctly secured in the car. Never allow a child to sit on the knee of a passenger.

Volvo has child safety equipment (child seats, booster cushions & attachment devices) which is designed for your particular car. Using Volvo's child safety equipment provides you with optimum conditions for your child to travel safely in the car. Furthermore, the child safety equipment fits and is easy to use.

NOTE

In the event of questions when fitting child safety products, contact the manufacturer for clearer instructions.

Child seats

Child seats and airbags are not compatible.

NOTE

When using child safety products it is important to read the installation instructions included.

WARNING

Do not secure the straps of the child seat to the seat's horizontal adjustment bar, springs or the rails and beams under the seat. Sharp edges may damage the straps.

Look in the installation instructions for the child seat for the correct fitting.

Location of child seats

You may place:

- a child seat/booster cushion on the passenger seat, provided the passenger airbag is not activated¹.
- one or more child seats/booster cushions in the rear seat.

Always fit child seats/booster cushions in the rear seat if the passenger airbag is activated. If a child is sitting on the front passenger seat then he/she could suffer serious injury if the airbag deploys.

¹ For information on activated/deactivated airbag, see page 22.



Child safety

WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.

No one shorter than 140 cm should ever sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger life.

WARNING

Booster cushions/child seats with steel braces or some other design that could rest on the seatbelt buckle's opening button must not be used, as they could cause the seatbelt buckle to open accidentally.

Do not allow the upper section of the child seat to rest against the windscreen.

Label Airbag



The label becomes visible when the passenger door is opened; see the illustration on page 22.

Recommended child seats²

| Weight | Front seat (with deactivated airbag) | Outer rear seat | Centre rear seat |
|-----------------------|--|---|--|
| Group 0 max 10 kg | | Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the ISOFIX fixture system. | |
| Group 0+ max 13 kg | | Type approval: E1 04301146 (L) | |
| Group 0 max 10 kg | Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the car's seatbelt. | Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the car's seatbelt. | Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the car's seatbelt. |
| Group 0+ max 13 kg | Type approval: E1 04301146 (U) | Type approval: E1 04301146 (U) | Type approval: E1 04301146 (U) |

² With regard to other child seats your car should be included in the manufacturer's enclosed list of vehicles or be universally approved in accordance with the ECE R44 legal requirement.



Child safety

01

| Weight | Front seat (with deactivated airbag) | Outer rear seat | Centre rear seat |
|---|--|--|---|
| Group 0 max 10 kg Group 0+ max 13 kg | Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Use a protective cushion between the child seat and the dashboard. Type approval: E5 03135 (L) | Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 03135 (L) | Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 03135 (L) |
| Group 0 max 10 kg Group 0+ max 13 kg | Child seats which are universally approved. (U) | Child seats which are universally approved. (U) | Child seats which are universally approved. (U) |
| Group 1 9-18 kg | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192 (L) | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192 (L) | |



Child safety

| Weight | Front seat (with deactivated airbag) | Outer rear seat | Centre rear seat |
|---------------------|--|--|--|
| Group 1 9-18 kg | Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Use a protective cushion between the child seat and the dashboard. Type approval: E5 03135 (L) | Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 03135 (L) | Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 03135 (L) |
| Group 1 9-18 kg | | Britax Fixway – rear-facing child seat, secured with the ISOFIX fixture system and straps. Type approval: E5 03171 (L) | |
| Group 1 9-18 kg | Child seats which are universally approved. (U) | Child seats which are universally approved. (U) | Child seats which are universally approved. (U) |
| Group 2 15-25 kg | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192 (L) | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192 (L) | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192 (L) |



| |
|---------------------|
| Child safety |
|---------------------|

01

| Weight | Front seat (with deactivated airbag) | Outer rear seat | Centre rear seat |
|-----------------------|--|--|---|
| Group 2 15-25 kg | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - front-facing child seat, secured with the car's seatbelt. Type approval: E5 04191 (U) | Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - front-facing child seat, secured with the car's seatbelt. Type approval: E5 04191 (U) | |
| Group 2/3 15-36 kg | Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169 (UF) | Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169 (UF) | Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169 (UF) |
| Group 2/3 15-36 kg | Booster cushion with and without backrest (Booster Cushion with and without backrest). Type approval: E5 04216 (UF) | Booster cushion with and without backrest (Booster Cushion with and without backrest). Type approval: E5 04216 (UF) | Booster cushion with and without backrest (Booster Cushion with and without backrest). Type approval: E5 04216 (UF) |





Child safety

| Weight | Front seat (with deactivated airbag) | Outer rear seat | Centre rear seat |
|-----------------------|--------------------------------------|---|------------------|
| Group 2/3 15-36 kg | | Integrated booster cushion (Integrated Booster Cushion) - available as a factory fitted option. Type approval: E5 04189 (B) | |

L: Suitable for specific child seats. These child seats may be intended for use in a special car model, limited or semi-universal categories.

U: Suitable for universally approved child seats in this weight class.

UF: Suitable for front-facing universally approved child seats in this weight class.

B: Built-in child seats approved for this weight class.

Integrated two-stage booster cushions*



Correct position, the seatbelt should be positioned on the shoulder.



Incorrect position, the head restraint must be adjusted as high as the head and the seatbelt must not be below the shoulder.

The booster cushions are specially designed to provide optimum safety. In combination

with the seatbelt they are approved for children who weigh between 15 and 36 kg and who are at least 95 cm in height.

Check before driving that:

- the integrated 2-stage booster cushion is correctly set (see table page 37) and in locked position
- the seatbelt is in contact with the child's body and is not slack or twisted
- the seatbelt does not lie across the child's throat or below the shoulder (see preceding illustrations)
- the lap section of the seatbelt is positioned low over the pelvis to provide optimal protection.



Child safety

01

For instructions on adjusting the booster cushion's two levels, see pages 37–38.

Raising the two-stage booster cushion

The integrated booster cushion can be folded up into two stages. How many stages the cushion should be folded up depends on the child's weight.

| | Stage 1 | Stage 2 |
|--------|----------|----------|
| Weight | 22-36 kg | 15-25 kg |

Stage 1



1 Pull the handle forward and up in order to release the booster cushion.



2 Press the booster cushion backwards to lock.

Stage 2



1 Start from the lower stage. Press the button.





Child safety

2 Lift the booster cushion up at the front edge and press it back against the backrest to lock.

WARNING

Volvo recommends that repair or replacement is only carried out by an authorised Volvo workshop. Do not make any modifications or additions to the booster cushion. If an integrated booster cushion has been subjected to a major load, such as in conjunction with a collision, the entire booster cushion must be replaced. Even if the booster cushion appears to be undamaged, it may not afford the same level of protection. The booster cushion must also be replaced if it is heavily worn.

NOTE

It is not possible to adjust the booster cushion from stage 2 to stage 1. It must first be reset by being fully folded into the seat cushion. Refer to the heading below, Lowering the two-stage booster cushion.

Lowering the two-stage booster cushion

Lowering can take place from both the upper and lower stage to fully lowered position in the cushion. However, it is not possible to

adjust the booster cushion from the upper stage to the lower stage.



1 Pull the handle forwards to release the cushion.



2 Press down with your hand in the centre of the cushion in order to lock it.

WARNING

If the instructions regarding the two-stage booster cushion are not followed then this could cause serious injury to a child in the event of an accident.

IMPORTANT

Check that there are no loose objects (e.g. toys) left behind in the space under the cushion before lowering.

NOTE

The booster cushion must be lowered first when lowering the backrest.

Child safety locks, rear doors

The controls for operating the rear door power windows and the rear door opening handles can be blocked from opening from the inside. For more information, see page 63.



Child safety

ISOFIX fixture system for child seats



Mounting points for the ISOFIX fixture system are concealed behind the lower section of the rear seat backrest, in the outer seats.

The location of the mounting points is indicated by symbols in the backrest upholstery (see preceding illustration).

Press the seat cushion down to access the mounting points.

Always follow the manufacturer's installation instructions when connecting a child seat to the ISOFIX mounting points.

Size classes

Child seats are in different sizes – cars are in different sizes. This means that not all child seats are suitable for all seats in all car models.

Consequently, there is a size classification for child seats using the ISOFIX fixture system in order to assist users in choosing the correct child seat (see the following table).

| Size class | Description |
|------------|--|
| A | Full size, front-facing child seat |
| B | Reduced size (alt. 1), front-facing child seat |
| B1 | Reduced size (alt.2), front-facing child seat |
| C | Full size, rear-facing child seat |
| D | Reduced size, rear-facing child seat |
| E | Rear-facing infant seat |

| Size class | Description |
|------------|------------------------------------|
| F | Transverse infant seat, left-hand |
| G | Transverse infant seat, right-hand |

WARNING

Never place a child in the passenger seat if the car is equipped with an activated air-bag.

NOTE

If an ISOFIX child seat has no size classification then the car model must be included on the child seat's vehicle list.

NOTE

Volvo recommends that you contact an authorised Volvo dealer for recommendations about which ISOFIX child seats Volvo recommends.



Child safety

Types of ISOFIX child seat

| Type of child seat | Weight | Size class | Passenger seats for ISOFIX installation of child seats | |
|--------------------------|-----------|------------|--|-----------------|
| | | | Front seat | Outer rear seat |
| Infant seat transverse | max 10 kg | F | X | X |
| | | G | X | X |
| Infant seat, rear-facing | max 10 kg | E | X | OK (IL) |
| Infant seat, rear-facing | max 13 kg | E | X | OK (IL) |
| | | D | X | OK (IL) |
| | | C | X | OK (IL) |
| Child seat, rear-facing | 9-18 kg | D | X | OK (IL) |
| | | C | X | OK (IL) |



Child safety

| Type of child seat | Weight | Size class | Passenger seats for ISOFIX installation of child seats | |
|-------------------------|---------|------------|--|--------------------------|
| | | | Front seat | Outer rear seat |
| Front-facing child seat | 9-18 kg | B | X | OK ^A (IUL) |
| | | B1 | X | OK ^A (IUL) |
| | | A | X | OK ^A (IUL) |

X: The ISOFIX position is not suitable for ISOFIX child seats in this weight class and/or size class.

IL: Suitable for specific ISOFIX child seats. These child seats may be intended for use in a special car model, limited or semi-universal categories.


IUF: Suitable for front-facing ISOFIX child seats that are universally approved in this weight class.

A Volvo recommends rear-facing child seats for this group.



Child safety

Upper mounting points for child seats

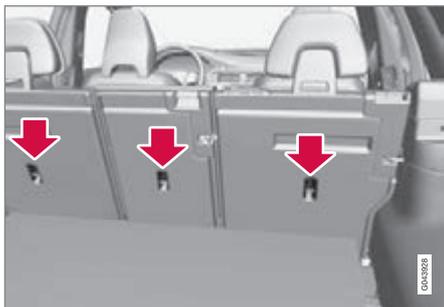

The car is equipped with upper mounting points for certain front-facing child seats. These mounting points are located on the rear of the seat.

The upper mounting points are primarily intended for use with front-facing child seats. Volvo recommends that small children should sit in rear-facing child seats to as late an age as possible.

NOTE

Fold the head restraints in order to facilitate fitting this type of child seat in cars with folding head restraints on the outer seats.

NOTE

For cars equipped with a cargo area cover over the cargo area, this must be removed before a child seat can be fitted in the mounting points.

For detailed information on how the child seat should be tensioned in the upper mounting points, see the seat manufacturer's instructions.

WARNING

The child seat's straps must always be drawn through the hole in the head restraint leg before they are tensioned at the attachment point.



[Empty rectangular box]

01

| | |
|---|----|
| Remote control key/key blade..... | 46 |
| Battery replacement, remote control key/PCC*..... | 52 |
| Keyless drive*..... | 54 |
| Locking/unlocking..... | 57 |
| Child safety locks..... | 63 |
| Alarm*..... | 64 |



02

LOCKS AND ALARM





Remote control key/key blade

General

The car is supplied with 2 remote control keys or PCCs (Personal Car Communicator). They are used to start the car and for locking and unlocking.

Additional remote control keys can be ordered - up to 6 can be programmed and used for the same car.

The remote control key contains a removable key blade made of metal. The visible section is available in two versions so that it is possible to distinguish between the remote control keys.

The PCC has increased functionality compared with the remote control key. The continuation of this chapter describes the functions available in both the PCC and the remote control key.

WARNING

If there are children in the car:

Remember to switch off the supply to the power windows and sunroof by removing the remote control key if the driver leaves the car.

Loss of a remote control key

If you lose a remote control key then a new one can be ordered at a workshop - an authorised Volvo workshop is recommended. The remaining remote control keys must then be taken to the workshop. The code of the missing remote control key must be erased from the system as a theft prevention measure.

The current number of keys registered to the car can be checked in the menu system **MY CAR** under **Information** → **Number of keys**. For a description of the menu system, see page 211.

Key memory¹ – door mirrors and driver's seat

The settings are automatically connected to each respective remote control key, see pages 84 and 105. After locking with the remote control key the setting of the combined instrument panel's theme is also saved in the key, see page 71.

The function can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Car key memory**.

For a description of the menu system, see page 211.

For cars with the Keyless drive system, see page 54.

Indicator for locking/unlocking

When the car is locked or unlocked using the remote control key, the direction indicators confirm that locking/unlocking was correctly performed.

- Locking - one flash and the door mirrors are folded² in.
- Unlocking - two flashes and the door mirrors are folded² out.

After locking the indication is only given if all locks have been activated once the doors have been closed.

Selecting the function

Different options for indicating locking/unlocking with light can be set in the car's menu system, see page 211.

Search in the menu system **MY CAR** for **Settings** → **Car settings** → **Light settings** and select **Door lock confirmation light** and/or **Unlock confirmation light**.

¹ Only in combination with power driver's seat and power mirrors.

² Only for cars with retractable power door mirrors.



Remote control key/key blade

Immobiliser

Each remote control key has a unique code. The car can only be started with the correct remote control key with the correct code.

The following error messages in the combined instrument panel's information display are related to the electronic immobiliser:

| Message | Specification |
|-----------------------------|---|
| Insert car key | Error when reading the remote control key during starting - Remove the key from the ignition switch, press it in again and make a new start attempt. |
| Car key not found | Error reading the remote control key during starting - Try to start again. If the error persists: Insert the remote control key into the ignition switch and try to start again. |
| Immobiliser Try start again | Error in immobiliser system during starting. If the error persists: Contact a workshop - an authorised Volvo workshop is recommended. |

For starting the car, see page 117.

Functions

Remote control key, standard version.

-  Locking
-  Unlocking
-  Approach light duration
-  Tailgate
-  Panic function



Remote control key/key blade



Remote control key with PCC* - Personal Car Communicator.

Information

Function buttons

Locking – Locks the doors and tailgate while the alarm is activated.

Press and hold (at least 2 seconds) to close all the windows and sunroof* simultaneously.

WARNING

If the sunroof and windows are closed using the remote control key, check that no one is in danger of getting hands caught.

Unlocking – Unlocks the doors and tailgate while the alarm is deactivated.

Press and hold (at least 4 seconds) to open all windows simultaneously.

The function can be changed from unlocking all doors simultaneously, to unlocking the driver's door only with one press of the button and, after a further press of the button - within 10 seconds - unlocking the remaining doors.

The function can be changed in the menu system **MY CAR** under **Settings** → **Car settings** → **Lock settings** → **Doors unlock** with both the alternatives **All doors** and **Driver door, then all**. For a description of the menu system, see page 211.

Approach light duration – Used to switch on the car's lighting at a distance. For more information, see page 99.

Tailgate - Unlocks and disarms the alarm for the tailgate only. On cars with power tailgate* the tailgate is opened after the button is kept depressed. For more information, see page 59.

Panic function – Used to attract attention in an emergency.

Press and hold the button for at least 3 seconds or press it twice within 3 seconds to activate the direction indicators and the horn.

The function can be turned off with the same button once it has been active for at least 5 seconds. Otherwise the function switches off automatically after 2 minutes and 45 seconds.

Range

The remote control key's functions have a range of about 20 m from the car.

If the car does not verify a button being pressed - move closer and try again.

NOTE

The remote control key functions can be disrupted by surrounding radio waves, buildings, topographical conditions etc. The car can always be locked/unlocked using the key blade, see page 50.

If the remote control key is removed from the car when the engine is running or key position **I** or **II** is active (see page 81) and if all doors are closed, then the information display in the combined instrument panel shows a warning message and an audible reminder signal sounds at the same time.




Remote control key/key blade

The message clears and the audible reminder signal stops when the remote control key is brought back to the car after:

- The remote control key has been inserted in the ignition switch.
- Speed exceeds 30 km/h.
- the **OK** button has been pressed.

Unique PCC functions*

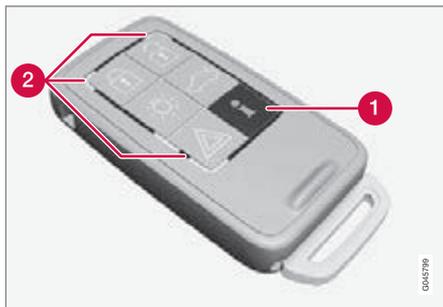

Remote control key with PCC* - Personal Car Communicator.

- 1 Information button
- 2 Indicator lamps

Using the information button enables access to certain information from the car via the indicator lamps.

Using the information button


- Press the information button .
 - > All indicator lamps flash for approximately 7 seconds and the light travels around on the PCC. This indicates that information from the car has been read.

If any of the other buttons are pressed during this time then the reading is interrupted.

NOTE

If none of the indicator lamps illuminates with repeated use of the information button and in different locations (as well as after 7 seconds and after the light has travelled around on the PCC), contact a workshop - an authorised Volvo workshop is recommended.

Indicator lamps display information in accordance with the following illustration:

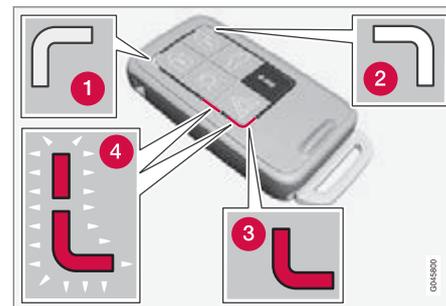

- 1 Green continuous light – the car is locked.
- 2 Yellow continuous light – the car is unlocked.
- 3 Red continuous light – the alarm has been triggered since the car was locked.
- 4 Red light flashing alternately in both indicator lamps – The alarm was triggered less than 5 minutes ago.

Range PCC

The PCC's range for locking, unlocking and tailgate is approx. 20 m from the car - for other functions up to approx. 100 m.

If the car does not verify a button being pressed - move closer and try again.



Remote control key/key blade

NOTE

The information button functions can be disrupted by surrounding radio waves, buildings, topographical conditions etc.

Out of PCC range

If the PCC is too far away from the car for the information to be read then the status the car was last left in is shown, without the light travelling around on the PCC.

If several PCCs are used for the car then it is only the PCC last used for locking/unlocking that shows correct status.

NOTE

If no indicator lamps illuminate when the information button is used within range then this may be because the last communication between the PCC and the car was disrupted by surrounding radio waves, buildings, topographical conditions etc.

Detachable key blade

A remote control key contains a detachable key blade of metal with which some functions can be activated and some operations carried out.

The key blade's unique code is provided by authorised Volvo workshops, which are recommended when ordering new key blades.

Key blade functions

Using the remote control key's detachable key blade:

- the driver's door can be opened manually if central locking cannot be activated with the remote control key, see page 55.
- the rear doors' mechanical child safety locks can be activated/deactivated, see page 63.
- access to the glovebox is blocked.
- the airbag for front passenger seat (PACOS)* can be activated/deactivated, see page 22.

Removing the key blade



- Slide the spring-loaded catch to the side.
- At the same time pull the key blade straight out backwards.

Attaching the key blade

Carefully refit the key blade into its location in the remote control key.

1. Hold the remote control key with the slot pointed up and lower the key blade into its slot.
2. Lightly press the key blade. You should hear a "click" when the key blade is locked in.

**Remote control key/key blade****Unlocking doors with the key blade**

If central locking cannot be activated with the remote control key - e.g. if the batteries are discharged - then the driver's door can be opened as follows:

1. Unlock the driver's door with the key blade in the door handle's lock cylinder.

See also the illustration and further information see page 55.

**NOTE**

When the door has been unlocked using the key blade and is opened, the alarm is triggered.

2. Deactivate the alarm by inserting the remote control key in the ignition switch.

For a car with the Keyless system, see page 55.



Battery replacement, remote control key/PCC*


Replacing the battery

The batteries should be replaced if:

- the information symbol in the combined instrument panel illuminates and the display shows **Low battery in remote control. Please change batteries.**

and/or

- the locks repeatedly do not react to signals from the remote control key within 20 metres from the car.

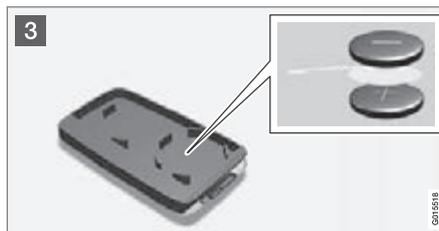

Opening

1 Slide the spring-loaded catch to the side.

2 At the same time pull the key blade straight out backwards.

2 **3** Insert a 3 mm slot screwdriver in the hole behind the spring-loaded catch and gently prize the remote control key up.

NOTE

Turn the remote control key over with the buttons facing up, this is to avoid the batteries falling out when it is opened.

IMPORTANT

Avoid touching the battery and its terminals with your fingers, as this could damage their functionality.

Battery replacement

3 Closely study how the battery/batteries are secured on the inside of the cover, with regard to their (+) and (-) sides.

Remove control key (1 battery)

- Carefully prize out the battery.
- Install a new one with the (+) side down.

PCC* (2 batteries)

- Carefully prize out the batteries.
- First install one new one with the (+) side up.
- Position the white plastic tab in between and finally install a second new battery with the (+) side down.

Battery type

Use batteries with the designation CR2430, 3V - one in the remote control key and two in the PCC.

Assembly

- Press the remote control key together.
- Hold the remote control key with the slot pointed up and lower the key blade into its slot.
- Lightly press the key blade. You should hear a "click" when the key blade is locked in.



Battery replacement, remote control key/PCC*

IMPORTANT

Make sure that you dispose of old batteries in an environmentally-friendly way.


02



Keyless drive*

Keyless lock and ignition system (only PCC¹)

General

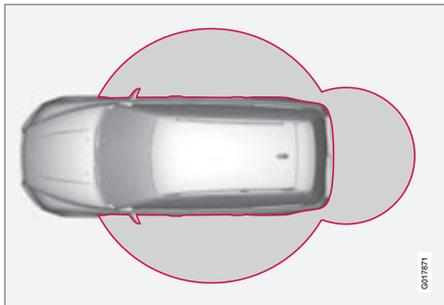

The keyless drive function in the PCC allows the car to be unlocked, driven and locked without the need for a key. You simply have to have the PCC with you. The system makes it easier and more convenient to open the car, e.g. when your hands are full.

Both of the car's PCCs incorporate the Keyless function. Additional PCCs can be ordered, see page 46.

PCC range

In order to open a door or the tailgate, a PCC must be no more than approx. 1.5 metres

from the car door handle or tailgate. This means that the person who wishes to lock or unlock a door must have the PCC with him or her. It is not possible to lock or unlock a door if the PCC is on the opposite side of the car.

The red rings in the preceding illustration indicate the range covered by the system's antennas.

If all PCCs are removed from the car when the engine is running or key position **I** or **II** is active (see page 81) and if all doors are closed, then a warning message is shown in the combined instrument panel's display and an audible reminder signal sounds at the same time.

The warning message clears and the audible reminder signal stops when the PCC is brought back to the car after:

- a door has been opened and closed
- the PCC is inserted into the ignition switch
- the **OK** button has been pressed.

Handling the PCC safely

If a PCC with keyless drive function is left in the car, it is deactivated temporarily when the car is locked. This prevents unauthorised entry.

However, if someone breaks into the car, opens the door and finds the PCC, it can be reactivated. It is therefore important to handle all PCCs with great care.



IMPORTANT

Never leave a PCC behind in the car.

Interference to PCC function

Electromagnetic fields and screening can interfere with the keyless drive system.



NOTE

Do not place/store the PCC near a mobile phone or metal object - no closer than 10-15 cm.

If interference is experienced nonetheless, use the PCC and the key blade as a remote control key, see page 47.

Locking

¹ Personal Car Communicator, see page 49.



Keyless drive*



Cars with the keyless system have a button on the outside door handles.

Lock the doors and the tailgate by pressing the lock button on one of the door handles on the outside.

All doors and the tailgate must be closed before the car can be locked - otherwise the car is not locked.

i NOTE

On cars with automatic transmission, the gear selector must be set in the **P** position – otherwise the car cannot be locked or the alarm armed.

Unlocking

Unlocking takes place when a hand grasps a door handle or the tailgate's rubberised pressure plate is actuated - open the door or tailgate as normal.

Unlocking with the key blade

Hole for key blade - to loosen the cover.

If central locking cannot be activated with the PCC, e.g. if the batteries are discharged, then the left-hand front door can be opened with the PCC's detachable key blade (see page 50)

To access the lock cylinder, the door handle's plastic cover must be removed - this is also done with the key blade:

1. Press the key blade approx. 1 cm straight up into the hole on the underside of the door handle/cover - do not prize.
 - > The plastic cover loosens automatically by means of the torque when the blade is pushed straight up and into the opening.
2. Then insert the key blade in the lock cylinder and unlock the door.
3. Refit the plastic cover after unlocking.

i NOTE

When the driver's door is unlocked using the key blade and is opened, the alarm is triggered. It is switched off by inserting the PCC in the ignition switch, see page 65.

Key memory² – driver's seat and door mirrors**PCC memory function**

If several people each with a PCC approach the car, then the settings for seat and mirrors are implemented for the person who opens the driver's door.

After the driver's door has been opened by person A with PCC-A, but person B with

² Only in combination with power driver's seat and power mirrors.



Keyless drive*

PCC-B shall drive, the settings can be changed in three ways:


- Standing by the driver's door, or sitting behind the steering wheel, person B presses their PCC's unlock button, see page 47.
- Select one of three possible memories for seat adjustment with seat button 1-3, see page 84.
- Adjust seat and mirrors manually, see page 84 and 105 .

Lock settings

The Keyless function can be adapted by indicating in the menu system **MY CAR** which doors shall be unlocked, under **Car settings** → **Lock settings** → **Keyless entry** - there select between **All doors unlock**, **Any door**, **Doors on same side** and **Both front doors**.

For a description of the menu system, see page 211.

Antenna location

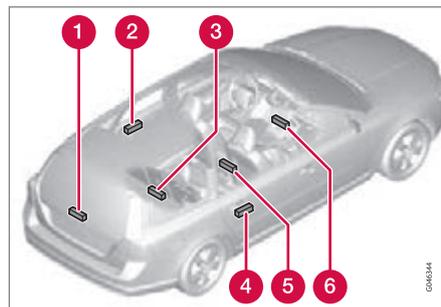

The keyless system has a number of integrated antennae located around the car:

- 1 Tailgate, by wiper motor
- 2 Door handle, left rear
- 3 Cargo area, central and furthest in under the floor
- 4 Door handle, right rear
- 5 Centre console, under the rear section
- 6 Centre console, under the front section.



WARNING

People with pacemaker operations should not come closer than 22 cm to the keyless system's antennae with their pacemaker. This is to prevent interference between the pacemaker and the keyless system.



Locking/unlocking

From the outside

The remote control key can lock/unlock all doors and the tailgate simultaneously. Different sequences for unlocking can be selected, see "Unlocking with the remote control key" page 48.

In order that the lock sequence can be activated, the driver's door must be closed - if any of the other doors or the tailgate is open, then it/they is/are locked and the alarm is activated only when it/they are closed. With the Keyless* system all the doors and tailgate must be closed.

NOTE

Be aware of the risk of locking the remote control key in the car.

If it is not possible to lock/unlock with the remote control key, the battery may be discharged - lock or unlock the driver's door with the detachable key blade, see page 50.

NOTE


Remember that the alarm is triggered when the door is opened after being unlocked with the key blade - the alarm is switched off when the remote control key is inserted into the ignition switch.

WARNING

Be aware of the risk of being locked in the car when it is locked from the outside using the remote control key - it is then not possible to open any of the doors from the inside with the door controls. Read more about this in the section "Deadlocks" later on.

Automatic relocking

If none of the doors or the tailgate is opened within 2 minutes of unlocking, all are locked again automatically. This function reduces the risk that the car is left unlocked unintentionally. (For cars with alarm, see page 64.)

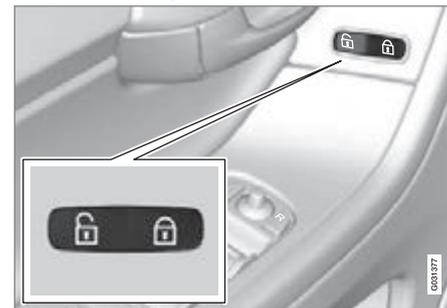From the inside**Central locking**

Central locking.

All of the doors and the tailgate can be locked or unlocked simultaneously using the central locking button on either front door.

- Press one side  of the button to lock - the other side  to unlock.

Unlocking

A door can be unlocked from the inside in two different ways:

- Press the central locking button .

Press and hold (at least 4 seconds) to also open all the side windows* simultaneously.



Locking/unlocking

- Pull the door handle once and release - the door is unlocked. Pull the door handle again to open the door.

Locking

- Press the central locking button  after the front doors have been closed.

Press and hold (at least 2 seconds) to also close all the side windows and the sunroof* simultaneously.

All doors can also be individually locked manually with their lock buttons - the door in question must then be closed.

Global opening


Press and hold the central locking button  (at least 4 seconds) to also open all the windows simultaneously - for example, to quickly ventilate the passenger compartment during hot weather.

Automatic locking

The doors and tailgate are locked automatically when the car starts to move.

The function can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Lock settings** → **Automatic door locking**. For a description of the menu system, see page 211.

Glovebox

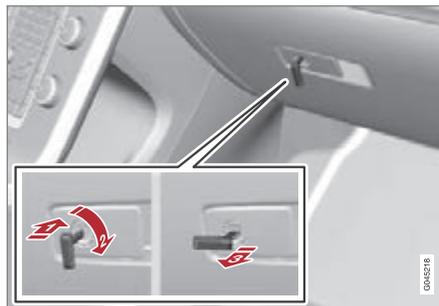

The glovebox can only be locked/unlocked using the remote control key's detachable key blade. For information on the key blade, see page 50.


Locking the glovebox:

- Insert the key blade in the glovebox lock cylinder.
- Turn the key blade 90 degrees clockwise. The keyhole is horizontal in the locked position.
- Pull out the key blade.

- Unlock by carrying this out in reverse order.

Tailgate

Manual opening

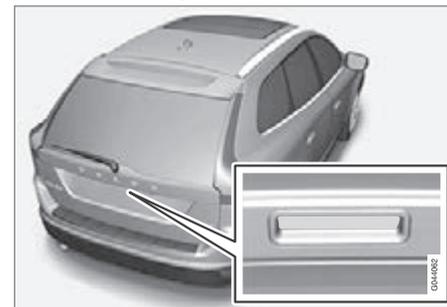

Rubber plate with electrical contact.

The tailgate is held closed by an electrical lock. To open:

1. Push down gently on the rubberised pressure plate under the outer handle - the lock is released.
2. Lift the outside handle in order to fully open the tailgate.



Locking/unlocking

! IMPORTANT

- Minimal force is required to release the rear hatch lock - just gently press the rubberised panel.
- Do not place the lift force on the rubber panel when opening the rear hatch - lift the handle. Using too much force may damage the electrical contact for the rubber panel.

Unlocking with the remote control key



The alarm for the tailgate can be disarmed* and the tailgate unlocked on its own by using the remote control key's  button.

If the car is equipped with an alarm* the alarm indicator on the instrument panel stops to show that alarm for the whole of the car is not

armed. The alarm's level and movement sensors and the sensors for opening the tailgate are disconnected.

The doors remain locked and armed.

- The tailgate is unlocked, but remains closed - press lightly on the rubberised pressure plate under the outer handle and lift the tailgate.

If the tailgate is not opened within 2 minutes then it is relocked and the alarm is re-armed.

Unlocking the car from inside

**1** Unlocking, tailgate


To unlock the tailgate:

- Press the lighting panel button (1).

- > The tailgate is unlocked and can be opened within 2 minutes (if the car is locked from the inside).

Locking with the remote control key

- Press the remote control key's button for locking, , see page 47.
- > If the car is equipped with an alarm* the alarm indicator on the instrument panel starts to flash, which means that the alarm is armed.

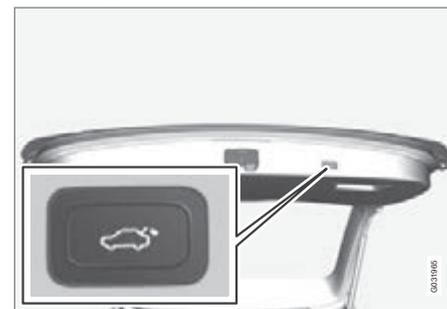Power operated tailgate*



Locking/unlocking

NOTE

Consider the roof height when using electrical operation. Do not use electrical operation of the tailgate under a low roof height, see under the heading "Interrupt opening/closing of tailgate".

NOTE

- If the system has been operating continuously for a long time, it is switched off to avoid overload. It can be used again after about 2 minutes.
- If the battery has been discharged or disconnected then the tailgate must be opened and closed again to reset the system.

Programmable max. opening

Tailgate maximum opening position can be programmed. Can be used for e.g. low roof height in a garage. Proceed as follows:

- Open the tailgate manually, hold it in the desired position and give the button on the tailgate one long press (at least 3 seconds) and then release the tailgate - the programming is complete.
- To clear the programming - move the tailgate manually to a higher position.

Snow and wind

If the tailgate is forced down by something just when it is being opened, e.g. snow, ice or strong wind, and this causes the tailgate to lower, then it is closed automatically.

Pinch protection

If something with sufficient resistance prevents the tailgate from opening/closing then the pinch protection is activated.

- During opening - power tailgate operation is deactivated and the tailgate is disengaged.
- When closing - the tailgate stops and backs off from the obstacle a couple of centimetres.

WARNING

Pay attention to the risk of crushing when opening/closing. Before starting to open/close; make sure that there is nobody close to the tailgate as a crushing injury could have serious consequences.

Always operate the tailgate with caution.

Opening the tailgate



The tailgate can be opened three ways (two of which involve this button):

- Long press on the button in the lighting panel - hold the button depressed until the tailgate starts to open.
- Long press on the button on the remote control key - hold the button depressed until the tailgate starts to open.
- Push down gently on the rubberised pressure plate under the outer handle.

Closing the tailgate



Close using this button on the tailgate or manually.

- Press the button - the tailgate closes automatically.

Stop the opening/closing of the tailgate



This can be done four ways (of which three involve this button):

- Press the lighting panel button
- Press the remote control key button
- Press the tailgate's button
- Press the rubberised pressure plate beneath the outside handle.

- The tailgate's movement is interrupted and it stops.

Manual tailgate operation

The system is disengaged if the opening/closing sequence is interrupted in accordance with the preceding section.



Locking/unlocking

- The tailgate can then be operated manually.

Deadlocks *1

Deadlocks means that all lock buttons and door handles are mechanically disengaged, which prevents doors being opened from the inside.

The deadlocks are activated with the remote control key and are set after an approximately 10 second delay after the doors have been locked.

i NOTE

If a door is opened within the delay time then the sequence is interrupted and the alarm is deactivated.

The car can only be unlocked from a deadlock state with the remote control key. The front left door can also be unlocked with the detachable key blade.

WARNING

Do not allow anyone to remain in the car without first deactivating the deadlocks in order to avoid the risk of anyone being locked in.

Temporary deactivation

Active menu options are indicated with a cross.

- 1 MY CAR**
- 2 OK MENU**
- 3 TUNE** knob control
- 4 EXIT**

If someone is going to stay in the car but the doors must be locked from the outside, then

the deadlocks function can be temporarily switched off. This is carried out as follows:

1. Access the menu system **MY CAR** under **Settings → Car settings → Reduced Guard** (for a detailed description of the menu system, see page 211).
2. Select **Activate once**.
 - > The combined instrument panel's panel display shows the message **Reduced guard See manual** and the deadlocks function is switched off when the car is locked.

or

- Select **Ask when exiting**.
 - > Each time the engine is switched off the centre console's screen shows the message **Activate Reduced Guard until engine has started again?** followed by the alternatives **Confirm with OK** and **Cancel with EXIT**.

If the deadlocks function shall be switched off

- Press **OK/MENU** and lock the car. (Note that the alarm's movement and tilt detectors* are switched off at the same time, see page 65.)

* Only in combination with alarm.



Locking/unlocking

- > The next time the engine is started, the system is reset to zero and the display in the combined instrument panel shows the message **Full guard** at which the deadlocks function and the alarm's movement and tilt detectors are re-engaged.

If the locking system shall not be changed

- Press **EXIT** and lock the car.




NOTE

- Remember that the alarm is activated when the car is locked.
- If any of the doors are opened from the inside then the alarm is triggered.

**Child safety locks****Manual blocking of the rear doors**

The child safety locks prevent children from opening a rear door from the inside.

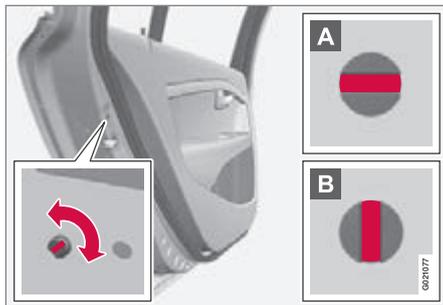

The child safety locks are located on the trailing edge of the rear doors and are only accessible when the doors are open.

To activate/deactivate the child safety locks:

- Use the remote control key's detachable key blade to turn the knob - see page 50.
- A** The door is blocked against opening from the inside.
- B** The door can be opened from both the outside and the inside.

NOTE

- A door's knob control only blocks that particular door - not both rear doors simultaneously.
- Cars with an electric child safety lock do not have a manual child lock.

Electrical locking of the rear doors* and power windows

Control panel driver's door.

The child safety locks can be activated/deactivated in all key positions higher than **0** - see page 81. Activation/deactivation can be performed up to 2 minutes after switching off the engine, provided that no door is opened.

To activate the child safety locks:

1. Start the engine or choose a key position higher than **0**.
2. Press the button in the driver's door control panel.
 - > The display in the combined instrument panel shows the message **Rear child locks Activated** and the button's lamp illuminates - the locks are active.

When the electric child safety lock is active then the rear:

- windows can only be opened with the driver's door control panel
- doors cannot be opened from inside.

The current setting is stored when the engine is switched off - if the child safety locks are activated at engine shutdown, the function will remain activated the next time the engine is started.



Alarm*

General

Activated alarm is triggered if:

- a door, the bonnet or the tailgate is opened
- a movement is detected in the passenger compartment (if fitted with a movement detector*)
- the car is raised or towed away (if fitted with a tilt detector*)
- the battery's cable is disconnected
- the siren is disconnected.

If there is a fault in the alarm system then the information display in the combined instrument panel shows a message. In which case, contact a workshop - an authorised Volvo workshop is recommended.

NOTE

The movement sensors trigger an alarm in the event of movement in the passenger compartment - air currents are also registered. For this reason the alarm is triggered if the car is left with a window or the sunroof open or if the passenger compartment heater is used.

To avoid this: Close the window/sunroof when leaving the car. If the car's integrated passenger compartment heater (or a portable electric heater) shall be used - direct the airflow from the air vents so that they are not pointing upwards in the passenger compartment. Alternatively, reduced alarm level can be used, see page 65.

NOTE


One of the detectors for the alarm is located under the cup holder in the centre console. This detector is sensitive for metals.

Avoid storing coins, keys or similar metal objects in the centre console's cup holder as such objects could accidentally trigger the alarm.

NOTE

Do not attempt to repair or modify alarm system components. All such attempts could affect the terms of insurance.

Alarm indicator

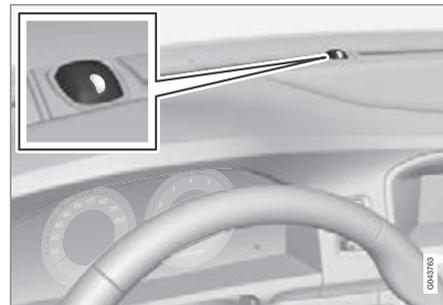

A red LED on the instrument panel indicates the alarm system's status:

- LED not lit – Alarm not armed
- The LED flashes once every other second – Alarm is armed
- The LED flashes rapidly after disarming the alarm (and until the remote control key is inserted in the ignition switch and key position **I** is selected) – Alarm has been triggered.



Alarm*

Arming the alarm

- Press the remote control key lock button.

Deactivate the alarm

- Press the remote control key unlock button.

Deactivating a triggered alarm

- Press the remote control key unlock button or insert the remote control key in the ignition switch.

Other alarm functions

Automatic re-arming of the alarm

This function prevents the car being left with the alarm disarmed unintentionally.

If the car is unlocked with the remote control key (and the alarm is disarmed) but none of the doors or the tailgate is opened within 2 minutes, then the alarm is automatically re-armed. The car is relocked at the same time.

Remote control key not working

If the alarm cannot be deactivated with the remote control key, e.g. if the key's battery is discharged - the car can be unlocked, disarmed and the engine started as follows:

1. Open the driver's door with the detachable key blade - see page 55.

- > The alarm is triggered, the alarm indicator flashes rapidly and the siren sounds.



2. Insert the remote control key in the ignition switch.
 - > The alarm is deactivated and the alarm indicator goes out.
3. Start the engine.

Alarm signals

When the alarm is triggered, the following happens:

- A siren sounds for 30 seconds or until the alarm is switched off. The siren has its own battery and works independently of the car battery.
- The direction indicators flash for 5 minutes or until the alarm is switched off.

Reduced alarm level

To avoid accidental triggering of the alarm - e.g. if a dog is left in a locked car or during transport on a car train or car ferry - temporarily deactivate the movement and tilt detectors.

The procedure is the same as with the temporary disengaging of deadlocks, see page 61.


| | |
|---|-----|
| Instruments and controls..... | 68 |
| Volvo Sensus | 80 |
| Key positions..... | 81 |
| Seats..... | 83 |
| Steering wheel..... | 88 |
| Lighting..... | 90 |
| Wipers and washing..... | 100 |
| Windows, rearview and door mirrors..... | 103 |
| Compass* | 108 |
| Power panorama roof* | 110 |
| Alcolock* | 113 |
| Starting the engine..... | 117 |
| Starting the engine – external battery..... | 121 |
| Gearboxes..... | 123 |
| Start/Stop* | 131 |
| All Wheel Drive - AWD* | 137 |
| Foot brake..... | 138 |
| HDC Hill Descent Control..... | 140 |
| Parking brake..... | 142 |
| HomeLink® * | 146 |



G041142

03

YOUR DRIVING ENVIRONMENT

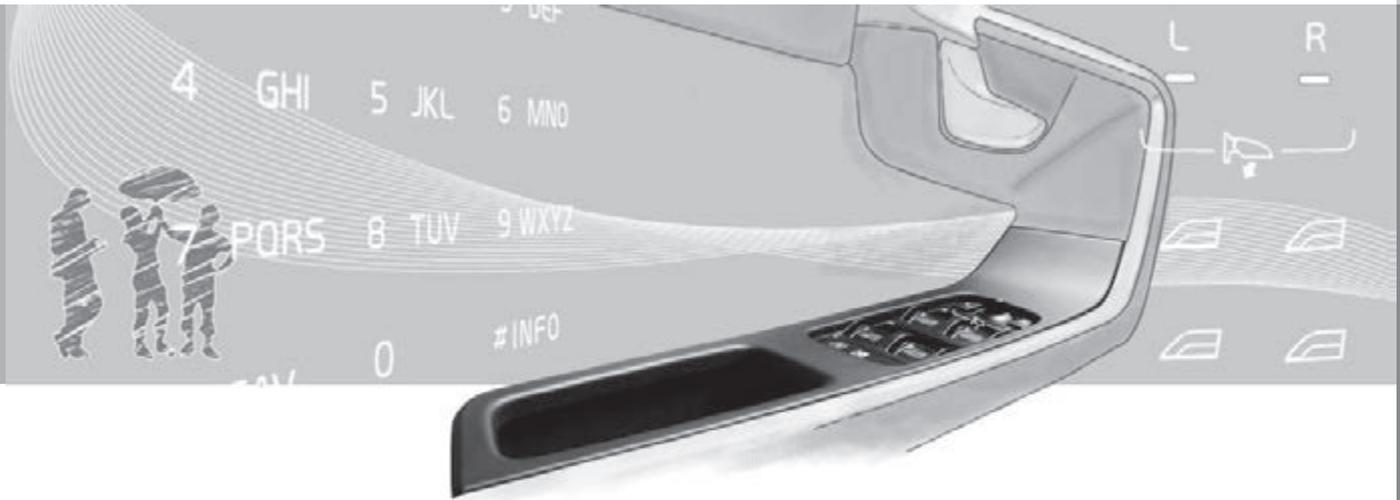




03 Your driving environment

Instruments and controls

Instrument overview

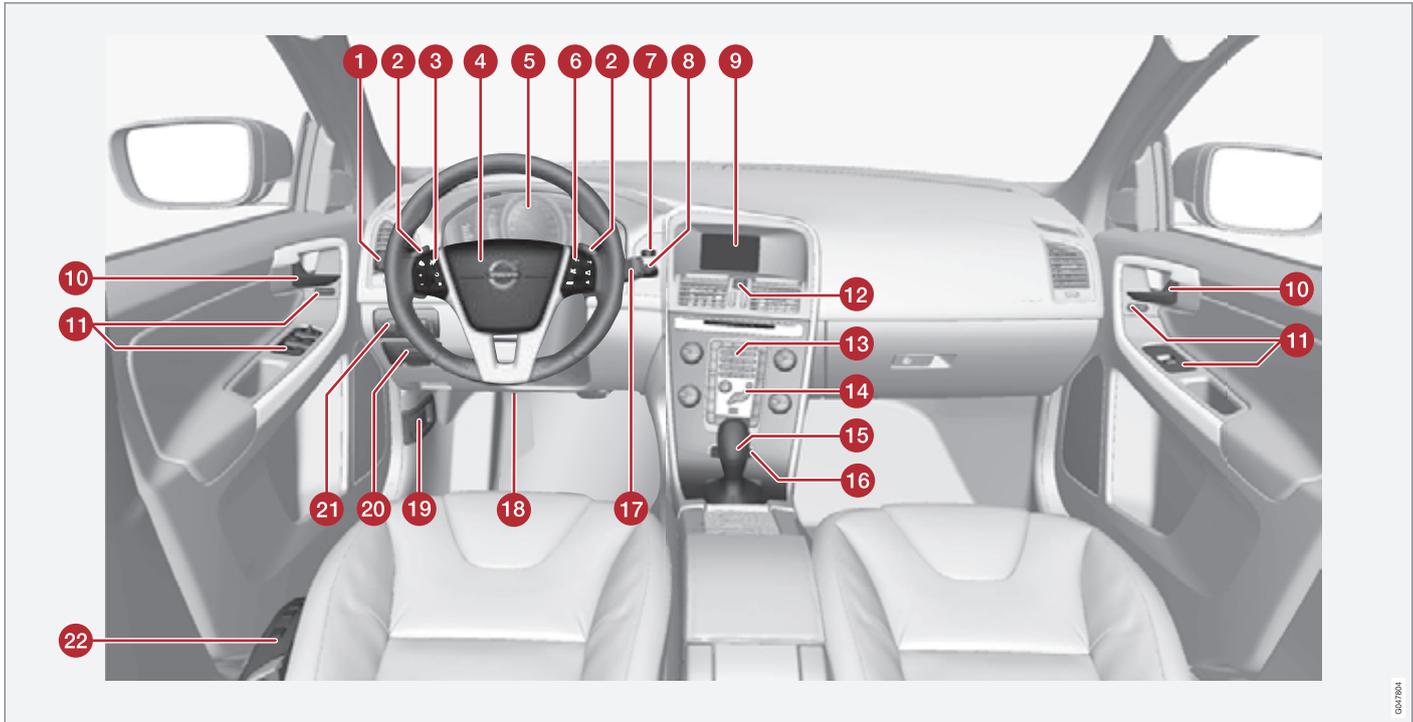

Left-hand drive.

03/17/14



Instruments and controls

| | Function | Page |
|----|---|--------------------|
| 1 | Menus and messages, direction indicators, main/dipped beam, trip computer | 208, 96, 92, 236 |
| 2 | Manual gear changing in an automatic gear-box* | 125 |
| 3 | Cruise control* | 157, 159 |
| 4 | Horn, airbags | 88, 20 |
| 5 | Combined instrument panel | 71 |
| 6 | Menu navigation, audio control, phone control* | 211, 253, 255, 281 |
| 7 | START/STOP ENGINE button | 117 |
| 8 | Ignition switch | 81 |
| 9 | Screen for infotainment system and display of menus | 252, 255, 211 |
| 10 | Door handle | – |


| | Function | Page |
|----|---|------------------|
| 11 | Control panel | 57, 63, 103, 105 |
| 12 | Hazard warning flashers | 96 |
| 13 | Control panel for infotainment system and menu navigation | 253, 255, 211 |
| 14 | Control panel for climate control | 219 |
| 15 | Gear selector | 123 |
| 16 | Controls for active chassis (Four-C)* | 244 |
| 17 | Wipers and washing | 100, 101 |
| 18 | Steering wheel adjustment | 88 |
| 19 | Bonnet opener | 355 |
| 20 | Parking brake | 142 |

| | Function | Page |
|----|--|-------------|
| 21 | Headlamp control, opener for fuel filler flap and tailgate | 90, 315, 58 |
| 22 | Seat adjustment* | 84 |



03 Your driving environment

Instruments and controls

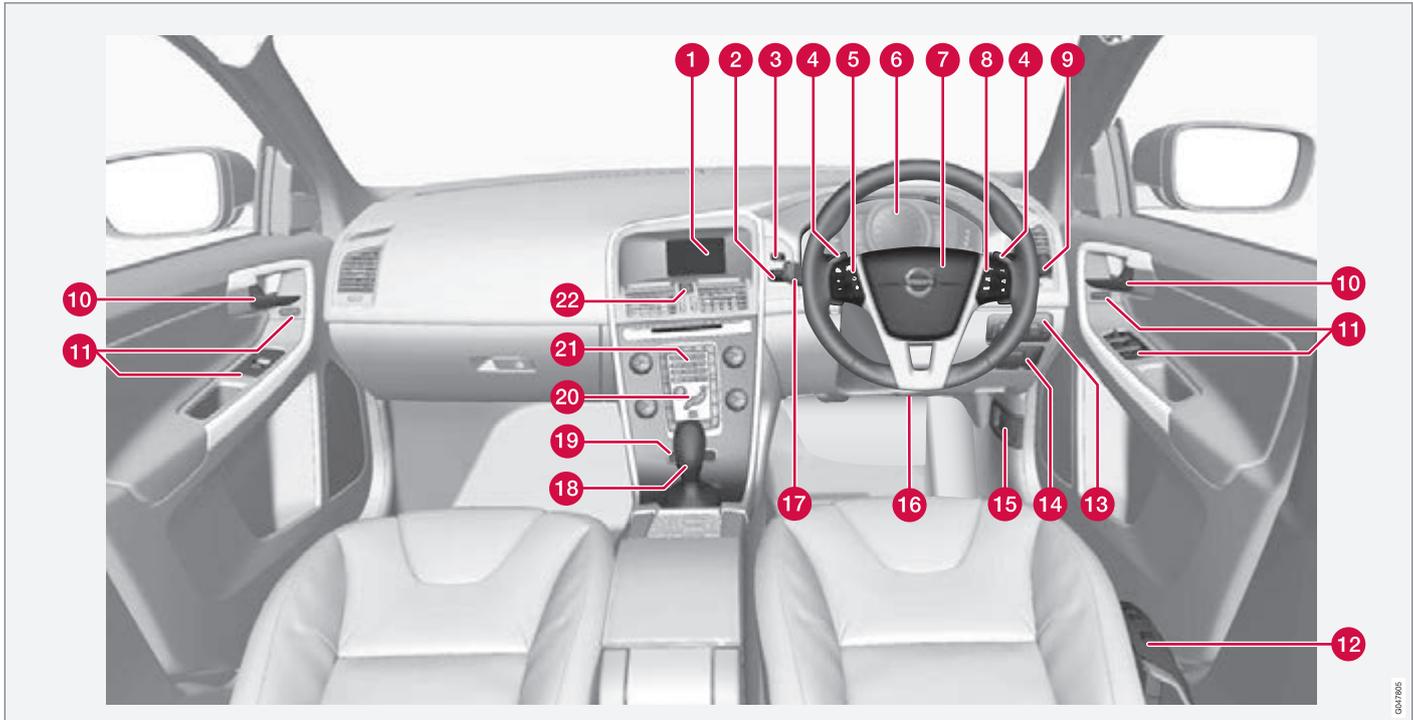

Right-hand drive.

041705




Instruments and controls

| | Function | Page |
|----|---|--------------------|
| 1 | Screen for infotainment system and display of menus | 252, 255, 211 |
| 2 | Ignition switch | 81 |
| 3 | START/STOP ENGINE button | 117 |
| 4 | Manual gear changing in an automatic gear-box* | 125 |
| 5 | Cruise control* | 157, 159 |
| 6 | Combined instrument panel | 71 |
| 7 | Horn, airbags | 88, 20 |
| 8 | Menu navigation, audio control, phone control* | 211, 253, 255, 281 |
| 9 | Wipers and washing | 100, 101 |
| 10 | Door handle | - |
| 11 | Control panel | 57, 63, 103, 105 |
| 12 | Seat adjustment* | 84 |

| | Function | Page |
|----|---|------------------|
| 13 | Headlamp control, opener for fuel filler flap and tailgate | 90, 315, 58 |
| 14 | Parking brake | 142 |
| 15 | Bonnet opener | 355 |
| 16 | Steering wheel adjustment | 88 |
| 17 | Menus and messages, direction indicators, main/dipped beam, trip computer | 208, 96, 92, 236 |
| 18 | Gear selector | 123 |
| 19 | Controls for active chassis (Four-C)* | 244 |
| 20 | Control panel for climate control | 219 |
| 21 | Control panel for infotainment system and menu navigation | 253, 255, 211 |
| 22 | Hazard warning flashers | 96 |

The combined instrument panel's information display

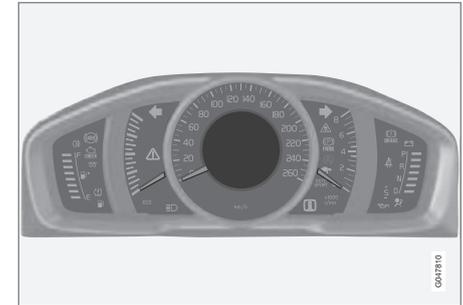

Information display, analogue instrument panel.



Information display, digital instrument panel*.


The combined instrument panel's information display shows information on some of the

Instruments and controls

car's functions, e.g. cruise control and trip computer, as well as messages. The information is shown with symbols and text.

There are further descriptions under the functions that use the display.

Gauges and indicators, analogue instrument panel

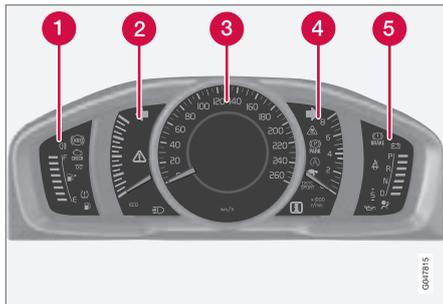

- 1 Fuel gauge. When the indicator lowers to only one white marking¹, the yellow indicator symbol for low level in the fuel tank is illuminated. See also Trip computer page 236, and Refuelling page 315.
- 2 Eco meter. This meter provides an indication of how economically the car is being

driven. The higher the reading on the scale, the more economical it is.


- 3 Speedometer
- 4 Tachometer. The meter indicates engine speed in thousands of revolutions per minute (rpm).
- 5 Gear shift indicator² / Gear position indicator³. See also gearboxes page 123.

Gauges and indicators, digital instrument panel

Alternative themes can be selected for the digital combined instrument panel. Possible themes are "Elegance", "Eco" and "Performance". The setting for the theme can be stored in the remote control key's memory when locking the car, see pages 46 and 213.

A theme can only be selected when the engine is running.

To change the theme, press the left-hand stalk switch's **OK** button and then select the **Themes** menu option by turning the thumb-wheel on the lever. Confirm selection by pressing the **OK** button. For more information on menus, see page 208.

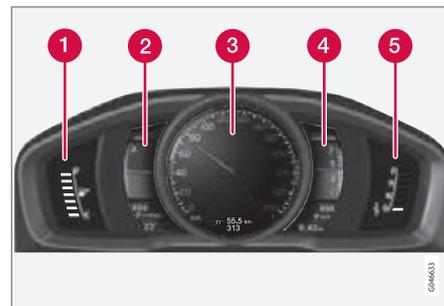

Gauges and indicators, theme "Elegance".

- 1 Fuel gauge. When the indicator lowers to only one white marking¹, the yellow indicator symbol for low level in the fuel tank is illuminated. See also Trip computer page 236, and Refuelling page 315.
- 2 Temperature gauge for engine coolant
- 3 Speedometer
- 4 Tachometer. The meter indicates engine speed in thousands of revolutions per minute (rpm).
- 5 Gear shift indicator² / Gear position indicator³. See also gearboxes page 123.

¹ When the display's message "Distance to empty fuel tank:" starts to show "----", the marking becomes red.

² Manual gearbox

³ Automatic gearbox



Instruments and controls



Gauges and indicators, theme "Eco".

- 1 Fuel gauge. When the indicator lowers to only one white marking¹, the yellow indicator symbol for low level in the fuel tank is illuminated. See also Trip computer page 236, and Refuelling page 315.
- 2 Eco guide. See also page 73.
- 3 Speedometer
- 4 Tachometer. The meter indicates engine speed in thousands of revolutions per minute (rpm).
- 5 Gear shift indicator² / Gear position indicator³. See also gearboxes page 123.



Gauges and indicators, theme "Performance".

- 1 Fuel gauge. When the indicator lowers to only one white marking¹, the yellow indicator symbol for low level in the fuel tank is illuminated. See also Trip computer page 236, and Refuelling page 315.
- 2 Temperature gauge for engine coolant
- 3 Speedometer
- 4 Tachometer. The meter indicates engine speed in thousands of revolutions per minute (rpm).

- 5 Power guide, see page 74.
- 6 Gear shift indicator² / Gear position indicator³. See also gearboxes page 123.

Eco guide & Power guide*

General

The Eco guide and Power guide instruments help the driver to drive the car while maintaining the best possible economy.

The car also stores statistics of journeys made, which can be viewed in the form of a block diagram, see page 243.

Eco guide

This meter provides an indication of how economically the car is being driven.

To view this function, select the theme "Eco", see page 73.

¹ When the display's message "Distance to empty fuel tank:" starts to show "----", the marking becomes red.

² Manual gearbox

³ Automatic gearbox



Instruments and controls



- 1 Instantaneous value
- 2 Average value

Instantaneous value

The instantaneous value is shown here - the higher the reading on the scale, the better.

The instantaneous value is calculated based on speed, engine speed, engine power utilised plus use of the foot brake.

Optimum speed (50-80 km/h) and low engine speeds are encouraged. The pointers fall during acceleration and braking.

Very low instantaneous values illuminate the red zone on the meter (with a short delay), which means poor economy and hence should be avoided.

Average value

The average value slowly follows the instantaneous value and describes how the car has been driven most recently. The higher the pointers on the scale, the better the economy achieved by the driver.

Power guide

This instrument shows the relationship between how much power (Power) is being taken from the engine and how much power is available.

To view this function, select the theme "Performance", see page 73.



- 1 Available engine power
- 2 Engine power utilised

Available power

The smaller, upper pointer shows the available engine power⁴. The higher the reading on the scale, the more power is available in the current gear.

Utilised power

The larger, lower pointer shows the engine power utilised⁴. The higher the reading on the scale, the more power is being taken from the engine.


A large gap between the two pointers indicates a large power reserve.

⁴ Power is dependent on engine speed.




Instruments and controls

Indicator and warning symbols

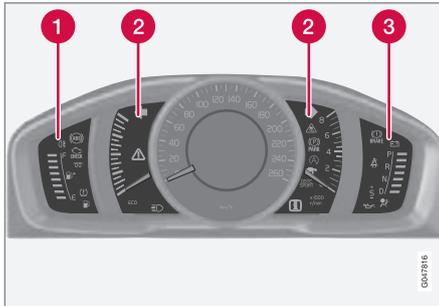

Indicator and warning symbols, analogue instrument panel.

- 1 Indicator symbols
- 2 Indicator and warning symbols
- 3 warning symbols⁵

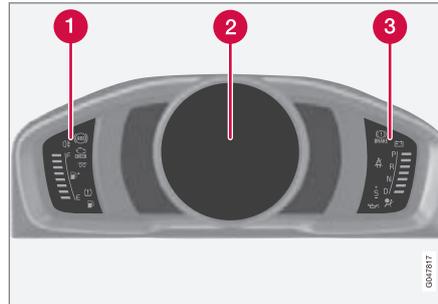

Indicator and warning symbols, digital instrument panel.

- 1 Indicator symbols
- 2 Indicator and warning symbols
- 3 Warning symbols⁵

Functionality check

All indicator and warning symbols illuminate in key position **II** or when the engine is started. When the engine has started, all the symbols should go out except the parking brake symbol, which only goes out when the brake is disengaged.

If the engine does not start or if the functionality check is carried out in key position **II** then all symbols go out within 5 seconds

except the symbol for faults in the car's emissions system and the symbol for low oil pressure.

Indicator symbols

| Symbol | Specification |
|--------|--------------------------------|
| | ABL fault |
| | Emissions system |
| | ABS fault |
| | Rear fog lamp on |
| | Stability system |
| | Stability system, sport mode |
| | Engine preheater (diesel) |
| | Low level in fuel tank |
| | Information, read display text |
| | Main beam On |

⁵ For certain engine variants, the symbol for low oil pressure is not used. Warnings are made via display text. For information on checking the oil level, see page 356.



Instruments and controls

| Symbol | Specification |
|--------|---|
| | Left-hand direction indicator |
| | Right-hand direction indicator |
| | Start/Stop, the engine auto-stopped, see page 131 |
| | Not used |

ABL fault

The symbol illuminates if a fault has arisen in the ABL function (Active Bending Lights).

Emissions system

If the symbol illuminates then it may be due to a fault in the car's emissions system. Drive to a workshop for checking. Volvo recommends that you seek assistance from an authorised Volvo workshop.

ABS fault

If this symbol illuminates then the system is not working. The car's regular brake system continues to work, but without the ABS function.

1. Stop the car in a safe place and turn off the engine.
2. Restart the engine.

3. If the symbol remains illuminated, drive to a workshop to have the ABS system checked. Volvo recommends that you seek assistance from an authorised Volvo workshop.

Rear fog lamp on

This symbol illuminates when the rear fog lamp is switched on.

Stability system

A flashing symbol indicates that the stability system is operating. If the symbol illuminates with constant glow then there is a fault in the system.

Stability system, sport mode

Sport mode allows for a more active driving experience. The system then detects whether the accelerator pedal, steering wheel movements and cornering are more active than in normal driving and then allows controlled skidding of the rear section up to a certain level before it intervenes and stabilises the car.

Engine preheater (diesel)

This symbol illuminates during engine preheating. Preheating takes place mostly due to low temperature.

Low level in fuel tank

When the symbol illuminates the level in the fuel tank is low, refuel as soon as possible.

Information, read display text

When one of the car's systems does not behave as intended, this information symbol illuminates and a text appears on the information display. The message text is cleared with the **OK** button, see page 208, or it disappears automatically after a time (time depending on which function is indicated). The information symbol can also illuminate in conjunction with other symbols.



NOTE

When a service message is shown, the symbol and message are cleared using the **OK** button, or disappear automatically after a time.

Main beam On

The symbol illuminates when main beam is on and with main beam flash.

Left/right-hand direction indicator

Both direction indicator symbols flash when the hazard warning flashers are used.

Start/Stop

The symbol shines when the engine is auto-stopped.



Instruments and controls

Warning symbols

| Symbol | Specification |
|---|---|
|  | Low oil pressure ^A |
|  | Parking brake applied |
|  | Parking brake applied, alternative symbol |
|  | Airbags – SRS |
|  | Seatbelt reminder |
|  | Alternator not charging |
|  | Fault in brake system |
|  | Warning |

^A For certain engine variants, the symbol for low oil pressure is not used. Warnings are made via display text, see pages 356 and 357.

Low oil pressure

If this symbol illuminates during driving then the engine's oil pressure is too low. Stop the engine immediately and check the engine oil level, top up if necessary. If the symbol illuminates and the oil level is normal, contact a workshop. Volvo recommends that you seek

assistance from an authorised Volvo workshop.

Parking brake applied

This symbol illuminates with a constant glow when the parking brake is applied. The symbol flashes during application, and then changes over to a constant glow.

A flashing symbol in any other situation means that a fault has arisen. Read the message on the information display.

For more information, see page 142.

Airbags – SRS

If this symbol remains illuminated or illuminates while driving, it means a fault has been detected in the seatbelt buckle, SRS, SIPS, or IC systems. Drive immediately to a workshop to have the system checked. Volvo recommends that you seek assistance from an authorised Volvo workshop.

Seatbelt reminder

This symbol illuminates if someone in a front seat has not put on their seatbelt or if someone in a rear seat has taken off their seatbelt.

Alternator not charging

This symbol illuminates during driving if a fault has occurred in the electrical system. Visit a workshop. Volvo recommends that you seek assistance from an authorised Volvo workshop.

Fault in brake system

If this symbol illuminates, the brake fluid level may be too low. Stop the car in a safe place and check the level in the brake fluid reservoir, see page 360.

If the brake and ABS symbols illuminate at the same time, there may be a fault in the brake force distribution system.

1. Stop the car in a safe place and turn off the engine.

2. Restart the engine.

- If both symbols extinguish, continue driving.
- If the symbols remain illuminated, check the level in the brake fluid reservoir, see page 360. If the brake fluid level is normal but the symbols are still illuminated, the car can be driven, with great care, to a workshop to have the brake system checked. Volvo recommends that you seek assistance from an authorised Volvo workshop.



Instruments and controls

WARNING

If the brake fluid is under the **MIN** level in the brake fluid reservoir, do not drive further before topping up the brake fluid.

The loss of brake fluid must be investigated by a workshop. Volvo recommends that you contact an authorised Volvo workshop.

WARNING

If the brake and ABS symbols are illuminated at the same time, there is a risk that the rear end will skid during heavy braking.

Warning

The red warning symbol illuminates when a fault has been indicated which could affect the safety and/or driveability of the car. An explanatory text is shown on the information display at the same time. The symbol remains visible until the fault has been rectified but the text message can be cleared with the **OK** button, see page 209. The warning symbol can also illuminate in conjunction with other symbols.

Action:

1. Stop in a safe place. Do not drive the car further.
2. Read the information on the information display. Implement the action in accordance with the message in the display. Clear the message using the **OK** button.

Reminder – doors not closed

If one of the doors is not closed properly then the information or warning symbol illuminates together with an explanatory image in the information display. Stop the car in a safe place as soon as possible and close the door that is open.

 If the car is driven at a speed lower than approx. 7 km/h then the information symbol illuminates.

 If the car is driven at a speed higher than approx. 7 km/h then the warning symbol illuminates.

If the bonnet⁶ is not closed properly then the warning symbol illuminates together with an explanatory image in the information display. Stop the car in a safe place as soon as possible and close the bonnet.

If the tailgate is not closed properly then the information symbol illuminates together with an explanatory image in the information display. Stop the car in a safe place as soon as possible and close the tailgate.

Trip meter



Trip meter.

- 1 Display for trip meter⁷

Both trip meters **T1** and **T2** are used to measure short distances. The distance is shown in the display.

Turn the left-hand stalk switch's thumbwheel to show the required meter.

⁶ Only cars with alarm*.

⁷ The appearance of the display may vary depending on variant.



Instruments and controls

One long press (more than 1 second) on the left-hand stalk switch's **RESET** button resets the trip meter currently displayed. A longer press (4 seconds) resets the trip computer if the car is fitted with the digital instrument. For more information, see page 236.

Clock



Clock, digital instrument panel.

- 1 Display for showing the time⁸

Setting the clock

The clock can be adjusted in the menu group **MY CAR**, for more information see page 211.



The menu option **Settings** → **System options** → **Time format** selects the 24h or 12h system (AM/PM).

1. Locate **Settings** → **System options** → **Time**.
2. The cursor is located in the first box for Hour: Press **OK/MENU** - the box is activated.
3. Turn **TUNE** to set the correct hour and press **OK/MENU** - the box is deactivated.
4. Turn **TUNE** to select the box for Minute (A) and press **OK/MENU** - the box is activated (B).
5. Turn **TUNE** to set the correct minute and press **OK/MENU** - the box is deactivated.
6. Turn **TUNE** to select the box for **OK** and press **OK/MENU** - the setting is complete.


⁸ The time is shown in the centre of an analogue instrument panel.



03 Your driving environment

Volvo Sensus

General

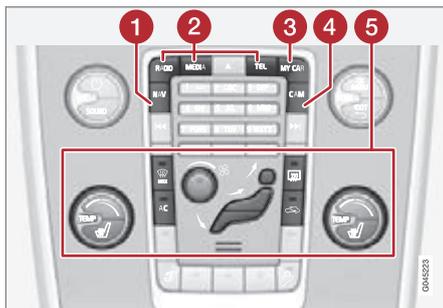

Control panel in centre console

- 1 Navigation* - **NAV**, see separate owner's manual (Road and Traffic Information System - RTI).
- 2 Infotainment (**RADIO, MEDIA, TEL***), see page 252.
- 3 Car settings - **MY CAR**, see page 211.
- 4 Park assist camera - **CAM***, see page 198.
- 5 Climate control, see page 219.

Volvo Sensus is the car's operating system, the heart of your personal Volvo experience. Volvo Sensus combines and presents many functions in several of the car's systems in the screen. With Volvo Sensus the car can be

personalised by means of an intuitive user interface. Settings can be made in Car settings, Infotainment, Climate, etc.

With the centre console buttons and controls or the steering wheel's right-hand keypad* functions can be activated or deactivated and many different settings can be made.

With a press on **MY CAR** all settings related to the driving and control of the car are presented, such as City Safety, Locks and alarm, setting the clock, etc.

With a press on the respective function: **RADIO, MEDIA, TEL***, **NAV*** and **CAM*** other sources, systems and functions can be activated, e.g. AM, FM1, CD, DVD*, TV*, Bluetooth*, navigation* and park assist camera*.

For more information on all functions/systems, see the respective section in the owner's manual.



Key positions

Insert and remove the remote control key



Ignition switch with remote control key extracted/inserted.

i NOTE

For cars with the Keyless* function the key does not need to be inserted into the ignition switch but can be stored in e.g. a pocket. For more information on Keyless functions - see page 54.

Insert the key

1. Hold the end of the remote control key with the detachable key blade and insert the key in the ignition switch.
2. Then press the key in the lock up to its end position.

! IMPORTANT

Foreign objects in the ignition switch may jeopardise the function or destroy the lock.

Do not press the remote control key incorrectly turned - Hold the end with the detachable key blade, see page 50.

Withdraw the key

- Push in the remote control key, allow it to eject, then pull it out from the ignition switch.

Functions at different levels

To enable the use of a limited number of functions with the engine switched off, the car's electrical system can be set in 3 different levels (key positions) - **0**, **I** and **II** - with the remote control key. This owner's manual describes these levels throughout using the denomination "key positions".

The following table shows the functions available in each key position/level.

| Level | Functions |
|----------|---|
| 0 | <ul style="list-style-type: none"> • Odometer, clock and temperature gauge are illuminated. • Electrically operated seats can be adjusted. • The audio system can be used for a limited time - see page 252. |
| I | <ul style="list-style-type: none"> • Panorama roof, power windows, 12 V socket in the passenger compartment, RTI, phone, ventilation fan and windscreen wipers can be used. |



Key positions

| Level | Functions |
|-------|---|
| II | <ul style="list-style-type: none"> The headlamps come on. Warning/indicator lamps illuminate for 5 seconds. Several other systems are activated. However, electric heating in seat cushions and the rear window can only be activated after starting the engine. <p>This key position consumes a lot of current from the battery and should therefore be avoided!</p> |

Selecting key position/level

Key position 0

- Unlock the car - at which point the car's electrical system is at level **0**.

Key position I

- With the remote control key fully inserted into the ignition switch¹ - Briefly press **START/STOP ENGINE**.



NOTE

To reach level **I** or **II** **without** starting the engine - do **not** depress the brake/clutch pedal when these key positions are due to be selected.

Key position II

- With the remote control key fully inserted into the ignition switch¹ - Give one long² press on **START/STOP ENGINE**.

Back to key position 0

- To return to key position **0** from position **II** and **I** - Briefly press on **START/STOP ENGINE**.

Audio system

For information on the audio system's functions with remote control key removed - see page 252.

Starting and stopping the engine

For information about starting/switching off the engine - see page 117.

Towing

For important information about the remote control key during towing - see page 331.

¹ Not required for cars with the Keyless* function.

² Approx. 2 seconds.



Seats

Front seats




- 1 Lumbar support adjustment, turn the wheel¹.
- 2 Forward/backward: lift the handle to adjust the distance to the steering wheel and pedals. Check that the seat is locked after changing position.
- 3 Raise/lower* front edge of seat cushion, pump up/down.
- 4 Adjust backrest rake, turn the wheel.
- 5 Raise/lower the seat, pump up/down.
- 6 Control panel for power seat*.

¹ Also applies to power seat.

² The sport seat backrest cannot be folded.

WARNING

Adjust the position of the driver's seat before setting off, never while driving. Make sure that the seat is in locked position in order to avoid personal injury in the event of sudden braking or an accident.

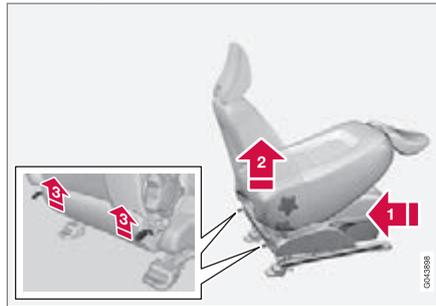Lowering the front seat backrest²

The passenger seat backrest can be folded forward to make room for long loads.

- 1 Move the seat as far back/down as possible.
- 2 Adjust the backrest to an upright position.

- 3 Lift the catches on the rear of the backrest and fold it forward.

4. Push the seat forward so that the head restraint "locks" in under the glovebox.

Raising takes place in reverse order.


WARNING

Grasp the backrest and make sure that it is properly locked after being folded up in order to avoid personal injury in the event of sudden braking or an accident.



Seats

Power seat*

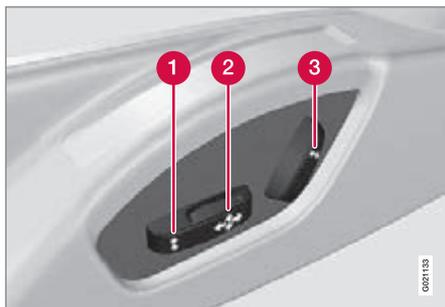

- 1 Front edge of seat cushion up/down
- 2 Seat forward/backward and up/down
- 3 Backrest rake

The power front seats have overload protection which is tripped if a seat is blocked by an object. If this happens, go to key position I or 0 and wait a short time before adjusting the seat again.

Only one movement (forward/back/up/down) can be made at a time.

Power lumbar support*




- 1 Lumbar support, increasing
- 2 Lumbar support, decreasing

The lumbar support can be adjusted when the engine is running or when key position II is active.

Preparations

The seats can be adjusted for a certain time after unlocking the door with the remote control key without the key in the ignition switch. Seat adjustment is normally made in key position I and can always be made when the engine is running.

Seat with memory function*

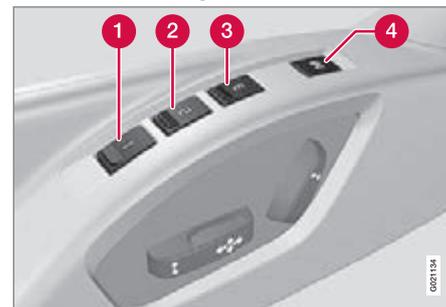

Store setting

- 1 Memory button
- 2 Memory button
- 3 Memory button
- 4 Button for storing settings

1. Adjust the seat and the door mirrors.
2. Hold the button depressed to store settings while depressing one of the memory buttons.

Using a stored setting


Hold one of the memory buttons depressed until the seat and the door mirrors stop. If you



Seats

release the button then the movement of the seat will stop.

Key memory* in remote control key³

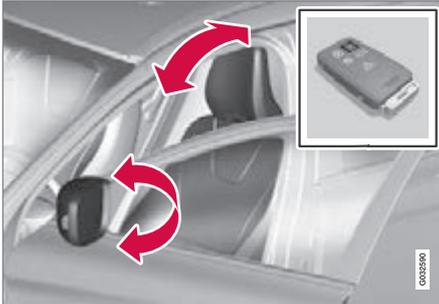

All remote control keys can be used by different drivers to store the settings for the driver's seat and door mirrors⁴. Proceed as follows:

- Adjust the seat as you want it.
- Lock the car by pressing the lock button on the remote control key that you normally use. This stores the positions of the seat and door mirrors in the remote control key's memory⁵.

- Unlock the car (by pressing the unlock button on the **same** remote control key) and open the driver's door. The driver's seat and door mirrors will automatically adopt the positions that are stored in the remote control key's memory (if the seat has been moved since you locked the car).

The key memory can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Car key memory**. For a description of the menu system, see page 211.

Emergency stop

If the seat accidentally begins to move, press one of the setting buttons for the seat or memory buttons in order to stop the seat.

Restarting to reach the seat position stored in the key memory is performed by pressing the unlock button on the remote control key. The driver's door must then be open.

WARNING


Risk of crushing! Make sure that children do not play with the controls. Check that there are no objects in front of, behind or under the seat during adjustment. Ensure that none of the backseat passengers will be trapped.

Heated seats

For heated seats, see page 223.

Rear seats

Head restraint, centre seat, rear

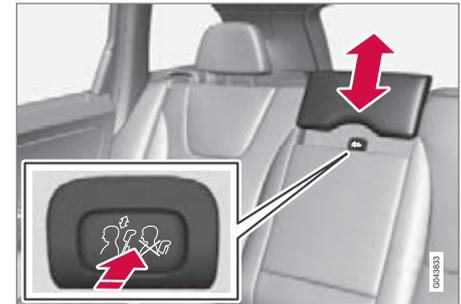

³ For key memory for Keyless function, see page 55.

⁴ Only if the car is equipped with power seat with memory and retractable power door mirrors.


⁵ This setting does not affect settings that have been stored in the power seat's memory function.

Seats

Adjust the head restraint according to passenger height so that the whole of the back of the head is covered if possible. Slide it up as required.

To lower the head restraint again, the button (located in the centre between the backrest and head restraint, see illustration) must be pressed in while the head restraint is pressed down carefully.

Manual lowering of the outer head restraints, rear seat

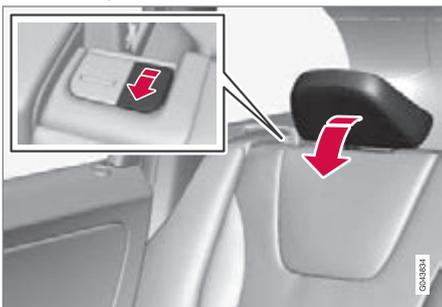

Pull the locking handle closest to the head restraint to fold the head restraint forward.

The head restraint is moved back manually until a "click" can be heard.

WARNING

The head restraints must be in locked position after being raised.

Lowering the rear seat backrest

IMPORTANT

There must be no objects on the rear seat when the backrest is to be folded down. The seat belts must not be connected either. Otherwise there is a risk of damaging the rear seat upholstery.


The triple-section backrest can be folded in different ways.

NOTE

The front seats may need to be pushed forwards, and/or the backrests adjusted upwards, in order that the rear backrests can be folded forward fully.

- The left-hand section can be folded separately.
- The centre section can be folded separately.
- The right-hand section can only be folded together with the centre section.

- If the entire backrest is to be folded then the different sections should be folded separately.

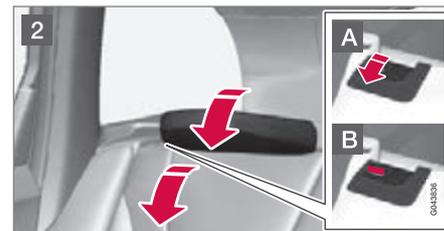

- 1 If the centre backrest is being lowered - fold and adjust the centre backrest's head restraint downwards, see page 85.
- 2 The outer head restraints are lowered automatically when the outer backrests are lowered. Pull up the backrest's locking handle **A** while folding the backrest forward at the same time. A red indicator



on the lock catch **B** shows that the backrest is no longer locked in place.

Raising takes place in reverse order.

NOTE

When the backrest has been raised, the red indicator should no longer be showing. If it is still showing then the backrest is not locked in place.

WARNING

Check that the backrests and head restraints in the rear seats are firmly locked after raising.

Electrical lowering of the rear seat's outer head restraints*



1. The remote control key must be in position **II**.
2. Press the button to lower the rear outer head restraints to improve rearward visibility.

WARNING

Do not lower the outer head restraints if there are any passengers using of the outer seats.

Move the head restraint back manually until a click is heard.


WARNING

The head restraints must be in locked position after being raised.



Steering wheel

Adjusting

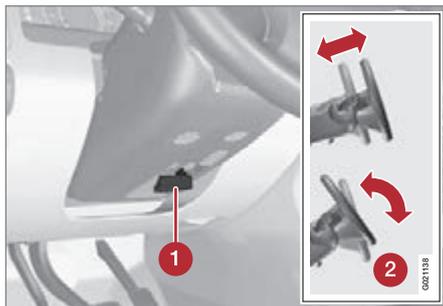

Adjusting the steering wheel.

- 1 Lever - releasing the steering wheel
- 2 Possible steering wheel positions

The steering wheel can be adjusted for both height and depth:


1. Pull the lever towards you to release the steering wheel.
2. Adjust the steering wheel to the position that suits you.
3. Push back the lever to fix the steering wheel in place. If the lever is stiff, press the steering wheel lightly at the same time as you push the lever back.

WARNING

Adjust and secure the steering wheel before driving.

With speed related power steering* the level of steering force can be adjusted, see page 244.

Keypads* and paddles*

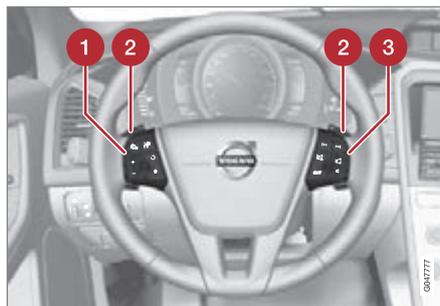

Keypads and paddles in the steering wheel.

- 1 Cruise control, see page 157
Adaptive cruise control, see page 159
- 2 Paddle for manual gear changing in an automatic gearbox, see page 125
- 3 Menu, audio and phone control, see page 253.

Horn



Horn.

Press the centre of the steering wheel to signal.



Steering wheel

Heating* of the steering wheel



Button position may vary depending on equipment selected and market.

Repeatedly **press the button** to switch between the following functions:

| Function | Indicator |
|--------------|--------------------------|
| Switched off | Button lamp extinguished |
| Heating | Button lamp illuminated |

Automatic steering wheel heating


With activated automatic start of steering wheel heating, the heating of the steering wheel starts when the engine is started. Automatic start takes place when the car is cold and the ambient temperature is below 7 °C.

Activate/deactivate the function in the menu system **MY CAR**, see page 211.



Lighting

Light switches

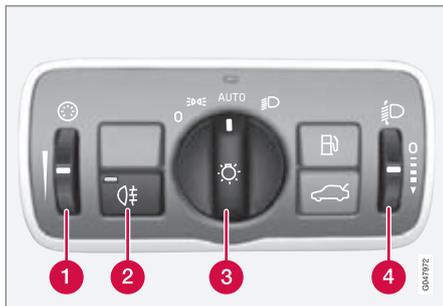

Overview, light switches.

- 1 Thumbwheel for adjusting display and instrument lighting as well as ambient lighting*
- 2 Button for rear fog lamp
- 3 Knob for daytime running lights and parking lamps
- 4 Thumbwheel¹ for headlamp levelling

Knob positions

NOTE

The same lamps are used for daytime running lights and position/parking lamps front. The brightness is higher when the lamps are used as daytime running lights.

| Position | Specification |
|----------|---|
| 0 | Daytime running lights ^A when the car's electrical system is in key position II or the engine is running. Main beam flash can be used. |
| | Daytime running lights, side marker lamps front and position/parking lamps/side marker lamps rear when the car's electrical system is in key position II or the engine is running. Automatic switching to position/parking lamps/side marker lamps when the car is parked. Main beam flash can be used. |

| Position | Specification |
|----------|--|
| AUTO | Daytime running lights, side marker lamps front and position/parking lamps/side marker lamps rear during the day when the car's electrical system is in key position II or the engine is running. Automatic switching to dipped beam and position/parking lamps/side marker lamps in poor light conditions or when the windscreen wipers or rear fog lamps are activated. The "Tunnel detection*" function is activated, see page 92. The "Active high beam*" function can be used, see page 93. Main beam can be activated when dipped beam is switched on. Main beam flash can be used. |

¹ Not available for cars equipped with active Xenon headlamps*.

* Option/accessory, for more information, see Introduction.



Lighting

| Position | Specification |
|---|--|
|  | Dipped beam and position/parking lamps/side marker lamps. Main beam can be activated. Main beam flash can be used. |

A Fitted in or under the front bumper.

Volvo recommends that **AUTO** mode is used when the car is being driven, as long as traffic situations or weather conditions are unfavourable for the "Active high beam*" function.

Instrument lighting

Different display and instrument lighting is switched on depending on key position, see page 81.

The display lighting is automatically subdued in darkness - the sensitivity is set with the thumbwheel.

The intensity of the instrument lighting is adjusted with the thumbwheel.

Headlamp levelling

The load in the car changes the vertical alignment of the headlamp beam, which could dazzle oncoming motorists. Avoid this by

adjusting the height of the beam. Lower the beam if the car is heavily laden.

1. Leave the engine running, or have the car's electrical system in key position I.
2. Roll the thumbwheel up/down to raise/lower beam alignment.




Thumbwheel positions for different load cases.

- 1 Only driver
- 2 Driver and passenger in the front passenger seat
- 3 Occupants in all seats
- 4 Occupants in all seats and maximum load in the cargo area
- 5 Driver and maximum load in the cargo area

Cars with active Xenon headlamps* have automatic headlamp levelling and are therefore not equipped with the thumbwheel.

Position/parking lamps

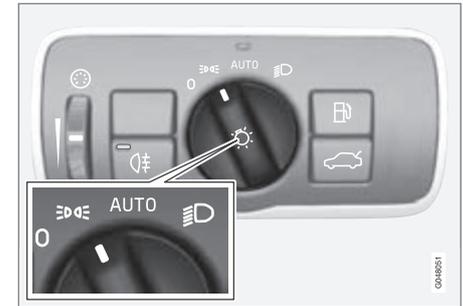

Knob for headlamp control in the position for position/parking lamps.

Turn the knob to the position for position/parking lamps (number plate lighting is switched on at the same time).

If the car's electrical system is in key position II or the engine is running then the daytime running lights are switched on instead of the front position/parking lamps.

When it is dark outside and the tailgate is opened the rear position/parking lamps are switched on in order to alert traffic behind. This takes place irrespective of what position

* Option/accessory, for more information, see Introduction.

Lighting

the knob is in or what key position the car's electrical system is in.

Daytime running lights during the day. DRL



Knob for headlamp control in **AUTO** position.

With the knob for headlamp control in **AUTO** position the daytime running lights (Daytime Running Lights - DRL) are activated automatically when the car is driven during the day. A light sensor on the top of the instrument panel changes from daytime running lights to dipped beam at twilight or when daylight becomes too weak. Switching to dipped beam also takes place if the windscreen wipers or rear fog lamps are activated.

WARNING

This system help to save energy - it cannot determine in all situations when daylight is too weak or sufficiently strong, e.g. in mist and rain.

The driver is always responsible for ensuring that the car is driven with its lights in a correct state and in accordance with applicable traffic regulations.

Tunnel detection*

The function is available in cars with rain sensor*. The sensor detects the entrance to a tunnel and resets the lighting from daytime running lights to dipped beam. Approx. 20 seconds after the car has left the tunnel, the lighting returns to daytime running lights. If the car is driven into another tunnel within this time period then dipped beam is kept switched on. This avoids repeated changes to the car's light settings.

Note that the headlamp control's knob must remain in **AUTO** position for tunnel detection to work.

Main/dipped beam



Stalk switch and knob for headlamp control.

- Position for main beam flash
- Position for main beam

Dipped beam

With the knob in **AUTO** position, dipped beam is activated automatically at twilight or when daylight becomes too weak. Dipped beam is also activated automatically if the windscreen wipers or rear fog lamps are activated.

With the knob in position dipped beam is always switched on when the engine is running or when key position II is active.

Main beam flash

Move the stalk switch gently towards the steering wheel to the position for main beam



Lighting

flash. Main beam comes on until the stalk switch is released.

Main beam

Main beam can be activated when the knob is in position **AUTO**² or . Activate/deactivate main beam by moving the stalk switch towards the steering wheel to the end position and then releasing.

When main beam has been activated the  symbol illuminates in the combined instrument panel.

Active high beam - AHB*

Active high beam (Active High Beam - AHB) is a function which uses a camera sensor at the top edge of the windscreen to detect the headlamp beams of oncoming traffic or the rear lights of vehicles in front, and then switches from main beam to dipped beam. The function can also take streetlights into account.

Car with halogen headlamps

The lighting returns to main beam about a second after the camera sensor no longer detects the headlamp beams from oncoming traffic or the rear lights from vehicles in front.

Car with Xenon headlamps

Unlike what happens during conventional dimming, the light beam continues with main beam on both sides of oncoming traffic or vehicles ahead - only the part of the light beam that points directly to the vehicle is dimmed.



Dipped beam directly toward oncoming vehicles, but continued main beam on both sides of the vehicle.

The lighting returns to full main beam about a second after the camera sensor no longer detects the headlamp beams from oncoming traffic or the rear lights from vehicles in front.

Activating/deactivating

AHB can be activated when the headlamp control's knob is in position **AUTO**.



*Stalk switch and knob for headlamp control in **AUTO** position.*

The function can start while driving in the dark when the car's speed is 20 km/h or higher.

Activate/deactivate AHB by moving the left-hand stalk switch towards the steering wheel to the end position and then releasing. Deactivation when main beam is on means that the lights are reset directly to dipped beam.

Car with analogue combined instrument panel

When AHB is activated the  symbol illuminates in the instrument's information display.

² When dipped beam is switched on.



Lighting

When main beam is switched on the  symbol also illuminates in the combined instrument panel. This also applies for Xenon headlamps if the main beam is partially dimmed, i.e. as soon as the light beam shines with slightly more than dipped beam.

Car with digital combined instrument panel

When AHB is activated the  symbol turns white in the instrument's information display.

When main beam is activated, the symbol turns blue. This also applies for Xenon headlamps if the main beam is partially dimmed, i.e. as soon as the light beam shines with slightly more than dipped beam.

Manual operation

NOTE

Keep the windscreen surface in front of the camera sensor clean from ice, snow, mist and dirt.

Do not attach or fit anything to the windscreen in front of the camera sensor, as this could reduce or prevent the function of one or more camera-dependent systems.

If the message **Active main beam Temporary unavailable Switch manually** is

shown in the combined instrument panel's information display then you have to switch manually between main and dipped beam. However, the knob for headlamp control can still remain in position **AUTO**. The same applies if the message **Windscreen sensors blocked See manual** and the  symbol are shown. The  symbol goes out when these messages are shown.

AHB may be temporarily unavailable e.g. in situations with dense fog or heavy rain. When AHB becomes available again, or the windscreen sensors are no longer blocked, the message extinguishes and the  symbol illuminates.

WARNING

AHB is an aid for using optimum light composition when conditions are favourable.

The driver always bears responsibility for manually switching between main and dipped beam when traffic situations or weather conditions so require.

IMPORTANT

Examples of when manual switching between main and dipped beam may be required:


- In heavy rain or dense fog
- In freezing rain
- In snow flurries or slush
- In moonlight
- When driving in poorly lit built-up areas
- When the traffic ahead has weak lighting
- If there are pedestrians on or beside the road
- If there are highly reflective objects such as signs in the vicinity of the road
- When the lighting from oncoming traffic is obscured by e.g. a crash barrier
- When there is traffic on connecting roads
- On the brow of a hill or in a hollow
- In sharp bends.

For more information on the limitations of the camera sensor, see page 184.



Lighting

Active Xenon headlamps - ABL*

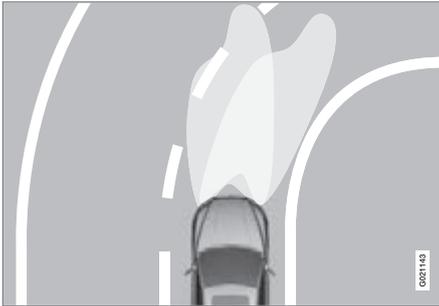

Headlamp pattern with function deactivated (left) and activated (right) respectively.

If the car is equipped with active Xenon headlamps (Active Bending Lights – ABL) the light from the headlamps follows the steering wheel movement in order to provide maximum lighting in bends and junctions and so provide increased safety.

The function is activated automatically when the car is started (provided that it has not been deactivated in the menu system **MY CAR**). In the event of a fault in the function the  symbol illuminates in the combined instrument panel at the same time as

the information display shows an explanatory text and a further illuminated symbol.

| Symbol | Display | Specification |
|---|--|--|
|  | Headlamp system malfunction Service required | The system is disengaged. Visit a workshop if the message remains. Volvo recommends that you contact an authorised Volvo workshop. |

The function is only active in twilight or darkness and only when the car is moving.

The function³ can be deactivated/activated in the menu system **MY CAR** under **Settings** → **Car settings** → **Light settings** → **Active Bending Lights**. For a description of the menu system, see page 212.

Cornering lights

Active Xenon headlamps are equipped with cornering lights that temporarily illuminate the area diagonally in front of the car in the direction the steering wheel is turned in a sharp

bend, or in the direction for which the direction indicators are used.

The function is activated when main beam or dipped beam is used and the car's speed is lower than approx. 30 km/h.

In addition, both cornering lights are switched on as a supplement to the reversing lamp during reversing.

Auxiliary lamps*

If the car has auxiliary lamps, the driver can use the **MY CAR** menu system to choose whether they should be deactivated or switched on/off simultaneously with the main beam⁴, see page 213.

³ Activated on delivery from the factory.

⁴ Auxiliary lamps must be connected to the electrical system by a workshop. Volvo recommends that you contact an authorised Volvo workshop.

Lighting

Rear fog lamp



Button for rear fog lamp.

The rear fog lamp can only be switched on when key position II is active or the engine is running and the headlamp control's knob is in position **AUTO** or **☰**.

Press the button for On/Off. The rear fog lamp's indicator symbol **☰** in the combined instrument panel and the light in the button both illuminate when the rear fog lamp is switched on.

The rear fog lamp is switched off automatically when the engine is switched off or when the headlamp control's knob is turned to position **0** or **☰**.

NOTE

Regulations for using rear fog lamps vary between different countries.

Brake lights

The brake light automatically comes on during braking. For information on the emergency brake lights and automatic hazard warning flashers, see page 138.

Hazard warning flashers



Button for hazard warning flashers.

Press the button to activate the hazard warning flashers. Both direction indicator symbols in the combined instrument panel flash when the hazard warning flashers are used.

The hazard warning flashers are activated automatically when the car has been braked so suddenly that the emergency brake lights have been activated at a speed below 10 km/h. The hazard warning flashers remain on when the car has stopped and are deactivated automatically when the car is driven off again or the button is depressed. For more information on Emergency brake lights and automatic hazard warning flashers, see page 138.

Direction indicators/flashers



Direction indicators/flashers.



Lighting

Short flash sequence

1 Move the stalk switch up or down to the first position and release. The direction indicators flash three times. The function can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Light settings** → **Triple indicator**. For a description of the menu system, see page 212.

Continuous flash sequence

2 Move the stalk switch up or down to the outer position.

The stalk switch remains in its position and is moved back manually, or automatically by the steering wheel movement.

Direction indicator symbols

For direction indicator symbols, see page 75.

Interior lighting



Controls in roof console for the front reading lamps and passenger compartment lighting.

- 1 Reading lamp, left-hand side
- 2 Reading lamp, right-hand side
- 3 Interior lighting

All lighting in the passenger compartment can be switched on and off manually within 30 minutes from when:

- the engine has been switched off and the car's electrical system is in key position **0**
- the car has been unlocked but the engine has not been started.

Front roof lighting

The front reading lamps are switched on or off by pressing the relevant button in the roof console.

Rear roof lighting



Rear roof lighting.



Lighting



Rear roof lighting in cars with panorama roof.

The lamps are switched on or off by pressing each respective button.

Courtesy lighting

Courtesy lighting (and passenger compartment lighting) is switched on and off respectively when a side door is opened or closed.

Glovebox lighting

Glovebox lighting is switched on and off respectively when the lid is opened or closed.

Vanity mirror lighting

The lighting for the vanity mirror, see page 247, is switched on and off respectively when the cover is opened or closed.

Lighting, cargo area

The lighting in the cargo area is switched on and off respectively when the tailgate is opened or closed.

Automatic lighting

The switch for passenger compartment lighting has three positions for the lighting in the passenger compartment:

- **Off** – right-hand side pressed in, automatic lighting deactivated.
- **Neutral position** – automatic lighting activated.
- **On** – left-hand side pressed in, passenger compartment lighting switched on.

Neutral position

When the button is in neutral position the passenger compartment lighting is switched on and off automatically in accordance with the following.

The passenger compartment lighting is switched on and remains on for 30 seconds if:

- the car is unlocked with the remote control key or key blade, see page 47 or 51
- the engine has been switched off and the car's electrical system is in key position 0.

Passenger compartment lighting is switched off when:

- the engine is started
- the car is locked.

The passenger compartment lighting comes on and remains on for two minutes if one of the doors is open.

If any lighting is switched on manually and the car is locked then it will be switched off automatically after two minutes.

Mood lights

When the normal passenger compartment lighting is switched off and the engine is running, a number of LEDs illuminate, including one in the roof lighting, in order to provide a low-light and enhance the mood while driving. This lighting goes out for a little while after the normal passenger compartment lighting when the car is locked. The brightness is controlled using the thumbwheel on the headlamp control, see page 90.



Home safe light duration

Some of the exterior lighting can be kept switched on to work as home safe lighting after the car has been locked.

1. Remove the remote control key from the ignition switch.
2. Move the left-hand stalk switch toward the steering wheel to the end position and release it. The function can be activated in the same way as with main beam flash, see page 92.
3. Get out of the car and lock the door.

When the function is activated, dipped beam, parking lamps, door mirror lamps, number plate lighting, interior roof lamps and courtesy lighting are switched on.

The length of time for which the home safe lighting should be kept on can be set in the menu system **MY CAR** under **Settings** → **Car settings** → **Light settings** → **Home safe light duration**. For a description of the menu system, see page 212.

Approach light duration

Approach lighting is switched on with the remote control key, see page 47, and is used to switch on the car's lighting at a distance.

When the function is activated with the remote control, the parking lamps, door mirror lamps, number plate lighting, interior roof lamps and courtesy lighting are switched on.


The length of time for which the approach lighting should be kept on can be set in the menu system **MY CAR** under **Settings** → **Car settings** → **Light settings** → **Approach light duration**. For a description of the menu system, see page 212.

Adjusting headlamp pattern

The headlamp pattern does not need to be adjusted for right or left-hand traffic. The headlamp pattern is designed in such a way that oncoming traffic is not dazzled.

Wipers and washing

Windscreen wipers¹

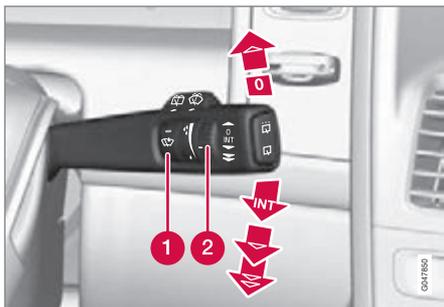

Windscreen wipers and windscreen washers.

- 1** Rain sensor, on/off
- 2** Thumbwheel sensitivity/frequency

Windscreen wipers off

0 Move the stalk switch to position **0** to switch off the windscreen wipers.

Single sweep

 Raise the stalk switch and release to make one sweep.

Intermittent wiping

INT Set the number of sweeps per time unit with the thumbwheel when intermittent wiping is selected.

Continuous wiping

-  The wipers sweep at normal speed.
-  The wipers sweep at high speed.

! IMPORTANT

Before activating the wipers during winter - ensure that the wiper blades are not frozen in and that any snow or ice on the windscreen (and rear window) is scraped away.

! IMPORTANT

Use plenty of washer fluid when the wipers are cleaning the windscreen. The windscreen must be wet when the windscreen wipers are operating.

Service position wiper blade

For cleaning the windscreen/wiper blades and replacement of wiper blades see see page 368 and 387.

Rain sensor*

The rain sensor automatically starts the windscreen wipers based on how much water it detects on the windscreen. The sensitivity of

the rain sensor can be adjusted using the thumbwheel.

When the rain sensor is activated a lamp in the button is illuminated and the rain sensor symbol  is shown in the combined instrument panel.

Activating and setting the sensitivity

When activating the rain sensor, the car must be running or the remote control key in position **I** or **II** while the windscreen wiper stalk switch must be in position **0** or in the position for a single sweep.

Activate the rain sensor by pressing the button . The windscreen wipers make one sweep.

Press the stalk switch up for the wipers to make an extra sweep.

Turn the thumbwheel upward for higher sensitivity and downward for lower sensitivity. (An extra sweep is made when the thumbwheel is turned upward.)

Deactivate

Deactivate the rain sensor by pressing the button  or move the stalk switch down to another wiper program.

¹ Replacing the wiper blades see page 368, service position, wiper blade see page 368 and filling washer fluid see page 369.




Wipers and washing

The rain sensor is automatically deactivated when the remote control key is removed from the ignition switch or five minutes after the engine has been switched off.

IMPORTANT

The windscreen wipers could start and be damaged in an automatic car wash. Switch off the rain sensor while the car is in motion or when the remote control key is in position I or II. The symbol in the combined instrument panel and the lamp in the button go out.

Washing the headlamps and windows

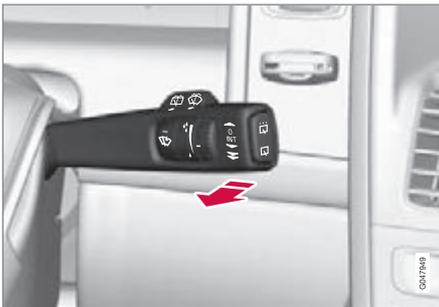

Washing function.

Washing the windscreen

Move the stalk switch toward the steering wheel to start the windscreen and headlamp washers.

The windscreen wipers will make several more sweeps and the headlamps are washed once the stalk switch has been released.

Heated washer nozzles*

The washer nozzles are heated automatically in cold weather to prevent the washer fluid freezing solid.

High-pressure headlamp washing*

High-pressure headlamp washing consumes a large quantity of washer fluid. To save fluid, the headlamps are washed automatically at every fifth windscreen wash cycle.

Reduced washing

If only approx. 1 litre of washer fluid remains in the reservoir and the message that you should fill the washer fluid is shown in the combined instrument panel, then the supply of washer fluid for the headlamps is switched off. This is in order to prioritise cleaning the windscreen and the visibility through it.

Wiping and washing the rear window



- 1 Rear window wiper – intermittent wiping
- 2 Rear window wiper – continuous speed

Press the stalk switch forward (see the arrow in the illustration above) to initiate rear window washing and wiping.

NOTE

The rear window wiper is equipped with overheating protection which means that the motor is switched off if it overheats. The rear window wiper works again after a cooling period (30 seconds or longer, depending on the heat in the motor and the outside temperature).

* Option/accessory, for more information, see Introduction.



Wipers and washing

Wiper – reversing

Engaging reverse gear while the windscreen wipers are on initiates intermittent rear window wiping². The function stops when reverse gear is disengaged.

If the rear window wiper is already on at continuous speed, no change is made.



NOTE

On cars with rain sensor, the rear window wiper is activated with reversing, if the sensor is activated and it is raining.

² This function (intermittent wiping when reversing) can be deactivated. Visit a workshop. Volvo recommends that you contact an authorised Volvo workshop.



Windows, rearview and door mirrors

General

Laminated glass



The windscreen and panorama roof have laminated glass. It is reinforced which provides better protection against break-ins and improved

sound insulation in the passenger compartment. Other glass surfaces*.

Water and dirt-repellent coating*




The windows are treated with a surface coating that improves the view in difficult weather conditions. Maintenance, see page 388.

! IMPORTANT

Do not use a metal ice scraper to remove ice from the windows. Use the defroster to remove ice from the mirrors, see page 106.

Heat-reflecting windscreen*

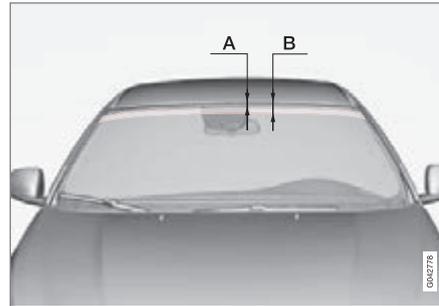

Areas where IR film is not applied.

| | Dimensions |
|---|------------|
| A | 47 mm |
| B | 87 mm |


The windscreen is equipped with a heat-reflecting film (IR) that reduces the solar radiation into the passenger compartment.

The positioning of electronic equipment, such as a transponder, behind a glass surface with heat-reflecting film may affect its function and performance.

For the optimal function of electronic equipment, it should be positioned on the part of the windscreen with no heat-reflecting film

(see the highlighted area in the above illustration).

Power windows

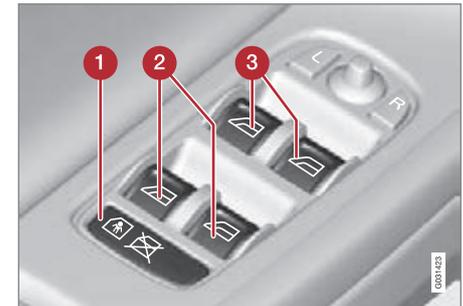

Driver's door control panel.

- 1 Switch for electric child safety locks* and disengaging rear power window buttons, see page 63.
- 2 Rear window controls
- 3 Front window controls

! WARNING

Check that none of the rear seat passengers is in danger of becoming trapped in any way when closing the windows from the driver's door.



Windows, rearview and door mirrors

! WARNING

Make sure that children or other passengers are not in danger of becoming trapped in any way when closing the windows, in particular when the remote control key is used.

! WARNING

If there are children in the car - remember to always switch off the power supply to the power windows by selecting key position **0** and then take the remote control key with you when leaving the car. For information on key positions - see page 82.

Operating



Operating the power windows.

1 Operating without auto

2 Operating with auto

All power windows can be operated using the control panel for the driver's door - the control panels for the other doors can only each operate their respective power window. Only one control panel can be operated at a time.

In order for the power windows to be used the key position must be at least **I** - see page 81. The power windows can be operated for a few minutes after the engine has been switched off and after the remote control key has been removed - although not after a door has been opened.

Closing of the windows is stopped and the window is opened if anything prevents its movement. It is possible to force the pinch protection when closing has been interrupted, e.g. with ice, by continuously holding the button up until the window is closed. The pinch protection is reactivated after a brief pause.

i NOTE

One way to reduce the pulsating wind noise when the rear windows are open is to also open the front windows slightly.

Operating without auto

Move one of the controls up/down gently. The power windows move up/down as long as the control is held in position.

Operating with auto

Move one of the controls up/down to the end position and release it. The window runs automatically to its end position.

Operating with the remote control key and central locking

To remotely operate the power windows from the outside with the remote control key or from inside with central locking, see pages 48 and 57.



Windows, rearview and door mirrors

Resetting

If the battery is disconnected then the function for automatic opening must be reset so that it can work correctly.

1. Gently raise the front section of the button to raise the window to its end position and hold it there for one second.
2. Release the button briefly.
3. Raise the front section of the button again for one second.

WARNING

Resetting must be carried out to ensure that pinch protection works.

Door mirrors



Door mirror controls.

Adjusting

1. Press the **L** button for the left-hand door mirror or the **R** button for the right-hand door mirror. The light in the button illuminates.
2. Adjust the position with the joystick in the centre.
3. Press the **L** or **R** button again. The light should no longer be illuminated.

WARNING

The mirror on the driver's side is the wide-angle type to provide optimal vision. Objects may appear further away than they actually are.

Storing the position¹

The mirror positions are stored in the key memory when the car has been locked with the remote control key. When the car is unlocked with the same remote control key the mirrors and the driver's seat adopt the stored positions when the driver's door is opened.

The function can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Car key memory** → **Personal settings in key memory**. For a description of the menu system, see page 212.

Angling the door mirror when parking¹

The door mirror can be angled down for the driver to view the side of the road when parking for example.

- Engage reverse gear and press the **L** or **R** button.

¹ Only in combination with power seat with memory, see page 84.



Windows, rearview and door mirrors

When reverse gear is disengaged the mirror automatically returns to its original position after approx. 10 seconds, or sooner by pressing the **L** and **R** button.

Automatic angling of the door mirror when parking¹

When reverse gear is engaged the door mirror is automatically angled down so that the driver can see the side of the road when parking for example. When reverse gear is disengaged the mirror automatically returns to its original position after a short time.

The function can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Side mirror settings** → **Tilt left mirror** or **Tilt right mirror**. For a description of the menu system, see page 212.

Automatic retraction when locking¹

When the car is locked/unlocked with the remote control key the door mirrors are automatically retracted/extended.

The function can be activated/deactivated in the menu system **MY CAR** under **Settings** → **Car settings** → **Side mirror settings** → **Fold mirrors**. For a description of the menu system, see page 212.

Resetting to neutral

Mirrors that have been moved out of position by an external force must be reset electrically to the neutral position for electric retracting/ extending to work correctly:

1. Retract the mirrors with the **L** and **R** buttons.
2. Fold them out again with the **L** and **R** buttons.
3. Repeat the above procedure as necessary.

The mirrors are now reset in neutral position.

Automatic dimming*

For the door mirrors to be fitted with this function requires that the interior rearview mirror also has automatic dimming, see page 107.

Retractable power door mirrors*

The mirrors can be retracted for parking/driving in narrow spaces:

1. Depress the **L** and **R** buttons simultaneously (key position must be at least **I**).
2. Release them after approximately 1 second. The mirrors automatically stop in the fully retracted position.

Fold out the mirrors by pressing down the **L** and **R** buttons simultaneously. The mirrors automatically stop in the fully extended position.

Home safe and approach lighting

The light on the door mirrors illuminates when approach lighting or home safe lighting is selected, see page 99.

Heated windscreen*, rear window and door mirrors



- 1 Heating, windscreen
- 2 Heating, rear window and door mirrors

¹ Only in combination with power seat with memory, see page 84.



Windows, rearview and door mirrors

The function is used to remove ice and misting from the windscreen, rear window and door mirrors.

One press of the respective button starts the heating. The light in the button indicates that the function is active. Switch off the heating as soon as the ice/misting is cleared in order not to load the battery unnecessarily. However, the function is switched off automatically after a certain time.

See also the section "Heated windscreen and max. defroster" on page 226.

The door mirrors and rear window are demisted/defrosted automatically if the car is started in an outside temperature lower than +7 °C. Automatic defrosting can be selected in the menu system **MY CAR** under **Settings** → **Climate settings** → **Auto start rear defrost**. Select between **On** or **Off**. For a description of the menu system, see page 212.

Interior rearview mirror



- 1 Control for dimming

Manual dimming

Bright light from behind could be reflected in the rearview mirror and dazzle the driver. Use dimming with the dimming control when lights from behind are distracting:

1. Use dimming by moving the control in towards the passenger compartment.
2. Return to normal position by moving the control towards the windscreen.

Automatic dimming*

Bright light from behind is automatically dimmed by the rearview mirror. The control for manual dimming is not available on mirrors with automatic dimming.

The rearview mirror contains two sensors - one forward facing and one rearward facing - that work together to identify and eliminate dazzling light. The forward facing sensor detects ambient light, while the rearward facing sensor detects the light from vehicle headlights behind.

i NOTE

If the sensors are obscured by e.g. parking permits, transponders, sun visors or objects in the seats or in the cargo area in such a way that light is prevented from reaching the sensors, then the dimming function of the interior rearview and door mirrors is reduced.

The compass* can only be specified for interior rearview mirror with automatic dimming, see page 108.

* Option/accessory, for more information, see Introduction.



03 Your driving environment

Compass*

Operation



Rearview mirror with compass.

The upper right-hand corner of the rearview mirror has an integrated display that shows the compass direction in which the front of the car is pointing. Eight different directions are shown with English abbreviations: **N** (north), **NE** (north east), **E** (east), **SE** (south east), **S** (south), **SW** (south west), **W** (west) and **NW** (north west).

The compass is activated automatically when the car is started or in key position II, see page 81. To deactivate/activate the compass - press in the button on the underside of the mirror using a paper clip for example.

Calibration

The compass may need calibrating to show the correct compass direction.

The earth is divided into 15 magnetic zones. The compass should be calibrated if the car is moved across several magnetic zones.

Proceed as follows to perform calibration:


1. Stop the car in a large open area free from steel structures and high-voltage power lines.
2. Start the car and switch off all electrical equipment (air conditioning, wipers, etc.) and ensure that all doors are closed.



NOTE

Calibration may fail or not start at all if electrical equipment is not switched off.

3. Hold the button on the underside of the rearview mirror depressed approx. 3 seconds. The number of the current magnetic zone is shown.

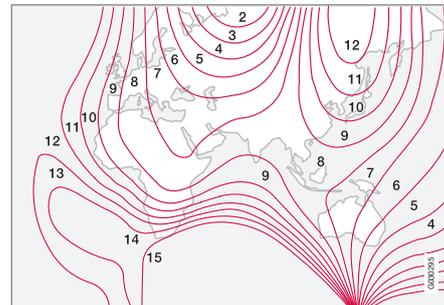

Magnetic zones.

4. Press the button repeatedly until the required magnetic zone (1-15) is shown. See the map of magnetic zones for the compass.
5. Wait until the display returns to showing the character **C**, or hold the button on the bottom of the rearview mirror depressed for approx. 6 seconds (use e.g. a paper clip) until the character **C** is shown.
6. Drive slowly in a circle at a speed of no more than 10 km/h until a compass direction is shown in the display, indicating that calibration is complete. Then drive a further 2 circles to fine-tune calibration.
7. **Cars with heated windscreen*:** If the character **C** is shown in the display when



Compass*

the heated windscreen is activated, perform the calibration in accordance with point 6 above with the heated windscreen activated, see page 226.

8. Repeat the above procedure as necessary.

Power panorama roof*

General

The panorama roof is divided into two sections. Only the front section can be opened - horizontally or vertically at the rear edge (ventilation position).

The panorama roof has a sun blind made of perforated fabric and located under the glass roof to provide extra protection from factors such as strong sunlight.




The panorama roof and curtain are operated with a control located in the roof. The control is activated when the key is in position **I** or **II**, see page 81.

WARNING

Children, other passengers or objects may be trapped by the panorama roof's moving parts.

- Always operate the panorama roof with caution.
- Do not allow children to play with the controls.
- Remember to always switch off the power supply to the panorama roof by selecting key position **0** and then take the remote control key/PCC* with you when leaving the car. For information on key positions - see page 82.

Operating

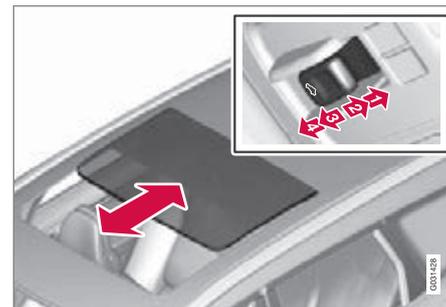

- 1 Opening, automatic
- 2 Opening, manual
- 3 Closing, manual
- 4 Closing, automatic

The panorama roof and curtain can be operated in key position **I** or **II**.

Automatic operation

1. To open the curtain all the way - press the control rearward to the automatic opening position and release.
2. To then open the panorama roof all the way - press the control rearward again to the automatic opening position and release.



Power panorama roof*

Close the roof/curtain by repeating the preceding procedure in reverse order - press the control forward to the automatic closing position instead.

Rapid opening/closing

The panorama roof and curtain can be opened/closed simultaneously:

- To open - press the control rearward to the automatic operation position twice and release.
- To close - press the control forward to the automatic operation position twice and release.

Manual operation


1. To open the curtain - press the control rearward to the point of resistance for manual opening. The curtain moves towards maximum opening as long as the button is depressed.
2. To angle the panorama roof - press the control rearward again to the point of resistance for manual opening
3. To open the panorama roof - press the control rearward to the point of resistance for manual opening a third time. The panorama roof moves towards maximum opening as long as the button is kept depressed.

Close the roof/curtain by repeating the preceding procedure in reverse order - press the control forward to the manual closing position instead.

NOTE

For manual opening, the curtain must be fully open before the panorama roof can be opened. For the reverse procedure, the panorama roof must be fully closed before the curtain can be closed.

Ventilation position

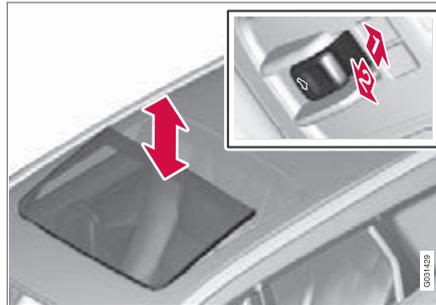

Ventilation position, vertically at the rear edge.

- 1 Open by pressing the rear edge of the control upward.
- 2 Close by pulling the rear edge of the control down.

When the ventilation position is selected the front section is raised at its rear edge. If the curtain is fully closed when ventilation position is selected - then it opens automatically approx. 50 mm.

Closing using the remote control key or central locking button



One long press on the lock button, see pages 47 (remote control key) and 57 (central locking button), closes the panorama roof and all the windows. The door mirrors are retracted* and the doors and tailgate are locked. To interrupt closing, press the lock button again.

WARNING

If closing the panorama roof with the remote control key, make sure nothing could become trapped.

* Option/accessory, for more information, see Introduction.



03 Your driving environment

Power panorama roof*

Pinch protection

The panorama roof has pinch protection that is triggered if the glass cover or the sun blind is blocked by an object during closing. In the event of blocking, the glass cover or sun blind is then opened automatically to approx. 50 mm from the blocked position (or to full ventilation position). The pinch protection is also active when the glass cover or sun blind is opened.

There is the option to force the pinch protection when closing has been interrupted e.g. in the event of ice forming around the glass cover, by continually holding the control pressed forward or depressed until the glass cover is closed.

The panorama roof has a wind deflector that is folded up when the panorama roof is in the open position.

Wind deflector





Alcolock*


General information on the alcolock

The alcolock's¹ function is to prevent the car from being driven by individuals under the influence of alcohol. Before the engine can be started the driver must take a breath test that verifies that he/she is not under the influence of alcohol. Alcolock calibration takes place in accordance with each market's limit value in force for driving legally.

WARNING

The Alcolock is an aid and does not exempt the driver from responsibility. It is always the responsibility of the driver to be sober and to drive the car safely.

Functions

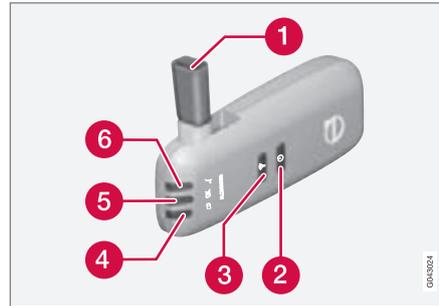

1. Nozzle for breath test.
2. Switch.
3. Transmission button.
4. Lamp for battery status.
5. Lamp for result of breath test.
6. Lamp indicates ready for breath test.

Operation

Battery

Alcolock indicator lamp (4) shows battery status:

| Indicator lamp (4) | Battery status |
|--------------------|---|
| Green flash-ing | Charging in progress |
| Green | Fully charged |
| Yellow | Semi-charged |
| Red | Discharged - fit the charger in the holder or connect the power supply cable from the glovebox. |


NOTE

Store the Alcolock in its holder. This will keep the built-in battery fully charged and the Alcolock is activated automatically when the car is opened.

¹ Also called Alcolguard.

Alcolock*

Storage

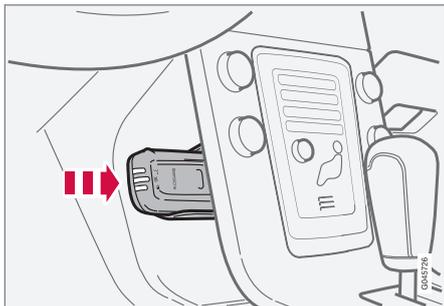

Handheld unit storage and charging station.

- The handheld alcolock unit is released by depressing it slightly in its holder and releasing it - it then springs out and can be removed from the holder.
- Replace the handheld unit in the holder by pushing it in until it engages.
- Store the handheld unit in the holder - this provides it with the best protection and keeps its batteries fully charged.

Before starting the engine

The Alcolock is activated automatically and is then ready for use when the car is opened.

1. When the indicator lamp (6) is green the Alcolock is ready for use.
2. Withdraw the Alcolock from its holder. If the Alcolock is outside the car when it is

unlocked then it must first be activated with the switch (2).

3. Fold up the nozzle (1), take a deep breath and blow with an even pressure until a "click" is heard after approx. 5 seconds. The result will be one of the alternatives in the following table **Result after breath test**.
4. If no message is shown then the transmission to the car may have failed - in which case, press the button (3) to transmit the result to the car manually.
5. Fold down the nozzle and refit the Alcolock in its holder.
6. Start the engine following an approved breath test within 5 minutes - otherwise it must be repeated.

Result after breath test

| Indicator lamp (5) + Display text | Specification |
|---|---|
| Green lamp + Alcolguard Approved test | Start the engine - no alcohol content measured. |
| Yellow lamp + Alcolguard Approved test | Engine starting possible - measured alcohol content is above 0.1 promille but below the limit value in force ^A . |
| Red lamp + Dis-approved test Wait 1 minute | Engine starting not possible - measured alcohol content is above the limit value in force ^A . |

^A Limits vary between countries, so find out what limits apply. See also the section entitled General information on the Alcolock on page 113



NOTE

After a completed period of driving, the engine can be restarted within 30 minutes without a new breath test.



To bear in mind

Before the breath test

In order to obtain correct function and as accurate a measurement result as possible:

- Avoid eating or drinking approx. 5 minutes before the breath test.
- Avoid excess windscreen washing - the alcohol in the washer fluid may result in an incorrect measurement result.

Change of driver

In order to ensure that a new breath test is carried out in the event of a change of driver - depress the switch (2) and the send button (3) simultaneously for approx. 3 seconds. At which point the car returns to start inhibition mode and a new approved breath test is required before starting the engine.

Calibration and service

The Alcolock must be checked and calibrated at a workshop² every 12 months.

30 days before recalibration is necessary the combined instrument panel shows the message **Alcoguard Calibr. required**. If calibration is not carried out within these 30 days then normal engine starting will be blocked - only starting with the Bypass function will

then be possible, see page 115 section Emergency situation.

The message can be cleared by pressing the send button (3) once. Otherwise it goes out on its own after approx. 2 minutes but then reappears each time the engine is started - only recalibration at a workshop² can clear the message permanently.

Cold or hot weather

The colder the weather the longer it takes before the Alcolock is ready for use:

| Temperature (°C) | Maximum heating time (seconds) |
|------------------|--------------------------------|
| +10 to +85 | 10 |
| -5 to +10 | 60 |
| -40 to -5 | 180 |

At temperatures below -20 °C or above +60 °C the Alcolock requires additional power supply. The combined instrument panel shows **Alcoguard insert power cable**. In which case, connect the power supply cable from the glovebox and wait until indicator lamp (6) is green.

In extremely cold weather the heating time can be reduced by taking the Alcolock indoors.

Emergency situation

In the event of an emergency situation or the Alcolock is out of order, it is possible to bypass the Alcolock in order to drive the car.

NOTE

All Bypass activation is logged and saved in memory, see page 8 in the section, Recording data.

After Bypass function activation the combined instrument panel shows **Alcoguard Bypass enabled** the whole time while driving and can only be reset by a workshop².

The Bypass function can be tested without the error message being logged - in which case, carry out all the steps without starting the car. The error message is cleared when the car is locked.

When the Alcolock is installed, either the Bypass or Emergency function is selected as the bypassing option. This setting can be changed afterwards at a workshop².

² An authorised Volvo workshop is recommended.



03 Your driving environment

Alcolock*

Activating the Bypass function

- Depress and hold the left-hand stalk switch **OK** button and the button for hazard warning flashers simultaneously for approx. 5 seconds - the combined instrument panel first shows **Bypass activated Wait 1 minute** and then **Alcoguard Bypass enabled** - after which the engine can be started.

This function can be activated several times. The error message shown during driving can only be cleared at a workshop².

Activating the Emergency function

- Depress and hold the left-hand stalk switch **OK** button and the button for hazard warning flashers simultaneously for approx. 5 seconds - the combined instrument panel shows **Alcoguard Bypass enabled** and the engine can be started.

This function can be used once, after which a reset must be made at a workshop².

Symbols and display messages

In addition to the previously described messages, the combined instrument panel's display can also show the following:

| Display text | Meaning/Action |
|-----------------------------------|--|
| Alcoguard Restart possible | The engine has been switched off for less than 30 minutes - engine starting possible without new test. |
| Alcoguard Service required | Contact a workshop ² . |
| Alcoguard No signal | Transmission failed - send manually with button (3) or take a new breath test. |
| Alcoguard Invalid test | Test failed - take a new breath test. |
| Alcoguard Blow longer | Blowing too short - blow for longer. |
| Alcoguard Blow softer | Blowing too hard - blow more gently. |

| Display text | Meaning/Action |
|----------------------------------|--|
| Alcoguard Blow harder | Blowing too weak - blow harder. |
| Alcoguard wait Preheating | Heating not finished - wait for text Alcoguard Blow 5 seconds . |

² An authorised Volvo workshop is recommended.

* Option/accessory, for more information, see Introduction.



Starting the engine

Petrol and diesel engine



Ignition switch with remote control key extracted/inserted, and **START/STOP ENGINE** button.

! IMPORTANT

Do not press in the remote control key incorrectly turned - Hold the end with the detachable key blade, see page 50.

1. Insert the remote control key in the ignition switch and press it in to its end position. Note that if the car is equipped with an alcolock then a breath test must first be approved before the engine can be started - see page 113.

2. Hold the clutch pedal fully depressed¹. (For cars with automatic gearbox - Depress the brake pedal.)
3. Press the **START/STOP ENGINE** button and then release it.

When the engine is started the starter motor works until the engine is started or until its overheating protection triggers.

! IMPORTANT

If the engine fails to start after 3 attempts - wait for 3 minutes before making a further attempt. Starting capacity increases if the battery is allowed to recover.

! WARNING

Never remove the remote control key from the ignition switch after starting the engine or when the car is being towed.

! WARNING

Always remove the remote control key from the ignition switch when leaving the car, and make sure that the key position is **0** - in particular if there are children in the car. For information on how this works - see page 82.

i NOTE

The idling speed can be noticeably higher than normal for certain engine types during cold starting. This is so that the emissions system can reach normal operating temperature as quickly as possible, which minimises exhaust emissions and protects the environment.

Keyless drive*

- Carry out steps 2-3 for starting the engine.

For more information on Keyless drive - see page 54.

i NOTE

A prerequisite for the engine to start is that one of the car's remote control keys with the Keyless drive function is in the passenger compartment or cargo area.

¹ If the car is moving then it is enough to press the **START/STOP ENGINE** button to start the engine.



Starting the engine

WARNING

Never remove the remote control key from the car while driving or during towing.

Stop the engine

To switch off the engine:

- Press **START/STOP ENGINE** - the engine stops.

If the gear selector is not in **P** position or if the car is moving:

- Press twice on **START/STOP ENGINE** or hold the button depressed until the engine stops.

Steering lock

A mechanical noise can be perceived when the steering lock unlocks or locks.

- The steering lock unlocks when the remote control key is in the ignition switch² and the **START/STOP ENGINE** button is depressed.
- The steering lock locks when the driver's door is opened after the engine has been switched off.

Key positions

For information on the remote control key's different key positions - see page 81

Remote start - ERS*

General information on ERS

Remote start (ERS – Engine Remote Start) means that the car's engine can be started remotely using the remote control key or the PCC key. This is so that the passenger compartment can be warmed up/cooled down before departure.

The climate control system and audio system start with the same settings that were in use when the car was parked.

An ERS-started engine is activated for a maximum of 15 minutes, then it is switched off. After two ERS-activations the engine must be started in the normal way before ERS can be re-used.

The ERS function is only available on cars with petrol engine and automatic gearbox.

NOTE

The service life of the remote control key's battery is affected by the ERS function. In the event of frequent use of ERS the battery should therefore be changed once per year (see page 52).

NOTE

Follow local/national rules/regulations on idling.

WARNING

To remote-start the engine, the following criteria must be met:

- The car must be supervised
- There must be no people or animals inside the car
- The car must not be parked in a closed, unventilated area - the exhaust gases may seriously injure humans and animals.


² Cars with Keyless drive must have a remote control key inside the passenger compartment.

* Option/accessory, for more information, see Introduction.



Starting the engine

Operation

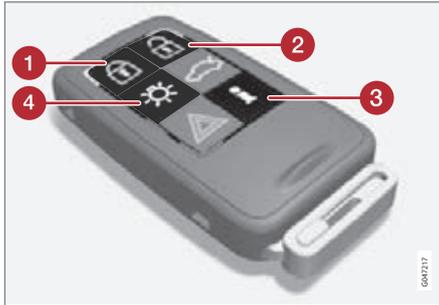

The key's buttons for remote start.

- 1 Locking
- 2 Unlocking
- 3 Information³
- 4 Approach lighting

Remote starting the engine

To be able to remotely start the engine, the car must be locked.

Then proceed as follows:

1. Briefly press on the key's button (1).
2. Follow this immediately afterwards with a long press - at least 2 seconds - on button (4).

If the conditions for ERS are fulfilled then the following takes place:

1. The direction indicators flash quickly several times.
2. The engine starts.
3. The direction indicators illuminate with a constant glow for 3 seconds to verify that the engine has started.

NOTE

After remote starting, the car continues to be locked but with deactivated movement detector*.

With PCC⁴ key

 The light indication for Approach lighting⁵ flashes several times when the button is pressed and then goes to constant glow if all criteria for ERS have been fulfilled. However, this does not mean that ERS has started the engine.

To check whether ERS has started the engine, the user can press the button (3) - if the engine has started, there is a light indication on the buttons (1) and (4).

Active functions

The following functions are activated with a remote started engine:

- Ventilation system
- Audio/video system.

Deactivated functions

The following functions are deactivated with a remote started engine:

- headlamps
- Position lamps
- Number plate lighting
- Windscreen wiper.

ERS is interrupted

The following steps switch off an ERS-started engine:

- The remote control key's button (1) or (2) is depressed.
- The car is unlocked
- A door is opened

³ Only on PCC key, see page 49.

⁴ For more information on the PCC key, see page 49.

⁵ For more information on Approach lighting, see pages 48 and 99.



03 Your driving environment

Starting the engine

- Accelerator pedal or brake pedal is depressed
- The gear selector is moved out of **P** position
- There is approx. 10 litres left in the fuel tank
- Active ERS time exceeds 15 minutes.

When an ERS-started engine is switched off, the direction indicators illuminate with a constant glow for 3 seconds.

Symbols and messages

In situations where the ERS function fails or is interrupted, a symbol is shown in the combined instrument panel, supplemented by an explanatory text message.

ERS function unavailable

| Message | Specification |
|--------------------------------|---|
| No remote start Max 2 starts | ERS unavailable because a maximum of 2 ERS activations in succession are allowed. |
| No remote start low fuel level | ERS unavailable because fuel level too low. |

| Message | Specification |
|--------------------------------|--|
| No remote start gear not in P | ERS unavailable because gear selector was not in P position. |
| No remote start driver in car | ERS unavailable because someone was in the passenger compartment. |
| No remote start low battery | ERS unavailable due to low battery voltage. Charge the battery by starting the engine. |
| No remote start engine warning | ERS unavailable due to warning message from engine. Contact a workshop ^A . |
| No remote start engine coolant | ERS unavailable due to error message from cooling system, see page 359. |
| No remote start door open | ERS unavailable because a door/tailgate was not closed. |
| No remote start car not locked | ERS unavailable because the car was not locked. |

^A An authorised Volvo workshop is recommended.

Interrupted ERS function

| Message | Specification |
|---------------------------------|---|
| Remote start off low fuel level | ERS interrupted because fuel level too low. |
| Remote start off gear not in P | ERS interrupted because gear selector is not in P position. |
| Remote start off driver in car | ERS interrupted because someone is in the passenger compartment. |
| Remote start off engine warning | ERS interrupted due to error message from engine. Contact a workshop ^A . |
| Remote start off low battery | ERS interrupted because battery voltage too low. |


^A An authorised Volvo workshop is recommended.

03



Starting the engine – external battery

Jump starting

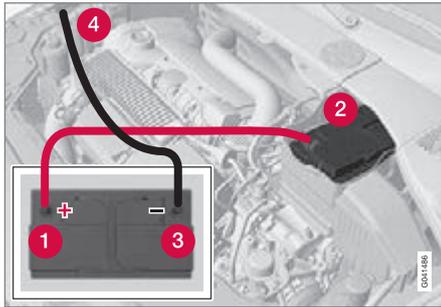

If the battery is flat then the car can be started with current from another battery.

When jump starting the car, the following steps are recommended to avoid short circuits or other damage:

1. Insert the remote control key in key position 0, see page 81.
2. Check that the donor battery has a voltage of 12 V.
3. If the donor battery is installed in another car - switch off the donor car's engine and make sure that the two cars do not touch each other.
4. Connect one of the red jump lead's clamps to the donor battery's positive terminal (1).

IMPORTANT

Connect the start cable carefully to avoid short circuits with other components in the engine compartment.

5. Open the clips on the front cover of the battery in your car and remove the cover, see page 372.
6. Connect the red jump lead's other clamp onto the car's positive terminal (2).
7. Connect one of the black jump lead's clamps to the donor battery's negative terminal (3).
8. Connect the other clamp to a grounding point, e.g. right-hand engine mounting at the top, the outer screw head (4).
9. Check that the jump lead clamps are affixed securely so that there are no sparks during the starting procedure.
10. Start the engine of the "donor car" and allow it to run a few minutes at a speed slightly higher than idle approx. 1500 rpm.

11. Start the engine in the car with the discharged battery.

IMPORTANT

Do not touch the crocodile clips during the start procedure. There is a risk of sparks forming.

12. Remove the jump leads in reverse order - first the black and then the red.
 - > Make sure that none of the black jump lead's clamps comes into contact with the battery's positive terminal or the clamp connected to the red jump lead!

WARNING

- The battery can generate oxyhydrogen gas, which is highly explosive. A spark can be formed if a jump lead is connected incorrectly, and this can be enough for the battery to explode.
- The battery contains sulphuric acid, which can cause serious burns.
- If sulphuric acid comes into contact with eyes, skin or clothing, flush with large quantities of water. If acid splashes into the eyes - seek medical attention immediately.



03 Your driving environment

Starting the engine – external battery

For more information on the car's battery -
see page 371.



Gearboxes

General

! IMPORTANT

To prevent damage to any drive system components, the working temperature of the gearbox is checked. If there is a risk of overheating, a warning symbol in the combined instrument lights up and a text message is shown. Follow the recommendation given in the text message.

Start assistance on a hill - HSA*¹

The foot brake can be released before setting off or reversing uphill - the HSA (Hill Start Assist) function means that the car does not roll backwards.


The function means that the pedal pressure in the brake system remains for several seconds while the driver's foot is moved from brake pedal to accelerator pedal.

The temporary braking effect releases after several seconds or when the driver accelerates.

Manual gearbox



Gearshift pattern 5-speed gearbox.

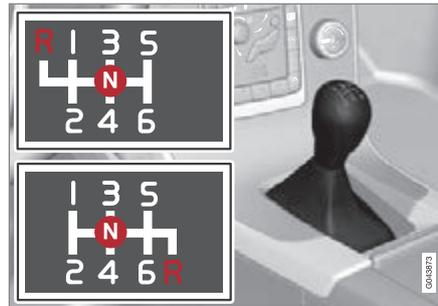

Gearshift pattern 6-speed gearbox.

The 6-speed box is available in two versions - reverse gear position differs between them.

Look at the actual gearshift pattern imprinted on the gear lever.

- Depress the clutch pedal fully during each gear change.
- Take your foot off the clutch pedal between gear changes.

! WARNING

Always apply the parking brake when parking on a slope - leaving the car in gear is not sufficient to hold the car in all situations.

Reverse gear inhibitor

The reverse gear inhibitor hinders the possibility of mistakenly attempting to engage reverse gear during normal forward travel.

- Follow the gearing pattern printed on the gear lever and start from neutral position, **N** before moving it to **R** position.
- Only engage reverse gear when the car is stationary.

¹ Standard/Option depends on the engine and gearbox combination. HSA not possible with some combinations.



Gearboxes

NOTE

With the upper variant of the shifting pattern for 6-speed gearbox (see previous illustration) - **first press down** the gear lever in the **N** position in order to engage reverse gear.

Gear shift indicator*

An essential detail in connection with environmental driving is to drive in the right gear and to change gear in good time.

An indicator is available as an aid on certain variants - GSI (Gear Shift Indicator) - which notifies the driver when it is appropriate to engage the next higher or lower gear in order to obtain the lowest possible fuel consumption. However, taking into consideration characteristics such as performance and vibration-free running, it may be advantageous to change gear at a higher engine speed. The framed number indicates the current gear.

Manual gearbox



Gear shift indicator for manual gearbox. Only one marker is illuminated at a time - during normal driving it is only illuminated in the centre.

When gearing up/down as recommended, the upper one is illuminated at "+" or the lower at "-", marked red in the illustration.

Automatic gearbox



Combined instrument panel "Digital" with gear shift indicator.



With "Analogue" combined instrument panel, the gear positions and indicator arrows are displayed in its centre.


Automatic gearbox Geartronic*



D: Automatic gear positions. +/-: Manual gear positions. S: Sport mode*.

The combined instrument panel shows the position of the gear selector using the following indications: **P**, **R**, **N**, **D**, **S***, **1**, **2**, **3** etc.

Gear positions

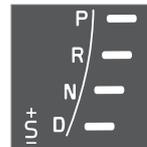

Automatic gear positions are indicated on the right of the combined instrument panel. (Only one marker is illuminated at a time - the one showing the current gear selector position.)

Symbol "S" for Sport mode is ORANGE when the mode is active.



Gearboxes

Parking position - P

Select **P** position when starting the engine or when the car is parked.

- In order to be able to move the gear selector from **P** position, the brake pedal must first be depressed firmly.

The gearbox is mechanically blocked when the **P** position is engaged. Apply the parking brake as well, as a precaution - see page 142.

i NOTE

The gear selector must be in **P** position to allow the car to be locked and alarmed.

! IMPORTANT

The car must be stationary when position **P** is selected.

! WARNING

Always apply the parking brake when parking on a slope - the automatic transmission's **P** position is not sufficient to hold the car in all situation.

Reverse position - R

The car must be stationary when **R** position is selected.

Neutral position - N

No gear is engaged and the engine can be started. Apply the parking brake if the car is stationary with the gear selector in **N** position.

Drive position - D

D is the normal driving position. Shifting up and down takes place automatically based on the level of acceleration and speed. The car must be stationary when the gear selector is moved to **D** position from **R** position.

Geartronic – Manual gear positions (+S-)

The driver can also change gear manually using the Geartronic automatic gearbox. The car engine-brakes when the accelerator pedal is released.



The manual gear position is reached by moving the lever to the side from position **D** to the end position at "+S-". The combined instrument panel's symbol "+S-" changes colour from WHITE to ORANGE and the digits **1, 2, 3** etc. are displayed in a box, corresponding to the gear that has just been selected.

- Move the lever forward towards "+" (plus) to change up a gear and release it - the lever returns to its neutral position between "+" and "-".

or

- Pull the lever back towards "-" (minus) to change down a gear and release it.

The manual gearshift mode "+S-" can be selected at any time while driving.

Geartronic automatically shifts down if the driver allows the speed to decrease lower than a level suitable for the selected gear, in order to avoid jerking and stalling.

To return to automatic driving mode:

- Move the lever to the side to the end position at **D**.

i NOTE

If the gearbox has a Sport programme then the gearbox will only become manual after the gear selector has been moved forwards or backwards in its "+S-" position. The combined instrument panel then changes indication from **S** to show which of the gears **1, 2, 3** etc. is engaged.

Paddles*

As a supplement to manual gear changing with the gear selector there are also controls located on the steering wheel, so-called "paddles".

To be able to change gear with the steering wheel paddles they must first be activated. This is by means of pulling one of the paddles

Gearboxes

toward the steering wheel - the combined instrument panel then changes indication from "D" to a figure, which indicates the current gear.

To then change gear one step:

- Pull one of the paddles backwards - towards the steering wheel - and release.



Both steering wheel "paddles".

- 1 "-": Selects the next lower gear.
- 2 "+": Selects the next higher gear.

A gear change occurs at each pull of the paddle provided that the engine speed does not leave the permitted range.

After each gear change the combined instrument panel changes figure to show the current gear.

NOTE

Automatic deactivation

If the steering wheel paddles are not used then they are deactivated after a short time - this is indicated when the combined instrument panel switches indication, from the figure for the current gear back to "D".

The exception is during engine braking - then the paddles are activated as long as engine braking is in progress.

The paddles can also be used with the gear selector in Sport mode* - then the paddles are constantly activated without being deactivated.

Geartronic - Sport mode* (S)²

 The Sport programme provides sportier characteristics and allows higher engine speed for the gears.

At the same time it responds more quickly to acceleration. During active driving, the use of a lower gear is prioritised, leading to a delayed upshift.

To activate Sport mode:

- Move the gear selector to the side from **D** position to the end position at "+S-" - the combined instrument panel changes indication from **D** to **S**.

Sport mode can be selected at any time while driving.

Geartronic - Winter mode

It can be easier to pull away on slippery roads if 3rd gear is engaged manually.

1. Depress the brake pedal and move the gear selector from **D** position to the end position at "+S-" - the combined instrument panel changes indication from **D** to the figure 1³.
2. Scroll up to gear 3 by pushing the lever forward towards "+" (plus) twice - the combined instrument panel changes indication from 1 to 3.
3. Release the brake and accelerate carefully.

The gearbox "winter mode" means that the car moves off with a lower engine speed and reduced engine power on the drive wheels.

² With some engines only.

³ If the car has Sport mode* then "S" is shown first.



Gearboxes

Kick-down

When the accelerator pedal is pressed all the way to the floor (beyond the position normally regarded as full acceleration) a lower gear is immediately engaged. This is known as kick-down.

If the accelerator is released from the kick-down position, the gearbox automatically changes up.

Kick-down is used when maximum acceleration is needed, such as for overtaking.


Safety function

To prevent overrevving the engine, the gearbox control program has a protective down-shift inhibitor which prevents the kick-down function.

Geartronic does not permit downshifting/kick-down which would result in an engine speed high enough to damage the engine. Nothing happens if the driver still tries to shift down in this way at high engine speed – the original gear remains engaged.

When kick-down is activated the car can change one or more gears at a time depending on engine speed. The car changes up when the engine reaches its maximum speed in order to prevent damage to the engine.

Mechanical gear selector inhibitor

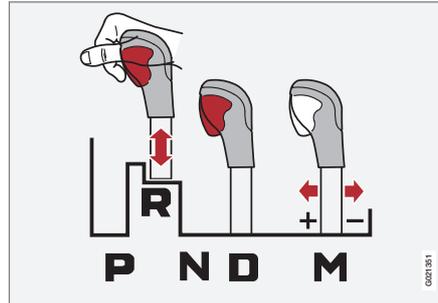

The gear selector can be moved forward and back freely between **N** and **D**. Other positions are locked with a latch that is released with the inhibitor button on the gear selector.

With the inhibitor button depressed the lever can be moved forwards or backwards between **P**, **R**, **N** and **D**.

Automatic gear selector inhibitor

The automatic gearbox has special safety systems:

Parking position (P)

Stationary car with engine running:

- Keep your foot on the brake pedal when moving the gear selector to another position.

Electric gear inhibitor – Shiftlock

Parking position (P)

To be able to move the gear selector from **P** to other gear positions, the brake pedal must be depressed and the remote control key must be in position **II**, see page 81.

Shiftlock – Neutral (N)

If the gear selector is in **N** position and the car has been stationary for at least 3 seconds (irrespective of whether the engine is running) then the gear selector is locked.

To be able to move the gear selector from **N** to other gear positions, the brake pedal must be depressed and the remote control key must be in position **II**, see page 81.

Deactivate automatic gear selector inhibitor



Gearboxes

If the car cannot be driven, e.g. due to a flat battery, the gear selector must be moved from the **P** position so that the car can be moved.

- 1 Lift the rubber mat in the compartment behind the centre console and locate a hole⁴ for the key blade⁵ in the bottom of the compartment.
 - 2 Search for a spring-loaded button down in the hole with the key blade; depress the button with the blade and hold.
 - 3 Move the gear selector from the **P** position and pull up the key blade.
4. Set the rubber mat back in place.

Automatic gearbox Powershift*



D: Automatic gear positions. **+S-**: Manual gear positions. **S:** Sport mode*.

The Powershift automatic gearbox transmits the motive force from the engine to the drive wheels with double mechanical clutch discs, as opposed to Geartronic which instead uses a hydraulic torque converter.

Powershift transmission operates in the same way⁶ and has similar controls and functions as the Geartronic automatic gearbox described in the previous section.

Powershift or Geartronic?

In the event of uncertainty as to whether or not the car is equipped with Powershift trans-

mission, this can be verified by checking the designation on the gearbox label under the bonnet - see page 396. The designation "MPS6" means that it is Powershift transmission - otherwise it is Geartronic automatic transmission.

To bear in mind

The transmission's double clutch has overload protection that is activated if it becomes too hot, e.g. if the car is held stationary with the accelerator pedal on an uphill gradient for a long time.

Overheated transmission causes the car to shake and vibrate, and the warning symbol illuminates and the combined instrument panel shows a message. The transmission can also overheat during slow driving in queues (10 km/h or slower) on an uphill gradient, or with a trailer hitched. The transmission cools down when the car is stationary, with foot brake depressed and the engine running at idling speed.

Overheating during slow driving in queues can be avoided by driving in stages:

- Stop the car and wait with your foot on the brake pedal until there is a moderate distance to the traffic ahead, drive for-

⁴ There may be 2 holes - one for the key blade and one that fixes the rubber mat.

⁵ For information on the key blade, see page 50.

⁶ One exception is the heading "Geartronic - Winter mode": Powershift enables driving away on a slippery road surface if 2nd gear is engaged manually - not 3rd gear.



Gearboxes

ward a short distance, and then wait another moment with your foot on the brake pedal.

! IMPORTANT

Use the foot brake to hold the car stationary on an uphill gradient - do not hold the car with the accelerator pedal. The gearbox could then overheat.

For important information regarding Powershift transmission and towing - see page 331.

Text message and action

In some situations the combined instrument panel may show a message at the same time as a symbol is illuminated.

| Symbol | Message | Driving characteristics | Action |
|--------|---------------------------------------|--|---|
| | Transm. overheat brake to hold | Difficulty in maintaining even speed at constant engine speed. | Transmission overheated. Keep the car stationary using the foot brake. ^A |
| | Transm. overheat park safely | Significant pulling in the car's traction. | Transmission overheated. Park the car immediately in a safe manner. ^A |
| | Transm. cooling let engine run | No drive due to overheated gearbox. | Transmission overheated. For fastest cooling: Run the engine at idling speed with the gear lever in the N or P position until the message clears. |

^A For fastest cooling: run the engine at idling speed with the gear lever in the **N** or **P** position, until the message clears.

The table shows three steps with an increased degree of seriousness should the transmission become too hot. In parallel with the text message, the driver is also advised that the car's electronics are temporarily changing the driving characteristics. Follow

the instructions in the text message where appropriate.

i NOTE

The table's examples are no indication that the car is defective but instead show that a safety function has been activated intentionally to prevent damage to one of the car's components.



Gearboxes

WARNING

If a warning symbol combined with the text **Transm. overheat park safely** is ignored then the heat in the gearbox may become so high that the power transmission between engine and gearbox is temporarily halted in order to prevent the clutch from malfunctioning - the car then loses drive and is stationary until gearbox temperature has cooled to an acceptable level.

For more possible text messages with their respective proposals for solutions concerning automatic transmission, see page 209.

A text message extinguishes automatically after the action has been carried out or after one press on the indicator stalk **OK** button.



Start/Stop*

Quieter and cleaner

Environmental care is one of Volvo Car Corporation's core values and it influences all of our operations. This target orientation has resulted in several separate energy-saving functions of which Start/Stop is one, all with the collective task of reducing fuel consumption, which in turn helps to reduce exhaust emissions.

General information on Start/Stop



The engine is switched off - it becomes quieter and cleaner.

Some engine and gearbox combinations come fitted with a Start and Stop function which engages in the event of e.g. stationary traffic or waiting at traffic lights - the engine is then switched off temporarily and restarts

automatically when the journey is due to continue.

The Start/Stop function gives the driver the opportunity for a more active environmentally conscious way of driving the car by means of being able to allow the engine to stop automatically, whenever appropriate.

Function and operation



Start/StopThe function is activated automatically when the engine is started with the key. The driver is made aware of this by the function's symbol illuminating in the combined instrument panel and the On/Off button lamp illuminating.



All of the car's normal systems such as lighting, radio, etc. work as normal even with an engine that has stopped automatically, except that some equipment may have the function temporarily reduced, e.g. the climate control system's fan speed or extremely high volume on the audio system.

Auto-stopping the engine

The following is required for the engine to auto-stop:

| Conditions ^A | M/A ^B |
|---|------------------|
| Declutch, set the gear lever in neutral position and release the clutch pedal - the engine stops automatically. | M |
| Stop the car with the foot brake and then keep your foot on the pedal - the engine stops automatically. | A |

^A The XC60 only has Start/Stop on manual gearbox.

^B M = Manual gearbox, A = Automatic gearbox.

In some cases the engine stops automatically before the car is completely stationary.



As verification and reminder that the engine is auto-stopped the combined instrument panel's symbols for the Start/Stop function illuminate.





03 Your driving environment

Start/Stop*

Auto-starting the engine

| Conditions ^A | M/ A ^B |
|---|----------------------|
| With the gear lever in neutral position: 1. Depress the clutch pedal or press the accelerator pedal - the engine starts. 2. Engage a suitable gear and drive. | M |
| The following option is also available on a downhill gradient: Release the foot brake and let the car move off - the engine starts automatically when the speed exceeds normal walking pace. | M |
| Release the foot pressure on the foot brake - the engine starts automatically and the journey can continue. | A |

^A The XC60 only has Start/Stop on manual gearbox.

^B M = Manual gearbox, A = Automatic gearbox.

Start assistance HSA

The foot brake can also be released on an uphill gradient to start the engine automatically - the HSA function (Hill Start Assist) means that the car does not roll backwards.

The function means that the pedal pressure in the brake system remains for several seconds while the driver's foot is moved from brake pedal to accelerator pedal before driving off with the engine having stopped automatically. The temporary braking effect releases after a couple of seconds or when the driver accelerates.

There is more information available on HSA, see page 123.

Deactivating the Start/Stop function



In certain situations, it may be advisable to temporarily switch off the automatic Start/Stop function - this is carried out with a push of this button.



Disengaged function is indicated by the combined instrument panel's Start/Stop symbols and the On/Off button's lamp extinguishing.



The Start/Stop function is disengaged until it is reactivated with the button or until the next time the engine is started with the key.

Limitations

The engine does not auto-stop

Even if the Start/Stop function is activated, the engine does not auto-stop if:

| Conditions ^A | M/A ^B |
|--|------------------|
| the car has not achieved approx. 5 km/h (= fast walking pace) first after a key start or the last auto-stop. | M + A |
| the driver has opened the seat-belt's buckle. | M + A |
| the capacity of the battery is below the minimum permissible level. | M + A |
| the engine does not have normal operating temperature. | M + A |
| outside temperature is below freezing point or above approx. 30 °C. | M + A |
| the windscreen's electric heating is activated. | M + A |



Start/Stop*

| Conditions ^A | M/A ^B |
|---|------------------|
| the environment in the passenger compartment deviates from the preset values ^C - indicated by the ventilation fan running at a high speed. | M + A |
| the car is reversed. | M + A |
| the starter battery temperature is below the freezing point or is too high. | M + A |
| the driver makes greater steering wheel movements. | M + A |
| the exhaust system's particulate filter is full - the temporarily disengaged Start/Stop function is reactivated once an automatic cleaning cycle has been performed (see page 318). | M + A |
| the road is very steep. | M + A |
| a trailer is connected electrically to the car's electrical system. | M + A |

| Conditions ^A | M/A ^B |
|--|------------------|
| the atmospheric air pressure is less than equivalent to 1500-2000 metres above sea level - the current air pressure varies with the prevailing weather conditions. | A |
| adaptive cruise control Queue Assist is activated. | A |
| the driver's door has been opened with the gear selector in D position. | A |
| the gear selector is moved out of the D position to S position ^D or "+/-". | A |

- ^A The XC60 only has Start/Stop on manual gearbox.
^B M = Manual gearbox, A = Automatic gearbox.
^C Cars with ECC.
^D Sport mode.

The engine auto-starts

An auto-stopped engine may restart in some cases without the driver having decided that the journey should continue. In the following cases the engine also starts automatically if the driver has not depressed the clutch pedal:

| Conditions ^A | M/A ^B |
|--|------------------|
| Misting forms on the windows. | M + A |
| The environment in the passenger compartment deviates from the preset values ^C . | M + A |
| The outside temperature falls below freezing point or exceeds approx. 30 °C. | M + A |
| There is a temporarily high current take-off or battery capacity drops below the lowest permissible level. | M + A |
| Repeated pumping of the brake pedal. | M + A |
| The car starts to roll - faster than the equivalent normal walking pace. | M |
| The driver's belt lock is opened with the gear selector in D or N position. | A |
| Steering wheel movements. | A |



03 Your driving environment

Start/Stop*

| Conditions ^A | M/A ^B |
|--|------------------|
| The gear selector is moved from the D position to "+/-" or R . | A |
| The driver's door is opened with the gear selector in D position - a "ping" sound and text message inform that the Start/Stop function is active. | A |

^A The XC60 only has Start/Stop on manual gearbox.
^B M = Manual gearbox, A = Automatic gearbox.

WARNING

Do not open the bonnet when the engine has stopped automatically - the engine may suddenly start automatically. First switch off the engine as normal using the **START/STOP ENGINE** button before opening the bonnet.

The engine does not auto-start

In the following cases the engine does not auto-start after having auto-stopped:

| Conditions ^A | M/A ^B |
|--|------------------|
| A gear is engaged without declutching - a display text prompts the driver to set the gear lever in neutral position in order to enable auto-start. | M |
| The driver is unrestrained, the gear selector is in P position and the driver's door is open - a normal engine start must take place. | A |
| The gear selector is moved to P position - press the START/STOP ENGINE button to restart the engine. If the driver's door is opened before starting the engine with the START/STOP ENGINE button, the Start/Stop function is switched off. | A |


^A The XC60 only has Start/Stop on manual gearbox.
^B M = Manual gearbox, A = Automatic gearbox.

Involuntary engine stop with manual gearbox

In the event that a start-up fails and the engine stops, proceed as follows:

1. Depress the clutch pedal again - the engine starts automatically.
2. In certain cases the gear lever must be set in neutral position. The combined instrument panel then shows the text **Put gear in neutral**

More information and settings

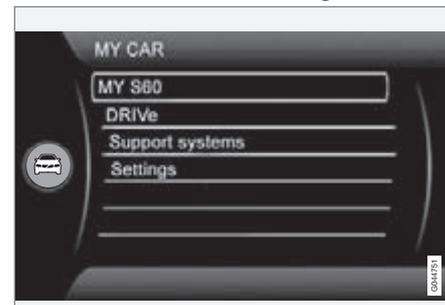

The car's menu system **MY CAR**, under the heading **DRive**, contains an introduction of Volvo's Start-Stop system, as well as recommendations for energy-saving driving techniques - see page 212.



Start/Stop*

Symbols and messages

 In combination with this indicator lamp the Start/Stop function may

show text messages in the combined instrument panel for certain situations. For some of them there is a recommended action that

should be performed. The following table shows some examples.

| Symbol | Message ^A | Info/Action | M/A ^B |
|---|--|--|------------------|
| | Engine in Auto Start | Illuminates for several seconds after Start/Stop has been activated. | M + A |
| | Eco DRIVe OFF | Illuminates for several seconds after Start/Stop has been switched off. | M + A |
| | Auto Start-Stop serv. required | Start/Stop is not operational. Contact a workshop - an authorised Volvo workshop is recommended. | M + A |
| | Engine management system | An automatic function check is carried out. | M + A |
|  | Autostart Engine running + acoustic signal | Activated if the driver's door is opened with auto-stopped engine. | M + A |
|  | Engine in Auto Start | The engine is ready to start automatically - waiting for the brake or clutch pedal to be depressed. | M |
| | Press Start button | The engine will not start automatically - start the engine as normal with the START/STOP ENGINE button. | M |
|  | Depress clutch pedal to start | The engine is ready to auto-start - waiting for the clutch pedal to be depressed. | M |



03 Your driving environment


Start/Stop*

| Symbol | Message ^A | Info/Action | M/A ^B |
|--------|---------------------------------|--|------------------|
| | Depress brake pedal to start | The engine is ready to auto-start - waiting for the brake pedal to be depressed. | M |
| | Press brake and clutch to start | The engine is ready to auto-start - waiting for the brake or clutch pedal to be depressed. | M |
| | Put gear in neutral to start | Gear is engaged without declutching - disengage and set the gear lever in neutral position. | M |
| | Engine in Auto Start | The engine is ready to start automatically - waiting for the brake pedal to be released. | A |
| | Select P or N to start | Start/Stop has been deactivated - move the gear selector to N or P position and start the engine as normal with the START/STOP ENGINE button. | A |
| | Press Start button | The engine will not start automatically - start the engine as normal with the START/STOP ENGINE button and the gear selector in P or N . | A |

^A The XC60 only has Start/Stop on manual gearbox.

^B M = Manual gearbox, A = Automatic gearbox.

If a message does not go out following completion of the action then a workshop should be contacted - an authorised Volvo workshop is recommended.

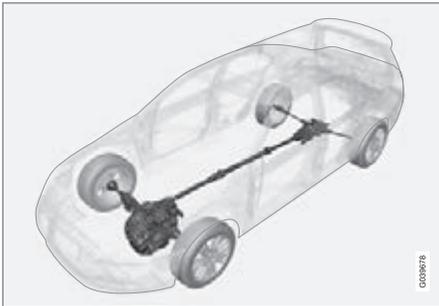**All Wheel Drive - AWD*****All Wheel Drive is always available**

All Wheel Drive (All Wheel Drive) means that the car is driving all four wheels at the same time.

The power is automatically distributed between the front and rear wheels. An electronically controlled clutch system distributes the power to the wheels that have the best grip on the current road surface. This provides the best traction and prevents wheel spin. Under normal driving conditions, the majority of power is transmitted to the front wheels.

All Wheel Drive improves driving safety in rain, snow and icy conditions.



Foot brake

General

The car is equipped with two brake circuits. If one brake circuit is damaged then this will mean that the brakes engage at a deeper level and higher pedal pressure is needed to produce the normal braking effect.

The driver's brake pedal pressure is assisted by a brake servo.

WARNING

The brake servo only works when the engine is running.

If the brake is used when the engine is switched off then the pedal will feel stiff and a higher pedal pressure must be used to brake the car.

In very hilly terrain or when driving with a heavy load the brakes can be relieved by using engine braking. Engine braking is most efficiently used if the same gear is used downhill as up.

For more general information on heavy loads on the car, see page 402.

Anti-lock braking system

The car is equipped with ABS (Anti-lock Braking System) which prevents the wheels from locking during braking. This means the

ability to steer is maintained and it is easier to swerve to avoid a hazard for example. Vibration may be felt in the brake pedal when this is engaged and this is normal.

A short test of the ABS system is made automatically after the engine has been started when the driver releases the brake pedal. A further automatic test of the ABS system may be made when the car reaches 10 km/h. The test may be experienced as pulses in the brake pedal.

Emergency brake lights and automatic hazard warning flashers

Emergency brake lights are activated to alert vehicles behind about sudden braking. The function means that the brake light flashes instead of - as in normal braking - shining with a constant glow.

Emergency brake lights are activated at speeds above 50 km/h if the ABS system is working and/or in the event of sudden braking. After the car's speed has been slowed below 10 km/h the brake light returns from flashing to the normal constant glow - while at the same time the hazard warning flashers are activated, and they flash until the driver changes engine speed with the accelerator pedal or they are deactivated with their button, see page 96.

Cleaning the brake discs

Coatings of dirt and water on the brake discs may result in delayed brake function. This delay is minimised by cleaning the brake linings.

Manual cleaning is advisable with wet road surfaces, prior to long-stay parking and after the car has been washed. Carry this out by braking gently during a short period while en route.

Emergency Brake Assistance

Emergency Brake Assistance EBA (Emergency Brake Assist) helps to increase brake force and so reduce braking distance. EBA detects the driver's braking style and increases brake force as necessary. The brake force can be reinforced up to the level when the ABS system is engaged. The EBA function is interrupted when the pressure on the brake pedal is reduced.

NOTE

When EBA is activated the brake pedal lowers slightly more than usual, depress (hold) the brake pedal as long as necessary. If the brake pedal is released then all braking ceases.



Maintenance

To keep the car as safe and reliable as possible, follow the Volvo service intervals as specified in the Service and Warranty Booklet, see page 354.

IMPORTANT

The wear on the brake system's components must be checked regularly.

Contact a workshop for information about the procedure or engage a workshop to carry out the inspection - an authorised Volvo workshop is recommended.

WARNING

If  and  illuminate at the same time, there may be a fault in the brake system.

If the level in the brake fluid reservoir is normal at this stage, drive carefully to the nearest workshop and have the brake system checked - an authorised Volvo workshop is recommended.

If the brake fluid is under the **MIN** level in the brake fluid reservoir, do not drive further before topping up the brake fluid.

The reason for the loss of brake fluid must be investigated.

Symbols and messages

| Symbol | Specification |
|---|--|
|  | Constant glow – Check the brake fluid level. If the level is low, fill with brake fluid and check for the cause of the brake fluid loss. |
|  | Constant glow for 2 seconds when the engine is started - automatic function check. |



HDC Hill Descent Control

General

HDC can be compared to an automatic engine brake. When you release the accelerator on downhill gradients the car is normally braked by means of the engine striving for low engine idling speeds, so-called engine braking. But the steeper the road and the more load there is in the car, the faster the car rolls despite engine braking. In order to then reduce speed the driver has to assist using the foot brake.

WARNING

HDC does not work in all situations, but is instead only intended to be supplementary assistance.

The driver always has ultimate responsibility that the car is driven safely.

HDC makes it possible to increase/reduce speed on steep downhill gradients, with a foot only on the accelerator pedal, without using the foot brake. The sensitivity of the accelerator pedal decreases and becomes more precise by means of the full actuation of the pedal being restricted to adjusting engine speed within a limited range. The brake system brakes itself and provides the car with a low and even speed, so allowing the driver to fully focus on steering.

HDC is particularly helpful on steep gradients with an uneven road surface and slippery sections. E.g. when launching a boat on a trailer from a ramp.

Function



HDC is engaged or disengaged using a switch on the centre console. An indicator lamp in the button illuminates when the function is switched on.

 When HDC is operating this symbol illuminates and the combined instrument panel shows **Hill descent control ON**

The function only operates with gear **1** or reverse gear **R** - with automatic gearbox the combined instrument panel then shows the character **1** or **R**, see page 125.

 **NOTE**

HDC cannot be activated in an automatic gearbox with the gear selector in position **D**.

Operation

HDC allows the car to roll at a maximum of 10 km/h forwards with engine braking and 7 km/h backwards. However, any speed within the gear's speed register can be selected using the accelerator pedal. When the accelerator pedal is released, the car is braked quickly to 10 or 7 km/h respectively, irrespective of the hill's gradient and without the need for the foot brake.

The brake lights come on automatically when the function is operating. The driver can brake or stop the car at any time by using the foot brake.

HDC is deactivated:

- with the on/off button on the centre console
- if a gear higher than **1** is selected on a manual gearbox
- if a gear higher than **1** is selected on an automatic gearbox, or if the gear selector is moved to position **D**.



HDC Hill Descent Control

The function can be disengaged at any time. If it takes place on a steep downhill gradient then the braking effect will not release directly, but slowly instead.



NOTE

With HDC activated you may experience a delay between acceleration pedal activation and engine response.



Parking brake

General

Function

A faint electric motor noise can be heard when the electrical parking brake is being applied. The noise can also be heard during the automatic function checking of the parking brake.

If the car is stationary when the parking brake is applied then it only acts on the rear wheels. If it is applied when the car is moving then the normal foot brake is used, i.e. the brake acts on all four wheels. Brake function changes over to the rear wheels when the car is almost stationary.

Low battery voltage

If the battery voltage is too low then the parking brake can neither be released nor applied. Connect a donor battery if the battery voltage is too low, see page 121.

Applying the parking brake



Parking brake control - apply.

1. Press the foot brake pedal down firmly.
2. Press the control **PUSH LOCK/PULL RELEASE**.
 - >  The combined instrument panel's symbol starts flashing - once there is a constant glow the parking brake is applied.
3. Release the foot brake pedal and make sure that the car is at a standstill position.
 - When parking the vehicle, always engage 1st gear (for manual gearbox) or put the gear selector in position **P** (for automatic gearbox).

Emergency brake

In an emergency the parking brake can be applied when the vehicle is in motion by pressing and holding the control for **PUSH LOCK/PULL RELEASE**. The braking procedure is stopped when the control is released.



NOTE

In the event of emergency braking at speeds above 10 km/h a signal sounds during the braking procedure.

Parking on a hill

If the car is parked facing uphill:

- Turn the wheels **away from** the kerb.

If the car is parked facing downhill:

- Turn the wheels **towards** the kerb.



WARNING

Always apply the parking brake when parking on a slope - leaving the car in gear, or in **P** if it has automatic transmission, is not sufficient to hold the car in all situation.



Parking brake

Disengaging the parking brake



Parking brake control - release.

Cars with manual gearbox

Releasing manually

1. Insert the remote control key in the ignition switch.¹
2. Press the foot brake pedal down firmly.
3. Pull the control **PUSH LOCK/PULL RELEASE**.
 - >  The parking brake releases and the combined instrument panel's symbol extinguishes.

NOTE

The parking brake can also be released manually by depressing the clutch pedal instead of the brake pedal. Volvo recommends the use of the brake pedal.

Releasing automatically

1. Start the engine.
2. Engage 1st gear or reverse gear.
3. Ease up the clutch and depress the accelerator.
 - >  The parking brake releases and the combined instrument panel's symbol extinguishes.

Cars with automatic gearbox

Releasing manually

1. Insert the remote control key in the ignition switch.¹
2. Press the foot brake pedal down firmly.
3. Pull the control **PUSH LOCK/PULL RELEASE**.
 - >  The parking brake releases and the combined instrument panel's symbol extinguishes.

Releasing automatically

1. Put the seatbelt on.
2. Start the engine.
3. Press the foot brake pedal down firmly.
4. Move the gear selector to position **D** or **R** and depress the accelerator.
 - >  The parking brake releases and the combined instrument panel's symbol extinguishes.

NOTE

For safety reasons, the parking brake is only released automatically if the engine is running and the driver is wearing a seatbelt. The parking brake is released immediately on cars with automatic gearbox when the accelerator pedal is depressed and the gear selector is in position **D** or **R**.

Heavy load uphill

A heavy load, such as a trailer, can cause the car to roll backward when the parking brake is released automatically on a steep incline. Avoid this by depressing the control while driving off. Release the control when the engine achieves traction.

¹ For a car with the Keyless system: Press **START/STOP ENGINE**.



03 Your driving environment

Parking brake

Replacing the brake linings

The rear brake linings must be replaced at a workshop due to the design of the electric parking brake - an authorised Volvo workshop is recommended.

Symbols and messages

For information on how the combined instrument panel's text messages can be shown and deleted, see page 209.

| Symbol | Message | Meaning/Action |
|--------|-------------------------------|--|
| | "Message" | <ul style="list-style-type: none"> Read the combined instrument panel's message. |
| | | <p>A flashing symbol indicates that the parking brake is applied.</p> <p>If the symbol flashes in any other situation then this means that a fault has arisen:</p> <ul style="list-style-type: none"> Read the combined instrument panel's message. |
| | Park brake not fully released | <p>A fault is preventing the parking brake from being released:</p> <ul style="list-style-type: none"> Try to apply and release the brake. <p>If the fault persists after a few attempts:</p> <ul style="list-style-type: none"> Visit a workshop - an authorised Volvo workshop is recommended. <p>Note: A warning signal sounds if the journey is continued with this error message.</p> |



| |
|----------------------|
| Parking brake |
|----------------------|

| Symbol | Message | Meaning/Action |
|--------|---------------------------------------|---|
| | Parking brake not applied | <p>A fault is preventing the parking brake from being applied:</p> <ul style="list-style-type: none"> • Try to release and apply the brake. <p>If the fault persists after a few attempts:</p> <ul style="list-style-type: none"> • Visit a workshop - an authorised Volvo workshop is recommended. <p>The message is also illuminated on cars with manual gearbox when the car is driven at low speed with the door open in order to alert the driver that the parking brake may have been unintentionally disengaged.</p> |
| | Parking brake Service required | <p>A fault has arisen:</p> <ul style="list-style-type: none"> • Try to apply and release the brake. <p>If the fault persists after a few attempts:</p> <ul style="list-style-type: none"> • Visit a workshop - an authorised Volvo workshop is recommended. |

- If the car has to be parked before a possible fault has been rectified, then the wheels must be turned as if parking on a hill and 1st gear engaged (manual gearbox) or the gear selector must be in position **P** (automatic gearbox).

A text message can be acknowledged by briefly pressing the **OK** button on the direction indicator stalk.



HomeLink® *

General



HomeLink®¹ is a programmable remote control which can remotely control up to three different devices (e.g. garage door opener, alarm system, outdoor lighting and indoor lighting etc.) and in doing so replace their remote controls. For more information on HomeLink®, visit: www.homelink.com or ring 00 8000 466 354 65 (or premium rate phone number, +49 6838 907 277).

WARNING

- If HomeLink® is used to operate a garage door or gate, make sure that there is no-one in the vicinity of the door or gate while it is moving.
- The car should remain outside the garage while a garage door opener is being programmed.
- Do not use HomeLink® for any garage door that does not have safety stop and safety reverse.

Save the original remote controls for future programming (e.g. when changing to another car or for use in another vehicle). It is also recommended that the programming for the buttons is deleted when the car is sold. See the section "Resetting the HomeLink® buttons" on page 147.

Programming HomeLink®

NOTE

In certain vehicles the ignition must be switched on or in "accessory position" before HomeLink® can be programmed or used. If possible, fit new batteries in the remote control that shall be replaced by HomeLink® for faster programming and improved transmission of the radio signal. The HomeLink® buttons should be reset before programming. When this has been done HomeLink® is set in "learn mode" and ready for programming.

1. Aim the original remote control towards the HomeLink® button to be programmed and hold it 5-14 cm from the button. Do not obstruct the indicator lamp on HomeLink®.
2. Depress the button on the original remote control and the button to be programmed on HomeLink® simultaneously. Do not release the buttons until the indicator lamp has changed over from slow to rapid flashing. Both the buttons must be released when the indicator lamp flashes quickly.

¹ HomeLink and the HomeLink house symbol are registered trademarks of Johnson Controls, Inc.



HomeLink® *

3. **Depress the HomeLink® button being programmed, hold it depressed for 5 seconds and then release it.** Repeat if necessary until the garage door is activated. If the door is not activated, press the programmed HomeLink® button and hold it depressed and check the indicator lamp.
 - > **Constant glow:** The indicator lamp illuminates with a constant glow when the button is kept depressed, this indicates that the **programming is complete**. The garage door, gate or similar should now be activated when the programmed HomeLink® button is depressed.
 - Glow not constant:** The indicator lamp flashes quickly for approx. 2 seconds and then changes over to a constant glow. In which case, continue with the programming steps 4-6 in order to complete the programming of a device with rolling code (usually a garage door opener).
4. Locate the "programming button²" on the receiver for the garage door for example, normally located close to the antenna's bracket on the receiver.

5. Depress and release the receiver's "programming button". The button flashes for approx. 30 seconds and the next step must be carried out within this period.
6. While the receiver's "programming button" is still flashing, press the button on HomeLink® being programmed and hold it depressed for approx. 2 seconds and then release it. Repeat the press/hold/release sequence up to 3 times to conclude the programming.

Operation

When HomeLink® is fully programmed it can be used in place of the separate original remote controls.

Press the programmed button and hold it depressed until the garage door, alarm system, etc. is activated (may take several seconds). Naturally the original remote controls can still be used in parallel with HomeLink® if required.

i NOTE

If the ignition is switched off, HomeLink® will work for 30 minutes after the driver's door has been opened.

If programming problems persist, contact HomeLink® on: www.homelink.com or ring 00 8000 466 354 65 (or premium rate phone number +49 6838 907 277).

Resetting the HomeLink® buttons

It is only possible to reset all of the HomeLink® buttons at the same time, not each button individually. However, individual buttons can be reprogrammed, see the following section "Programming individual buttons".

1. Depress the two outer buttons on HomeLink® and do not release until the indicator lamp starts to flash.
2. Release the buttons.
 - > HomeLink® is now set in so-called "learn mode" and is ready to be reprogrammed, see section "Programming HomeLink®" on page 146.

² Button designation and colour vary depending on manufacturer.



HomeLink® *

Programming individual buttons

To reprogram an individual HomeLink® button, proceed as follows:

1. Depress the required button and **do not release**.
2. When the indicator lamp on HomeLink® starts to flash, after approx. 20 seconds, start with step 1 in section "Programming HomeLink®" on page 146.

For more information or to leave comments about HomeLink®, visit: www.homelink.com or ring 00 8000 466 354 65 (or premium rate phone number +49 6838 907 277).



| | |
|--|-----|
| DSTC – Stability and traction control system..... | 152 |
| Road sign information - RSI* | 154 |
| Cruise control* | 157 |
| Adaptive cruise control* | 159 |
| Distance Warning* | 170 |
| City Safety™ | 173 |
| Collision Warning with Auto Brake & Pedestrian Protection* | 179 |
| Driver Alert System* | 187 |
| Driver Alert System - DAC* | 188 |
| Driver Alert System - LDW* | 192 |
| Park assist syst* | 195 |
| Park assist camera* | 198 |
| BLIS* | 201 |



G000000

04

DRIVER SUPPORT





DSTC – Stability and traction control system

General information on DSTC

The stability and traction control system, DSTC (Dynamic Stability & Traction Control) helps the driver to avoid skidding and improves the car's traction.

The activation of the system during braking may be noticed as a throbbing sound. The car may accelerate slower than expected when the accelerator pedal is depressed.

Active Yaw Control

The function limits the driving and brake force of the wheels individually in order to stabilise the car.

Spin Control

The function prevents the driving wheels from spinning against the road surface during acceleration.

Traction control system

The function is active at low speed and transfers power from the driving wheel that is spinning to the one that is not.

Engine drag control - EDC

EDC (Engine Drag Control) prevents involuntary wheel locking, e.g. after shifting down or engine braking when driving in low gears on slippery road surfaces.

Involuntary wheel locking while driving can, amongst other things, impair the driver's ability to steer the car.

Corner Traction Control – CTC

CTC compensates for understeer and allows higher than normal acceleration in a bend without wheelspin on the inner wheel, e.g. on an arcing motorway entrance road to quickly reach the prevailing traffic speed.

Trailer stabiliser - TSA¹

The function serves to stabilise the car and trailer combination if it begins to snake, see page 330.



NOTE

The function is deactivated if the driver selects **Sport** mode.

Operation

Selection of level - Sport mode

The DSTC system is always activated - it cannot be deactivated.

However, the driver can select the **Sport** mode, which allows for a more active driving experience. In **Sport** mode the system detects whether the accelerator pedal, steer-

ing wheel movements and cornering are more active than in normal driving and then allows controlled skidding with the rear section up to a certain level before it intervenes and stabilises the car.

If the driver stops a controlled skid by releasing the accelerator pedal then the DSTC system intervenes and stabilises the car.

With **Sport** mode, maximum traction is obtained if the car has become stuck, or when driving on a loose surface - e.g. sand or deep snow.

Proceed as follows to select **Sport** mode:

1. Press the centre console button **MY CAR** and search in the screen's menu system and locate **My XC60 → DSTC**. (For information on the menu system, see page 211).
2. Uncheck the box and back out of the menu system with **EXIT**.
 - > The system then allows a more sporty driving style.

The **Sport** mode is active until the driver deselects it or until the engine is switched off - after the engine is started the next time the DSTC system is back in its normal mode again.

¹ Included in the installation of Volvo genuine towbar.



DSTC – Stability and traction control system

Symbols and text messages


| Symbol | Message | Specification |
|-------------------|------------------------------|---|
| | DSTC Temporarily OFF | DSTC system temporarily reduced due to excessive brake disc temperature. - The function is reactivated automatically when the brakes have cooled. |
| | DSTC Service required | DSTC system disengaged. <ul style="list-style-type: none"> • Stop the car in a safe place, switch off the engine and start it again. • Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |
| and | "Message" | There is a text message in the combined instrument panel - Read it! |
| | Constant glow for 2 seconds. | System check when the engine is started. |
| | Flashing light. | DSTC system is being activated. |
| DSTC SPORT | | Sport mode is activated. |



04 Driver support

Road sign information - RSI*

General information on RSI

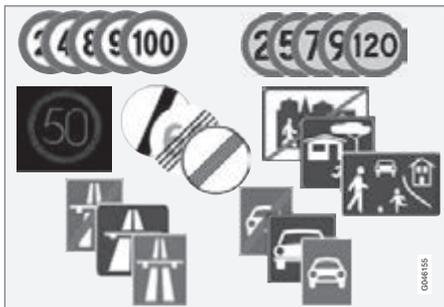

Examples of readable speed-related¹ signs.

The Road sign information (RSI – Road Sign Information) helps the driver to remember which road signs the car has passed through information on - among other things - the current speed, the start/end of a motorway or road, and when overtaking is prohibited.


If both a sign for motorway/road for motorised traffic and a sign showing the maximum permitted speed are passed, RSI decides to show the sign symbol for maximum permitted speed.

WARNING

RSI does not work in all situations but is designed merely as a supplementary aid.

The driver always bears ultimate responsibility for ensuring that the vehicle is driven safely and that applicable road traffic rules and regulations are followed.

Operation

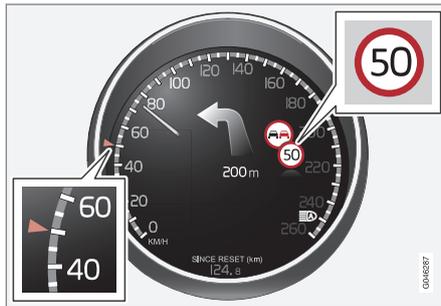

Recorded speed information¹.

When RSI has recorded a road sign with an imposed speed, the combined instrument panel displays the sign as a symbol.




Together with the symbol for the current speed limit, a sign showing that overtaking is prohibited may also be displayed where appropriate.

End of restriction or motorway

A corresponding road sign is shown in the combined instrument panel for approx. 10 seconds in situations where RSI detects a sign that involves the end of a speed limit - or other speed-related information, e.g. end of a motorway.

Examples of such signs are:

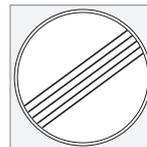

End of all restrictions.



End of motorway.


¹ Road signs shown in the combined instrument panel are market-dependent - the illustrations in the manual only show a few examples.



Road sign information - RSI*

Following which, the sign information is hidden until the next speed-related sign is detected.


Additional signs

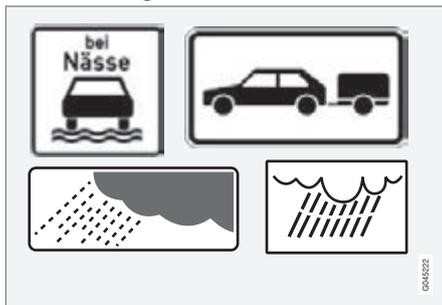

Examples of additional signs¹.


Sometimes different speed limits are signposted for the same road - an additional sign then indicates the circumstances under which the different speeds apply. The road section may be particularly susceptible to accidents in rain and/or fog, for example.

An additional sign relating to rain is displayed only if the windscreen wipers are in use.

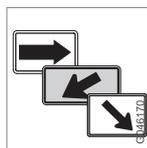

The speed applicable on an exit is indicated in certain markets by means of an additional sign containing an arrow.

Speed signs linked to this type of additional sign are displayed only if the driver is using the direction indicator.

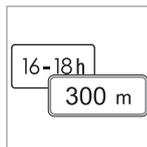

Some speeds are applicable only after e.g. a specific distance or at a certain time of day. The driver's attention is drawn to the situation by means of a symbol for an additional sign under the

symbol showing speed.

Display of additional information



A symbol for additional sign in the form of an empty frame under the combined instrument panel's speed symbol means that the RSI has detected an additional sign with supplementary information for the current speed limit.

Setting in MY CAR

There are options for RSI in the **MY CAR** menu system, see page 212.

Road sign information On/Off



The combined instrument panel's speed symbol display can be disabled. To deactivate the RSI function:


- Uncheck the option **Road Sign Information** at **Settings** → **Car settings** → **Road Sign Information** and go back out by pressing **EXIT**.

¹ Road signs shown in the combined instrument panel are market-dependent - the illustrations in the manual only show a few examples.



Road sign information - RSI*

Speed warning

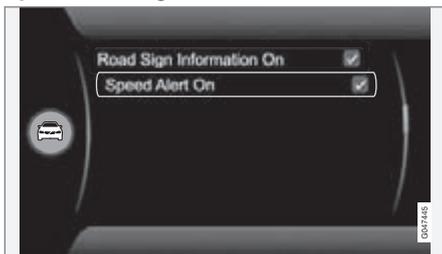

The driver can opt to receive a warning when the applicable speed limit is exceeded by 5 km/h or more. This warning is given by the symbol showing the applicable maximum speed temporarily flashing when this speed is exceeded.

To activate speed warning:

- Check **Speed alert** at **Settings** → **Car settings** → **Speed alert** and go back out by pressing **EXIT**.

Limitations

The RSI function's camera sensor is limited - just like the human eye. Find out more about this on page 184.

Signs which indirectly provide information on a prevailing speed limit, e.g. name signs for towns/districts, are not recorded by the RSI function.

Here are several examples of what can disrupt the function:

- Faded signs
- Signs positioned on bends
- Rotated or damaged signs
- Concealed or poorly positioned signs
- Signs completely or partly covered with frost, snow and/or dirt.


**Cruise control*****General information on CC**

The cruise control (CC – Cruise Control) helps the driver maintain an even speed, resulting in a more relaxed driving on motorways and long, straight roads in regular traffic flows.

WARNING

The driver must always be observant with regard to the traffic conditions and intervene when the cruise control is not maintaining a suitable speed and/or suitable distance.

The driver always bears ultimate responsibility for ensuring that the vehicle is driven safely.

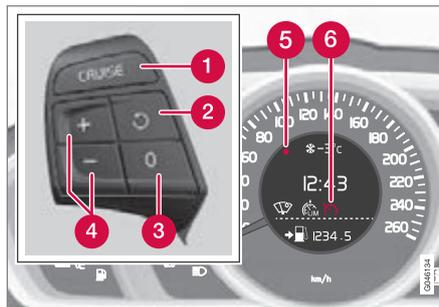Operation

Steering wheel keypad and display.

- 1 Cruise control - On/Off.
- 2 Standby mode ceases and the stored speed is resumed.
- 3 Standby mode
- 4 Activate and adjust the speed.
- 5 Selected speed (GREY = Standby mode).
- 6 Cruise control active - WHITE symbol (GREY = Standby mode).

Activating and setting the speed

To enable cruise control:

- Press the steering wheel button

- > The cruise control symbol (6) in the combined instrument panel changes from GREY to WHITE and shows that the cruise control is in standby mode.

To activate cruise control:

- At the required speed - press the steering wheel button or .
- > The current speed is stored in the memory and the combined instrument panel's marking (5) is illuminated at the selected speed.

**NOTE**

Cruise control cannot be engaged at speeds below 30 km/h.

Changing the speed

To change the stored speed:

- Adjust with short presses on or - every press gives +/- 5 km/h. The last presses made are stored in the memory.

To adjust +/- 1 km/h:

- Hold the button depressed and release it at the desired speed.

A temporary increase in speed with the accelerator pedal, e.g. during overtaking, does not affect the cruise control setting - the car



Cruise control*

returns to the set speed when the accelerator pedal is released.

NOTE

If any of the Cruise Control buttons are held depressed for several minutes then it is blocked and deactivated. To be able to reactivate Cruise Control, the car must be stopped and the engine restarted.

Temporary deactivation - standby mode

To temporarily disengage cruise control and set it in standby mode:

- Press the steering wheel button .
- > The combined instrument panel's marking (5) and symbol (6) change colour from WHITE to GREY.

Automatic standby mode

Cruise control is temporarily disengaged and set in standby mode if:

- wheels lose traction
- the foot brake is used
- speed falls below approx. 30 km/h
- the clutch pedal is depressed
- the gear selector is moved to neutral position (automatic gearbox)
- the driver maintains a speed higher than the set speed for longer than 1 minute.

The driver must then regulate the speed.

Resume set speed

To reactivate the cruise control from standby mode:

- Press the steering wheel button .
- > The combined instrument panel's marking (5) and symbol (6) change colour from GREY to WHITE and the speed is then set to the last speed stored.

NOTE

A significant increase in speed may arise after the speed has been resumed with .

Deactivate

The cruise control is switched off with the steering wheel button (1) or by switching off the engine - the set speed is deleted from the memory and cannot be resumed with the  button.



Adaptive cruise control*

General information on ACC

The adaptive cruise control (ACC – Adaptive Cruise Control) helps the driver maintain a safe distance from the vehicle ahead. Adaptive cruise control provides a more relaxing driving experience on long journeys on motorways and long straight main roads in smooth traffic flows.

The driver sets the desired speed and time interval to the car in front. When the radar detector detects a slower vehicle in front of the car, the speed is automatically adapted to that. When the road is clear again the car returns to the selected speed.

If the adaptive cruise control is switched off or set to the standby mode and the car comes too close to a vehicle in front, then the driver is warned instead by Distance Warning (see page 170) about the short distance.

WARNING

The driver must always be observant with regard to the traffic conditions and intervene when the adaptive cruise control is not maintaining a suitable speed or suitable distance.

The adaptive cruise control cannot handle all traffic, weather and road conditions.

Read the whole of this section for information on the limitations of the adaptive cruise control. The driver must be familiar with this information before using the adaptive cruise control.

The driver always bears responsibility for maintaining the correct distance and speed, even when the adaptive cruise control is being used.


IMPORTANT

Maintenance of adaptive cruise control components must only be performed at a workshop - an authorised Volvo workshop is recommended.

Automatic gearbox

Cars with automatic gearbox have enhanced functionality with the adaptive cruise control's Queue Assistant, see page 164.

Function

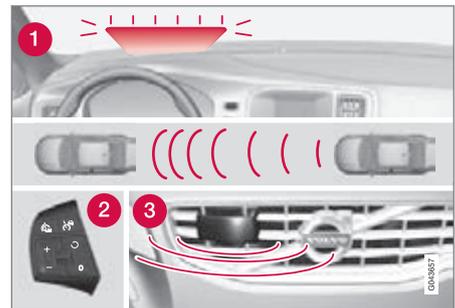

Function overview¹.

- 1** Warning lamp - braking by driver required
- 2** Steering wheel keypad
- 3** Radar sensor

Adaptive cruise control consists of a cruise control system and a coordinated spacing system.

¹ NOTE: The illustration is schematic - details may differ depending on car model.



Adaptive cruise control*

WARNING

Adaptive cruise control is not a collision avoidance system. The driver must intervene if the system does not detect a vehicle in front.

The adaptive cruise control does not brake for humans or animals, and not for small vehicles such as bicycles and motorcycles. Nor for oncoming, slow or stationary vehicles and objects.

Do not use the adaptive cruise control, for example, in city traffic, in dense traffic, at junctions, on slippery surfaces, with a lot of water or slush on the road, in heavy rain/snow, in poor visibility, on winding roads or on slip roads.

The distance to the vehicle ahead is mainly measured by a radar sensor. Cruise control regulates the speed with acceleration and braking. It is normal for the brakes to emit a low sound when they are being used by the adaptive cruise control.

WARNING

The brake pedal moves when the cruise control brakes. Do not rest your foot under the brake pedal as it could become trapped.

The adaptive cruise control aims to follow the vehicle ahead in the same lane at a time interval set by the driver. If the radar sensor cannot see any vehicle in front then the car will instead maintain the cruise control's set speed. This also happens if the speed of the vehicle in front exceeds the cruise control's set speed.

The adaptive cruise control aims to control the speed in a smooth way. In situations that demand sudden braking the driver must brake himself/herself. This applies with large differences in speed, or if the vehicle in front brakes heavily. Due to limitations in the radar sensor, braking may come unexpectedly or not at all, see page 165.

The adaptive cruise control can be activated to follow another vehicle at speeds from 30 km/h² up to 200 km/h. If the speed falls below 30 km/h or if the engine speed becomes too low, the cruise control is set in standby mode at which automatic braking

ceases - the driver must then take over himself/herself to maintain a safe distance to the vehicle ahead.

Warning lamp - braking by driver required

Adaptive cruise control has a braking capacity that is equivalent to more than 40% of the car's braking capacity.

If the car needs to be braked more heavily than cruise control capacity and the driver does not brake, then the cruise control uses the collision warning system's warning lamp and warning sound (see the illustration on page 179) to alert the driver that immediate intervention is required.

NOTE

The warning lamp may be difficult to notice in strong sunlight or when sunglasses are being worn.

WARNING

Cruise control only warns of vehicles detected by the radar sensor. Consequently there may be no warning or it may be subject to a delay. Do not wait for a warning but brake when it is necessary.

² Queue Assistant (in cars with automatic gearbox) can operate in the range of 0-200 km/h, see page 164.

* Option/accessory, for more information, see Introduction.




Adaptive cruise control*

Steep roads and/or heavy load

Bear in mind that the adaptive cruise control is primarily intended for use when driving on level road surfaces. It may have difficulty in keeping the correct distance from the vehicle ahead when driving on steep downhill gradients, with a heavy load or with a trailer - in which case, be extra attentive and ready to slow down.

Operation

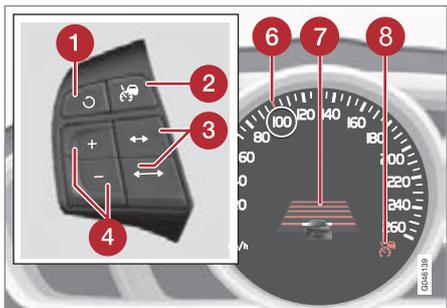

- 1 Standby mode ceases and the stored speed is resumed.
- 2 Cruise control - On/Off or Standby mode.
- 3 Time interval - Increase/decrease.
- 4 Activate and adjust the speed.

- 5 (Not used)
- 6 Green marking by the stored speed (WHITE = standby mode).
- 7 Time interval
- 8 ACC is active with GREEN symbol (WHITE = standby mode).

Activating and setting the speed

To enable cruise control:

- Press the steering wheel button - a similar WHITE symbol illuminates in the combined instrument panel (8) which shows that cruise control is in standby mode.

To activate cruise control:

- At the required speed - press the steering wheel button or .
- > The current speed is stored in memory, the combined instrument panel shows a "magnifying glass" around the selected speed for a few seconds and its marking (6) changes from WHITE to GREEN.

When this symbol changes colour from WHITE to GREEN the cruise control is active and the car maintains the stored speed.



Only when the symbol shows the image of another vehicle is the **distance** to the vehicle ahead regulated by the cruise control.



At the same time a speed interval is marked:

- the higher speed with the GREEN marking (6) is the pre-programmed speed
- the lower speed is the speed of the car in front.

Changing the speed

To change the stored speed:

- Adjust with short presses on or - every press gives +/- 5 km/h. The last presses made are stored in the memory.
- If speed is increased using the accelerator pedal prior to pressing the / button, then it is the car's current speed when the button is pressed that is stored in the cruise control.

To adjust +/- 1 km/h:

- Hold the button depressed and release it at the desired speed.

* Option/accessory, for more information, see Introduction.






Adaptive cruise control*

NOTE

If any of the Cruise Control buttons are held depressed for several minutes then it is blocked and deactivated. To be able to reactivate Cruise Control, the car must be stopped and the engine restarted.

In certain situations, cruise control cannot be activated. In this case, the combined instrument panel shows **Cruise control Unavailable**, see page 167.

Set time interval

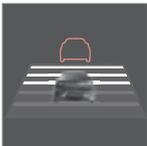

Different time intervals to the vehicle in front can be selected and shown in the combined instrument panel as 1-5 horizontal lines - the more lines the longer the time interval. One line corre-

sponds to approximately 1 second to the vehicle in front, 5 lines approximately 3 seconds.

To set/change the time interval:

- Increase or decrease with the steering wheel buttons  .

At low speed, when the distances are short, the adaptive cruise control increases the time interval slightly.

The adaptive cruise control allows the time interval to vary noticeably in certain situations in order to allow the car to follow the vehicle in front smoothly and comfortably.

Note that a short time interval only allows the driver a short time to react and take action if any unforeseen traffic problem should arise.

The same symbol is also shown when Distance Warning is activated, see page 170.

NOTE

Only use the time intervals permitted by local traffic regulations.

If Cruise Control does not appear to react when activated, this may be because the time distance to the car in front is preventing an increase in speed.

The higher the speed the longer the calculated distance in metres for a given time interval.

Temporary deactivation - standby mode

To temporarily disengage the adaptive cruise control and set it in standby mode:

- Press the steering wheel button .



This symbol and the stored speed's marking then change colour from GREEN to WHITE.

Standby mode due to driver intervention

Cruise control is temporarily disengaged and set in standby mode if:

- the foot brake is used
- the clutch pedal is depressed for longer than 1 minute³
- the gear selector is moved to **N** position (automatic gearbox)
- the driver maintains a speed higher than the set speed for longer than 1 minute.

The driver must then regulate the speed.

A temporary increase in speed with the accelerator pedal, e.g. during overtaking, does not affect the cruise control setting - the car returns to the last stored speed when the accelerator pedal is released.

Automatic standby mode

The adaptive cruise control is dependent on other systems, such as DSTC (see page 152). If any of these systems stop working then cruise control is automatically deactivated.

In the event of automatic deactivation a signal will sound and the message **Cruise control Cancelled** is shown in the combined instrument panel. The driver must then intervene and adapt the speed and distance to the vehicle ahead.

³ Disengaging and selecting a higher or lower gear does not involve standby mode.

* Option/accessory, for more information, see Introduction.



Adaptive cruise control*

An automatic deactivation can be due to:

- the driver opens the door
- the driver takes off the seatbelt
- engine speed is too low/high
- speed has fallen below 30 km/h⁴
- wheels lose traction
- brake temperature is high
- the radar sensor is covered e.g. by wet snow or heavy rain (radar waves blocked).

Resume set speed

Adaptive cruise control in standby mode is reactivated with one press on the steering wheel button - the speed is then set to the last stored speed.

NOTE

A significant increase in speed may arise after the speed has been resumed with .

Overtaking another vehicle

When the car is following another vehicle and the driver indicates an impending overtaking manoeuvre with the direction indicator⁵, the

adaptive cruise control helps to briefly accelerate the car towards the vehicle in front.

This function is active at speeds above 70 km/h.

WARNING

Be aware that this function can be activated in more situations other than during overtaking, e.g. when a direction indicator is used to indicate a change of lane or exit to another road - the car will then accelerate briefly.

Deactivate

With a short press on the steering wheel button the adaptive cruise control is set in standby mode. With a further short press it is deactivated. The set speed is cleared and cannot be resumed with the button.

Changing from ACC to CC

With one press of the button the adaptive part (spacing system) in the cruise control is deactivated, at which point the car just follows the set speed.

- Give a **long** press on the steering wheel button - the combined instrument panel's symbol changes from to .
- > By these means the standard cruise control CC (Cruise Control) is activated, see page 157.

WARNING

The car no longer brakes automatically after switching from ACC to CC - it merely follows the set speed.

Changing back from CC to ACC

Deactivate CC with 1-2 presses on in accordance with the previous heading "Deactivate". The next time the system is switched on, it is the ACC that is activated.

04

⁴ Does not apply to a car with Queue Assistant - it manages right down to stationary.

⁵ On left flash only in left-hand-drive car, or right flash in right-hand-drive car.



04 Driver support

Adaptive cruise control*

Queue Assistant

In cars with automatic gearbox the adaptive cruise control is supplemented with the Queue Assist function (also referred to as "Queue Assist").

Queue Assistant has the following functions:

- Extended speed range - also below 30 km/h and at standstill
- Change of target
- Automatic braking ceases when stationary
- Automatic activation parking brake.

Note that the lowest programmable speed for the adaptive cruise control is 30 km/h - even though it is capable of following another vehicle down to a standstill, a lower speed **cannot** be selected.

Extended speed range

NOTE

In order to activate the cruise control the driver's door must be closed and the driver must be wearing the seatbelt.

With an automatic gearbox, the adaptive cruise control can follow another vehicle within the range 0-200 km/h.

NOTE

Activation of the cruise control below 30 km/h requires a vehicle in front within a reasonable distance.

For shorter stops in connection with inching in slow traffic or at traffic lights driving is automatically resumed if the stops do not exceed approx. 3 seconds - if it takes longer before the car in front starts moving again then the cruise control is set in standby mode with automatic braking. The driver must then reactivate it in one of the following ways:


- Press the steering wheel button .
 - or
 - Depress the accelerator pedal.
- > The cruise control will then resume following the vehicle in front.

NOTE

Queue Assist can hold the car stationary for a maximum of 4 minutes - then the parking brake is applied and Cruise Control is disengaged.

- The driver has to release the parking brake before the cruise control can be reactivated.

Change of target

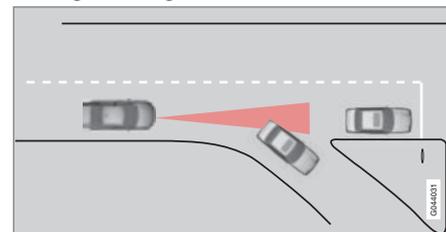

If the target vehicle in front suddenly turns then there may be stationary traffic in front.

When the adaptive cruise control is following another vehicle at speeds **below** 30 km/h and changes target from a moving to a stationary vehicle, the cruise control will slow down for the stationary vehicle.

WARNING

When the cruise control is following another vehicle at speeds **in excess of** 30 km/h and the target is changed from a moving vehicle to a stationary vehicle, the cruise control will ignore the stationary vehicle and instead select the stored speed.

- The driver must intervene him/herself and brake.



Adaptive cruise control*

Automatic standby mode with change of target

The adaptive cruise control is disengaged and set in standby mode:

- when the speed is below 5 km/h and cruise control is not sure whether the target object is a stationary vehicle or some other object, e.g. a speed bump.
- when the speed is below 5 km/h and the vehicle in front turns off so the cruise control no longer has a vehicle to follow.

Termination of automatic braking at a standstill

In certain situations, Queue Assist stops automatic braking at a standstill. This means that the brakes are released and the car may start to roll - the driver must therefore intervene and brake the car himself/herself in order to maintain its position.

Queue Assist releases the foot brake and sets the adaptive cruise control in standby mode in the following situations:

- the driver puts his/her foot on the brake pedal
- the parking brake is applied
- the gear selector is moved to **P**, **N** or **R** position
- the driver sets the cruise control in standby mode.

Automatic activation parking brake

In certain situations Queue Assist applies the parking brake in order to keep the car remaining stationary.

This takes place if:

- the driver opens the door or takes off his/her seatbelt
- DSTC is changed from **Normal** to **Sport** mode
- Queue Assist has held the car stationary for more than 4 minutes
- the engine is switched off
- the brakes have overheated.

The radar sensor and its limitations

The radar sensor is used - apart from by Adaptive cruise control - by the following functions as well:

- Collision Warning with Auto Brake, see page 179
- Distance Warning, see page 170.

The function of the radar sensor is to detect cars or larger vehicles in the same direction, in the same lane.



IMPORTANT

In the event of visible damage to the car's grille, or if you suspect that the radar sensor may be damaged:

- Contact a workshop - an authorised Volvo workshop is recommended.

The function may completely or partially disappear - or malfunction - if the grille, the radar sensor or its bracket is damaged or has loosened.



WARNING

The driver must always be observant with regard to the traffic conditions and intervene when the adaptive cruise control is not maintaining a suitable speed or suitable distance.

The adaptive cruise control cannot handle all traffic, weather and road conditions.

Read the whole of this section for information on the limitations of the adaptive cruise control. The driver must be familiar with this information before using the adaptive cruise control.

The driver always bears responsibility for maintaining the correct distance and speed, even when the adaptive cruise control is being used.



Adaptive cruise control*

WARNING

Accessories or other objects such as auxiliary lamps must not be installed in front of the grille.

WARNING

Adaptive cruise control is not a collision avoidance system. The driver must intervene if the system does not detect a vehicle in front.

The adaptive cruise control does not brake for humans or animals, and not for small vehicles such as bicycles and motorcycles. Nor for oncoming, slow or stationary vehicles and objects.

Do not use the adaptive cruise control, for example, in city traffic, in dense traffic, at junctions, on slippery surfaces, with a lot of water or slush on the road, in heavy rain/snow, in poor visibility, on winding roads or on slip roads.

The capacity of the radar sensor to detect vehicles in front is reduced significantly:

- if the radar sensor becomes blocked and cannot detect other vehicles e.g. in heavy rain or slush, or if other objects have collected in front of the radar sensor.


NOTE

Keep the surface in front of the radar sensor clean - see page 182, "Maintenance".

- if the speed of vehicles in front is significantly different from your own speed.

Examples where the adaptive cruise control does not work optimally

The radar sensor has a limited field of vision. In some situations another vehicle is not detected, or the detection is made later than expected.

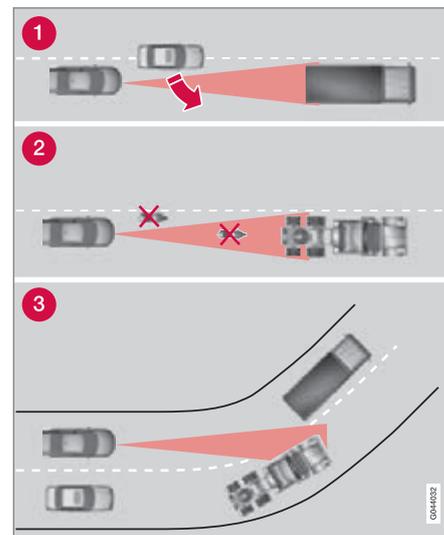

ACC field of vision.

00000000



Adaptive cruise control*

- 1 Sometimes the radar sensor is late at detecting vehicles at close distances, e.g. a vehicle that drives in between the car and vehicles in front.
- 2 Small vehicles, such as motorcycles, or vehicles not driving in the centre of the lane can remain undetected.
- 3 In bends the radar sensor may detect the wrong vehicle or lose a detected vehicle from view.

Fault tracing and action

If the combined instrument panel shows the message **Radar blocked** See manual this means that the radar signals from the radar sensor are blocked and that vehicles in front of the car cannot be detected.

In turn this means that - apart from Adaptive Cruise Control - Distance Warning and Colli-

sion Warning with Auto Brake functions are not operating either.

The following table presents examples of possible causes for a message being shown along with the appropriate action.

| Cause | Action |
|---|--|
| The radar surface in the grille is dirty or covered with ice or snow. | Clean the radar surface in the grille from dirt, ice and snow. |
| Heavy rain or snow blocking the radar signals. | No action. Sometimes the radar does not work during heavy rain or snowfall. |
| Water or snow from the road surface swirls up and blocks the radar signals. | No action. Sometimes the radar does not work on a very wet or snowy road surface. |
| The radar surface has been cleaned but the message remains. | Wait. It could take several minutes for the radar to sense that it is no longer blocked. |

Symbols and messages

| Symbol | Message | Specification |
|--------|---------------------|---|
| | The symbol is GREEN | The car maintains the stored speed. |
| | The symbol is WHITE | The Adaptive cruise control is set in standby mode. |

04

* Option/accessory, for more information, see Introduction.





Adaptive cruise control*

| Symbol | Message | Specification |
|---|--|---|
|  | | Standard cruise control is selected manually. |
| | DSTC Normal to enable Cruise | The adaptive cruise control cannot be activated until the Stability and Traction Control system (DSTC) has been set in Normal mode - see page 152. |
| | Cruise control Cancelled | The adaptive cruise control has been deactivated - the driver has to regulate the speed himself. |
| | Cruise control Unavailable | The adaptive cruise control cannot be activated. This could be due to: <ul style="list-style-type: none"> • brake temperature is high • the radar sensor is blocked by e.g. wet snow or rain. |
|  | Radar blocked See manual | The adaptive cruise control is temporarily disengaged. <ul style="list-style-type: none"> • The radar sensor is blocked and cannot detect other vehicles. For example, in the event that heavy rain or if slush has collected in front of the radar sensor. <p>The driver can then choose to change to normal Cruise control (CC), see page 163 - a text message informs about appropriate options.</p> <p>Read about the limitations of the radar sensor, see page 165.</p> |
| | Cruise control Service required | The adaptive cruise control is disengaged. <ul style="list-style-type: none"> • Contact a workshop - an authorised Volvo workshop is recommended. |

04



Adaptive cruise control*

| Symbol | Message | Specification |
|--------|--|--|
| | <p>Press Brake To hold + acoustic alarm (Only with Queue Assistant)</p> | <p>The car is stationary and the cruise control will release the foot brake to allow the parking brake to take over and hold the car, but a fault in the parking brake means the car will shortly begin to roll.</p> <ul style="list-style-type: none"> The driver must brake himself/herself. The message remains and the alarm sounds until the driver depresses the brake pedal or uses the accelerator pedal. |
| | <p>Below 30 km/h Only following (Only with Queue Assistant)</p> | <p>Shown with attempts to activate the cruise control at speeds below 30 km/h without a vehicle in front within the activation distance (approx. 30 metres).</p> |

04

* Option/accessory, for more information, see Introduction.




04 Driver support

Distance Warning*

General

Distance Warning (Distance Alert) is a function that informs the driver about the time interval to vehicles in front.

Distance Warning is active at speeds above 30 km/h and only reacts to vehicles driving in front of the car, in the same direction. No distance information is provided for oncoming, slow or stationary vehicles.

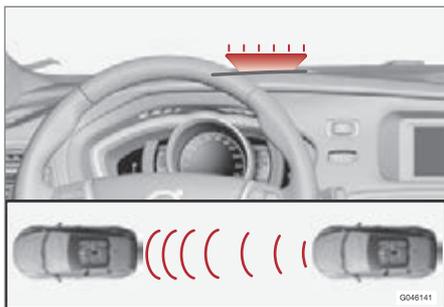

Orange warning lamp¹.

An orange warning lamp in the windscreen illuminates with a constant glow if the distance to the vehicle in front is shorter than the set time interval.


NOTE

Distance warning is deactivated during the time the adaptive cruise control is active.

WARNING

Distance warning only reacts if the distance to the vehicle ahead is shorter than the preset value - the speed of the driver's vehicle is not affected.


Operation

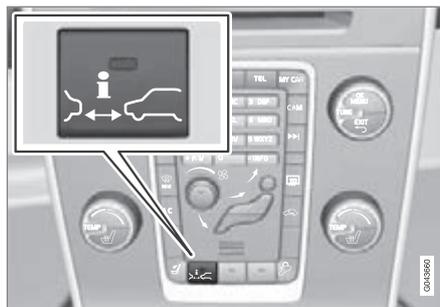

Press the button in the centre console to switch the function on or off. The function is switched on if one lamp is illuminated in the button.

Some combinations of the selected equipment leave no vacant space for a button in the centre console - in which case the function is handled by the car's menu system **MY CAR** under **Settings** → **Car settings** → **Distance Alert**. For a description of the menu system - see page 211.

Set time interval

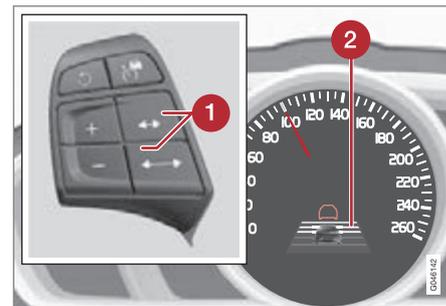

Controls and symbol for time interval.

- ① Time interval - Increase/decrease.
- ② Time interval - On.

¹ NOTE: The illustration is schematic - details may vary depending on car model.

**Distance Warning***

Different time intervals to the vehicle in front can be selected and shown in the combined instrument panel as 1-5 horizontal lines - the more lines the longer the time interval. One line corre-

sponds to approximately 1 second to the vehicle in front, 5 lines approximately 3 seconds.

The same symbol is also shown when adaptive cruise control is activated.

i NOTE

The higher the speed the longer the calculated distance in metres for a given time interval.

The set time interval is also used by the Adaptive Cruise Control function, see page 162.

Only use the time intervals permitted by local traffic regulations.

Limitations

The function uses the same radar sensor as adaptive cruise control and the collision warning system with auto brake. For more information on the radar sensor and its limitations, see page 165.

i NOTE

Strong sunlight, reflections or strong variations in light intensity, as well as wearing sunglasses, could mean that the warning light in the windscreen cannot be seen.

Poor weather or winding roads could affect the radar sensor's capacity to detect vehicles in front.

The size of other vehicles could also affect detection capacity, e.g. motorcycles. This could mean that the warning lamp illuminates at a shorter distance than the setting or that the warning is temporarily absent.

Extremely high speeds can also cause the lamp to illuminate at a shorter distance than that set due to limitations in sensor range.



Distance Warning*

Symbols and text messages

| Symbol ^A | Message | Specification |
|---|---|--|
|  | Radar blocked See manual | Distance Warning temporarily disengaged. The radar sensor is blocked and cannot detect other vehicles, e.g. in the event of heavy rain or if slush has collected in front of the radar sensor. Read about the limitations of the radar sensor, see page 165. |
|  | Collision warn. Service required | Distance Warning and Collision Warning with Auto Brake fully or partially disengaged. Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |

^A Symbols are schematic - may vary by market and car model.



City Safety™

General

City Safety™ is a function for helping the driver to avoid a collision when driving in queues, amongst other things, when changes in the traffic ahead, combined with a lapse in attention, could lead to an incident.

The function is active at speeds under 50 km/h and it helps the driver by automatically braking the car in the event of imminent risk of collision with vehicles in front, should the driver not react in time by braking and/or steering away.

City Safety™ is activated in situations where the driver should have started braking earlier, which is why it cannot help the driver in every situation.

City Safety™ is designed to be activated as late as possible in order to avoid unnecessary intervention.

City Safety™ must not be used as an excuse for the driver to change his/her driving style. If the driver solely relies on City Safety™ to do the braking, there will be a collision sooner or later.

The driver or passengers normally only notice City Safety™ if a situation arises where the car is extremely close to being in a collision.

If the car is also equipped with a Collision Warning function with Auto Brake*, these two systems complement each other. For more information on Collision Warning function with Auto Brake, see page 179.

IMPORTANT

Maintenance and replacement of City Safety™ components must only be performed by a workshop - an authorised Volvo workshop is recommended.

WARNING

City Safety™ does not engage in all driving situations or traffic, weather or road conditions.

City Safety™ does not react to vehicles driving in a different direction from the car, to small vehicles and motorcycles or to humans and animals.

City Safety™ can prevent collision at a speed difference of less than 15 km/h - at a higher speed difference, it is only possible to reduce collision speed. In order to obtain full brake function, the driver must depress the brake pedal.

Never wait for City Safety™ to engage. The driver always bears responsibility for maintaining the proper distance and speed.

04

* Option/accessory, for more information, see Introduction.



04 Driver support

City Safety™

Function



Laser sensor transmitter and receiver window¹.

City Safety™ detects the traffic in front of the car with a laser sensor fitted in the top edge of the windscreen. If there is an imminent risk of collision, City Safety™ will automatically brake the car, which may be experienced as sudden braking.

If the speed difference is 4-15 km/h in relation to the vehicle in front then City Safety™ can completely prevent a collision.

City Safety™ activates a short, sharp braking and stops the car in normal circumstances, just behind the vehicle in front. For most drivers this is well outside normal driving style

and may be experienced as being uncomfortable.

If the difference in speed between the vehicles is greater than 15 km/h then City Safety™ may not prevent the collision on its own. To obtain full brake force, the driver must depress the brake pedal. This could then make it possible to prevent a collision, even at speed differences above 15 km/h.

When the function is activated and brakes, the combined instrument panel shows a text message to the effect that the function is/has been active.

NOTE

The brake lights come on when City Safety™ brakes the car.

Operation

NOTE

The City Safety™ function is always enabled after the engine has been started via key position **I** and **II** (see page 81 on key positions).

On and Off

In certain situations, it may be advisable to disable City Safety™, e.g. where leafy branches could sweep over the bonnet and/or windscreen.

After starting the engine City Safety™ can be deactivated as follows:

- Using **MY CAR** in the centre console's screen with its menu system, search and locate **Settings** → **Car settings** → **Driver support systems** → **City Safety**. Select the **Off** option. For more information on the menu system **MY CAR**, see page 211.

However, the function will be enabled the next time the engine is started, regardless of whether the system was enabled or disabled when the engine was switched off.

WARNING

The laser sensor also transmits laser light when City Safety™ is disabled manually.

To enable City Safety™ again:

- Follow the same procedure as for disabling, but select the **On** option.

¹ NOTE: The illustration is schematic - details may vary depending on car model.



Limitations

The sensor in City Safety™ is designed to detect cars and other large vehicles in front of the car irrespective of whether it is day or night.

However, the sensor has limitations and has poorer functionality - or none at all - in e.g. heavy snowfall or rain, dense fog, dust storms or white-out situations. Mist, dirt, ice or snow on the windscreen may disrupt the function.

Low-hanging objects, e.g. a flag/pennant for projecting load, or accessories such as auxiliary lamps and bull bars that are higher than the bonnet limit the function.

The laser light from the sensor in City Safety™ measures how the light is reflected. The sensor cannot detect objects with low reflection capacity. The rear sections of the vehicle generally reflect the light sufficiently thanks to the number plate and rear light reflectors.

On slippery road surfaces the braking distance is extended, which may reduce the capacity of City Safety™ to avoid a collision. In such situations the ABS and DSTC systems will provide best possible braking force with maintained stability.

When your own car is reversing, City Safety™ is temporarily deactivated.

City Safety™ is not activated at low speeds - under 4 km/h, which is why the system does not intervene in situations where a vehicle in front is being approached very slowly, e.g. when parking.

Driver commands are always prioritised, which is why City Safety™ does not intervene in situations where the driver is steering or accelerating in a clear manner, even if a collision is unavoidable.

When City Safety™ has prevented a collision with a stationary object the car remains stationary for a maximum of 1.5 seconds. If the car is braked for a vehicle in front that is moving, then speed is reduced to the same speed as that maintained by the vehicle in front.

On a car with manual gearbox the engine stops when City Safety™ has stopped the car, unless the driver manages to depress the clutch pedal beforehand.

NOTE

- Keep the windscreen surface in front of the laser sensor free from ice, snow and dirt (see the illustration for sensor location on page 174).
- Do not affix or mount anything on the windscreen in front of the laser sensor
- Remove ice and snow from the bonnet - snow and ice must not exceed a height of 5 cm.

Fault tracing and action

If the message **Windscreen Sensors blocked** is shown in the combined instrument panel it indicates that the laser sensor is blocked and cannot detect vehicles in front of the car. This means that City Safety™ is not operational.

The **Windscreen Sensors blocked** message is not shown for all situations in which the laser sensor is blocked. The driver must therefore be diligent about keeping the windscreen and area in front of the laser sensor clean.

The following table presents possible causes for the message being shown, along with suggestions for appropriate action.



City Safety™

| Cause | Action |
|---|--|
| The windscreen surface in front of the laser sensor is dirty or covered with ice or snow. | Clean the windscreen surface in front of the sensor from dirt, ice and snow. |
| The laser sensor field of vision is blocked. | Remove the blocking object. |

! IMPORTANT

If there are cracks, scratches or stone chips in the windscreen in front of either of the laser sensor's "windows" and they cover a surface of approx. 0.5 x 3.0 mm (or larger), then a workshop must be contacted for replacement of the windscreen (see the illustration for sensor location, page 174) - an authorised Volvo workshop is recommended.

Failure to take action may result in reduced performance for City Safety™.

To avoid the risk of failed, deficient or reduced operation for City Safety™, the following also applies:


- Volvo recommends that you do **not** repair cracks, scratches or stone chips in the area in front of the laser sensor - instead, the whole windscreen should be replaced.
- Before replacing a windscreen, contact an authorised Volvo workshop to verify that the correct windscreen is ordered and fitted.
- The same type or Volvo-approved windscreen wipers must be fitted during replacement.

Laser sensor

The City Safety™ function includes a sensor which transmits laser light. The illustration on page 174 shows sensor location.

Contact a qualified workshop in the event of a fault or if the laser sensor needs servicing - an authorised Volvo workshop is recommended. It is absolutely essential to follow the prescribed instructions when handling the laser sensor.

The following two labels with English text are fitted directly on the laser sensor unit:

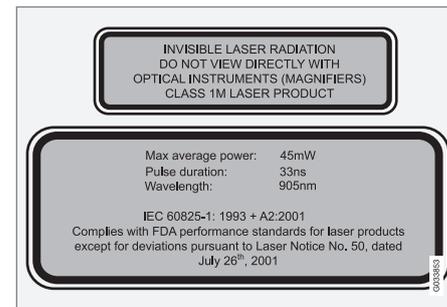

The upper label in the illustration describes the classification of the laser light:

- Laser radiation - Do not look into the laser beam with optical instruments - Class 1M laser product.



The lower label in the illustration describes the physical data for the laser light:

- IEC 60825-1:1993 + A2:2001. Complies with FDA (U.S. Food Administration) standards for laser product design with the exception of deviations in accordance with "Laser Notice No. 50" from 26 July 2001.

Radiation data for the laser sensor

The following table specifies the laser sensor's physical data.

| | |
|------------------------------------|-----------|
| Maximum pulse energy | 2.64 µJ |
| Maximum average output | 45 mW |
| Pulse duration | 33 ns |
| Divergence (horizontal x vertical) | 28° × 12° |

WARNING

If any of these instructions are not followed then there is a risk of eye injury!

- Never look into the laser sensor (which emits spreading invisible laser radiation) at a distance of 100 mm or closer with magnifying optics such as a magnifying glass, microscope, lens or similar optical instruments.
- Testing, repair, removal, adjustment and/or replacement of the laser sensor's spare parts must only be carried out by a qualified workshop - we recommend an authorised Volvo workshop.
- To avoid exposure to harmful radiation, do not carry out any readjustments or maintenance other than those specified here.
- The repairer must follow specially drawn up workshop information for the laser sensor.
- Do not remove the laser sensor (this includes removing the lenses). A removed laser sensor does not fulfil

- laser class 3B as per standard IEC 60825-1. Laser class 3B is not eye-safe and therefore entails a risk of injury.
- The laser sensor's connector must be unplugged before removal from the windscreen.
- The laser sensor must be fitted onto the windscreen before the sensor's connector is plugged in.
- The laser sensor transmits laser light when the remote control key is in position II and also with the engine switched off (see page 81 on key positions).

04

Symbols and text messages

In conjunction with automatic braking by the City Safety™ system, one or more symbols may illuminate in the combined instrument panel and a text message may be shown.

A text message can be acknowledged by briefly pressing the **OK** button on the direction indicator stalk.



City Safety™

| Symbol | Message | Meaning/Action |
|---|------------------------------|---|
|  | Auto braking by City Safety | City Safety™ is braking or has automatically braked. |
|  | Windscreen Sensors blocked | The laser sensor is temporarily non-operational because something is blocking it. <ul style="list-style-type: none">Remove the object blocking the sensor and/or clean the windscreen in front of the sensor. Read about the limitations of the laser sensor, see page 175. |
|  | City Safety Service required | City Safety™ is not operational. <ul style="list-style-type: none">Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |



Collision Warning with Auto Brake & Pedestrian Protection*

General

"Collision Warning with Auto Brake & Pedestrian Detection" is an aid to assist the driver when there is a risk of colliding with a pedestrian or vehicle in front that is stationary or moving in the same direction.

Collision Warning with Auto Brake & Pedestrian Detection is activated in situations where the driver should have started braking earlier, which is why it cannot help the driver in every situation.

Collision Warning with Auto Brake & Pedestrian Detection is designed to be activated as late as possible in order to avoid unnecessary intervention.

Collision Warning with Auto Brake & Pedestrian Detection may prevent a collision or reduce the collision speed.

Collision Warning with Auto Brake & Pedestrian Detection must not be used as an excuse for the driver to change his/her driving style. If the driver solely relies on Collision Warning with Auto Brake to do the braking, there will be a collision sooner or later.

Two system levels

Depending on how the car is equipped, the Collision Warning with Auto Brake & Pedestrian Detection function may appear in two variants: **Level 1** and **Level 2**.

Level 1

The driver is merely warned of occurring obstacles by means of visual and acoustic signals - no automatic braking intervenes, the driver must himself brake.


Level 2

The driver is warned of occurring obstacles by means of visual and acoustic signals - the car is braked automatically if the driver himself does not act within a reasonable time.

! IMPORTANT

Maintenance of components included in Collision Warning with Auto Brake & Pedestrian Detection must only be carried out in a workshop - an authorised Volvo workshop is recommended.

Function

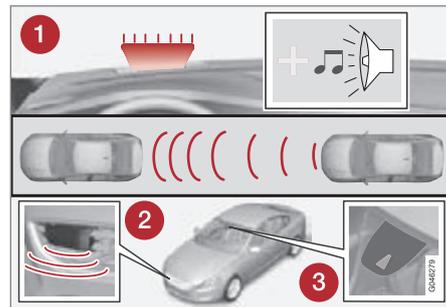

Function overview¹.

- 1 Audio-visual warning signal in the event of a collision risk.
- 2 Radar sensor²
- 3 Camera sensor

Collision Warning with Auto Brake executes three steps in the following order:

1. **Collision warning**
2. **Brake support²**
3. **Auto Brake²**

¹ NOTE: The illustration is schematic - details may vary depending on car model.

² With system Level 2 only.



Collision Warning with Auto Brake & Pedestrian Protection*

The collision warning system and City Safety™ complement each other. For more information on City Safety™, see page 173.

1 - Collision warning

The driver is first warned of a potentially imminent collision.

The collision warning system detects pedestrians, stationary vehicles as well as vehicles driving in the same direction in front of the car.

If there is a risk of collision with a pedestrian or a vehicle, the driver's attention is attracted with a flashing red warning signal (no. [1] in the illustration on page 179) and an acoustic signal.

2 - Brake support²

If the risk of collision has increased further after the collision warning then the brake support is activated.

This means that the brake system is prepared for rapid braking by applying the brakes lightly, which may feel like a slight jolt.

If the brake pedal is depressed sufficiently quickly then full brake function is implemented.

Brake support also reinforces the driver's braking if the system considers that the braking is not sufficient to avoid a collision.

3 - Auto Brake²

The automatic brake function is activated last.

If in this situation the driver has not yet started to take evasive action and the risk of collision is imminent then the automatic braking function is deployed - this takes place irrespective of whether or not the driver brakes. Braking then takes place with full brake force in order to reduce collision speed, or with limited brake force if it is sufficient to avoid a collision.



WARNING

The collision warning system does not engage in all driving situations or traffic, weather or road conditions. The collision warning system does not react to vehicles driving in another direction to the car or to animals.

Warning only activated in the event of a high risk for collision. This section "Function" and the section "Limitations" inform about limitations that the driver must be aware of before using the Collision Warning system with Auto Brake.

Warnings and brake interventions for pedestrians are switched off at vehicle speeds exceeding 80 km/h.

Warnings and brake interventions for pedestrians do not work in darkness and tunnels - not even when streetlights are lit.

The auto-brake function can prevent a collision or reduce collision speed. To ensure full brake performance, the driver should always depress the brake pedal - even when the car auto-brakes.


Never wait for a collision warning. The driver is always responsible that the correct distance and speed are maintained - even when the collision warning system with auto-brake is used.

² With system Level 2 only.



Collision Warning with Auto Brake & Pedestrian Protection*

Detection of pedestrians

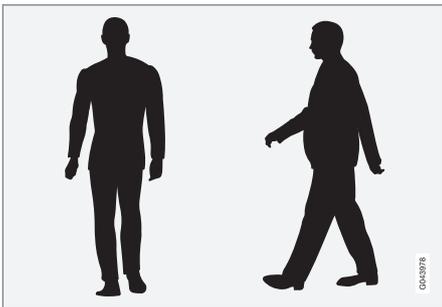

Optimal examples of what the system regards as pedestrians with clear body contours.

Optimal performance of the system requires that the system function that detects pedestrians receives as unambiguous information as possible about the contours of the body - this implies the opportunity to identify the head, arms, shoulders, legs, upper and lower body combined with a normal human pattern of movement.

If large parts of the body are not visible to the camera then the system cannot detect a pedestrian.

- In order for a pedestrian to be detected he/she must appear full-length and have a height of at least 80 cm.
- The system cannot detect a pedestrian carrying larger items.
- The camera sensor's ability to see pedestrians at dusk and dawn is limited - just like the human eye.
- The camera sensor's capacity to detect pedestrians is deactivated when driving in darkness and tunnels - even when streetlights are lit.

WARNING

Collision Warning with Auto Brake & Pedestrian Detection is an assistance tool.

This function cannot detect all pedestrians in all situations and it cannot see e.g. partially obscured pedestrians, people in clothing that hides the contours of the body or pedestrians shorter than 80 cm.

- The driver is always responsible that the vehicle is driven properly and with a safety distance adapted to the speed.

Operation

Settings are made from **MY CAR** via the centre console's screen and menu system. For information on how the menu system is used, see page 211.

Warning signals On and Off

It is possible to choose whether the acoustic and visual warning signals of the collision warning system should be on or off.

When starting the engine, the setting that was selected when the engine was switched off is obtained automatically.

NOTE

The Brake Support and Auto Brake functions are always enabled - they cannot be deactivated.

Light and acoustic signals

To deactivate the light and acoustic signals:

- Locate **Settings** → **Car settings** → **Driver support systems** → **Collision Warning** - untick the box there.

The warning lamp (no. [1] in the image on page 179) is tested each time the engine is started by briefly lighting the separate light points of the warning lamp if the visual and acoustic warning of the collision warning system is activated.

04

* Option/accessory, for more information, see Introduction.



Collision Warning with Auto Brake & Pedestrian Protection*

Acoustic signal

The warning sound can be activated/deactivated separately:

- Select **On** or **Off** in the menu system under **Settings → Car settings → Driver support systems → Collision Warning → Warning sound**.

Set warning distance

The warning distance regulates the distance at which the visual and acoustic warnings are deployed.

- Select **Long**, **Normal** or **Short** in the **MY CAR** menu system under **Settings → Car settings → Driver support systems → Collision Warning → Warning distance**.

The warning distance determines the system's sensitivity. Warning distance **Long** provides an earlier warning. First test with **Long** and if this setting produces too many warnings, which could be perceived as irritating in certain situations, then change to warning distance **Normal**.

Only use warning distance **Short** in exceptional cases, e.g. for dynamic driving.

NOTE

When the adaptive cruise control is in use the warning lamp and warning sound will be used by the cruise control even if the collision warning system is switched off.

The collision warning system warns the driver in the event of a risk of a collision, but the function cannot shorten driver reaction time.

In order for the collision warning system to be effective, always drive with Distance Warning set at time interval 4-5, see page 170.

NOTE

Even if the warning distance has been set to **Long** warnings could be perceived as being late in certain situations, e.g. when there are large differences in speed or if vehicles in front brake heavily.


WARNING

No automatic system can guarantee 100 % correct function in all situations. Therefore, never test Collision Warning with Auto Brake by driving at people or vehicles - this may cause severe damage and injury and risk lives.

Checking settings

The settings required can be controlled in the centre console's screen. Search with the menu system **MY CAR** under **Settings → Car settings → Driver support systems → Collision Warning**, see page 211.

Maintenance

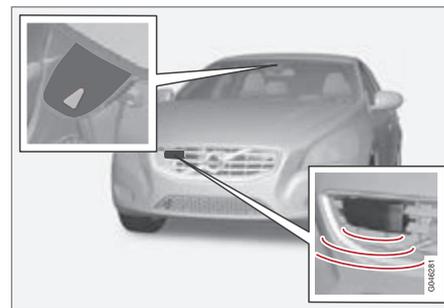

Camera and radar sensor³.

For the sensors to work correctly, they must be kept clear of dirt, ice and snow, and be cleaned regularly with water and car shampoo.

³ NOTE: The illustration is schematic - details may vary depending on car model.

* Option/accessory, for more information, see Introduction.



Collision Warning with Auto Brake & Pedestrian Protection*

NOTE

Dirt, ice and snow covering the sensors will reduce their function and may prevent measurement.

Limitations

Collision Warning with Auto Brake and Pedestrian Detection is active from approx. 4 km/h.

The visual warning signal (no. [1] in the illustration on page 179) may be difficult to notice in the event of strong sunlight, reflections, when sunglasses are being worn or if the driver is not looking straight ahead. The warning sound should therefore always be activated.

On slippery road surfaces the braking distance is extended, which may reduce the capacity to avoid a collision. In such situations the ABS and DSTC systems will provide best possible braking force with maintained stability.

NOTE

The visual warning signal can be temporarily disengaged in the event of high passenger compartment temperature caused by strong sunlight for example. If this occurs then the warning sound is activated even if it is deactivated in the menu system.

- Warnings may not appear if the distance to the vehicle in front is small or if steering wheel and pedal movements are large, e.g. a very active driving style.

WARNING

Warnings and brake interventions could be implemented late or not at all if the traffic situation or external influences mean that the radar or camera sensor cannot detect a pedestrian or a vehicle in front correctly.

The sensor system has a limited range for pedestrians and the system therefore provides effective warnings and brake interventions at vehicle speeds up to 50 km/h. For stationary or slow-moving vehicles, warnings and brake interventions are effective at vehicle speeds up to 70 km/h.

Warnings for stationary or slow-moving vehicles could be disengaged due to darkness or poor visibility.

Warnings and brake interventions for pedestrians are switched off at vehicle speeds exceeding 80 km/h.

The collision warning system uses the same radar sensors as adaptive cruise control. For more information on the radar sensor and its limitations, see page 165.

If warnings are perceived as being too frequent or disturbing then the warning distance can be reduced. This then leads to the system providing a warning at a later stage, which reduces the total number of warnings; see the section "Set warning distance" on page 182.

04

* Option/accessory, for more information, see Introduction.



Collision Warning with Auto Brake & Pedestrian Protection*

Collision Warning with Auto Brake is temporarily deactivated with reverse gear engaged.

Collision Warning with Auto Brake is not activated at low speeds - under 4 km/h, which is why the system does not intervene in situations where the car is approaching a vehicle in front very slowly, e.g. when parking.

In situations where the driver demonstrates active, aware driving behaviour, a collision warning may be postponed slightly in order to keep unnecessary warnings to a minimum.

When Auto Brake has prevented a collision with a stationary object the car remains stationary for a maximum of 1.5 seconds. If the car is braked for a vehicle in front that is moving, then speed is reduced to the same speed as that maintained by the vehicle in front.

On a car with manual gearbox the engine stops when Auto Brake has stopped the car, unless the driver manages to depress the clutch pedal beforehand.

Camera sensor limitations

The car's camera sensor is also used - as well as by Collision Warning with Auto Brake - by the functions:

- Automatic main/dipped beam dimming - see page 93
- Road sign information - see page 154

- Driver Alert Control – see page 188
- Lane Departure Warning – see page 192.

NOTE

Keep the windscreen surface in front of the camera sensor clean from ice, snow, mist and dirt.

Do not attach or fit anything to the windscreen in front of the camera sensor, as this could reduce or prevent the function of one or more camera-dependent systems.

The camera sensors have limitations similar to the human eye, i.e. they "see" worse in darkness, heavy snowfall or rain and in thick fog for example. Under such conditions the functions of camera-dependent systems could be significantly reduced or temporarily disengaged.

Strong oncoming light, reflections in the carriageway, snow or ice on the road surface, dirty road surfaces or unclear lane markings could also significantly reduce camera sensor function when it is used to scan the carriageway and detect pedestrians and other vehicles.

The field of vision of the camera sensor is limited, which is why pedestrians and vehicles

cannot be detected in some situations, or they are detected later than anticipated.

During very high temperatures the camera is temporarily switched off for about 15 minutes after the engine is started in order to protect camera functionality.

Fault tracing and action

If the display shows the message **Windscreen Sensors blocked** then this means that the camera sensor is blocked and cannot detect pedestrians, vehicles or road markings in front of the car.

At the same time, this means that - besides Collision Warning with Auto Brake - the Automatic main/dipped beam dimming, Road sign information, Driver Alert Control and Lane Departure Warning functions will not have full functionality either.

The following table presents possible causes for a message being shown along with the appropriate action.



Collision Warning with Auto Brake & Pedestrian Protection*

| Cause | Action |
|--|--|
| The windscreen surface in front of the camera is dirty or covered with ice or snow. | Clean the windscreen surface in front of the camera from dirt, ice and snow. |
| Thick fog, heavy rain or snow means that the camera does not work sufficiently well. | No action. At times the camera does not work during heavy rain or snowfall. |

| Cause | Action |
|---|---|
| The windscreen surface in front of the camera has been cleaned but the message remains. | Wait. It may take several minutes for the camera to measure the visibility. |

| Cause | Action |
|--|--|
| Dirt has appeared between the inside of the windscreen and the camera. | Visit a workshop to have the windscreen inside the camera cover cleaned - an authorised Volvo workshop is recommended. |

04

Symbols and messages in the display

| Symbol ^A | Message | Specification |
|---------------------|------------------------------------|---|
| | Collis'n warning OFF | Collision warning system switched off. Shown when the engine is started. The message clears after about 5 seconds or after one press of the OK button. |
| | Collision warn. Unavailable | The collision warning system cannot be activated. Shown when the driver attempts to activate the function. The message clears after about 5 seconds or after one press of the OK button. |
| | Auto braking was activated | Auto Brake has been active. The message clears after one press of the OK button. |



* Option/accessory, for more information, see Introduction.



Collision Warning with Auto Brake & Pedestrian Protection*

| Symbol ^A | Message | Specification |
|---|---|---|
|  | Windscreen Sensors blocked | <p>The camera sensor is temporarily disengaged.</p> <p>Shown in the event of snow, ice or dirt on the windscreen for example.</p> <ul style="list-style-type: none"> • Clean the windscreen surface in front of the camera sensor. <p>Read about the limitations of the camera sensor, see page 184.</p> |
|  | Radar blocked See manual | <p>Collision Warning with Auto Brake is temporarily disengaged.</p> <p>The radar sensor is blocked and cannot detect other vehicles. For example, in the event that heavy rain or if slush has collected in front of the radar sensor.</p> <p>Read about the limitations of the radar sensor, see page 165.</p> |
|  | Collision warn. Service required | <p>Collision Warning with Auto Brake is fully or partially disengaged.</p> <ul style="list-style-type: none"> • Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |

^A Symbols are schematic - may vary by market and car model.



General information on Driver Alert System

The Driver Alert System is intended to assist drivers whose driving ability is deteriorating or who are inadvertently leaving the lane they are driving on.

The Driver Alert System consists of different functions which can either be switched on at the same time or individually:

- Driver Alert Control – DAC, see page 188.
- Lane Departure Warning – LDW, see page 192.

A switched-on function is set in standby mode and is not activated automatically until speed exceeds 65 km/h.

The function is deactivated again when speed decreases to below 60 km/h.

Both functions use a camera which is dependent on the lane having side markings painted on each side.

WARNING

The Driver Alert System does not work in all situations but is instead only intended to be of supplementary assistance.


The driver always has ultimate responsibility that the car is driven safely.



04 Driver support

Driver Alert System - DAC*

General information on DAC

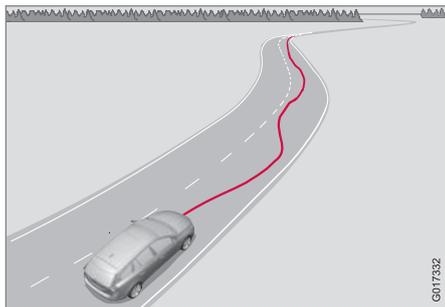

The DAC (Driver Alert Control) function is intended to attract the driver's attention when he/she starts to drive less consistently, e.g. if he/she becomes distracted or starts to fall asleep.

A camera detects the side markings painted on the carriageway and compares the section of the road with the driver's steering wheel movements. The driver is alerted if the vehicle does not follow the carriageway evenly.

i NOTE

The camera sensor has certain limitations, see page 184.

The objective for DAC is to detect slowly deteriorating driving ability and it is primarily intended for major roads. The function is not intended for city traffic.

In some cases driving ability is not affected despite driver fatigue. In which case there may not be any warning issued for the driver. For this reason it is always important to stop and take a break in the event of any signs of driver fatigue, irrespective of whether or not DAC issues a warning.

i NOTE

The function must not be used to extend a driving stint. Always plan breaks at regular intervals and ensure that you are fully rested.

Limitation

In some cases the system may issue a warning despite driving ability not deteriorating, for example:

- in strong side winds.
- on rutted road surfaces.

Operation



Settings are made from the centre console's screen and its menu system. For information on how the menu system is used, see page 211.

On/Off

To set Driver Alert in standby mode:

- In **MY CAR**, search for **Car settings** → **Driver support systems** → **Driver Alert** and check the box - No check in the box: Function disengaged.

Function

Driver Alert is activated when speed exceeds 65 km/h and remains active as long as the speed is over 60 km/h.



Driver Alert System - DAC*



If the vehicle is being driven erratically, the driver is notified by an acoustic signal plus the text message **Driver Alert Time for a break**

- the linked symbol is illuminated in the combined instrument panel at the same time. The warning is repeated after a time if driving ability does not improve.

The warning symbol can be switched off:

- Press the left-hand stalk switch's **OK** button.

**WARNING**

An alarm should be taken very seriously, as a sleepy driver is often not aware of his/her own condition.

In the event of an alarm or a feeling of tiredness; stop the car in a safe manner as soon as possible and rest.

Studies have shown that it is equally as dangerous to drive while tired as it is under the influence of alcohol.



04 Driver support

Driver Alert System - DAC*

Symbols and messages

Combined instrument panel

| Symbol ^A | Message | Specification |
|---|-----------------------------------|---|
|  | Driver Alert Time for a break | The vehicle has been driven inconsistently - the driver is alerted by an acoustic warning signal + text. |
|  | Windscreen Sensors blocked | The camera sensor is temporarily disengaged. Shown in the event of snow, ice or dirt on the windscreen for example. <ul style="list-style-type: none"> Clean the windscreen surface in front of the camera sensor. Read about the limitations of the camera sensor, see page 184. |
|  | Driver Alert Sys Service required | The system is disengaged. <ul style="list-style-type: none"> Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |

^A Symbols are schematic - may vary by market and car model.

Screen

| Sym- bol ^A | Message | Specification |
|--------------------------|------------------------|-----------------------------|
| | Driver Alert OFF | The function is disengaged. |
| | Driver Alert Available | The function is activated. |



Driver Alert System - DAC*

| Sym- bol ^A | Message | Specification |
|--------------------------|---|--|
| | Driver Alert Standby <65 km/h | The function is set in standby mode due to speed being lower than 65 km/h. |
| | Driver Alert Unavailable | The carriageway does not have clear side markings or the camera sensor is temporarily disengaged. Read about the limitations of the camera sensor, see page 184. |

^A Symbols are schematic - may vary by market and car model.


* Option/accessory, for more information, see Introduction.



04 Driver support

Driver Alert System - LDW*

General information on - LDW

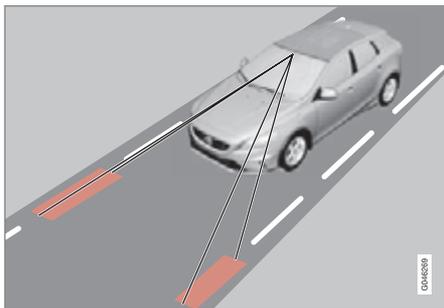

The LDW (Lane Departure Warning) function is intended to reduce the risk of so-called single-vehicle accidents – accidents where, in certain situations, the vehicle leaves the carriageway and is in danger of driving either into a ditch or into oncoming traffic.

LDW consists of a camera that detects the side lines painted on the carriageway.

If the vehicle crosses the left or right-hand side line of the carriageway without due cause then the driver is alerted by an acoustic signal.

NOTE

The driver is only warned once each time the wheels cross a line. So there is no acoustic alarm when there is a line between the car's wheels.

Operation and function



The function is switched on or off by means of a button on the centre console. An indicator lamp in the button illuminates when the function is switched on.

This function is complemented in the combined instrument panel with intuitive graphics in different situations. Here are several examples:



The LDW function's side lines (marked in red in the figure).

- The LDW symbol has WHITE side lines - the function is active and detects/"sees" one side line, or both.
- The LDW symbol has GREY side lines - the function is active but detects neither left nor right-hand side line.

or

- The LDW symbol has GREY side lines - the function is in standby mode because the speed is below 65 km/h.
- The LDW symbol has no side lines - the function is deactivated.



Driver Alert System - LDW*

Limitations

The LDW function's camera sensor has limitations similar to the human eye. For more information, see page 184.

NOTE

There are several situations when LDW does not give any warning, for example:

- A direction indicator is switched on
- The driver's foot is on the brake pedal¹
- In the event of rapid accelerator pedal depression¹
- In the event of rapid steering wheel movements¹
- In the event of turning so suddenly that the car rolls.

Personal preferences

Settings are made from the centre console's screen via the menu system in **MY CAR**.

From there, search and locate **Settings** → **Car settings** → **Driver support systems** → **Lane Departure Warning**. For information on how the menu system is used - see page 211.

Select from the options:

- **On at start-up** - The function enters standby mode every time the engine is started. Otherwise the same value as

when the engine was switched off is obtained.

- **Increased sensitivity** - The sensitivity increases, an alarm is triggered earlier and fewer limitations apply.

Symbols and messages in the display

In situations where there is no LDW function a symbol may be shown in the combined instrument panel in combination with an explanatory message - follow the recommendation given if appropriate.

Examples of messages:

04

| Symbol ^A | Message | Specification |
|---------------------|--|---|
| | Lane departure warning ON/ Lane departure warning OFF | The function is switched on/off. Shown at switch-on/off. The text disappears after 5 seconds. |
| | Lane Depart. Warning Unavailable at this speed | The function is set in standby mode due to speed being lower than 65 km/h. |

¹ When "Increased sensitivity" is selected a warning is still given, see page 193.



04 Driver support

Driver Alert System - LDW*

| Symbol ^A | Message | Specification |
|---|--|---|
| | Lane Depart. Warning Unavailable | The carriageway does not have clear side markings or the camera sensor is temporarily disengaged. Read about the limitations of the camera sensor, see page 184. |
| | Lane Depart. Warning Available | The function scans the carriageway's side markings. |
|  | Windscreen Sensors blocked | The camera sensor is temporarily disengaged. Shown in the event of snow, ice or dirt on the windscreen for example. <ul style="list-style-type: none"> • Clean the windscreen surface in front of the camera sensor. Read about the limitations of the camera sensor, see page 184. |
|  | Driver Alert Sys Service required | The system is disengaged. <ul style="list-style-type: none"> • Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |

^A Symbols are schematic - may vary by market and car model.



Park assist syst*

General

Parking assistance is used as an aid to parking. An acoustic signal as well as symbols in the centre console's screen indicate the distance to the detected obstacle.

Parking assistance sound level can be adjusted during the ongoing acoustic signal using the centre console's **VOL** knob or in the car's menu system **MY CAR** - see page 211.

Parking assistance is available in two variants:

- Rear only
- Both front and rear.

**NOTE**


When a towbar is configured with the car's electrical system, the protrusion of the towbar is included when the function measures the parking space.

**WARNING**

- Parking assistance does not relinquish the driver's own responsibility during parking.
- The sensors have blind spots where obstacles cannot be detected.
- Be aware of e.g. people or animals near the car.

Function

The system is automatically activated when the engine is started - the switch's On/Off lamp is illuminated. If parking assistance is switched off with the button, the lamp goes out.

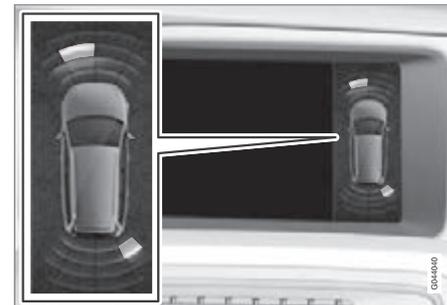

Screen view - showing an obstacle left front and right rear.

The centre console's screen shows an overview of the relationship between the car and detected obstacle.

Marked sectors show which of the four sensor(s) detected an obstacle. The closer to the car symbol a selected sector box is, the shorter the distance between the car and a detected obstacle.

The frequency of the signal increases the shorter the distance to an obstacle, in front of or behind the car. Other sound from the audio system is muted automatically.

When the distance is within 30 cm the tone is constant and the active sensor's field nearest the car is filled in. If the detected obstacle is within the distance for the constant tone both

* Option/accessory, for more information, see Introduction.



04 Driver support

Park assist syst*

behind and in front of the car, then the tone sounds alternately from the loudspeakers.


! IMPORTANT

Objects e.g. chains, thin glossy poles or low barriers may be in the "signal shadow" and are then temporarily not detected by the sensors - the pulsating tone may then unexpectedly stop instead of changing over to the expected constant tone.

The sensors cannot detect high objects, such as projecting loading docks.

- In such situations, pay extra attention and manoeuvre/reposition the car particularly slowly or stop the current parking manoeuvre - there may be a high risk of damage to vehicles or other objects since the sensors are temporarily unable to function optimally.

Rear parking assistance

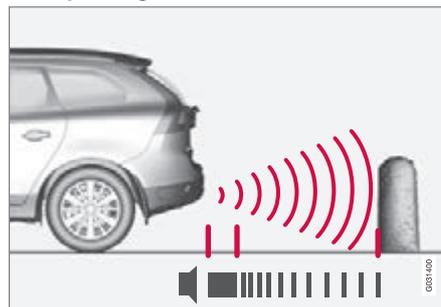

The distance covered to the rear of the car is about 1.5 metres. The acoustic signal for obstacles behind comes from one of the rear loudspeakers.


Rear parking assistance is activated when reverse gear is engaged.

When reversing with e.g. a trailer on the towbar, rear parking assistance is switched off automatically - otherwise the sensors would react to the trailer.

i NOTE

When reversing with e.g. a trailer or bike carrier on the towbar - without Volvo genuine trailer wiring - parking assistance may need to be switched off manually in order that the sensors do not react to them.

Front parking assistance

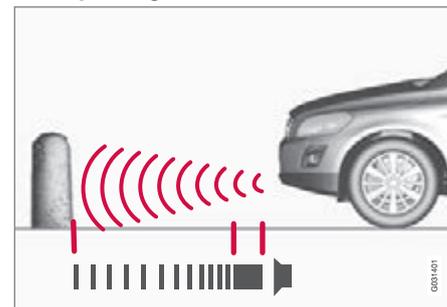

The distance covered in front of the car is about 0.8 metres. The acoustic signal for obstacles in front comes from one of the front loudspeakers.

Front park assist is active up to approx. 10 km/h. The lamp in the button is illuminated in order to indicate that the system is activated. When the speed is below 10 km/h the system is reactivated.

i NOTE

Front parking assistance is deactivated when the parking brake is applied or **P** mode is selected in a car with an automatic gearbox.

**Park assist syst*****! IMPORTANT**

When fitting auxiliary lamps: Remember that they must not obscure the sensors – the auxiliary lamps could then be detected as obstacles.

Fault indicator


If the combined instrument panel's information symbol illuminates with constant glow and the text message

Park assist syst Service required is shown then parking assistance is disengaged.


! IMPORTANT

In certain conditions the parking assistance system may produce incorrect warning signals that are caused by external audio sources that emit the same ultrasonic frequencies that the system works with.

Examples of such sources include horns, wet tyres on asphalt, pneumatic brakes and exhaust noises from motorcycles etc.

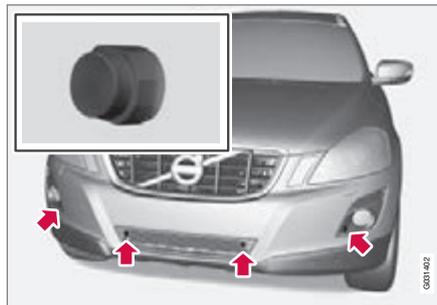Cleaning the sensors

Sensor location, front.

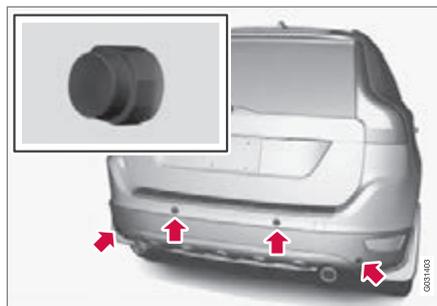

Sensor location, rear.

The sensors must be cleaned regularly to ensure that they work properly. Clean them with water and car shampoo.

i NOTE

Dirt, ice and snow covering the sensors may cause incorrect warning signals.



04 Driver support

Park assist camera*

General

The parking camera is an assist system and is activated when reverse gear is engaged (can be changed in the settings menu, see page 211).

The camera image is shown in the centre console's screen.

NOTE

When a towbar is configured with the car's electrical system, the protrusion of the towbar is included when the function measures the parking space.

WARNING

- The parking camera serves as an aid. It does not relieve the driver of responsibility when reversing.
- The camera has blind spots, where obstacles cannot be detected.
- Be aware of people and animals in the vicinity of the car.

Function and operation



CAM button location.

The camera shows what is behind the car and if something appears from the sides.

The camera shows a wide area behind the car and part of the bumper and any towbar.

Objects in the screen may appear to tilt slightly - this is normal.

NOTE


Objects on the display screen may be closer to the car than they appear to be on the screen.

If another view is active the parking camera system takes over automatically and the camera image is displayed in the screen.

When reverse gear is engaged two unbroken lines are shown graphically which illustrate where the car's rear wheels will roll with the current steering wheel angle, this facilitates tight parking, reversing into tight spaces and for hitching a trailer. The car's approximate external dimensions are illustrated by means of two dashed lines. These help lines can be switched off in the settings menu.

If the car is also equipped with parking assistance sensors* then their information is displayed graphically as coloured fields in order to illustrate the distance to detected obstacles, see page 195.

The camera is active approx. 5 seconds after reverse gear has been disengaged or until the car's speed exceeds 10 km/h.

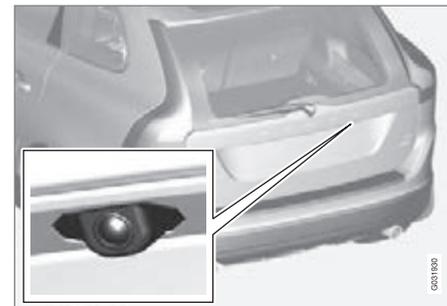

Camera location next to the opening handle.



Park assist camera*


Light conditions

The camera image is adjusted automatically according to prevailing light conditions. Because of this, the image may vary slightly in brightness and quality. Poor light conditions can result in a slightly reduced image quality.

NOTE

Keep the camera lens clear of dirt, snow and ice to ensure optimum function. This is particularly important in poor light.

Park assist lines

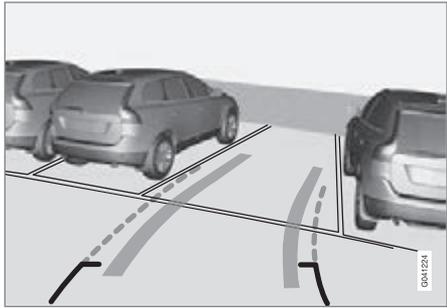

Examples of how the park assist lines can be displayed for the driver.

The lines in the screen are projected as if they were at ground level behind the car and are

directly related to steering wheel movement, which shows the driver the path the car will take, even when turning.


NOTE

- When reversing with a trailer which is not connected electrically to the car, the lines on the display show the route the **car** will take - not the trailer.
- The screen shows no lines when a trailer is connected electrically to the car's electrical system.
- The parking camera is deactivated automatically when towing a trailer if a Volvo genuine trailer cable is used.

IMPORTANT

Bear in mind that the screen only shows the area behind the car - pay attention to the sides and front of the car when manoeuvring during reversing.

Boundary lines

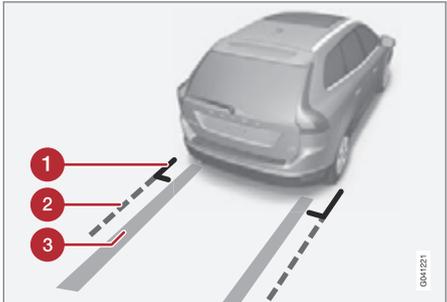

The system's lines.

- 1 Boundary line, 30 cm zone backwards from the car
- 2 Boundary line, free reversing zone
- 3 "Wheel tracks"

The unbroken line (1) frames in a zone that is within about 30 cm from the bumper.

The dashed line (2) frames in a zone up to about 1.5 m back from the bumper. It is also the limit of the car's most protruding parts, such as door mirrors and corners - also during turning.


The wide "wheel tracks" (3) between the side lines indicate where the wheels will roll and can extend about 3.2 m back from the bumper if no obstacle is in the way.

* Option/accessory, for more information, see Introduction.



Park assist camera*

Cars with reversing sensors*

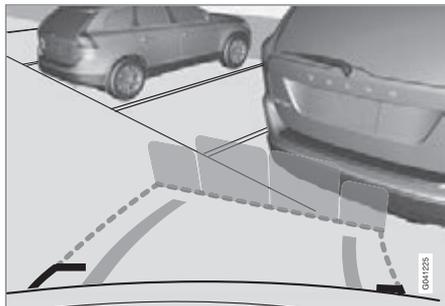

Coloured areas (x 4, one per sensor) show distance.

If the car is also equipped with parking assistance sensors (see page 195) the distance indication will be more precise and the coloured areas show which of the 4 sensors is/are registering an obstacle.

The colour of the areas changes with decreasing distance to the obstacle - from yellow to orange to red.

| Colour / paint | Distance (metres) |
|----------------|-------------------|
| Yellow | 1,5– |
| Orange | 0,3–1,5 |
| Red | 0–0,3 |

Settings

Press **OK/MENU** when a camera view is shown. Make the settings as desired.

Miscellaneous

- The default setting is that the camera is activated when reverse gear is engaged.
- One press on **CAM** activates the camera even if reverse gear is not engaged.
- Change between normal and zoomed image by turning **TUNE** or by pressing **CAM**.
- If the car has several cameras* installed then cameras are alternated between by pressing **CAM** or turning **TUNE**.

To bear in mind

- Keep the camera lens free from dirt, ice and snow.
- Clean the camera lens regularly with luke-warm water and car shampoo - take care not to scratch the lens.

Limitations

i NOTE

A bike carrier or other accessory mounted on the rear of the car could obscure the camera's view.

Pay attention to the possibility that, even if it only looks like a relatively small part of the image is obscured, it could be a relatively large sector that is hidden from view. Obstacles could thereby go undetected until they are very close to the car.



BLIS*

General information on BLIS and CTA

The BLIS function (Blind Spot Information System) is designed for driving in dense traffic on roads with several lanes in the same direction. BLIS is a driver's aid intended to provide a warning about:

- vehicles in the car's blind spot
- rapidly approaching vehicles in the left and right-hand lanes closest to the car.

The BLIS function CTA (Cross Traffic Alert) is a driver's aid intended to provide a warning about:

- crossing traffic when the car is reversed.


WARNING

BLIS and CTA are supplementary aids and do not work in all situations.

BLIS and CTA are no substitutes for a safe driving style and the use of rearview and door mirrors.

BLIS and CTA can never replace the driver's responsibility and attention - it is always the driver's responsibility to reverse and change lanes in a safe manner.

Operation

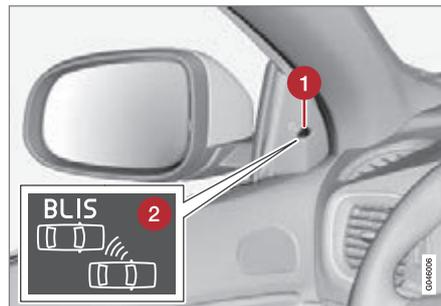

BLIS lamp location¹.

- 1 Indicator lamp
- 2 BLIS symbol

NOTE

The lamp illuminates on the side of the car where the system has detected the vehicle. If the car is overtaken on both sides at the same time then both lamps illuminate.

Function

BLIS and CTA are activated when the engine is started. This is confirmed by the indicator lamps in the door panels flashing once.

Activate/deactivate BLIS



Button for activating/deactivating.

The **BLIS** function can be deactivated/activated by pressing the **BLIS** button on the centre console.

Some combinations of the selected equipment leave no vacant space for a button in the centre console - in which case the function is handled by the car's menu system **MY CAR**²:

¹ NOTE: The illustration is schematic - details may vary depending on car model.

² For information on the menu system - see page 211.



04 Driver support

BLIS*


- Select **On** or **Off** at **Settings** → **Car settings** → **BLIS**.

When BLIS is deactivated/activated the lamp in the button extinguishes/illuminates and the combined instrument panel confirms the change with a text message. The door panel indicator lamps flash once upon activation.

To extinguish the message:

- Press the left-hand stalk switch's **OK** button.
- or
- Wait approx. 5 seconds - the message extinguishes.

When BLIS operates

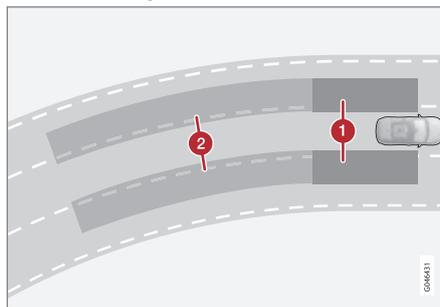

Principle for BLIS: 1. Zone in blind spot. 2. Zone for rapidly approaching vehicle.

The BLIS function is active at speeds above approx. 10 km/h.

The system is designed to react when:

- the driver's vehicle is overtaken by other vehicles
- the driver's vehicle is rapidly caught up by another vehicle.

When BLIS detects a vehicle in zone 1 or a rapidly approaching vehicle in zone 2, the door panel's BLIS lamp illuminates with a constant glow. If the driver activates the direction indicator on the same side as the warning in this situation then the BLIS lamp

will change from a constant glow to flashing with a more intense light.



WARNING

BLIS does not work in sharp bends.

BLIS does not work when the car is being reversed.

Activate/deactivate CTA

In cars equipped with parking assistance (see page 195), the CTA function can be deactivated/activated with the parking assistance On/Off button.



On/Off for parking assistance and CTA sensors.

CTA can be deactivated individually in the menu system **MY CAR**² as follows:


² For information on the menu system - see page 211.



BLIS*

- Go to **Settings** → **Car settings** → **BLIS** → **Cross Traffic Alert** and deselect. The CTA function is then deactivated. BLIS remains activated however.

When CTA operates

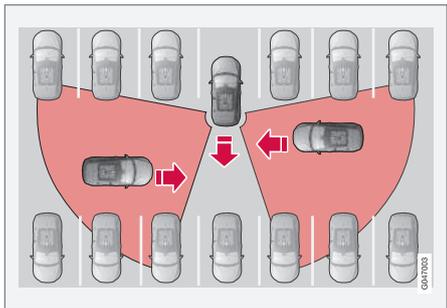

Principle for CTA.

CTA supplements the BLIS function by being able to see crossing traffic from the side during reversing, such as when reversing out of a parking space.

CTA is primarily designed to detect vehicles. In favourable conditions, it may also be able to detect smaller objects, such as cyclists and pedestrians.


CTA is only active during reversing and is activated automatically when the gearbox's reverse position is selected.

- If CTA detects something approaching from the side, an acoustic warning signal sounds. The signal comes from either the left or the right-hand speaker, depending on the direction from which the object is approaching.
- CTA also warns by illuminating the BLIS lamps.
- An additional warning is provided in the form of an illuminated icon in the screen's PAS graphics, see page 195.

Limitations


CTA does not perform optimally in all situations, but has a certain limitation - for example, the CTA sensors cannot "see" through other parked vehicles or obstructing objects.

Here are some examples of when CTA's "field of vision" may be limited from the beginning and approaching vehicles cannot therefore be detected until they are very close:

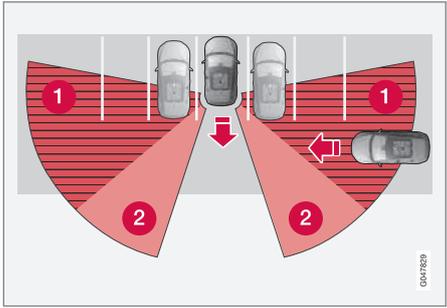

The car is parked deep inside a parking slot.

- 1 Blind CTA sector.
- 2 Sector where CTA can detect/"see".

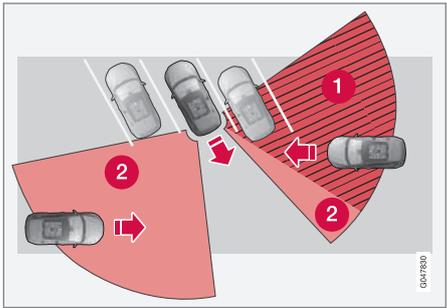

In an angled parking slot CTA can be completely "blind" on one side.



* Option/accessory, for more information, see Introduction.



BLIS*

However, when the driver is slowly reversing the car, the angle is changed in relation to the vehicle/object that is blocking, at which the blind sector rapidly decreases.

Examples of further limitations:

- Dirt, ice and snow covering sensors may reduce functionality and make it impossible to provide warnings. BLIS and CTA are unable to detect hazards in such a situation.
- Do not affix any objects, tape or labels within the area for the sensors³.
- BLIS and CTA are deactivated when a trailer is connected to the car's electrical system.

Maintenance



Location of BLIS and CTA sensors.¹

The BLIS and CTA sensors are located inside the rear wing/bumper on each side of the car.

- To ensure optimal functionality the areas in front of the sensors must be kept clean.

IMPORTANT

Repair of the BLIS and CTA functions' components must only be performed by a workshop - an authorised Volvo workshop is recommended.

Messages

In situations where the BLIS and CTA functions fail or are interrupted, the combined instrument panel may show a symbol, supplemented by an explanatory message. Follow any recommendation given.

Examples of messages:

| Message | Specification |
|--------------------------------------|--|
| CTA OFF | CTA is manually switched off - BLIS is active. |
| BLIS and CTA OFF Trailer attached | BLIS and CTA are temporarily non-operational because a trailer is connected to the car's electrical system. |
| BLIS and CTA Service required | BLIS and CTA are non-operational. <ul style="list-style-type: none"> • Visit a workshop if the message remains - an authorised Volvo workshop is recommended. |

A text message can be acknowledged by briefly pressing the **OK** button on the direction indicator stalk.

³ See the figure in the next section "Maintenance", page 204.

¹ NOTE: The illustration is schematic - details may vary depending on car model.



A long, empty rectangular box with a thin black border, spanning most of the width of the page below the header.

| | |
|---|-----|
| Menus and messages..... | 208 |
| Menu source MY CAR..... | 211 |
| Climate control..... | 219 |
| Engine and passenger compartment heater*..... | 230 |
| Additional heater*..... | 234 |
| Trip computer..... | 236 |
| Adapting driving characteristics..... | 244 |
| Comfort inside the passenger compartment..... | 245 |



05


COMFORT AND DRIVING PLEASURE






Menus and messages

Combined instrument panel

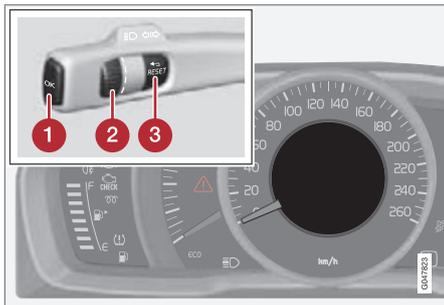

Information display (analogue combined instrument panel) and controls for menu navigation.

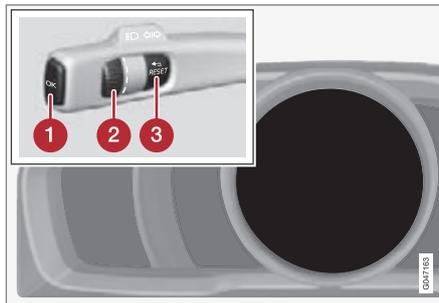

Information display (digital combined instrument panel) and controls for menu navigation.

- 1 **OK** – access to message list and message confirmation.
- 2 Thumbwheel – browse between menu options.
- 3 **RESET** – reset the active function. Used in certain cases to select/activate a function, see the explanation under each respective function.

The menus shown in the display in the combined instrument panel are controlled with the left-hand stalk switch. The menus shown depend on key position, see page 81. If a message appears then this must be acknowledged with **OK** for the menus to be shown.

Menu overview

Some of the following menu options require the function and hardware to be installed in the car.

Analogue combined instrument panel

Digital speed

Parking heater*

Additional heater*

TC options

Service status

Oil level¹

Messages (##)²

Digital combined instrument panel

Settings*

Themes

Contrast mode/Colour mode

Service status

Messages²

Oil level

Parking heater*

Trip computer reset

¹ Certain engines.

² The number of messages is indicated in brackets.

* Option/accessory, for more information, see Introduction.



Menus and messages

Message

When a warning, information or indicator symbol illuminates, a corresponding message appears in the display at the same time. An error message is stored in a memory list until the fault has been rectified.

Press **OK** (see figure in the section "Combined instrument panel" on page 208) to acknowledge and browse through messages.

NOTE

If a warning message appears while you are using the trip computer, the message must be read (press **OK**) before the previous activity can be resumed.

| Message | Specification |
|--------------------------|--|
| Stop safely ^A | Stop and switch off the engine. Serious risk of damage - consult a workshop ^B . |
| Stop engine ^A | Stop and switch off the engine. Serious risk of damage - consult a workshop ^B . |

| Message | Specification |
|-------------------------------|---|
| Service urgent ^A | Contact a workshop ^B to check the car immediately. |
| Service required ^A | Contact a workshop ^B to check the car as soon as possible. |
| See manual ^A | Read the owner's manual. |
| Book time for maintenance | Time to book regular service - contact a workshop ^B . |
| Time for regular maintenance | Time for regular service - contact a workshop ^B . The timing is determined by the number of kilometres driven, number of months since the last service, engine running time and oil grade. |
| Maintenance overdue | If the service intervals are not followed then the warranty does not cover any damaged parts - contact a workshop ^B . |

| Message | Specification |
|---|---|
| Transmission Oil change needed | Contact a workshop ^B to check the car as soon as possible. |
| Transmission Reduced performance | The gearbox cannot handle full capacity. Drive carefully until the message clears ^C . If shown repeatedly - contact a workshop ^B . |
| Transmission hot Reduce speed | Drive more smoothly or stop the car in a safe manner. Disengage the gear and run the engine at idling speed until the message clears. |
| Transmission hot Stop safely Wait for cooling | Critical fault. Stop the car immediately in a safe manner and contact a workshop ^B . |



Menus and messages

| Message | Specification |
|---------------------------------------|--|
| Temporarily off ^A | A function has been temporarily switched off and is reset automatically while driving or after starting again. |
| Low battery charge Power save mode | The audio system is switched off to save energy. Charge the battery. |

^A Part of message, shown together with information on where the problem has arisen.

^B An authorised Volvo workshop is recommended.

^C For more information regarding the automatic gearbox, see page 123.



Menu source MY CAR

General information about MY CAR



Many of the car's features are handled in this menu source, e.g. setting the clock, door mirrors and locks.

Navigation in the menus is carried out using buttons in the centre console or with the steering wheel's right-hand keypad.

Certain functions are standard, others are optional - the range also varies depending on the market.

Operation

Centre console controls



Centre console controls for menu navigation.

- 1 Press **MY CAR** to open the menus under **MY CAR**.
- 2 Press **OK MENU** to select/tick in the highlighted menu option or to store the selected function in the memory.
- 3 Turn the **TUNE** knob to scroll up/down among the menu options.
- 4 **EXIT**

EXIT functions

Depending on the function the cursor is on when **EXIT** is pressed, and on the menu level, one of the following may occur:

- phone call is rejected
- current function is interrupted
- input characters are deleted
- most recent selections are undone
- leads up in the menu system

Short and long presses may also produce varying results.

A long press leads to the highest menu level (Main source view), from where all of the car's functions/menu sources can be accessed - see also page 255.



Menu source MY CAR

Steering wheel keypad*



The keypad may vary depending on market.

- 1 Turn the thumbwheel to scroll up/down among the menu options.
- 1 Press the thumbwheel to select/tick in the highlighted menu option or to store the selected function in the memory.
- 2 EXIT (see heading "EXIT functions" page 211).

Search paths

Current menu level is shown at the top right of the centre console's screen. Search paths to the menu system functions are described in this manual in the following form:

Settings → Car settings → Lock settings
→ Doors unlock → Driver door, then all.

The following is an example of how a function can be accessed and adjusted using the steering wheel keypad:

1. Press the centre console button **MY CAR**.
2. Scroll to the desired menu, e.g. **Settings**, with the thumbwheel (1) and then **press** the thumbwheel - a submenu opens.
3. Scroll to the desired menu, e.g. **Car settings** and press the thumbwheel - a submenu opens.
4. Scroll to **Lock settings** and press the thumbwheel - a new submenu opens.
5. Scroll to **Doors unlock** and press the thumbwheel - a submenu of selectable functions opens.
6. Choose between the options **All doors** and **Driver door, then all** and press the thumbwheel - a cross is marked in the option's empty box.
7. Exit the programming by backing out of the menus incrementally with short presses on **EXIT** (2) or with one long press.

The procedure is the same as with the centre console's buttons - see page 211: **OK MENU** (2), **EXIT** (4) and the **TUNE** knob (3).

MY CAR

The following options are available in menu source **MY CAR**:



- My XC60
- DRiVe
- Support systems
- Settings



Menu source MY CAR

My XC60



NOTE! The figure is schematic – the number of functions varies depending on the selected equipment and market.

MY CAR → My XC60

The screen shows a grouping of all of the car's driver support systems - these can be activated or deactivated here.

DRIVE

Parts of the Volvo DRIVE concept are described here, among other things.

- **Start/Stop**
- **Eco driving guide**

For more information - see page 131.

Trip statistics

MY CAR → Trip statistics

The screen shows history with a bar chart of average fuel consumption, see page 243.

Driver support system



NOTE! The figure is schematic – the number of functions varies depending on the selected equipment and market.

MY CAR → Support systems

The screen shows a summary of the current status of the car's driver support systems.

Setup - menus

The menus are structured as follows:

| | |
|--------------|------|
| Menu level 1 | |
| Menu level 2 | p. x |
| Menu level 3 | |
| Menu level 4 | |

Shown here are the 4 first menu levels under **MY CAR → Settings**. Some menus have further submenus - these are then described in detail in their respective sections.

When selecting whether a function should be activated/**On** or deactivated/**Off** a square is displayed:

On: Selected square.

Off: Empty square.

- Select **On/Off** with **OK** - then back out of the menu with **EXIT**.

Functions in MY CAR

| | |
|----------------|---------------|
| Car settings | |
| Car key memory | p. 84 and 105 |
| On | |
| Off | |



05 Comfort and driving pleasure

Menu source MY CAR

| | |
|-----------------------------|------------------|
| Lock settings | p. 48, 56 and 58 |
| Automatic door locking | |
| On | |
| Off | |
| Doors unlock | |
| All doors | |
| Driver door, then all | |
| Keyless entry | |
| All doors | |
| Any door | |
| Doors on same side | |
| Both front doors | |
| Reduced Guard | p. 61 and 65 |
| Activate once | |
| Ask when exiting | |
| Side mirror settings | p. 105 |
| Fold mirrors | |
| Tilt left mirror | |
| Tilt right mirror | |

| | |
|------------------------------|--------------|
| Light settings | p.46 |
| Door lock confirmation light | |
| On | |
| Off | |
| Unlock confirmation light | |
| On | |
| Off | |
| Approach light duration | p. 48 and 99 |
| Off | |
| 30 sec | |
| 60 sec | |
| 90 sec | |
| Home safe light duration | p.99 |
| 30 sec | |
| 60 sec | |
| 90 sec | |
| Triple indicator | p.97 |
| On | |
| Off | |

| | |
|---|--------|
| Active bending lights | p.95 |
| On | |
| Off | |
| Auxiliary lights | p.95 |
| On | |
| Off | |
| Steering wheel force | p. 244 |
| Low | |
| Medium | |
| High | |
| Reset car settings | |
| All menus in Car settings are given original factory settings. | |
| Driver support systems | |

05



Menu source MY CAR

| | |
|-------------------------------|-----------|
| Collision Warning | p. 179 |
| On | |
| Off | |
| Warning distance | |
| Long | |
| Normal | |
| Short | |
| Warning sound | |
| On | |
| Off | |
| Lane Departure Warning | p. 192 |
| On | |
| Off | |
| On at start-up | |
| On | |
| Off | |
| Increased sensitivity | |
| On | |
| Off | |

| | |
|------------------------------|-----------|
| Road Sign Information | p. 154 |
| On | |
| Off | |
| Speed alert | |
| On | |
| Off | |
| DSTC | p. 152 |
| On | |
| Off | |
| City Safety | p. 173 |
| On | |
| Off | |
| BLIS | p. 201 |
| On | |
| Off | |
| Distance Alert | p. 170 |
| On | |
| Off | |

| | |
|---|-----------|
| Driver Alert | p. 188 |
| On | |
| Off | |
| System options | |
| Time | p.79 |
| The combined instrument panel's clock is adjusted here. | |
| Time format | p.79 |
| 12 h | |
| 24 h | |
| Screen saver | p. 211 |
| On | |
| Off | |
| The screen's current content fades out after a period of inactivity and is replaced by a blank screen if this option is selected. | |
| The current screen content returns if any of the screen's buttons or controls are actuated. | |
| Language | |
| Selects language for menu texts. | |





05 Comfort and driving pleasure

Menu source MY CAR

| | |
|---|--------|
| <p>Show help text</p> <p>On</p> <p>Off</p> <p>Explanatory text for the screen's current content is shown with this option selected.</p> | |
| <p>Distance and fuel units</p> <p>MPG (UK)</p> <p>MPG (US)</p> <p>km/l</p> <p>l/100km</p> | p. 243 |
| <p>Temperature unit</p> <p>Celsius</p> <p>Fahrenheit</p> <p>Selects the unit for the display of outside temperature and setting of the climate control system.</p> | |

| | |
|--|--|
| <p>Volume levels</p> <p>Voice output volume</p> <p>Front park assist volume</p> <p>Rear park assist volume</p> <p>Phone ringing volume</p> <p>(Voice output volume: Only with Volvo's GPS navigator RTI installed – see RTI manual.)</p> | |
| <p>Reset system options</p> <p>All menus in System options are given original factory settings.</p> | |
| <p>Voice settings</p> | |
| <p>Voice tutorial</p> <p>This menu option + OK provides spoken information about how the system works.</p> | |

| | |
|--|--|
| <p>Voice command list</p> <p>Phone commands</p> <p>Phone</p> <p>Phone call contact</p> <p>Phone dial number</p> <p>Navigation commands</p> <p>Navigation</p> <p>Navigation repeat ins</p> <p>Navigation go to add</p> <p>General commands</p> <p>Help</p> <p>Cancel</p> <p>Voice tutorial</p> <p>The menu options under Phone commands show several examples of available voice commands - only with a Bluetooth®-enabled mobile phone installed. For more and detailed information - see page 281.</p> <p>The menu options under Navigation commands show several examples of available voice commands - only with Volvo's navigation system RTI* installed.</p> | |
|--|--|

05



Menu source MY CAR

| | | | | | |
|---|--|--|--------|---|--------|
| <p>Voice user setting</p> <p>Default setting</p> <p>User 1</p> <p>User 2</p> <p>Here there is the option to create a second user profile - an advantage if more than one person shall use the car/system regularly. Default setting gives factory settings.</p> | | <p>Voice output volume</p> <p>A volume control appears in the screen - at which point, proceed as follows:</p> <ol style="list-style-type: none"> 1. Adjust the volume with the thumbwheel. 2. Test-listen using OK. 3. Use EXIT to store the setting and the menu is switched off. | | <p>Automatic blower adjustment</p> <p>Normal</p> <p>High</p> <p>Low</p> <p>Recirculation timer</p> <p>On</p> <p>Off</p> <p>Automatic rear defroster</p> <p>On</p> <p>Off</p> <p>Auto start steering wheel heater</p> <p>On</p> <p>Off</p> <p>Auto start driver seat heater</p> <p>On</p> <p>Off</p> <p>Interior air quality system</p> <p>On</p> <p>Off</p> <p>Reset climate settings</p> <p>All menus in Climate settings are given original factory settings.</p> | p. 219 |
| <p>Voice training</p> <p>User 1</p> <p>User 2</p> <p>With Voice training the voice recognition system is taught to recognise the driver's voice and pronunciation. A number of phrases are presented in the screen for the driver to read aloud. When the system has learnt how the driver talks, the presentation of the phrases stops. Following which e.g. User 1 can be selected in Voice user setting in order that the system shall listen to the right user.</p> | | <p>Voice POI list</p> <p>Edit list</p> <p>The number of facilities is extensive and varies depending on market. Maximum 30 favourite facilities can be stored in this list.</p> <p>Menu option Voice POI list is only shown if Volvo's navigation system RTI* is installed. For more information on Facilities and Voice recognition - see the Navigation system's owner's manual.</p> | | | |
| | | <p>Audio settings</p> | p. 253 | | |
| | | <p>Climate settings</p> | | | |





Menu source MY CAR

| | |
|---|-----------|
| Favourites (FAV) | p. 257 |
| Volvo On Call Described in a separate manual. | |
| Information | |
| Number of keys | p.46 |
| VIN number | p. 396 |
| DivX® VOD code | p. 274 |
| Bluetooth software version in car | p. 280 |
| Map and software version* Only in cars with Volvo GPS navi- gator - see separate manual. | |

05



General

Climate control

The car is equipped with electronic climate control. The climate control system cools or heats as well as dehumidifies the air in the passenger compartment.

NOTE

The air conditioning system (AC) can be switched off, see page 226, but to ensure the best possible climate comfort in the passenger compartment and to prevent the windows from misting, it should always be on.

Actual temperature

The temperature you select corresponds to the physical experience with reference to factors such as air speed, humidity and solar radiation etc. in and around the car.

The system includes a sun sensor which detects on which side the sun is shining into the passenger compartment. This means¹ that the temperature can differ between the right and left-hand air vents despite the controls being set for the same temperature on both sides.

¹ Only applies to ECC.

Sensor location

- The sun sensor is located on the top side of the dashboard.
- The temperature sensor for the passenger compartment is located below the climate control panel.
- The outside temperature sensor is located on the door mirror.
- The humidity sensor* is located by the interior rearview mirror.

NOTE

Do not cover or block the sensors with clothing or other objects.

Side windows and panorama roof

To ensure that the air conditioning works optimally the side windows, and panorama roof if appropriate, should be closed.

Misting windows

Remove misting on the insides of the windows by primarily using the defroster function.

To reduce the risk of misting, keep the windows clean and use window cleaner.

Temporary shut-off of the air conditioning

When the engine requires full power, e.g. for full acceleration or driving uphill with a trailer, the air conditioning can be temporarily switched off. There may then be a temporary increase in temperature in the passenger compartment.

Condensation

In warm weather, condensation from the air conditioning may drip under the car. This is normal.

Ice and snow

Remove ice and snow from the climate control system air intake (the grille between the bonnet and the windscreen).

Total airing function

The function opens/closes all side windows simultaneously and can be used for example to quickly air the car during hot weather, see page 58.

Passenger compartment filter

All air entering the car's passenger compartment is cleaned with a filter. This must be replaced at regular intervals. Follow the Volvo Service Programme for the recommended



Climate control

replacement intervals. If the car is used in a severely contaminated environment, it may be necessary to replace the filter more often.

NOTE

There are different types of passenger compartment filter. Make sure that the correct filter is fitted.

Clean Zone Interior Package (CZIP)*

This option keeps the passenger compartment clear of allergy and asthma inducing substances. For more information on CZIP, see the brochure included with the purchase of the car.

The following is included:

- An enhanced fan function that means that the fan starts when the car is opened with the remote control key. The fan fills the passenger compartment with fresh air. The function starts when required and is disengaged automatically after a time or when one of the passenger compartment doors is opened.
- The air quality system IAQS is a fully automatic system that cleans the air in the passenger compartment from contaminants such as particles, hydrocarbons, nitrous oxides and ground-level ozone.

NOTE

To keep the CZIP standard in cars with CZIP the IAQS filter must be changed after 15 000 km or once per year depending on whichever occurs first. However, up to 75 000 km over 5 years. In cars without CZIP and where the customer does not want to keep the CZIP standard the IAQS filter must be changed at a regular service.

Use of tested materials in the interior equipment.

The materials have been developed in order to minimise the quantity of dust in the passenger compartment and they contribute to making the passenger compartment easier to keep clean. The carpets in both the passenger compartment and the cargo area are removable and easy to remove and clean. Use cleaning agents and car care products recommended by Volvo, see page 389.

Menu settings

It is possible to activate/deactivate or change the default settings for six of the climate control system's functions via the centre console. For general information about menu navigation, see page 212:


- Fan level for automatic climate control*, see page 225.
- Recirculation timer, see page 227.

- Automatic start of rear window defroster, see page 106.
- Air quality system*, see page 228.
- Automatic start of seat heating driver, see page 224.
- Automatic start of steering wheel heating, see page 89.

The climate control system's functions can be reset to the default settings via the menu system in **MY CAR** and this is carried out under:

Settings → **Climate settings** → **Reset climate settings**.

Air distribution

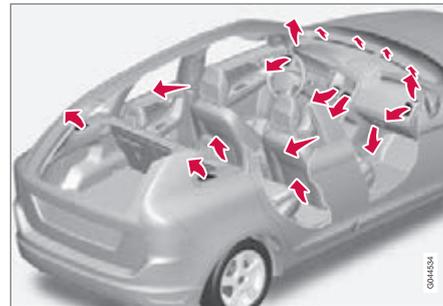

The incoming air is divided between a number of different vents in the passenger compartment.



Climate control

Air distribution is fully automatic in **AUTO** mode*.

If necessary it can be controlled manually, see page 229.


Air vents in the dashboard



- A** Open
- B** Closed
- C** Lateral airflow
- D** Vertical airflow

Aim the outer vents at the side windows to remove misting.

Air vents in the door pillars

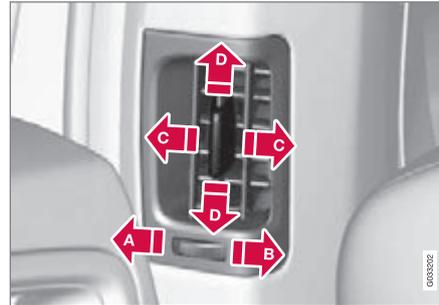

- A** Closed
- B** Open
- C** Lateral airflow
- D** Vertical airflow

Aim the vents at the windows to remove misting in cold weather.

Aim the vents into the passenger compartment to maintain a comfortable climate in the rear seat in hot weather.


i NOTE

Remember that small children may be sensitive to air flows and draughts.



Climate control

Electronic climate control, ECC*

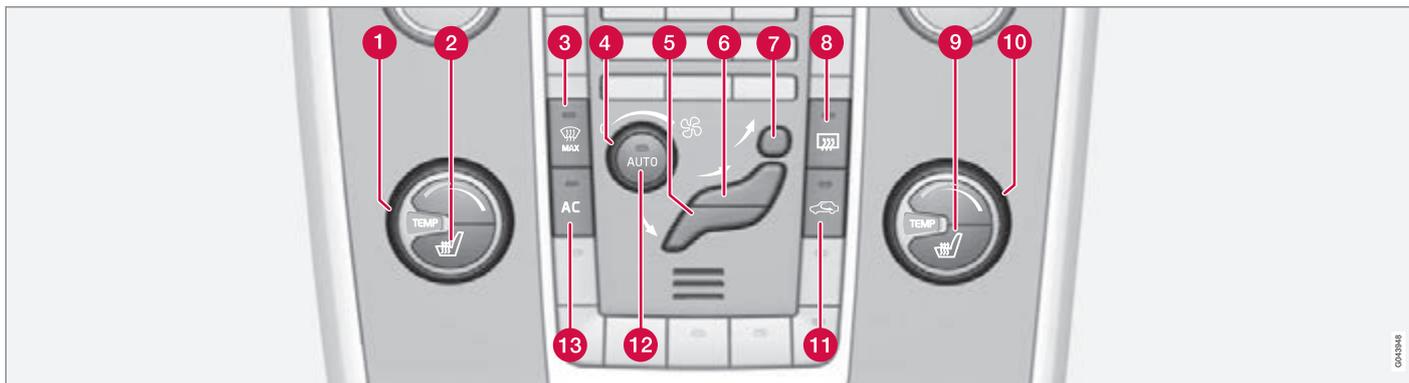


- 1 Temperature control, left-hand side
- 2 Electrically heated front seat, left-hand side
- 3 Max. defroster
- 4 Fan
- 5 Air distribution - ventilation floor
- 6 Air distribution - air vent instrument panel
- 7 Air distribution - defroster windscreen
- 8 Rear window and door mirror defrosters, see page 106
- 9 Electrically heated front seat, right-hand side
- 10 Temperature control, right-hand side
- 11 Recirculation
- 12 **AUTO** - Automatic climate control
- 13 **AC** -- Air conditioning on/off

0433948



Climate control

Electronic Temperature Control, ETC

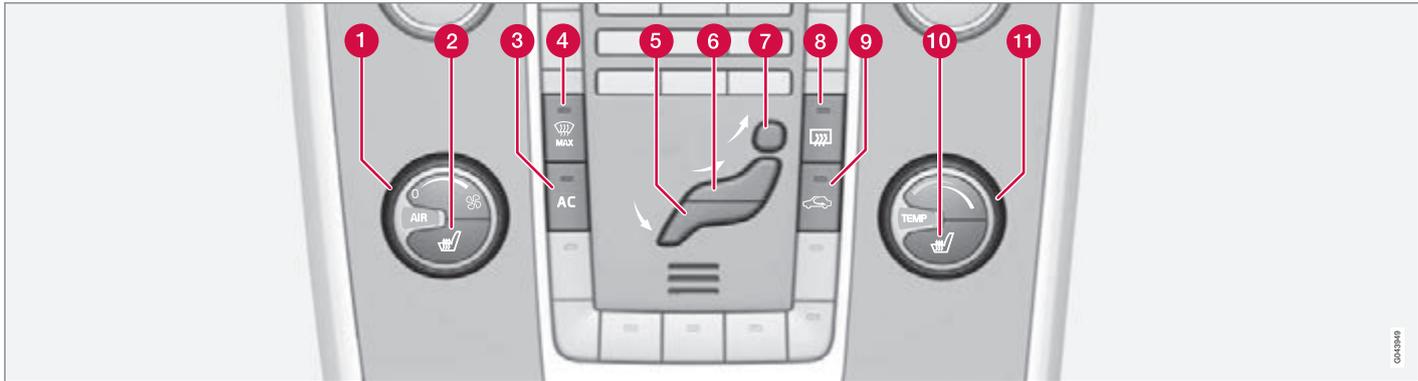

- ❶ Fan
- ❷ Electrically heated front seat, left-hand side
- ❸ AC – – Air conditioning on/off
- ❹ Max. defroster
- ❺ Air distribution - ventilation floor
- ❻ Air distribution - air vent instrument panel
- ❼ Air distribution - defroster windscreen
- ❽ Rear window and door mirror defrosters, see page 106
- ❾ Recirculation
- ❿ Electrically heated front seat, right-hand side
- ⓫ Temperature control

Operating the controls

Heated seats*

WARNING

The heated seat should not be used by people who find it difficult to perceive temperature increase because of sensory loss or for any reason have difficulty in managing to use the control of the heated seat. Otherwise, burn injuries may arise.

* Option/accessory, for more information, see Introduction.



Climate control

Front seats



Current heat level is shown in the centre console's screen.



Press the button repeatedly in order to activate the function:

- Highest heat level - three orange fields illuminate in the centre console's screen (see figure above).
- Lower heat level - two orange fields illuminate in the screen.

- Lowest heat level - one orange field illuminates in the screen.
- Switch off the heat - no field illuminates.

Automatic start of driver's seat heating

With the automatic start of the driver's seat heating activated, the driver's seat will have the highest heat level when the engine is started.

Automatic start takes place when the car is cold and the ambient temperature is lower than approx. +7 °C. Activate/deactivate the function via the menu system in **MY CAR** under **Settings** → **Climate settings** → **Auto start driver seat heater**. For a description of the menu system, see page 211.

Rear seat²



Current heat level is shown in the pushbutton's lamps.

Press the button repeatedly in order to activate the function:

- Highest heat level - three lamps illuminate.
- Lower heat level - two lamps illuminate.
- Lowest heat level - one lamp illuminates.
- Switch off the heat - no lamp illuminates.

² Not included if two-stage booster seat is selected.



Climate control

Fan

NOTE

If the fan is fully switched off then the air conditioning is not engaged - which can cause a risk of misting on the windows.

Fan knob for ECC*




Turn the knob to increase or decrease fan speed. If **AUTO** is selected then fan speed is regulated automatically. The previously set fan speed is disengaged.

Fan knob for ETC



Turn the knob to increase or decrease fan speed.

Air distribution

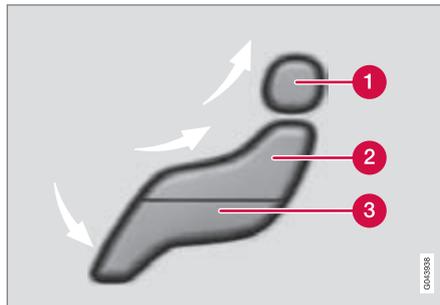

- 1 Air distribution - defroster windscreen
- 2 Air distribution - air vent instrument panel
- 3 Air distribution - ventilation floor

The figure consists of three buttons. When pressing the buttons the corresponding figure is illuminated in the screen (see following figure) and an arrow in front of each part of the figure shows the air distribution that is selected. For more information on air distribution, see page 229.



The selected air distribution is shown in the centre console's screen.

AUTO - Automatic climate control¹

The Auto function automatically regulates temperature, air conditioning, fan speed, recirculation, and air distribution.

If you select one or more manual functions, the other functions continue to be controlled automatically. All manual settings are disengaged when **AUTO** is pressed. The screen shows **AUTO CLIMATE**.

Fan speed in automatic mode can be set in the menu system **MY CAR** under: **Settings**

¹ Only applies to ECC.



Climate control

→ **Climate settings** → **Automatic blower adjustment**. Choose between **Low**, **Normal** or **High**:

- **Low** - Automatic fan control. Low airflow is prioritised.
- **Normal** - Automatic fan control.
- **High** - Automatic fan control. A more intense airflow is prioritised.

For a description of the menu system, see page 212.

Temperature control



Current temperature for each side is shown in the centre console's screen.



The temperature can be adjusted with the knob. For ECC* the temperature for the driver's side and the passenger side can be set separately.

When the car is started, the most recent setting is resumed.

NOTE

Heating or cooling cannot be hastened by selecting a higher/lower temperature than the actual temperature required.

AC – Air conditioning on/off



When the lamp in the **AC** button illuminates, the air conditioning is controlled by the system's automatic function. This way, incoming air is cooled and dehumidified.

When the lamp in the **AC** button is switched off the air conditioning is disconnected. Other functions are still controlled automatically. When the max. defroster function is activated the air conditioning is switched on automatically, so that the air is dehumidified at the maximum setting.

Heated windscreen* and max. defroster



The selected setting is shown in the centre console's screen.

- 1 Electric heating*
- 2 Max. defroster



Used to quickly remove misting and ice from the windscreen and side windows. The light in the defroster button illuminates when the function is active.

Press the button repeatedly in order to activate the function.



Climate control

For cars without heated windscreen:

- Air flows to the windows - symbol (2) illuminates in the screen.
- Switch off the function - no symbol illuminates.

For cars with heated windscreen:

- Start the heating for the windscreen³ - symbol (1) illuminates in the screen.
- Start the heating for the windscreen³ and air flow to the windows - symbols (1) and (2) illuminate in the screen.
- Switch off the function - no symbol illuminates.

NOTE

Heated windscreen and IR window, see page 103, may have an impact on the performance of transponders and other communication equipment.

NOTE

A triangular area at the end of each side of the windscreen is not electrically heated, where de-icing may take longer.

NOTE

Electrically heated windscreen is not available when the engine is auto-stopped, see page 131.

The following also takes place in order to provide maximum dehumidification in the passenger compartment:

- the air conditioning is automatically engaged
- recirculation and the air quality system are automatically disengaged.

NOTE

The noise level increases as the fan is operating at max.

When the defroster is switched off the climate control returns to the previous settings.

Heated steering wheel*

The heating of the steering wheel is activated/deactivated via a button in the centre console. For more information, see page 89.

Recirculation

When recirculation is engaged the orange lamp in the button illuminates. The function is selected to shut out bad air, exhaust gases etc. from the passenger compartment. The air in the passenger compartment is recirculated, i.e. no outside air is taken into the car when this function is activated.

IMPORTANT

If the air in the car recirculates for too long, there is a risk of misting on the insides of the windows.

Timer

With the timer function activated the system will exit manually activated recirculation mode according to a time that depends on the outside temperature. This reduces the risk of ice, misting and bad air. Activate/deactivate the function in the menu system **MY CAR** under **Settings → Climate settings → Recirculation timer**. For a description of the menu system, see page 212.

³ If the character **C** is shown in the rearview mirror when the heated windscreen is activated then the compass* must be recalibrated. See section Calibration on page 108 .



Climate control

NOTE

When max. defroster is selected, recirculation is always deactivated.

Air quality system*

The air quality system (IAQS) separates gases and particles to reduce the levels of odours and contaminants in the passenger compartment. If the outside air is contaminated then the air intake is closed and the air is recirculated.

Activate/deactivate the function in the menu system **MY CAR** under **Settings** → **Climate settings** → **Interior air quality system**. For a description of the menu system, see page 212.

NOTE

The air quality sensor must always be enabled to ensure the best air in the passenger compartment.

In a cold climate recirculation is limited so as to prevent misting.

In the event of misting, the air quality sensor should be disengaged, and the defroster functions for the windscreen and side windows, as well as the rear window, should be used.

Cars with DRIVE Start/Stop *

With an auto-stopped engine certain equipment has its function temporarily reduced, e.g. climate control fan speed. For more information, see page 131.



Climate control

Air distribution table

| | Air distribution | Use | | Air distribution | Use |
|---|---|--|---|--|--|
|  | Air to windows. Some air flows from the air vents. The air is not recirculated. Air conditioning is always engaged. | to remove ice and misting quickly. |  | Air to the floor and windows. Some air flows from the dashboard air vents. | to ensure comfortable conditions and good demisting in cold or humid weather. |
|  | Air to windscreen, via defroster vent, and side windows. Some air flows from the air vents. | to prevent misting and icing in a cold and humid climate, (not at too low fan speed to enable this). |  | Air to floor and from dashboard air vents. | in sunny weather with cool outside temperatures. |
|  | Airflow to windows and from dashboard air vents. | to ensure good comfort in warm, dry weather. |  | Air to floor. Some air flows to the dashboard air vents and windows. | to direct heat or cold to the floor. |
|  | Airflow to the head and chest from the dashboard air vents. | to ensure efficient cooling in warm weather. |  | Airflow to windows, from dashboard air vents and to the floor. | to provide cooler air along the floor or warmer air higher up in cold weather or hot, dry weather. |

Engine and passenger compartment heater*

General

Preconditioning prepares the parking heater for the engine and passenger compartment before departure so that both wear and energy needs during the journey are reduced.

The heater can be started directly or with timer.

Two different times can be selected using the timer. Here, time refers to the time when the car is heated and ready. The car's electronic system calculates when heating should be started based on the outside temperature.

Fuel-driven heater

The fuel-driven heater cannot start if the outside temperature exceeds 15 °C. At -5 °C or lower the maximum running time of the heater is 50 minutes.

WARNING

Do not use the fuel-driven heater indoors. Exhaust gases are secreted.

NOTE

When the fuel-driven auxiliary heater is active there may be smoke from the right-hand wheel housing, which is perfectly normal.

Refuelling



Warning label on fuel filler flap.

WARNING

Fuel which spills out could be ignited. Switch off the fuel-driven auxiliary heater before starting to refuel.

Check in the combined instrument panel that the heater is switched off. The heat symbol is shown when it is operating.

Parking on a hill

If the car is parked on a steep hill, the front of the car should point downhill to ensure that there is a supply of fuel to the fuel-driven heater.

Battery and fuel

If the battery has insufficient charge or if the fuel level is too low, the heater will be switched off automatically and a message is shown in the display. Acknowledge the message by pressing the indicator stalk **OK** button once, see page 231.

IMPORTANT


Repeated use of the heater combined with short journeys leads to the battery discharging and consequential starting problems.

The car should be driven for the same time as the heater is used to ensure that the car's battery is recharged adequately to replace the energy consumed by the heater when it is used on a regular basis. The heater is used for a maximum of 50 minutes each time.




Engine and passenger compartment heater*

Operation

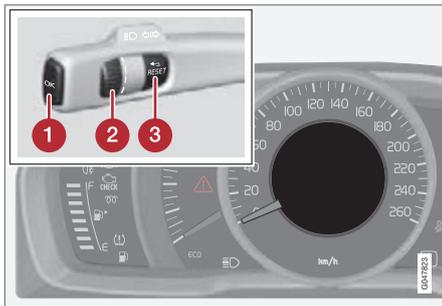

Information display (analogue combined instrument panel) and controls for menu navigation.

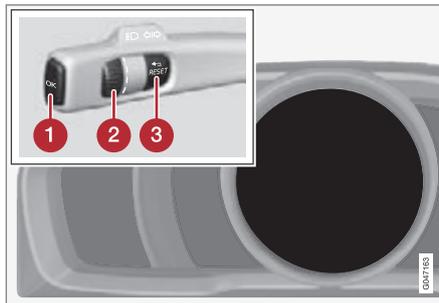

Information display (digital combined instrument panel) and controls for menu navigation.

- 1 **OK** button
- 2 Thumbwheel
- 3 **RESET** button

For more information on the display and **OK**, see page 208.

Symbols and messages



When the heater has been activated the heat symbol illuminates in the display.

When one of the timers has been activated, the symbol for activated timer illuminates in the display at the same time as the set time is shown next to the symbol.



Symbol for activated timer in analogue combined instrument panel.



Symbol for activated timer in digital combined instrument panel.

The table shows symbols and display texts that appear.



Engine and passenger compartment heater*

| Symbol | Display | Specification |
|--|---|--|
|  | | The heater is switched on and running. |
|   | Fuel operated heater stopped Battery saving mode | The heater has been stopped by the car's electronics in order to facilitate starting the engine. |
|   | Fuel operated heater stopped Low fuel level | Starting the heater is not possible due to fuel level being too low - this is in order to facilitate starting the engine as well as approx. 50 km driving. |
|  | Fuel operated heater Service required | Heater not working. Contact a workshop for repair. Volvo recommends that you contact an authorised Volvo workshop. |

A display text clears automatically after a time or after one press on the indicator stalk **OK** button.

Direct start and immediate stop

Following the direct start of the heater it will be activated for 50 minutes.

Heating of the passenger compartment will begin as soon as the engine coolant has reached the correct temperature.



NOTE

The car can be started and driven while the fuel-driven auxiliary heater is running.

1. Press **OK** to access the menu.
2. Scroll with the thumbwheel to **Parking heater** and select with **OK**.

**Engine and passenger compartment heater***

3. Scroll forward in the next menu to **Direct start/Stop** in order to activate/deactivate the heater and select with **OK**.
4. Exit the menu with **RESET**.

Timer

The time when the car shall be used and heated is specified with the timer.

Setting the timer¹

1. Press **OK** to access the menu.
2. Use the thumb wheel to scroll to one of the timers **Parking heater** and select with **OK**.
3. Select one of the two timers using the thumbwheel and confirm with **OK**.
4. Briefly press **OK** to move to the illuminated hours setting.
5. Select the required hour using the thumbwheel.
6. Briefly press **OK** to move to the flashing minutes setting.
7. Select the required minute using the thumbwheel.
8. Press **OK**² to confirm the setting.

¹ Setting the timer is only possible with the engine switched off.

² A further press of **OK** activates the timer.

9. Go back in the menu structure with **RESET**.
10. Select the second timer (continued from point 2) or exit the menu with **RESET**.

Starting the timer

1. Press **OK** to access the menu.
2. Scroll with the thumbwheel to **Parking heater** and select with **OK**.
3. Select one of the two timers using the thumbwheel and activate with **OK**.
4. Exit the menu with **RESET**.

Switching off the timer

A timer-started heater can be switched off manually before the set time has elapsed. Proceed as follows:

1. Press **OK** to access the menu.
2. Scroll with the thumbwheel to **Parking heater** and select with **OK**.
 - > If a timer is set but not activated then a clock icon is shown beside the set time.
3. Select one of the two timers using the thumbwheel and confirm with **OK**.

4. Switch off the timer by pressing:

- long on **OK** or
- short on **OK** to go forward in the menu. Then select to stop the timer and confirm with **OK**.

5. Exit the menu with **RESET**.

A timer-started heater can be switched off in accordance with the instructions in the section "Direct start and immediate stop" see page 232.

Clock/timer

The heater's time is connected to the car's clock.

**NOTE**

All timer programming will be cleared if the car's clock is reset.



Additional heater*

General information about the additional heater

In cold climate zones¹ an additional heater may be required to obtain the correct operating temperature in the engine and to obtain sufficient heating in the passenger compartment.

Fuel-driven additional heater

A fuel-driven additional heater is fitted in cars with diesel engines.

The heater starts automatically when extra heat is required when the engine is running.


The heater is switched off automatically when the correct temperature is reached or when the engine is switched off.

NOTE


When the additional heater is active there may be smoke from the right-hand wheel housing which is perfectly normal.

Auto mode or shutdown

The additional heater's automatic start sequence can be switched off if required.

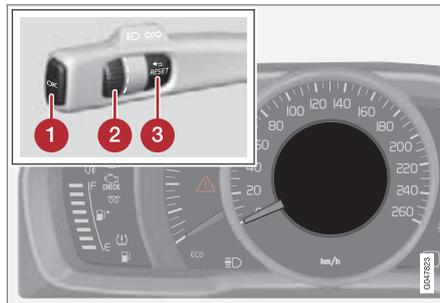

Information display (analogue combined instrument panel) and controls for menu navigation.

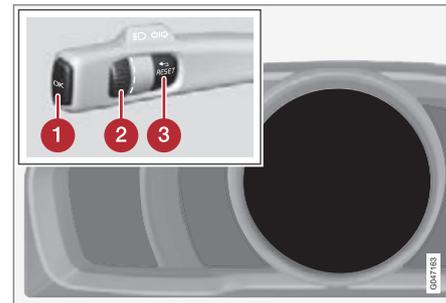

Information display (digital combined instrument panel) and controls for menu navigation.

- 1** OK button
- 2** Thumbwheel
- 3** RESET button

1. Before starting the engine: Select key position **I**, see page 81.
2. Press **OK** to access the menu.
3. Scroll with the thumbwheel to **Additional heater**² or **Settings**³ and select with **OK**.

¹ An authorised Volvo dealer has information regarding the geographical areas concerned.

² Analogue combined instrument panel.

³ Digital combined instrument panel.

**Additional heater***

4. Select one of the alternatives **ON** or **OFF** using the thumbwheel and confirm with **OK**.
the set passenger compartment temperature has been reached.
5. Exit the menu with **RESET**.

i NOTE

The menu options are only visible in key position **I** - any adjustments must therefore be made before starting the engine.

Passenger compartment heater*

If the additional heater is supplemented with a timer function then it can be used as a fuel-driven passenger compartment heater, see page 230.

Electric additional heater

Cars with certain petrol engines⁴ have an electric additional heater integrated into the car's climate control system.

In a semi-cold¹ climate zone diesel-driven cars have an electric additional heater instead of a fuel-driven version.

The heater cannot be controlled manually but is instead activated automatically after the engine has been started in outside temperatures below 14 °C and is switched off after

⁴ An authorised Volvo dealer has information regarding the engines concerned.

¹ An authorised Volvo dealer has information regarding the geographical areas concerned.

Trip computer

General

Trip computer content and appearance varies depending on whether the combined instrument panel is the "Analog" or "Digital" type.

Checking and settings can be made immediately after the combined instrument panel is automatically illuminated in connection with unlocking. If none of the trip computer's controls are actuated within approx. 30 seconds after the driver's door has been opened then the instrument extinguishes, after which either key position II¹ or engine starting is required in order to operate the trip computer.

NOTE

If a warning message appears when the trip computer is used then the message must first be acknowledged before the trip computer can be reactivated.

- Acknowledge the message by briefly pressing the indicator stalk **OK** button.


Group menus

The trip computer has two different group menus:

- Functions
- Heading in combined instrument panel

The trip computer's **functions** or **headings** are each listed in an infinite loop.

Combined instrument panel "Analog"

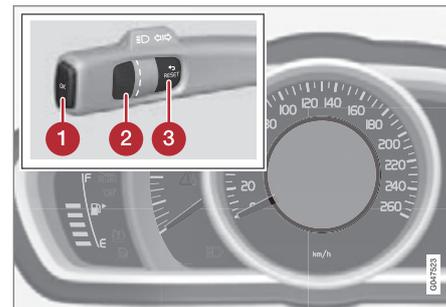

Information display and controls.

- 1 OK** - Opens the loop with the trip computer's functions + Activates the selected option.
- 2 Thumbwheel** - Opens the loop with the trip computer's headings + Scrolls through the options.
- 3 RESET** - Undoes, zeroes or backs out of a function after making a selection.

Functions

Proceed as follows to open and check/adjust functions:

¹ For information on key positions - see page 82.

**Trip computer**

1. To ensure that no control is in the middle of a sequence - "Reset" them first with 2 presses on **RESET**.
2. Press **OK** - the loop with all functions opens.
3. Browse through the functions with the **thumbwheel** and select/confirm with **OK**.
4. Finish by pressing **RESET** twice after completed checking/ adjustment.

The different functions of the trip computer are listed in the following table:

| Functions | Information |
|--|--|
| Digital speed - km/h - mph - No display | Shows the car's speed digitally in the centre of the combined instrument panel: <ul style="list-style-type: none"> • Open with OK, select with the thumbwheel, confirm with OK and back out with ENTER. |
| Parking heater* - Direct start - Timer 1 - leads to the menu for selecting time. - Timer 2 - leads to the menu for selecting time. | For a description of programming the timer, see page 233. |
| Additional heater* - Auto On - Off | For more information, see page 234. |



Trip computer

| Functions | Information |
|--|---|
| TC options - Distance to empty tank - Fuel consumption Average speed Trip meter T1 and total dist. Trip meter T2 and total dist. | Here you can select/activate the options that you want to be available as selectable headings in the trip computer. The symbols for the items already selected are WHITE with a "tick" - others are GREY and have no "tick": <ol style="list-style-type: none"> 1. Open the function with OK, scroll through the symbols for the options with the thumbwheel and select/stop on the desired symbol. 2. Confirm with OK - the symbol changes colour from GREY to WHITE and is marked with a "tick". 3. Continue to select the function symbols with the thumbwheel or finish with RESET. |
| Service status | Shows the number of months and mileage to next service. |
| Oil level^A | For more information, see page 356. |
| Messages (##) | For more information, see page 208. |

^A Certain engines.

Headings

One of the headings in the following table can be selected for constant display in the combined instrument panel. Proceed as follows to determine which:

1. To ensure that no control is in the middle of a sequence - "Reset" them first with 2 presses on **RESET**.
2. Turn the **thumbwheel** - selectable headings for the trip computer are shown in a loop.
3. Stop on desired heading.




Trip computer

| Trip computer heading in combined instrument panel | Information |
|--|---|
| Trip meter T1 and total dist. | <ul style="list-style-type: none"> Long press on RESET resets trip meter T1. |
| Trip meter T2 and total dist. | <ul style="list-style-type: none"> Long press on RESET resets trip meter T2. |
| Distance to empty | For more information - see page 242, "Distance to empty tank". |
| Fuel consumption | Current consumption. |
| Average speed | <ul style="list-style-type: none"> Long press on RESET resets Average speed. |
| No trip computer information. | This option shows a blank display - it also marks the beginning/end of the loop. |

The combined instrument panel's trip computer can be changed to another option at any time during the journey. Proceed as follows:

- Turn the **thumbwheel** - stop on the desired heading.

Combined instrument panel "Digital"

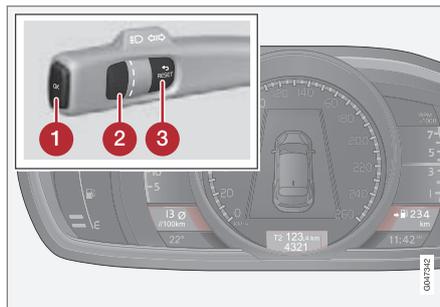

Information displays and controls.

- OK** - Opens the loop with the trip computer's functions + Activates the selected option.
- Thumbwheel** - Opens the loop with the trip computer's headings + Scrolls through the options.
- RESET** - Undoes, zeroes or backs out of a function after making a selection.

Functions

Proceed as follows to open and check/adjust functions:

- To ensure that no control is in the middle of a sequence - "Reset" them first with 2 presses on **RESET**.
- Press **OK** - loop with all functions opens.
- Browse through the functions with the **thumbwheel** and select/confirm with **OK**.
- Finish by pressing **RESET** twice after completed checking/ adjustment.



Trip computer

The different functions of the trip computer are listed in the following table:

| Functions | Information |
|---|---|
| Trip computer reset Average Average speed | Note that this function does not reset both trip meters T1 and T2 - see the table in the section "Headings" page 241 or the heading "Resetting with Digital" page 242 for information on the process. |
| Messages | For more information, see page 209. |
| Themes | Combined instrument panel appearance is selected here, see page 71. |
| Settings* | Select Auto On or Off . For more information, see page 234. |
| Contrast mode/Colour mode | Adjusting the combined instrument panel's brightness and colour intensity. |
| Parking heater* – Direct start - Symbol Timer 1 - leads to the menu for selecting time. - Symbol Timer 2 - leads to the menu for selecting time. | For a description of programming the timer, see page 233. |

* Option/accessory, for more information, see Introduction.



Trip computer

| Functions | Information |
|------------------------------|---|
| Service status | Shows the number of months and mileage to next service. |
| Oil level^A | For more information, see page 356. |

^A Certain engines.

Headings

Three trip computer headings can be displayed simultaneously - one in each "window" (see previous figure).

One of the heading combinations in the following table can be selected for constant dis-

play in the combined instrument panel. Proceed as follows to determine which:

1. To ensure that no control is in the middle of a sequence - "Reset" them first with 2 presses on **RESET**.
2. Turn the **thumbwheel** - selectable heading combinations are shown in a loop.
3. Stop on desired heading combination.

| Heading combinations | | | Information |
|----------------------|-------------------------------|------------------------|--|
| Average | Trip meter T1 + Meter reading | Average speed | <ul style="list-style-type: none"> • Long press on RESET resets trip meter T1. |
| Instantaneous | Trip meter T2 + Meter reading | Distance to empty tank | <ul style="list-style-type: none"> • Long press on RESET resets trip meter T2. |
| Instantaneous | Meter reading | kmh<>mph | kmh<>mph - see "Digital speed display" page 242. |
| | No trip computer information. | | This option extinguishes all three trip computer displays - it also marks the beginning/end of the loop. |

The combined instrument panel's heading combination for the trip computer can be changed to another option at any time during the journey. Proceed as follows:

- Turn the **thumbwheel** - stop on the desired heading.





Trip computer

Supplementary information

Average

Average fuel consumption is calculated from the last resetting.

NOTE

There may be a slight error in the reading if a fuel-driven heater* has been used.

Average speed

The average speed is calculated for the driving distance driven since the last reset to zero.

Instantaneous

The information for current fuel consumption is updated continuously - approximately once per second. When the car is driven at low speed the consumption is shown per time unit - at a higher speed it is shown related to mileage.

Different units (km/miles) can be selected for the display - see the heading "Change unit" page 243.

Range - distance to empty tank

The trip computer shows the approximate distance that can be driven with the fuel quantity remaining in the tank.

No guaranteed range remains when the heading **Distance to empty** shows "----".

- In which case, refuel as soon as possible.

The calculation is based on the average fuel consumption over the last 30 km and the remaining driveable fuel quantity.

NOTE

There may be a slight error in the reading if the driving style has been changed.

An economic driving style generally results in a longer driving distance. For more information on how fuel consumption can be influenced, see page 10.

Digital speed display²

The speed is shown in the opposite unit (kmh/mph) in relation to the main instrument. If it is calibrated in mph then the trip computer shows the corresponding speed in km/h and vice versa.

Resetting with "Analog"

Trip meter and Average speed

With current trip computer heading - Trip meter T1, Trip meter T2 or Average speed - shown in the combined instrument panel:

- Give a long press on **RESET** - selected heading is zeroed.

Each heading must be zeroed individually.

Resetting with "Digital"

Trip meter

Turn with the **thumbwheel** to the heading combination containing the trip meter to be reset:

- Give a long press on **RESET** - selected trip meter is zeroed.

Average speed & Average consumption

1. Select function **Trip computer reset** and activate with **OK**.
2. Select one of the following options with the **thumbwheel** and activate with **OK**:
 - l/100 km
 - km/h
 - Reset both
3. Finish with **RESET**.

² Only for combined instrument panel "Digital".

* Option/accessory, for more information, see Introduction.



Trip computer

Change unit

To change unit (km/miles) for distance and speed - go to **MY CAR** → **Settings** →

System options → **Distance and fuel units**, see page 211.

NOTE

In addition to the trip computer, these units are also changed at the same time in Volvo's GPS navigator RTI.

Trip statistics*

Information is stored about completed trips containing average fuel consumption and average speed, which can be viewed in the centre console's screen as a bar chart.

Function



*Trip statistics*³.

Each bar symbolises 1 km or 10 km driven distance, depending on the scale selected - the bar at the far right shows the value for the current kilometre or 10 km.

Using the **TUNE** control, the scale for the bars can be changed between 1 km and 10 km - the cursor on the far right changes position between up and down in relation to the scale selected.

Operation

A setting can be made in the **MY CAR** menu system:

MY CAR → **My XC60** → **Trip statistics**:

- **Start new trip** - **ENTER** deletes all previous statistics, go back out from the menu with **EXIT**.
- **Reset for every driving cycle** - tick in the box with **ENTER** and go back out from the menu with **EXIT**.

With the "**Reset for every driving cycle**" option ticked all statistics are deleted automatically after driving is finished and the car has been stationary for 4 hours. Trip statistics start from zero the next time the engine is started.

If a new driving cycle is started before 4 hours have elapsed then the current period must first be deleted manually using the "**Start new trip**" option.

See also information on Eco guide on page 73.

³ The figure is schematic - layout may vary depending on updated software and market.



Adapting driving characteristics

Active chassis - Four-C*

Active chassis, Four-C (Continuously Controlled Chassis Concept), regulates the characteristics of the shock absorbers so that the car's driving characteristics can be adjusted. There are three settings: **Comfort**, **Sport** and **Advanced**.

Comfort

This setting means that the car is perceived as being more comfortable on rough and uneven road surfaces. Shock absorption is soft and the movement of the body is smooth and gentle.

Sport


This setting means that the car is perceived as being more sporty and is recommended for more active driving. Steering response is faster than in the Comfort mode. Shock absorption is harder and the body follows the road in order to reduce rolling during cornering.

Advanced

This setting is only recommended on very even and smooth road surfaces.

The shock absorbers are optimised for maximum roadholding and rolling in bends is further minimised.

Operation

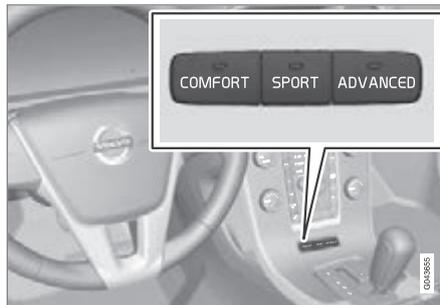

Chassis settings.

Use the buttons in the centre console to change setting. The setting in use when the engine is switched off is activated next time the engine is started.

Speed related power steering*

Steering force increases with the speed of the car to give the driver enhanced sensitivity. The steering is firmer and more immediate on motorways. Steering is light and requires no extra effort when parking and at low speed.

The driver can choose between three different levels of steering force for road responsiveness or steering sensitivity. Go to the menu system **MY CAR** and locate **Settings**


→ Car settings → Steering wheel force and select **Low**, **Medium** or **High**.

For a description of the menu system, see page 211. This menu cannot be accessed while the car is in motion.



Comfort inside the passenger compartment

Storage spaces

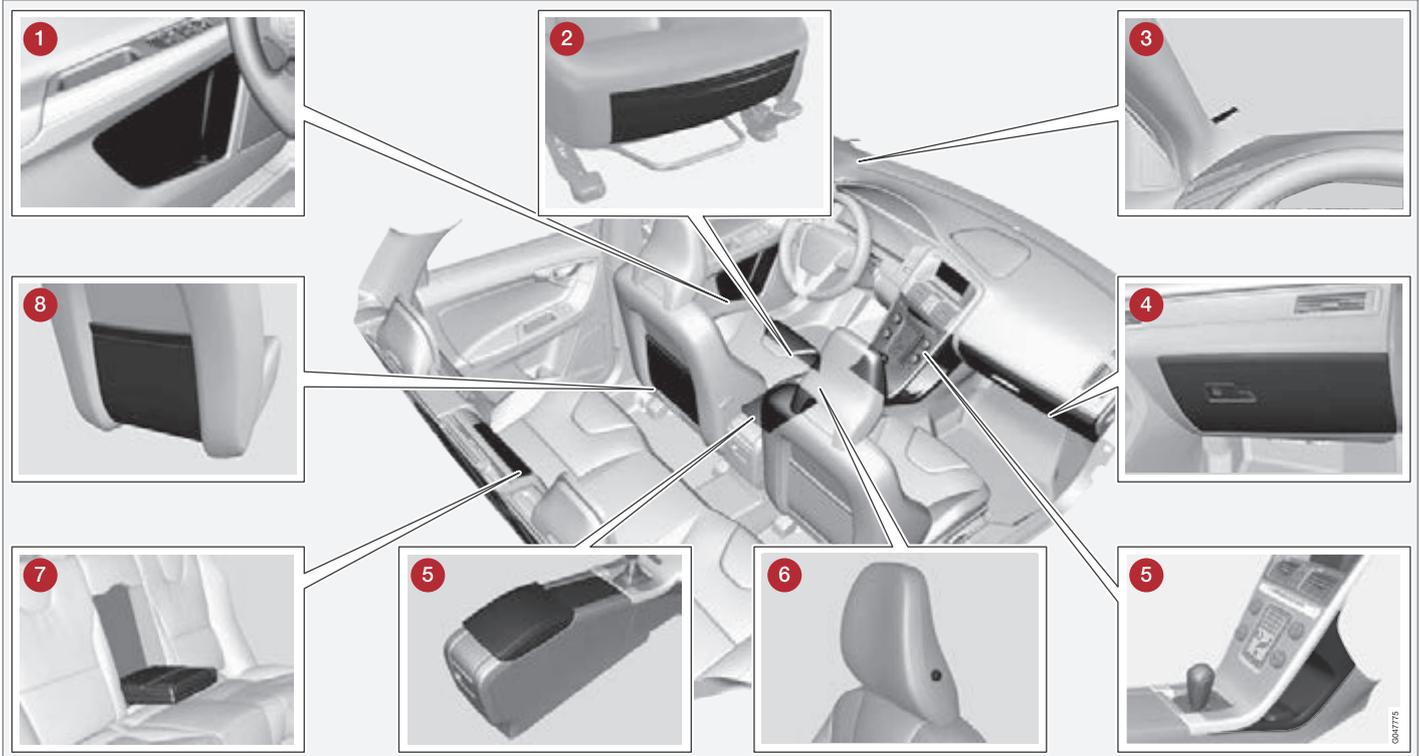

05

Comfort inside the passenger compartment

- 1 Storage compartment in door panel
- 2 Storage pocket* on front edge of front seat cushions
- 3 Ticket clip
- 4 Glovebox
- 5 Storage compartment, cup holder
- 6 Jacket holder
- 7 Cup holder* in armrest, rear seat
- 8 Storage pocket




WARNING

Keep loose objects such as mobile phones, cameras, remote controls for accessories, etc. in the glove compartment or other compartments. Otherwise they may injure people in the car in the event of sudden braking or a collision.

Jacket holder

The jacket holder is only designed for light clothing.

Tunnel console

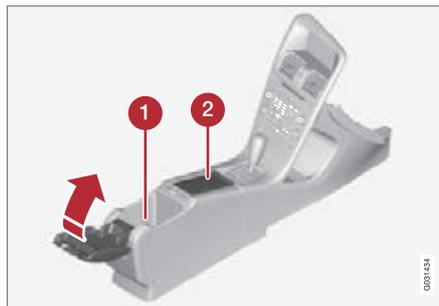

- 1 Storage compartment (e.g. for CDs) and USB*/AUX input under the armrest.
- 2 Includes cup holder for driver and passenger. (If ashtray and cigarette lighter are specified then there is a cigarette lighter in the 12 V socket for the front seat, see page 247, and a detachable ashtray in the cup holder.)

Avoid storing coins, keys or similar metal objects in the cup holder as such objects could accidentally trigger the alarm*, see page 64.

Cigarette lighter and ashtray*

The ashtray in the tunnel console is detached by lifting the tray straight up.

Activate the lighter by pushing in the button. The button pops out when the lighter is hot.

Pull out the lighter and light a cigarette on the heated coils.

Glovebox



The owner's manual and maps can be kept here for example. There are also holders for pens on the inside of the lid. The glovebox can be locked using the key blade, see pages 50 and 58.



Comfort inside the passenger compartment

Inlaid mats*

Volvo supplies specially manufactured inlay mats.

WARNING

Before setting off check that the inlaid mat in the driver area is firmly affixed and secured in the pins in order to avoid getting caught adjacent to and under the pedals.

Vanity mirror



Vanity mirror with lighting.

The lamp for the vanity mirror, on the driver's side* and passenger side respectively, is switched on automatically when the cover is raised.

12 V socket



12 V socket in tunnel console, front seat.



12 V socket in tunnel console, rear seat.

The electrical socket can be used for various accessories designed for 12 V, e.g. TV screens, music players and mobile phones.

For the socket to supply current, the remote control key must be in at least key position I, see page 81.

WARNING

Always leave the plug in the socket when the socket is not in use.

NOTE

Optional equipment and accessories - e.g. display screens, music players and mobile phones - which are connected to one of the passenger compartment's 12V electrical sockets, could be activated by the climate control system, even when the remote control key has been removed or when the car is locked, for example, when the parking heater is activated at a preset time.

For this reason remove the plugs from the electrical sockets for optional equipment or accessories when not in use because the battery could be drained in the event of such an occurrence!



Comfort inside the passenger compartment

IMPORTANT

Max. socket is 10 A (120 W) if one socket is used at a time. If both sockets in the tunnel console are used simultaneously, 7.5 A (90 W) per socket is applicable.

If the compressor for emergency puncture repair is connected to one of the two sockets, no other current consumer must be connected to the other one.

NOTE

The compressor for temporary emergency puncture repair has been tested and approved by Volvo. For information on the use of Volvo's recommended temporary emergency puncture repair (TMK), see page 346.

Electrical socket in cargo area*

For more information, see page 320.



| | |
|---|-----|
| General information on infotainment..... | 252 |
| Radio..... | 264 |
| Media player..... | 271 |
| External audio source via AUX/USB* input..... | 275 |
| Media Bluetooth®* | 278 |
| Bluetooth® handsfree* | 281 |
| Voice recognition* mobile phone..... | 290 |
| TV* | 294 |
| Remote control* | 298 |
| RSE - Rear Seat Entertainment system* | 300 |



06

INFOTAINMENT SYSTEM





06 Infotainment system

General information on infotainment

General

The infotainment system consists of radio, media player, TV* and the facility to communicate with mobile phone*. Information is presented on a 5 or 7-inch* screen in the upper section of the centre console. Functions can be controlled via buttons in the steering wheel, in the centre console under the screen or via a remote control*. A mobile phone can also be controlled with voice recognition in certain cases.

If the Infotainment System is active when the engine is switched off then it is automatically activated the next time the key is inserted into key position **I** or higher, and it continues with the same source (e.g. radio) as before the engine was switched off (the driver's door must be closed on cars with Keyless systems*).


The infotainment system can be used for 15 minutes at a time without the remote control key being in the ignition switch by pressing the On/Off button.

When the car is being started the infotainment system is switched off temporarily and continues when the engine has started.

NOTE

Remove the remote control key from the ignition switch if the infotainment system is used when the engine is switched off. This is to avoid discharging the battery unnecessarily.


Dolby, Pro Logic

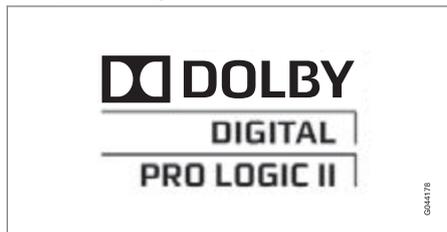

Made under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.


Audyssey MultEQ

Only applies to Premium Sound Multimedia.

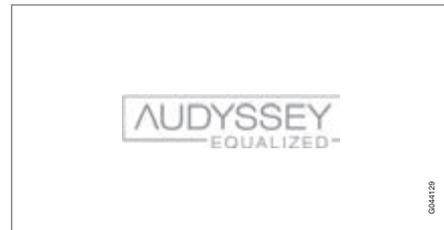

The Audyssey MultEQ system has been used in the development and tuning of the sound to ensure a world-class sound experience.

Overview

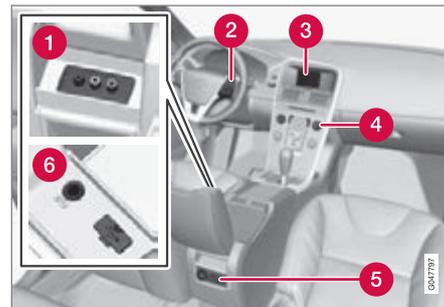


- 1 A/V-AUX input*.
- 2 Steering wheel keypad (with*/without thumbwheel).



General information on infotainment

- 3 Screen. The screen is available in two sizes: 5 and 7-inch. The manual shows a 7-inch screen.
- 4 Centre console control panel.
- 5 Rear control panel with headphones socket*.
- 6 AUX (only applies to Performance) - and USB (does not apply to Performance) - inputs for external audio sources (e.g. iPod®).

Operating the system

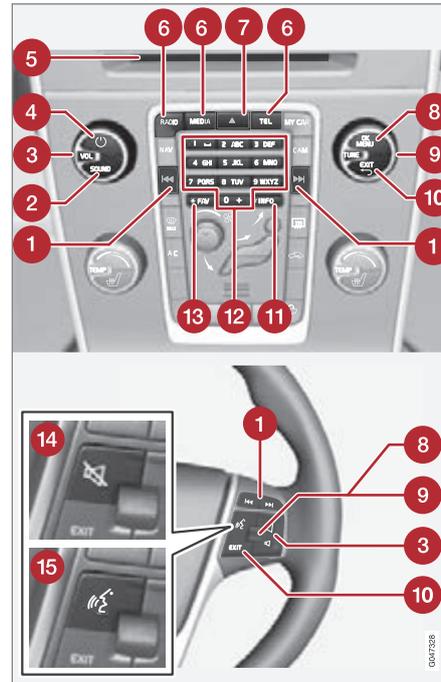

- 1 **Scroll/fast wind/search - short press** scrolls between disc tracks, preset radio stations (does not apply to DAB) or chapter (only

applies to DVD discs). A **long press** fast-winds disc tracks or searches for the next available radio station.

- 2 **SOUND** - press for access to audio settings (bass, treble, etc.). For more information, see page 257.

- 3 **VOL** - raise or lower the volume.

- 4 **ON/OFF/MUTE** - **short press** starts the system and **long press** (until the screen is off) switches off. Note that the whole of the Sensus system (including navigation * and phone functions*) starts/switches off at the same time. Briefly press to mute the sound (MUTE) or restore the sound if it had been switched off.

- 5 Disc insert and eject slot.

- 6 **Main sources** - press to select the main source (e.g. **RADIO**, **MEDIA**). Last active source is shown (e.g. **FM1**). If you are in **RADIO** or **MEDIA** and press the main source button, a source view is shown. If you are in **TEL*** or **NAV*** and press the main source button then a shortcut menu is shown with commonly used menu options.

- 7 Disc eject.

- 8 **OK/MENU** - press the thumbwheel in the steering wheel or the button in the centre

* Option/accessory, for more information, see Introduction.



General information on infotainment

console to accept selections in menus. If you are in the normal view and press **OK/MENU** a menu is shown for the selected source (e.g. **RADIO** or **MEDIA**). Arrow to the right of the screen is shown when there are underlying menus.

9 TUNE - turn the thumbwheel in the steering wheel or the knob in the centre console to scroll between disc tracks/folders, radio and TV* stations, phone contacts* or navigate between the options in the screen.

10 EXIT - **short press** leads upwards in the menu system, interrupts current function, interrupts/rejects phone calls or erases entered characters. **Long press** leads to normal view, or if you are in normal view to the highest menu level (main source view), from where you can reach the same main source buttons located in the centre console (7).

11 INFO - If more information than can be shown in the screen is available, press the **INFO** button to see the remaining information.

12 Preset buttons, input of numbers and letters.

13 FAV - shortcut to a favourite setting. The button can be programmed for a commonly

used function in FM etc. For more information, see page 257.


14 MUTE (cars without navigation) - press to deactivate the radio/media audio or restore the audio if it has been switched off.

15 Voice recognition (cars with navigation) - press to activate voice recognition (for Bluetooth®-connected mobile phone and navigation system*).



General information on infotainment

Menus

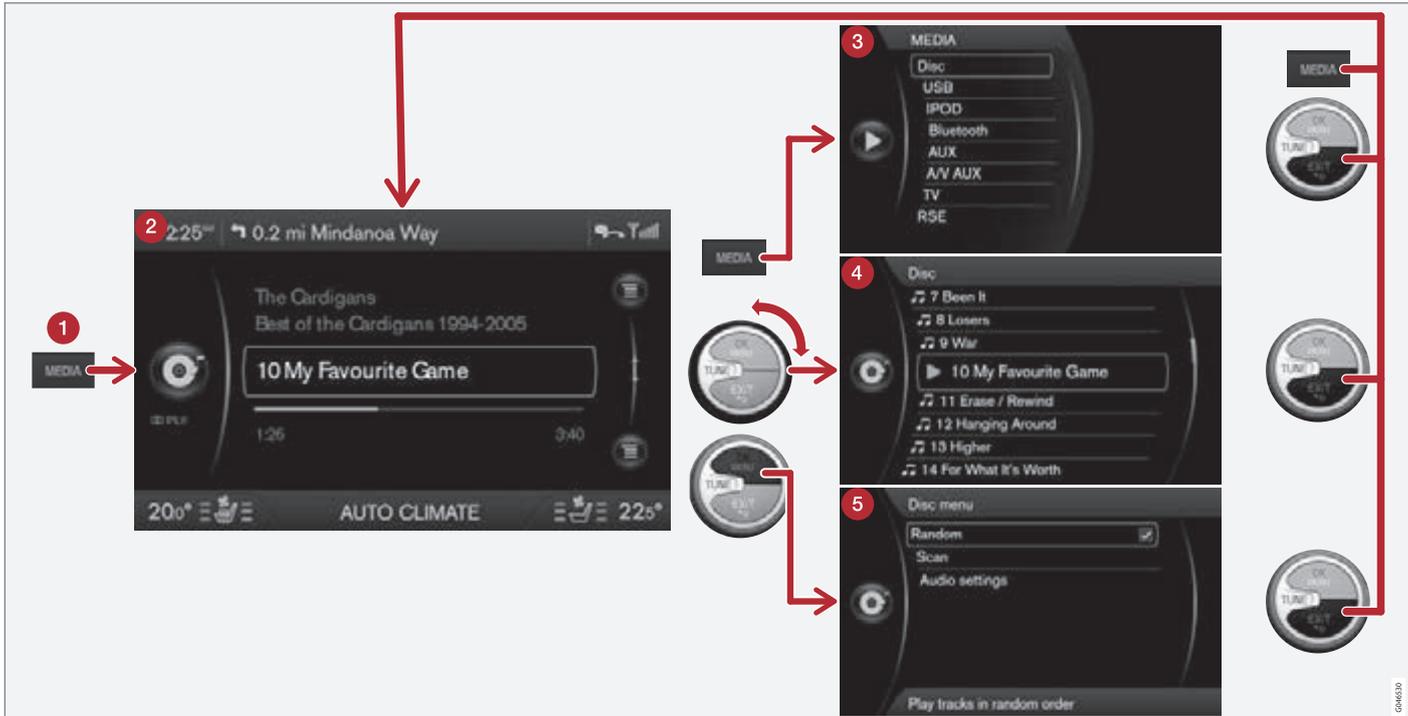

The example shows navigation to different functions when a disc is played back. (1) Main source button, (2) Normal view, (3) Shortcut/Source menu, (4) Quick menu, (5) Source menu.



General information on infotainment

Select main source by pressing a main source button (1) (**RADIO**, **MEDIA**, **TEL**). To navigate in the source's menus, use the controls for **TUNE**, **OK/MENU**, **EXIT** or the main source button (1).

For Menu overview, see page 259.

i NOTE

If the car is equipped with a steering wheel keypad with a thumbwheel*, these can be used instead of the controls in the centre console (**TUNE**, **OK/MENU**, **EXIT**).

Menus and views in the screen

Appearance depends on source, equipment in the car, settings, etc.


- 1 Main source button** - press to change the main source or show the Shortcut/Source menu in the active source.
- 2 Normal view** - normal mode for the source.
- 3 Shortcut/Source menu** - shows commonly used menu options in the main sources e.g. **TEL** and **MEDIA** (accessed by pressing the active source's main source button (1)).

4 Quick menu - fast mode when **TUNE** is turned, e.g. for changing disc tracks, radio station, etc.

5 Source view - for menu navigation (accessed by pressing **OK/MENU**).

Rear control panel with headphones socket*

Headphones with an impedance of 16-32 ohm and sensitivity of 102 dB or higher are recommended for best sound reproduction.

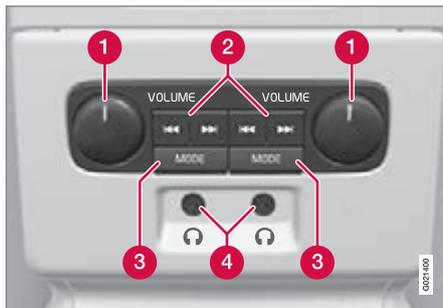

- 1 VOLUME** - Volume, left and right.
- 2** Scroll/search forward and backward.
- 3 MODE** - Select between **AM**, **FM1**, **FM2**, **DAB1***, **DAB2***, **Disc**, **USB***, **iPod***,

Bluetooth*, **AUX**, **TV*** and On/Off. For connection via **USB*** or **AUX**, see page 275 or via **Bluetooth®***, see page 279.

4 Headphones sockets (3.5 mm).

Activate/deactivate

The control panel is activated with **MODE**. Deactivation is possible via a long press on **MODE** or when the engine is switched off.

Scroll/search forward and backward

Pressing (2) scrolls between disc tracks/audio files or seeks the next available radio station.

Limitations

i NOTE

The audio source (e.g. **FM1**, **AM**, **Disc** etc.) being played back through the speakers cannot be controlled from the rear control panel.


i NOTE

In order that an audio source can be selected with **MODE** and listened to it is required that the audio source is available and connected in the car.



General information on infotainment

FAV - store a preset

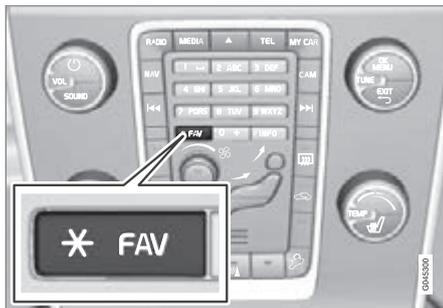

The **FAV** button can be used to store functions that are used frequently so that the function can be started simply by pressing **FAV**. You can select a favourite (e.g. **Equalizer**) for each function as follows:

In **RADIO** mode:

- AM
- FM1/FM2
- DAB1*/DAB2*

In **MEDIA** mode:

- DISC
- USB*
- iPod*

- Bluetooth*
- AUX
- TV*

It is also possible to select and store a favourite for **MY CAR**, **CAM*** and **NAV***. Favourites can also be selected and stored under **MY CAR**. For more information on the menu system **MY CAR**, see page 211.

To store a function in the **FAV** button:

1. Select a main source (e.g. **RADIO**, **MEDIA**).
2. Select a wavelength or source (**FM1**, **Disc**, etc.).
3. Press and hold the **FAV** button until the "favourites menu" is shown.
4. Turn **TUNE** to select an option from the list and press **OK/MENU** to save.
 - > When the main source (e.g. **RADIO**, **MEDIA**) is active the stored function is available via a short press on **FAV**.

General audio settings

Press **SOUND** to access the audio settings menu (**Bass**, **Treble**, etc.). Scroll forward with **SOUND** or **OK/MENU** to your selection (e.g. **Treble**).

Adjust the setting by turning **TUNE** and save the setting with **OK/MENU**.

Continue pressing **SOUND** or **OK/MENU** to access other options:

- **Surround**¹ - Can be set to the On/Off position. When On is selected, the system selects the setting for optimal sound reproduction. Normally DPLII and **PLII** then appear in the screen. If the recording is made with Dolby Digital technology then playback will take place with this setting, **DIGITAL** then appears in the screen. When Off is selected, 3-channel stereo is available.
- **Bass** - Bass level.
- **Treble** - Treble level.
- **Fader** - Balance between the front and rear speakers.
- **Balance** - Balance between the left and right-hand speakers.
- **Subwoofer**^{*1} - Bass speaker level.

¹ Only Premium Sound Multimedia.



General information on infotainment

- **DPL II centre level/3 channel centre level¹** - Volume for centre speaker.
- **DPL II surround level^{1, 2}** - Level for surround.

Advanced audio settings

Equalizer³

The volume level can be adjusted separately for different wavelengths.

1. Press **OK/MENU** to access **Audio settings** and select **Equalizer**.
2. Select wavelength by turning **TUNE** and confirm with **OK/MENU**.
3. Adjust the audio settings by turning **TUNE** and confirm with **OK/MENU**. Continue in the same way with other wavelengths you want to change.
4. When you have finished with audio settings, press **EXIT** to confirm and return to normal view.

For general information on menu navigation, see page 255 and menu overview, see page 259.

Sound stage¹

The sound experience can be optimised for the driver's seat, both front seats or the rear seat. If there are passengers in both the front and rear seats then the option recommended is; both front seats. The options can be selected under **Audio settings** → **Sound stage**.

For general information on menu navigation, see page 255 and menu overview, see page 259.

Audio volume and automatic volume control

The audio system compensates for disrupting noises in the passenger compartment by increasing the volume in relation to the speed of the car. The compensation level can be set to low, medium, high or off. Select the level under **Audio settings** → **Volume compensation**.

For general information on menu navigation, see page 255 and menu overview, see page 259.

External audio source audio volume

If an external audio source (e.g. an MP3 player or iPod®) is connected to the AUX input then the audio source that is connected can have a different volume than the audio system's internal volume (e.g. radio). Correct this by adjusting the volume of the input:

1. Press the **MEDIA** button and turn **TUNE** to **AUX** and wait a few seconds or press **OK/MENU**.
2. Press **OK/MENU** and then turn **TUNE** to **AUX input volume**. Confirm with **OK/MENU**.
3. Turn **TUNE** to adjust the volume for the AUX input.



NOTE

If the external audio source's volume is too high or too low, the quality of the sound may deteriorate. The audio quality may also be impaired if the player is charged while the infotainment system is in AUX mode. In which case, avoid charging the player via the 12 V socket.

¹ Only Premium Sound Multimedia.

² Only when Surround is activated.

³ Not Performance.



General information on infotainment

Optimum sound reproduction

The audio system is pre-calibrated for optimum sound reproduction by means of digital signal processing.

This calibration takes into account loudspeakers, amplifiers, passenger compartment acoustics, listener position etc. for each combination of car model and audio system.

There is also a dynamic calibration that takes into account the position of the volume control, radio reception and vehicle speed.

The controls explained in these operating instructions, e.g. **Bass**, **Treble** and **Equalizer**, are only intended for the user to be able to adapt the sound reproduction according to personal taste.

Menu overview

The main sources **RADIO**, **MEDIA** and **TEL** contain the following menus. For information about menu navigation, see page 255.

Menus RADIO

| | |
|--|--------|
| Main menu AM | |
| Show presets See footnote ^A | p. 265 |
| Scan | p.268 |

| | |
|---------------------------------|-------|
| Audio settings | p.257 |
| See footnote ^B | |
| Sound stage | p.258 |
| See footnote ^C | |
| Equalizer | p.258 |
| See footnote ^D | |
| Volume compensation | p.258 |
| Reset all audio settings | p.257 |

^A Only applies to High Performance Multimedia and Premium Sound Multimedia.

^B The menu options for audio settings are the same for all audio sources.

^C Only applies to Premium Sound Multimedia.

^D Does not apply to Performance.

| | |
|---------------------------|-------|
| Main menu FM1/FM2 | |
| TP | p.266 |
| Show radio text | p.267 |
| Show presets | p.265 |
| See footnote ^A | |

| | |
|---------------------------|-------|
| Scan | p.268 |
| News settings | p.267 |
| Advanced settings | |
| REG | p.268 |
| Alternative frequency | p.267 |
| EON | p.266 |
| Set TP favourite | p.266 |
| PTY settings | p.267 |
| Reset all FM settings | p.268 |
| Audio settings | p.257 |
| See footnote ^B | |

^A Only applies to High Performance Multimedia and Premium Sound Multimedia.

^B For submenus, see "Main menu AM".



General information on infotainment

| Main menu DAB1*/DAB2* | |
|---------------------------|-------|
| Ensemble learn | p.268 |
| PTY filtering | p.269 |
| Turn off PTY filtering | p.269 |
| Show radio text | p.269 |
| Show presets | p.269 |
| See footnote ^A | |
| Scan | p.268 |
| Advanced settings | p.270 |
| DAB linking | p.270 |
| DAB band | p.270 |
| Sub channels | p.270 |
| Show PTY text | p.270 |

| | |
|---------------------------|-------|
| Reset all DAB settings | p.270 |
| Audio settings | p.257 |
| See footnote ^B | |

^A Only applies to High Performance Multimedia and Premium Sound Multimedia.
^B For submenu, see "Main menu AM".

Menus MEDIA

| Main menu CD Audio (Disc menu) | |
|--------------------------------|-------|
| Random | p.273 |
| Scan | p.273 |
| Audio settings | p.257 |
| See footnote ^A | |

^A For submenu, see "Main menu AM".

| Main menu CD/DVD ^A Data (Disc menu) | |
|--|-------|
| Play | p.272 |
| Pause | |
| Stop | p.272 |
| Random | p.273 |

| | |
|---------------------------|-------|
| Repeat folder | p.273 |
| Change subtitles | p.272 |
| Change audio track | p.272 |
| Scan | p.273 |
| Audio settings | p.257 |
| See footnote ^B | |

^A Only applies to High Performance Multimedia and Premium Sound Multimedia.
^B For submenu, see "Main menu AM".

| Main menu DVD ^A Video (Disc menu) | |
|--|-------|
| DVD disc menu | p.273 |
| Play/Pause/Continue | p.273 |
| Stop | p.273 |
| Subtitles | p.273 |
| Audio tracks | p.273 |
| Advanced settings | p.274 |



General information on infotainment

| | |
|--|-------|
| Angle | p.274 |
| DivX® VOD code | p.274 |
| Audio settings See footnote ^B | p.257 |

^A Only applies to High Performance Multimedia and Premium Sound Multimedia.

^B For submenus, see "Main menu AM".

| | |
|--|-------|
| Main menu iPod^A | |
| Random | p.273 |
| Scan | p.273 |
| Audio settings See footnote ^B | p.257 |

^A Does not apply to Performance.

^B For submenus, see "Main menu AM".

| | |
|----------------------------------|-------|
| Main menu USB^A | |
| Play | p.276 |
| Pause | |
| Stop | p.276 |

| | |
|--|-------|
| Random | p.273 |
| Repeat folder | p.273 |
| Select USB device | p.277 |
| Change subtitles | p.276 |
| Change audio track | p.276 |
| Scan | p.273 |
| Audio settings See footnote ^B | p.257 |

^A Does not apply to Performance.

^B For submenus, see "Main menu AM".

| | |
|--|-------|
| Main menu Media Bluetooth^A | |
| Random | p.280 |
| Change device | p.279 |
| Remove Bluetooth device | p.279 |
| Scan | p.280 |

| | |
|--|-------|
| Bluetooth software version in car | p.280 |
| Audio settings See footnote ^B | p.257 |

^A Does not apply to Performance.

^B For submenus, see "Main menu AM".

| | |
|--|-------|
| Main menu AUX | |
| AUX input volume | p.257 |
| Audio settings See footnote ^A | p.257 |

^A For submenus, see "Main menu AM".

| | |
|---------------------------------|-------|
| Main menu TV[*] | |
| Select country | p.295 |
| Reorganise presets | p.295 |
| Autostore | p.296 |





General information on infotainment

| | |
|---------------------------|-------|
| Scan | p.296 |
| Audio settings | p.257 |
| See footnote ^A | |

^A For submenus, see "Main menu AM".

| | |
|---|-------|
| Pop-up menu^A*video and TV* | |
| Press OK/MENU when a video file is being played back or TV* is being shown in order to access the pop-up menu. | |
| Image settings | p.274 |
| Source menu | p.255 |
| See footnote ^B | |
| DVD disc menu | p.273 |
| See footnote ^C | |
| DVD disc TOP menu^C | p.273 |

^A Only applies when playing back videos or displaying TV.

^B What is shown in the pop-up menu for the source menu depends on what is being played back or displayed, it can be e.g. CD/DVD data menu or USB menu.

^C Only applies to DVD video discs.

Menus TEL

Main menu Bluetooth® handsfree^A (Phone menu)

| | |
|-------------------|-------|
| All calls | p.284 |
| All calls | p.284 |
| Missed calls | p.284 |
| Answered calls | p.284 |
| Dialled calls | p.284 |
| Call duration | p.284 |
| Phone book | p.285 |
| Search | p.286 |
| New contact | p.287 |
| Speed dials | p.288 |
| Receive vCard | p.288 |

| | |
|---------------------------------|-------|
| Memory status | p.288 |
| Clear phone book | p.289 |
| Change phone | p.283 |
| Remove Bluetooth device | p.284 |
| Phone settings | |
| Discoverable | p.282 |
| Sounds and volume | p.284 |
| Download phone book | p.285 |
| Bluetooth software version in c | p.289 |
| Call options | |
| Auto answer | p.284 |

**General information on infotainment**


| | |
|-------------------------|-------|
| Voicemail number | p.284 |
| Disconnect phone | p.283 |

^A Does not apply to Performance.



Radio

General

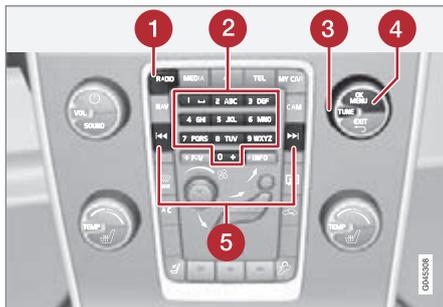

Centre console, controls for radio functions.

- 1 **RADIO** button for selecting the wavelength (FM1, FM2, DAB1*, DAB2*).
- 2 Station presets (0-9)
- 3 Select the desired frequency/station or navigate in the radio menu by turning **TUNE**.
- 4 Confirm your selection or go to the radio menu by pressing **OK/MENU**.
- 5 Hold in the button for next/previous available station. Short press for preset.

NOTE

If the car is equipped with a steering wheel keypad* and/or remote control* then in many cases these can be used instead of the buttons in the centre console. For a description of the buttons in the steering wheel, see page 253. For a description of the remote control, see page 298.

Menus

The menus in **RADIO** are controlled from the centre console and the steering wheel keypad*. For general information on menu navigation, see page 255 and menu overview, see page 259.

Radio AM/FM

Tuning

NOTE

The reception is dependent both on how good the signal strength and signal quality are. The transmission may be disturbed by various factors such as tall buildings or the transmitter being far away. Coverage level can also vary depending on where in the country you are located.

Automatic tuning

1. Press **RADIO**, turn **TUNE** until the desired wavelength (e.g. **FM1**) is shown, press **OK/MENU**.
2. Hold in **◀◀** / **▶▶** in the centre console (or in the steering wheel keypad*). The radio searches for the next/previous available station.

Station list¹

The radio automatically compiles a list of the strongest FM stations whose signals it is currently receiving. This enables you to find a station when you drive into an area where you do not know the radio stations and their frequencies.

To go to the list and select a station:

1. Select the desired wavelength (**FM1** or **FM2**).
2. Turn **TUNE** one step in either direction. This displays the list of all stations in the area. The currently tuned station is indicated with enlarged text in the list.
3. Turn **TUNE** again in either direction to select a station from the list.
4. Confirm your selection with **OK/MENU**.

¹ Does not apply to Performance.

**i NOTE**

- The list only shows the frequencies of stations that are currently being received, **not** a complete list of all radio frequencies on the selected wavelength.
- If the signal from the currently received station is weak, this may prevent the radio from updating the station list. If this occurs, press the **#INFO** button (while the station list is shown in the display screen) in order to change to manual tuning and set a frequency. If the station list is no longer shown, turn **TUNE** one step in either direction to show the list again, and press **#INFO** to switch.

The list disappears from the screen after a few seconds.

If the station list is no longer shown, turn **TUNE** one step in either direction and press the **#INFO** button in the centre console to change to manual tuning (or to return from manual tuning to the function for "Station list").

Manual tuning

The preset from the factory is that the radio shows the station list of the strongest stations in the area when you turn **TUNE** (see the section "Station list", page 264). When the station list is shown, press the **#INFO** button in the centre console to change to manual tuning. This allows you to select a frequency from the list of all available radio frequencies in the selected wavelength. In other words, if turn **TUNE** one step in a manual search the frequency is changed from e.g. 93.3 to 93.4 MHz, etc.

To manually select a station:

1. Press the **RADIO** button, turn **TUNE** until the desired wavelength (e.g. **FM1**) is shown, press **OK/MENU**.
2. Turn **TUNE** to select a frequency.

i NOTE

The preset from the factory is that the radio automatically searches for the stations in the area where you are driving (see previous section "Station list" above).

But if you have changed over to manual tuning (by pressing the **#INFO** button in the centre console when the station list was shown), then the radio remains set in the function for manual tuning the next time you switch on the radio. To change back to the function for "Station list", turn **TUNE** one step (to show the complete list of stations) and press the button **#INFO**.

Note that if you press **#INFO** when the station list is not shown then **INFO** is activated. For more information on this function, see page 253.

Preset

10 presets can be stored per wavelength (e.g. **FM1**).

The stored presets are selected using the preset buttons.

1. Tune into a station (see "Tuning", page 264).
2. Hold in one of the preset buttons for a few seconds, the sound disappears dur-



Radio

ing this time and returns when the station is stored. The preset button can now be used.

A list of pre-selected channels can be shown² in the screen. The function is activated/deactivated in FM/AM mode under **FM menu** → **Show presets** or **AM menu** → **Show presets**.

RDS functions

RDS (Radio Data System) links FM transmitters into a network. An FM transmitter in such a network sends information that gives an RDS radio the following functions:

- Automatically switches to a stronger transmitter if reception in the area is poor.
- Searches for programme type, such as traffic information or news.
- Receives text information on current radio programme.

NOTE

Some radio stations do not use RDS or only some if its functionality.

If a required programme type is located the radio can switch stations interrupting the

audio source currently in use. For example, if the CD player is in use, it is paused. The interrupting transmission is played at a preset volume, see page 268. The radio returns to the previous audio source and volume when the set programme type is no longer broadcast.

The programme functions alarm (**ALARM!**), traffic information (**TP**), news (**NEWS**), and programme types (**PTY**) interrupt one another in order of priority, where alarm has the highest priority and programme types has the lowest. For additional settings of programming interruptions (**EON Distant** and **EON Local**), see the section "Enhanced Other Networks – EON" below. Press **EXIT** to return to the interrupted audio source, press the **OK/MENU** to clear the message.

Alarm

This function is used to warn of serious accidents and catastrophes. The alarm cannot be temporarily interrupted or deactivated. The message **ALARM!** appears in the screen when an alarm message is transmitted.

Traffic information – TP

This function allows traffic information sent within a set station's RDS network to break

through. The **TP** symbol indicates that the function is activated. If the preset station can send traffic information then this is shown by **TP** glowing brightly in the screen, otherwise **TP** will be grey.

- Activate/deactivate in FM mode under **FM menu** → **TP**.

Enhanced Other Networks – EON

This function is useful in urban areas with many regional radio stations. It allows the distance between the car and the radio station transmitter to determine when programme functions should interrupt the current audio source.

- Activate/deactivate in FM mode by selecting one of the options under **FM menu** → **Advanced settings** → **EON**:
- **Local** – interrupts only if the radio station transmitter is close.
- **Distant**³ – interrupts if the station transmitter is far away, even if there is a lot of static.

TP from selected station/all stations

The radio can only interrupt for traffic information from the selected station or all stations within the RDS network.

² Only applies to High Performance Multimedia and Premium Sound Multimedia.

³ Factory settings.



- Go in FM mode to **FM menu** → **Advanced settings** → **Set TP favourite** to change.

News

This function allows news broadcasts sent within a set station's RDS network to break through. The **NEWS** symbol indicates that the function is active.

- Activate/deactivate in FM mode under **FM menu** → **News settings** → **News**.

News from selected station/all stations

The radio can only interrupt for news from the selected station or all stations in the RDS network.

- Go in FM mode to **FM menu** → **News settings** → **Set news favourite** to change.

Programme types – PTY

The PTY function can be used to select one or more programme types, such as pop music and serious classic. The PTY symbol indicates that the function is active. This function allows programme types broadcast within a set station's RDS network to break through.

1. Activate in FM mode by first selecting the programme types under **FM menu** → **Advanced settings** → **PTY settings** → **Select PTY**.
2. Then the PTY function must be activated under **FM menu** → **Advanced settings** → **PTY settings** → **Receive traffic bulletins from other networks**.

An indicator is shown in the screen when PTY is activated.

Deactivation of the PTY function is performed in FM mode under **FM menu** → **Advanced settings** → **PTY settings** → **Receive traffic bulletins from other networks**. Selected programme types (PTY) are not reset.

Resetting and removing PTY are performed under **FM menu** → **Advanced settings** → **PTY settings** → **Select PTY** → **Clear all**.

PTY search

This function searches the entire wavelength for the selected programme type.

1. In FM mode select one or more PTY under **FM menu** → **Advanced settings** → **PTY settings** → **Select PTY**.

2. Go to **FM menu** → **Advanced settings** → **PTY settings** → **Seek PTY**.

To finish searching, press **EXIT**.

- To continue searching for another broadcast of the selected programme types, press on **◀◀** or **▶▶**.

Display of programme type

The programme type of the current station can be shown in the screen.

- Activate/deactivate in FM mode under **FM menu** → **Advanced settings** → **PTY settings** → **Show PTY text**.

Radio text⁴

Some RDS stations transmit information on programme content, artists, etc. This information can be shown in the screen.

- Activate/deactivate in FM mode under **FM menu** → **Show radio text**.

Automatic frequency update – AF

The function selects the strongest transmitter for the set station. In order to find a strong transmitter the function may, in exceptional cases, need to search the entire FM wavelength.

⁴ Only cars with 7-inch screen



Radio

- Activate/deactivate in FM mode under **FM menu → Advanced settings → Alternative frequency.**

Regional radio programmes – REG

This function causes the radio to continue with a regional transmitter even if its signal strength is low. The symbol **REG** shows that the function is active.

- Activate/deactivate in FM mode under **FM menu → Advanced settings → REG.**

Resetting RDS functions

All radio settings can be reset to the original factory settings.

- The reset is carried out in FM mode under **FM menu → Advanced settings → Reset all FM settings.**

Volume control, programme types

The interrupting programme types, e.g. **NEWS** or **TP**, are heard at the volume selected for each respective programme type. If the volume level is adjusted during the programme interruption, the new level is saved until the next programme interruption.

Scan wavelength

The function automatically searches for available channels and takes into account any programme type filtering. When a station is

found, it is played for approx. 10 seconds before scanning is resumed. When a station is playing back it can be saved as a preset in the usual way, see the section **Preset**, page 265.

- To start scanning go in FM/AM mode to **FM menu → Scan** or **AM menu → Scan.**

NOTE

Scanning stops if a station is saved.

Radio system - DAB*

General

DAB (Digital Audio Broadcasting) is a digital broadcasting system for radio. This system supports DAB, DAB+ and DMB.

NOTE

Coverage for DAB is not available in all locations. If there is no coverage then the message **No reception** is shown in the display screen.

Service and Ensemble

- **Service** - Channel, radio channel (only audio services are supported by the system).
- **Ensemble** - A collection of radio channels on the same frequency.

Storing channel groups (Ensemble learn)

When the vehicle is moved to a new broadcasting area, programming of existing channel groups in the area may be necessary.

Programming of channel groups creates an updated list of all available channel groups. The list is not updated automatically.

Programming is carried out in the menu system in DAB mode under **DAB menu → Ensemble learn**. Programming can also take place as follows:

1. Turn **TUNE** one step in either direction.
 - > **Ensemble learn** is shown in the list of available channel groups.
2. Press **OK/MENU**.
 - > New programming is started.

Programming can be cancelled with **EXIT**.



Navigation in channel group list (Ensemble)

To navigate in and access the channel group list turn **TUNE**. The name of the Ensemble is shown in the upper part of the screen. When switching to the new Ensemble the name changes to the new one.

- **Service** - Shows channels irrespective of the channel group to which they are allocated. The list can also be filtered using the selection of programme type (**PTY filtering**), see below.

Scanning

The function automatically searches the current wavelength for strong stations. When a station is found, it is played for approx. 10 seconds before scanning is resumed. When a station is playing back it is saved as a preset in the usual way. For more information on presets, see "Preset" below.

- Go in DAB mode to **DAB menu** → **Scan** to start scanning.

NOTE

Scanning stops if a station is saved.

Scanning can also be selected in DAB-PTY mode. In which case only channels of the pre-selected programme type are played.

Programme type (PTY)

Various types of radio programmes can be selected using the programme type function. There are a number of different programme types which also include different programme categories. After selecting a programme type, navigation only takes place within the channels that are broadcasting that type.

Programme type is selected in DAB mode under **DAB menu** → **PTY filtering**. Exit this mode as follows:

- Press **EXIT**.
 - > An indicator is shown in the screen when PTY is activated.

In certain cases DAB radio will exit PTY mode when DAB to DAB linking (see below) is implemented.

Preset

10 station presets can be stored per wavelength. DAB has 2 memories for presets: **DAB1** and **DAB2**. Storage of presets is made by means of a long press on the desired preset button, for more information see

page 265. The stored presets are selected using the preset buttons.

A preset contains one channel but no sub-channels. If a subchannel is being played and a preset is saved then only the main channel is registered. This is because subchannels are temporary. At the next attempt to retrieve the preset, the channel which contained the subchannel will be played. The preset is not dependent on the channel list.

A list of pre-selected channels can be shown⁵ in the screen. The function is activated/deactivated in DAB mode under **DAB menu** → **Show presets**.

NOTE

The audio system's DAB system does not support all functions available in the DAB standard.

Radio text

Some radio stations transmit information on programme content, artists, etc. This information is shown in the screen.

The function is deactivated/activated in DAB mode under **DAB menu** → **Show radio text**.

⁵ Only applies to High Performance Multimedia and Premium Sound Multimedia.



Radio

NOTE

Only one of the functions "Show radio text" and "Show presets" can be activated at a time. If one of them is activated when the other is already activated, then the previously activated function is deactivated automatically. Both functions can be deactivated.

Advanced settings

DAB to DAB link

DAB to DAB linking means that the DAB radio can go from one channel with poor or no reception to the same channel in another channel group with better reception. There may be a certain delay when changing channel group. There may be a period of silence between the current channel no longer being available to the new channel becoming available.

The function can be activated/deactivated in DAB mode under **DAB menu** → **Advanced settings** → **DAB linking**.

Wavelength

DAB can be transmitted on two⁶ wavelengths:

- **Band III** - covers most areas.
- **LBand** - available only in a few areas.

By selecting for example **Band III** on its own, channel programming takes place more quickly than if both **Band III** and **LBand** have been selected. It is not certain that all channel groups will be found. Wavelength selection does not affect the stored memories.

Wavelengths can be deactivated/activated in DAB mode under **DAB menu** → **Advanced settings** → **DAB band**.

Subchannel

Secondary components are usually named subchannels. These are temporary and can contain e.g. translations of the main programme into other languages.

If one or more subchannels are broadcast then the **√** symbol is shown to the left of the channel name in the screen. A subchannel is indicated by the **-** symbol appearing to the left of the channel name in the screen.

Press **▶▶** to access the subchannels.

Subchannels can only be accessed on the selected main channel and not on any other channel without selecting it.

Display of subchannels can be deactivated/activated in DAB mode under **DAB menu** → **Advanced settings** → **Sub channels**

Programme type text

Some radio stations broadcast information about programme type and programme category, for information on Programme type (PTY), see page 269. This information is shown in the screen.

The function is activated/deactivated in DAB mode under **DAB menu** → **Advanced settings** → **Show PTY text**.

Resetting the DAB settings

All DAB settings can be reset to the original factory settings.

- The reset is carried out in DAB mode under **DAB menu** → **Advanced settings** → **Reset all DAB settings**.


⁶ Not all areas/countries use both wavelengths.



Media player

General

The media player can playback audio and video from CD/DVD* discs and externally connected audio sources via the AUX/USB* input or wirelessly stream audio files from external devices using Bluetooth®. Certain media players can show TV* and have the option to communicate with a mobile phone (see page 281)* via Bluetooth®.

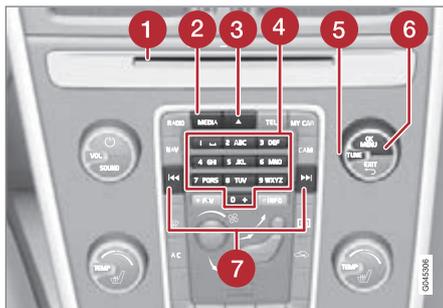CD/DVD¹ functions

Centre console control panel.

- 1 Disc insert and eject slot
- 2 **MEDIA** button, activates last active media source. If you are already in a

media source and press the **MEDIA** button then a shortcut menu is shown for commonly used menu options.

- 3 Disc eject
- 4 Input of numbers and letters.
- 5 Select the disc tracks/folders, or navigate through menu options by turning **TUNE**.
- 6 Confirm your selection or go to the menu for the selected media source by pressing **OK/MENU**.
- 7 Fast forward/reverse and change disc track or chapter².

The media player supports and can play the following main types of discs and files:

- Pre-recorded CD discs (CD Audio).
- Burned CD discs with audio and/or video files¹.
- Pre-recorded DVD video discs¹.
- Burned DVD discs¹ with audio and/or video files.

For more information about the supported formats, see page 274.

NOTE

If the car is equipped with a steering wheel keypad* and/or remote control* then in many cases these can be used instead of the buttons in the centre console. For a description of the buttons in the steering wheel, see page 253. For a description of the remote control, see page 298.

Menus

The menus in **MEDIA** are controlled from the centre console and the steering wheel keypad*. For general information on menu navigation, see page 255 and menu overview, see page 259.

Starting playback of a disc

Press the **MEDIA** button, turn **TUNE** until **Disc** is shown, press **OK/MENU**. If there is a disc in the media player then the disc starts playing back automatically, otherwise **Insert disc** is shown in the TV screen. Then insert a disc, with text side up. The disc starts to play back automatically.

If a disc with audio/video files is inserted into the player then the disc's folder structure needs to be loaded. Depending on the quality of the disc and the quantity of information

¹ Only applies to High Performance Multimedia and Premium Sound Multimedia.

² Only applies to DVD discs.



Media player

there may be a certain delay before playback starts.

Disc eject

A disc remains in the ejected position for about 12 seconds, after which it is inserted back into the player for safety reasons.

Pause

When the volume is reduced entirely or MUTE is pressed, the media player is paused. When the volume is increased or MUTE is pressed again, the media player starts. It is also possible to pause via the menu system³, press **OK/MENU**, select **Play/Pause**.

Playback and navigation

CD audio discs

Turn **TUNE** to access the disc's playlist and navigate in the list. Use **OK/MENU** to confirm the selection of the disc track and start playback. Press **EXIT** to cancel and exit the playlist. A long press on **EXIT** leads to the playlist's root level.

Disc tracks can also be changed by pressing on **◀◀** / **▶▶** on the centre console or the steering wheel keypad*.

Burned discs audio/video files¹

Turn **TUNE** to access the disc's playlist/folder structure and navigate in the list/structure. Use **OK/MENU** to confirm either selection of subfolder or start of playback of the selected audio/video file. Press **EXIT** to either stop and exit the playlist or go up (back) in the folder structure. A long press on **EXIT** leads to the playlist's root level.

Audio/video files can also be changed by pressing **◀◀** / **▶▶** on the centre console or the steering wheel keypad*.

Audio files have the symbol , video files¹ have the symbol  and folders have the symbol .

When playback of a file is complete the playback of the other files (of the same type) in that particular folder continues. Change⁴ of folder takes place automatically when all the files in the current folder have been played back. The system automatically detects and changes setting when a disc containing only audio files or only video files is loaded into the media player and then plays back these files. However, the system does not change setting if a disc containing a mixture of audio

and video files is loaded into the media player, but instead the player continues to play back the previous file type.

NOTE

A video film is only shown when the car is stationary. When the car is moving at a speed of over about 8 km/h no picture is shown and **No visual media available while driving** appears on the display screen, although the audio is heard during this time. The picture is shown again as soon as the car's speed falls below about 6 km/h.

NOTE

Some audio files that are copy-protected by record companies or privately copied audio files cannot be loaded by the player.

DVD video discs¹

For playback of DVD video discs, see page 273.

Fast forward/reverse

Hold in the buttons **◀◀** / **▶▶** to fast forward/rewind. Audio files are fast forwarded/rewound at one speed, while video files are

³ Does not apply to CD Audio

¹ Only applies to High Performance Multimedia and Premium Sound Multimedia.

⁴ If Repeat folder is activated then this does not take place.

* Option/accessory, for more information, see Introduction.



Media player

fast forwarded/rewound at several speeds. Repeatedly press the buttons **◀◀** / **▶▶** to increase the fast forward/rewind speed for video files. Release the button to return to viewing at normal speed.

Scan⁵

This function plays the first ten seconds of each disc track/audio file. To scan:

1. Press **OK/MENU**
2. Turn **TUNE** to **Scan**
 - > The first 10 seconds of each disc track or audio file are played.
3. Cancel the scan with **EXIT**, the disc track or audio file being played back will continue playing.

Random⁵

This function plays the tracks in random order. To listen to the tracks in random order:

1. Press **OK/MENU**
2. Turn **TUNE** to **Random**
3. Press **OK/MENU** to activate/deactivate the function.

Disc tracks/audio files can be changed by pressing **◀◀** / **▶▶** on the centre console or the steering wheel keypad*.

Repeat folder⁶

This function makes it possible to play files in a folder over and over again. When the last file has been played out, playback of the first file starts again.


1. Press **OK/MENU**
2. Turn **TUNE** to **Repeat folder**
3. Press **OK/MENU** to activate/deactivate the function.

Playback of DVD video discs¹**Playback**

When playing back a DVD video disc a disc menu may appear on the display screen. The disc menu gives access to additional functions and settings, such as selecting subtitles, language and scene selection.

NOTE

A video film is only shown when the car is stationary. When the car is moving at a speed of over about 8 km/h no picture is shown and **No visual media available while driving** appears on the display screen, although the audio is heard during this time. The picture is shown again as soon as the car's speed falls below about 6 km/h.

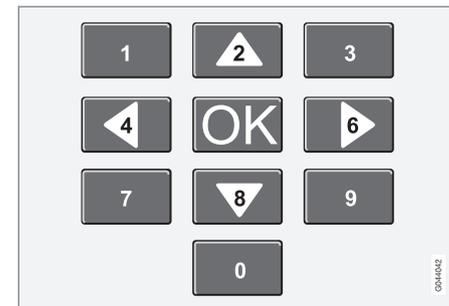Navigation in the DVD video disc's menu

Navigation in the DVD video disc's menu is performed using the number keys in the centre console as illustrated above.

⁵ Does not apply to DVD video discs.

⁶ Only applies to audio/video files on burned discs or USB.

¹ Only applies to High Performance Multimedia and Premium Sound Multimedia.



Media player

Changing chapter or title

Turn **TUNE** to access the list of chapters and navigate through them (if the film is being played back then it is paused). Press **OK/MENU** to select the chapter, this also leads back to the original position (if the film was being played back then it is restarted). Press **EXIT** to access the title list.

Titles are selected in the title list by turning **TUNE** and the selection is confirmed with **OK/MENU**, this also leads back to the chapter list. Press **OK/MENU** to activate the selection and return to the start position. Use **EXIT** to cancel the selection and this leads back to the original position (without any selection being made).

The chapter can also be changed by pressing on **◀** / **▶** on the centre console or the steering wheel keypad*.

Advanced settings⁷

Angle

If the DVD video disc supports it, the function can be used to choose from which camera position a particular scene should be shown. Go in disc mode to **Disc menu** → **Advanced settings** → **Angle**.

DivX® Video On Demand

The media player can be registered in order to play DivX VOD type files from burned discs or USB. The code for registration can be found in the menu system **MY CAR Settings** → **Information** → **DivX® VOD code**. For general information on menus, see under **MY CAR**, see page 211.

For more information visit www.divx.com/vod.

Picture settings⁷

You can adjust the settings (when the car is stationary) for brightness and contrast.

1. Press **OK/MENU** and select **Image settings**, confirm with **OK/MENU**.
2. Turn **TUNE** to the adjustment option and confirm with **OK/MENU**.
3. Adjust the setting by turning **TUNE** and confirm with **OK/MENU**.

To return to the settings list, press the **OK/MENU** or **EXIT**.

The picture settings can be reset to factory settings with the **Reset** option.

Compatible file formats

The media player can play back a variety of file types and is compatible with the formats in the following table.



NOTE

Dual format, double-sided discs (DVD Plus, CD-DVD format) are thicker than regular CD discs and therefore playback cannot be guaranteed and malfunction may arise.

If a CD contains a mixture of MP3 and CDDA tracks, all MP3s will be ignored.

| | |
|---------------------------|-------------------------------------|
| Audio format ^A | CD audio, mp3, wma |
| Audio format ^B | CD audio, mp3, wma, aac, m4a |
| Video format ^C | CD video, DVD video, divx, avi, asf |

^A Applies to Performance.

^B Does not apply to Performance.


^C Only applies to High Performance Multimedia and Premium Sound Multimedia.

⁷ Applies to High Performance Multimedia and Premium Sound Multimedia.



External audio source via AUX/USB* input

General

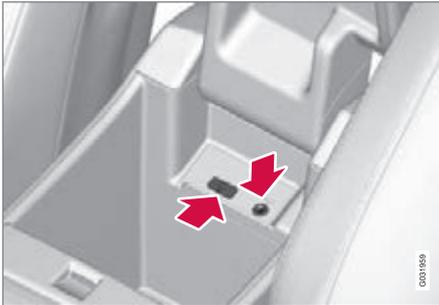

Connection points for external audio sources.

An external audio source, e.g. an iPod® or MP3 player, can be connected to the audio system via any of the connections in the centre console. An audio source connected to the USB input can then be handled¹ with the car's audio controls. A device connected via the AUX input cannot be controlled via the car.

i NOTE

If the car is equipped with a steering wheel keypad* and/or remote control* then in many cases these can be used instead of the buttons in the centre console. For a description of the buttons in the steering wheel, see page 253. For a description of the remote control, see page 298.

An iPod® or MP3 player with rechargeable batteries is recharged (when the ignition is on or the engine is running) if the device is plugged into the USB connection.

To connect the audio source:

1. Press **MEDIA**, turn **TUNE** to the desired audio source **USB**, **iPod** or **AUX**, press **OK/MENU**.
 - > If USB is selected then **Connect USB** is shown in the TV screen.
2. Connect your audio source to one of the connections in the centre console's storage compartment (see previous illustration).

The text **Reading USB** is shown in the TV screen when the system is loading the storage media's file structure. Depending on the

file structure and number of files there may be some delay before loading is finished.

i NOTE

The system supports most iPod® models produced in 2005 or later.

i NOTE

To prevent damage to the USB connection, this is shut off if the USB connection is short-circuited or if a connected USB unit is taking too much power (this may happen if the unit connected does not meet the USB standard). The USB connection is reactivated automatically the next time the ignition is turned on, unless the fault persists.

Menus

The menus in **MEDIA** are controlled from the centre console and the steering wheel keypad*. For general information on menu navigation, see page 255 and menu overview, see page 259.

¹ Only applies to the media source connected via the USB connection.



External audio source via AUX/USB* input

Playback and navigation²

Turn **TUNE** to access the playlist/folder structure and navigate in the list/structure. Use **OK/MENU** to either confirm selection of sub-folder or start of playback of the selected audio/video file. Press **EXIT** to either stop and exit the playlist or go up (back) in the folder structure. A long press on **EXIT** leads to the playlist's root level.

Audio/video files can also be changed by pressing  /  on the centre console or the steering wheel keypad*.

Audio files have the symbol  , video files³ have the symbol  and folders have the symbol .

When playback of a file is complete the playback of the other files (of the same type) in that particular folder continues. Change⁴ of folder takes place automatically when all the files in the current folder have been played back. The system automatically detects and changes setting when a device containing only audio files or only video files is connected to the USB port and then it plays back

these files. However, the system does not change setting if a device containing a mixture of audio and video files is connected to the USB port, but instead the player continues to play back the previous file type.

Fast forward/reverse²

See page 272.

Scan²

See page 273.

Random²

See page 273.

Search function²

The keypad on the control panel in the centre console can be used to find a filename in the current folder.

The search function is accessed either by turning **TUNE** (to access the folder structure) or by pressing one of the letter keys. As a letter or character in a search string is entered you get closer to your search target.

Start playback of a file by pressing **OK/MENU**.

Repeat folder⁵

See page 273.

Pause

When the volume is reduced entirely or MUTE is pressed, the media player is paused. When the volume is increased or MUTE is pressed again, the media player starts. It is also possible to pause via the menu system⁶, press **OK/MENU**, select **Play/Pause**.

Audio sources

USB memory

To facilitate the use of a USB memory stick, only store music files on it. It takes a lot longer for the system to load storage media that contains anything other than compatible music files.

² Only applies to USB and iPod®.

³ Applies to High Performance Multimedia and Premium Sound Multimedia.

⁴ If Repeat folder is activated then this does not take place.

⁵ Only applies to USB.

⁶ Does not apply to iPod®



External audio source via AUX/USB* input

i NOTE

The system supports mobile media compliant with USB 2.0 and the FAT32 file system and can handle 1000 folders with a maximum of 254 subfolders/files in every folder. The top level, which can handle up to 1000 subfolders/files, is an exception to this.

i NOTE

When using a longer model USB memory stick the use of a USB adapter cable is recommended. This is to avoid mechanical wear to the USB input and the connected USB memory stick.

USB hub

It is possible to connect a USB hub to the USB connection and thereby connect multiple USB devices simultaneously. Selection of USB device is made in **USB** mode under **USB menu** → **Select USB device**.

MP3 player

Many MP3 players have their own file systems that are not supported by the audio system. For use in the system, an MP3 player must be set in **USB Removable device/ Mass Storage Device** mode.

iPod®

An iPod® is charged and supplied with power by the USB connection* via the player's connection cable.

i NOTE

The system only supports the playback of audio files from iPod®.

i NOTE

When an iPod® is used as audio source, the car's infotainment system has a menu structure that is similar to the iPod® player's own menu structure.

Compatible file formats via the USB connection

Audio and video files in the following table are supported by the system for playback via the USB connection.

| | |
|---------------------------|--------------------|
| Audio format | mp3, wma, aac, m4a |
| Video format ^A | divx, avi, asf |

^A Only applies to High Performance Multimedia and Premium Sound Multimedia.



Media Bluetooth®*

General

The car's media player is equipped with Bluetooth®¹ and can wirelessly play streaming audio files from external devices with Bluetooth®, such as mobile phones and PDAs. Navigation and control of the sound can be carried out via the centre console buttons or via the steering wheel keypad*. In some external devices it is also possible to change tracks from the device.

To play back the audio the car's media player must first be set in **Bluetooth** mode.

When a mobile phone is connected to the car, it is also possible to remotely control a selection of the mobile phone's functions, see page 281. Switch between the main sources **TEL** and **MEDIA** to operate each one's functions.

NOTE

The Bluetooth® media player must support the Audio/Video Remote Control Profile (AVRCP) and Advanced Audio Distribution Profile (A2DP). The player should use AVRCP version 1.3, A2DP 1.2. Otherwise some functions may not work.

Not all mobile phones and external media players available in the market are fully compatible with the Bluetooth® function in the car's media player. Volvo recommends that you contact an authorised Volvo dealer or visit www.volvocars.com for information on compatible phones and external media players.


NOTE

The car's media player can only play the audio files via the Bluetooth® function.

Menus

The menus in **MEDIA** are controlled from the centre console and the steering wheel keypad*. For general information on menu navigation, see page 255 and menu overview, see page 259.

Overview

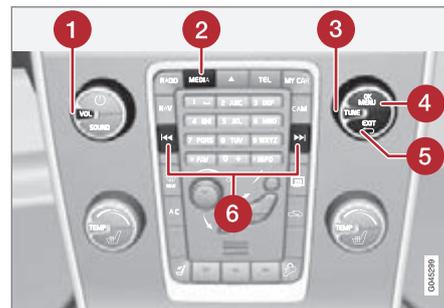

Centre console control panel.

- 1 **VOL** – volume
- 2 **MEDIA** button. Last active source (e.g. iPod®) is activated automatically. If a source is activated and you press **MEDIA** then a shortcut menu is shown with commonly used menu options.
- 3 Navigate in the menu by turning **TUNE**.
- 4 Confirm your selection or go to the menu by pressing **OK/MENU**.

¹ Applies to High Performance, High Performance Multimedia and Premium Sound Multimedia.

* Option/accessory, for more information, see Introduction.

**Media Bluetooth®***

- 5 EXIT** - leads up in the menu system, stops the function in progress.
- 6 Short presses** are used to scroll between audio files. **Long presses** are used to fast forward and rewind audio files.

NOTE

If the car is equipped with a steering wheel keypad* and/or remote control* then in many cases these can be used instead of the buttons in the centre console. For a description of the buttons in the steering wheel, see page 253. For a description of the remote control, see page 298.

Getting started**Connect an external Bluetooth® device**

A maximum of ten external devices can be registered. The connection is made in the same way as for the phone, see Connect an external Bluetooth® device, page 282.

Automatic connection

When the Bluetooth® function is active and the last external device connected is in range it is connected automatically. When the infotainment system searches for the last device connected its name is shown in the TV screen. To connect to another device, press

EXIT. Connect a new external device, see "Change to another external device" below.

Change to another external device

It is possible to change a connected device with another device if there are several devices in the car. However, the device must first have been paired, see "Connect an external Bluetooth® device" above. To change to another device:

1. Press **MEDIA**, turn **TUNE** until **Bluetooth** is shown, press **OK/MENU**.
2. Check that the external device is searchable/visible via Bluetooth®, see the manual for the external device.
3. Press **OK/MENU**.
4. Turn **TUNE** to **Change device**, and confirm with **OK/MENU**.
 - > After a while, the external device's name is shown in the TV screen. If several external devices have been paired then these are also shown.
5. Select the device to be connected by turning **TUNE** and confirm with **OK/MENU**.
 - > Connection of the external device takes place.

Change audio file by pressing **◀◀** / **▶▶** on the centre console or the steering wheel keypad*.

Disconnecting the device

Automatic disconnection takes place if the external device moves out of the infotainment system's range. For more information on connection, see page 279.

Remove the connected device

1. Press Bluetooth mode on **OK/MENU**.
2. Turn **TUNE** to **Remove Bluetooth device** and confirm with **OK/MENU**.
3. Select the device to be removed by turning **TUNE**, and confirm with **OK/MENU**.
 - > A prompt asking whether or not you want to remove the connection is shown in the TV screen.
4. Press **OK/MENU** to confirm.

EXIT cancels.



Media Bluetooth®*

Random²

This function plays back the audio files on the external device in random order. Activate/deactivate the random function in Bluetooth mode under **Bluetooth menu** → **Random**.

Change audio file by pressing  /  on the centre console or the steering wheel keypad*.

Scanning of audio files in external device²

This function play backs the first ten seconds of each audio file. Activate/deactivate the function in Bluetooth mode under **Bluetooth menu** → **Scan**.

Cancel scanning with **EXIT**.

Version information Bluetooth®

The car's current Bluetooth® version can be seen in Bluetooth mode under **Bluetooth menu** → **Bluetooth software version in car**.

² Not supported by all mobile phones.

* Option/accessory, for more information, see Introduction.



Bluetooth® handsfree*

General

A mobile phone equipped with Bluetooth® can be connected wirelessly to the Infotainment system¹. The infotainment system then works handsfree, with the option to control a range of the mobile phone's functions remotely. The microphone used is located by the driver's sun visor (2). The mobile phone can be operated by its own keys irrespective of whether or not it is connected.

NOTE


Only a selection of mobile phones are fully compatible with the handsfree function. Volvo recommends that you seek assistance from an authorised Volvo dealer or visit www.volvocars.com for information on compatible phones.

When a mobile phone is connected to the car, it is also possible to stream audio files from the phone at the same time, see page 278. Switch between the main sources **TEL** and **MEDIA** to operate each one's functions.

Menus

The menus in **TEL** are controlled from the centre console and the steering wheel keypad*. For general information on menu navigation, see page 255 and menu overview, see page 259.


Overview

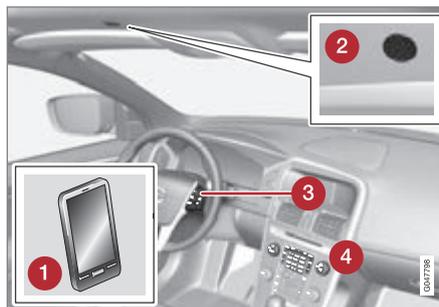

System overview

- 1 Mobile phone
- 2 Microphone
- 3 Steering wheel keypad
- 4 Centre console control panel

Phone functions, controls overview

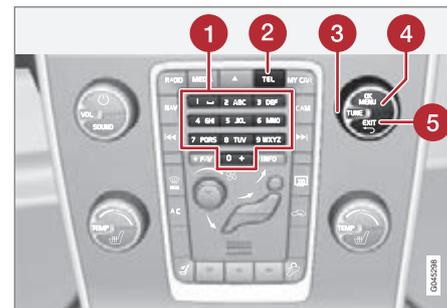

Centre console control panel.

- 1 Number and letter buttons
- 2 **TEL** button activates/searches last connected phone. If a phone is already connected, and **TEL** is pressed, a shortcut menu is shown with commonly used menu options for the phone.
- 3 **TUNE** - Turn in normal view to the right to access the phone book, and to the left for the call register for all calls; also used for navigation among the options in the screen.

¹ Applies to High Performance, High Performance Multimedia and Premium Sound Multimedia.



Bluetooth® handsfree*

- 4 Accept incoming calls, confirm your selection or go to the Phone menu by pressing **OK/MENU**.
- 5 **EXIT** - Cancels/rejects phone calls, deletes input characters, leads up in the menu system and cancels the current function.

i NOTE

If the car is equipped with a steering wheel keypad* and/or remote control* then in many cases these can be used instead of the buttons in the centre console. For a description of the buttons in the steering wheel, see page 253. For a description of the remote control, see page 298.

Remember

Activate

A short press on **TEL** activates/searches last connected phone. If a phone is already connected, and **TEL** is pressed, a shortcut menu is shown with commonly used menu options for the phone. The  symbol indicates that a phone is connected.

Connect an external Bluetooth® device

A maximum of ten external devices can be registered. Registration is performed once per device. After registration the device no

longer needs to be activated as visible/searchable.

i NOTE

If the phone's operating system is updated then it is possible that the registration of the phone is interrupted. In which case, disconnect the phone, see page 284 and then reconnect it, see page 282.

It is possible to have two Bluetooth® devices connected simultaneously. One phone and one media device, which it is possible to switch between, see page 283 or see page 279. It is also possible to use the phone while streaming audio files from a connected device.

Connecting an external device takes place in different ways depending on whether or not the device has been connected previously. The connection alternatives below assume that this is the first time the device is being connected and that no other device is connected.

There are two possible ways of connecting devices, either search for the external device from the car, or search for the car from the external device. If one option does not work then try with the other.



Example of normal view for the phone.

If you are not already in the normal view, press **TEL** in the centre console.

Alternative 1 - search for the external device via the car's menu system

1. Make the external device searchable/visible via Bluetooth®, see the external device's manual or www.volvocars.com.
2. Press **OK/MENU** and follow the instructions in the car's screen.
 - > The external device is now connected and can be controlled from the car.

Connection failed, press **EXIT** twice and connect in accordance with Alternative 2.

* Option/accessory, for more information, see Introduction.



Bluetooth® handsfree*

Alternative 2 - Search for car with the external device's Bluetooth® function.

1. Make the car searchable/visible via Bluetooth®. Turn **TUNE** to **Phone settings**, confirm with **OK/MENU**, select **Discoverable** and confirm with **OK/MENU**.
2. Select **My Volvo Car** on the external device's screen and follow the instructions.
3. Enter an optional PIN code into the external device, then select the option to connect.
4. Press **OK/MENU** and then enter the same PIN code via the car's keypad in the centre console.

When the external device is connected, the external device's Bluetooth® name is shown in the car's screen and the device can be controlled from the car.

Automatic connection

When the handsfree function is active and the last mobile phone connected is in range it is connected automatically. If the last connected mobile phone is not available then the system will try to connect a mobile phone that was paired earlier. When the audio sys-

tem searches for the last phone connected its name is shown in the screen.

Manual connection

If you want to change the connected mobile phone, go in phone mode to **Phone menu** → **Change phone**.

Change to another external device

It is possible to change a connected device with another device if there are several devices in the car. However, the device must first have been registered to the car, see Connect an external Bluetooth® device. To change to another device:

1. Check that the external device is searchable/visible via Bluetooth®, see the manual for the external device.
2. Press **TEL** and then select **Change phone**.
 - > The car searches for previously connected devices. The external devices detected are specified with their respective Bluetooth® name in the screen.
3. Select the device to be connected by turning **TUNE** and confirm with **OK/MENU**.

> Connection of the external device takes place.

To call

1. Make sure that the  symbol appears at the top of the screen and that the handsfree function is in phone mode.
2. Dial either the desired number or speed dial number, see page 288. Or in normal view turn **TUNE** to the right to access the phone book, and to the left for the call register for all calls. For information on the phone book, see page 285.
3. Press **OK/MENU**.

The call is interrupted with **EXIT**.

Disconnecting the mobile phone

Automatic disconnection takes place if the mobile phone moves out of the audio system's range. The connection to the mobile phone can be manually broken in phone mode under **Phone menu** → **Disconnect phone**. For more information on connection, see page 282.

The handsfree function is deactivated when the engine is switched off and the door is opened².

² Only Keyless Drive.



Bluetooth® handsfree*

When the mobile phone has been disconnected an ongoing call can be continued by using the mobile phone's built-in microphone and speaker.

NOTE

Even when your mobile phone has been manually disconnected, some mobile phones may automatically couple up to the last handsfree unit connected, e.g. when a new call begins.

Remove the device

A connected mobile phone can be deregistered and removed. This is performed in phone mode under **Phone menu** → **Remove Bluetooth device**.

Making and receiving calls

Incoming call

- Press **OK/MENU** to answer the call, even if the audio system is in e.g. **RADIO** or **MEDIA** mode.

Refuse or end with **EXIT**.

Automatic answer

The automatic answer function means that calls are accepted automatically.

- Activate/deactivate in phone mode under **Phone menu** → **Call options** → **Auto answer**.

In call menu

Press **OK/MENU** during an ongoing call to access the following functions:

- **Mute** - audio system microphone is muted.
- **Mobile phone** - the call is transferred from handsfree to the mobile phone. For some mobile phones the connection is interrupted. This is normal. The handsfree function asks if you want to reconnect.
- **Dial number** - option to call a third party using the number keys (current call set in standby).

Call lists

The call lists are copied to the handsfree function at each new connection and are then updated during the connection. In normal view, turn to the left with **TUNE** to see the call register for **All calls** .

In phone mode it is possible to see all the call lists under **Phone menu** → **All calls**:

- **All calls**
- **Missed calls**
- **Answered calls**

- **Dialled calls**
- **Call duration**

NOTE

Certain mobile phones show a list of the last dialled numbers in reverse order.

Voice mailbox

In normal view a speed dial number for the voice mailbox can be programmed in and then accessed later via a long press on **1**.

Voice mailbox number is changed in phone mode under **Phone menu** → **Call options** → **Voice mailbox number** → **Change number**. If there is no number stored then this menu can be reached with one long press on **1**.

Audio settings

Phone call volume

The phone call volume can only be changed during a call. Use the steering wheel keypad* or turn the **VOL** control.

Audio system volume

Providing there is no ongoing call taking place, the audio system volume is controlled as usual by turning **VOL**.

If an audio source is active during an incoming call then it can be muted automatically.

**Bluetooth® handsfree***

Activate/deactivate in phone mode under **Phone menu → Phone settings → Sounds and volume → Mute radio/media**.

Ring volume

In phone mode go to **Phone menu → Phone settings → Sounds and volume → Ring volume** and adjust by turning **VOL**. Press **OK/MENU** to hear the audio volume. Press **EXIT** to save.

Ring signals

The handsfree function has integrated ring signals that can be selected in phone mode under **Phone menu → Phone settings → Sounds and volume → Ring signals → Ring signal 1** etc.

NOTE

For some mobile phones, the ringtone on the phone connected will not be switched off when one of the inbuilt signals for the handsfree system is used.

In order to select the connected phone's ring signal³, go in phone mode to **Phone menu → Phone settings → Sounds and volume**

→ **Ring signals → Mobile phone ring signal**.

Phone book

There are two phone books. These are merged into one in the car and are displayed as a single phone book in the car.

- The car downloads the mobile phone's phone book and only displays this phone book when the mobile phone from which this phone book was downloaded is connected.
- The car also has a built-in phone book. This contains all the contacts stored in the car irrespective of which phone was connected when saving them. These contacts are visible for all users, regardless of the mobile phone that is connected to the car. If a contact is saved in the car then the symbol  is shown in front of the contact in the phone book.

NOTE

Changes made from the car to a record in the mobile phone's telephone book will result in a new record in the car's telephone book, i.e. changes will not be saved to the phone. From the car, this will now look like you have double records, with different icons. Note also that when a short-cut number is saved or a change to a contact is made, this will result in a new record in the car's phone book.

All use of the phone book requires that the  symbol appears at the top of the screen and that the handsfree function is in phone mode.

The audio system stores a copy of the phone book from each paired mobile phone. The phone book can be copied automatically to the audio system during each connection.

- Activate/deactivate the function in phone mode under **Phone menu → Phone settings → Download phone book**.

If the phone book contains a ringing caller's contact information then this is shown in the screen.

³ Not supported by all mobile phones.



Bluetooth® handsfree*

Quick search for contacts

In normal view turn **TUNE** to the right to obtain a list of contacts. Turn **TUNE** to select and press **OK/MENU** to call.

Under the name of the contact is the phone number that is selected by default. If the symbol > appears to the right of the contact then there are several phone numbers stored for the contact. Press **OK/MENU** to show the numbers. Change and dial a number other than that selected by default by turning **TUNE**. Press **OK/MENU** to dial.

Search in the list of contacts by using the centre console's keypad to key in the start of the contact's name (see "Character table keypad in centre console" for button functions).


The list of contacts can also be accessed from normal view by pressing and holding the button on the centre console's keypad with the letter that the contact searched for starts with. For example, a long press on the button for **6** gives instant access to that part of the list where the contacts with the letter **M** are located.

Character table keypad in centre console

| Key | Function |
|--------|--|
| 1 | Space . , - ? @ : ; / () 1 |
| 2 ABC | A B C Å Ä Æ À Ç 2 |
| 3 DEF | D E F È É 3 |
| 4 GHI | G H I ì 4 |
| 5 JKL | J K L 5 |
| 6 MNO | M N O Ö Ø Ñ Ò 6 |
| 7 PQRS | P Q R S ß 7 |
| 8 TUV | T U V Ü Û 8 |
| 9 WXYZ | W X Y Z 9 |
| * FAV | Shift between upper and lower case letter. |

| Key | Function |
|-------|----------|
| 0 + | + 0 p w |
| #INFO | # * |

Searching for contacts

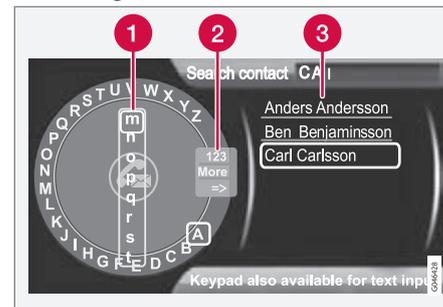

Search contacts using the text wheel.

- 1 Character list
- 2 Changing the input mode (see table below)
- 3 Phone book



Bluetooth® handsfree*

To search for or edit a contact, go in phone mode to **Phone menu** → **Phone book** → **Search**.

i NOTE

There is no text wheel for High Performance, so **TUNE** cannot be used there to input characters: only the digit and letter buttons on the control panel in the centre console can be used for this.

1. Turn⁴ **TUNE** to the desired letter, press **OK/MENU** to confirm. The number and letter buttons on the control panel in the centre console can also be used.
2. Continue with the next letter and so on. The result of the search is shown in the phone book (3).
3. To change the input mode to numbers or special characters, or to go to the phone book, turn **TUNE** to one of the options (see explanation in the table below) in the list for changing the input mode (2), press **OK/MENU**.


| | |
|---------|---|
| 123/ABC | Change between letters and numbers with OK/MENU . |
| More | Change to special characters with OK/MENU . |
| => | Leads to the phone book (3). Turn TUNE to select a contact, press OK/MENU to see the saved numbers and other information. |

A short press on **EXIT** deletes an input character. A long press on **EXIT** will clear all entered characters.

By pressing a number key in the centre console when the text wheel is shown (see previous illustration), a new character list (1) is shown in the screen. Continue repeatedly pressing the number key to the desired letter and then release. Continue with the next letter and so on. When a button is depressed the entry is confirmed when another button is depressed.

To enter a number, hold in the corresponding number key.

New contact

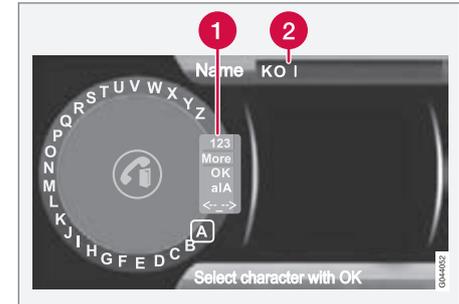

Entering letters for New contact.

- 1 Changing the input mode (see table below)
- 2 Input field

New contacts can be added in phone mode under **Phone menu** → **Phone book** → **New contact**.

i NOTE

There is no text wheel for High Performance, so **TUNE** cannot be used there to input characters: only the digit and letter buttons on the control panel in the centre console can be used for this.

⁴ Only applies to High Performance Multimedia and Premium Sound Multimedia.



Bluetooth® handsfree*

1. When the **Name** row is selected, press **OK/MENU** to reach the input mode (illustration above).
2. Turn⁴ **TUNE** to the desired letter, press **OK/MENU** to confirm. The number and letter buttons on the control panel in the centre console can also be used.
3. Continue with the next letter and so on. The name entered is shown in the input field (2) in the screen.
4. To change the input mode to numbers, special characters, change between uppercase/lowercase letters, etc., turn **TUNE** to one of the options (see explanation in the table below) in the list (1) and then press **OK/MENU**.

When the name has been fully entered, select **OK** in the list in the screen (1) and press **OK/MENU**. Now continue with the telephone number in the same way as above.

When the telephone number has been entered, press **OK/MENU** and select a telephone number type (**Mobile phone**, **Home**, **Work** or **General**). Press **OK/MENU** to confirm.

When all details have been filled in, select **Save contact** in the menu to save the contact.

| | |
|---------|--|
| 123/ABC | Change between letters and numbers with OK/MENU . |
| More | Change to special characters with OK/MENU . |
| OK | Save and go back to Add contact with OK/MENU . |
| a A | Change between uppercase and lowercase letters with OK/MENU . |
| <- -> | Press OK/MENU , the cursor moves to the input field (2) at the top of the screen. The cursor can now be moved, with TUNE , to the appropriate place to e.g. insert new letters or delete with EXIT . To be able to insert new letters first go back to the input mode, by pressing OK/MENU . |

Speed dial numbers

Use phone mode to add speed dial numbers under **Phone menu** → **Phone book** → **Speed dial**.

Dialling with speed dial numbers can be performed in phone mode using the number keys on the keypad in the centre console, by pressing a number key and then pressing **OK/MENU**. If there is no contact stored on the speed dial number then an option is shown to save a contact to the selected speed dial number.

Receiving a vCard

It is possible to receive a vCard to the car's phone book from other mobile phones (other than the one currently connected to the car). In order to allow this the car is set to visible mode for Bluetooth®. The function is activated in phone mode under **Phone menu** → **Phone book** → **Receive vCard**.

Memory status

Memory status of the car's phone book and the connected mobile phone's phone book can be seen in phone mode under **Phone menu** → **Phone book** → **Memory status**.

⁴ Only applies to High Performance Multimedia and Premium Sound Multimedia.

* Option/accessory, for more information, see Introduction.

**Bluetooth® handsfree*****Delete phone book**

The car's phone book can be deleted, this is carried out in phone mode under **Phone menu** → **Phone book** → **Clear phone book**.

i NOTE

Deleting the car's telephone book only deletes contacts in the car's telephone book. Contacts in the mobile phone's phone book are not deleted.

Version information Bluetooth®

The car's current Bluetooth® version can be seen in phone mode under **Phone menu** → **Phone settings** → **Bluetooth software version in car**.



Voice recognition* mobile phone

General

The infotainment system's voice recognition¹ allows the driver to voice-activate certain functions in a Bluetooth®-connected mobile phone or in Volvo's navigation system - RTI (Road and Traffic Information System).

NOTE

- The information in this section describes the use of voice commands to control a **mobile phone connected using Bluetooth®**. For detailed information on using a mobile phone connected using Bluetooth® with the car's Infotainment system see page 281.
- The Volvo navigation system RTI (Road and Traffic Information System) has a separate user manual which contains more information on voice control and voice commands to control that system.

Voice commands offer convenience and help the driver to avoid being distracted, and instead concentrate on driving and focus attention on the road and traffic conditions.

WARNING

The driver always holds overall responsibility for driving the vehicle in a safe manner and complying with all applicable rules of the road.

The voice recognition system allows the driver to voice-activate certain functions of a Bluetooth®-connected mobile phone and in Volvo's navigation system - RTI (Road and Traffic Information System), while the driver can keep his/her hands on the wheel at the same time. The input data are in dialogue form with spoken commands from the user and verbal replies from the system. The voice recognition system uses the same microphone as the Bluetooth® handsfree system (see illustration on page 281) and the voice recognition system's replies come via the car's speakers.

Language



Language list.

Voice recognition is not possible for all languages. Languages available for voice recognition are marked with an icon in the language list - . Changing the language is performed in the menu system **MY CAR**, see page 213.

¹ Only applies to vehicles equipped with Volvo's navigation system - RTI (Road and Traffic Information System).

* Option/accessory, for more information, see Introduction.



Voice recognition* mobile phone

Remember



Steering wheel keypad.

- 1 Button for voice recognition

To activate the system

Before voice commands to a mobile phone can be used the mobile phone must be paired and connected via Bluetooth® hands-free. If a telephone command is given and no mobile phone is paired, then the system will provide information about this. For information on pairing and connecting a mobile phone, see page 282.

- Press the button for voice recognition (1) in order to activate the system and initiate a dialogue with voice commands. The system will then display commonly used commands in the screen in the centre console.

Keep the following things in mind when you use the voice recognition system:

- For a command - speak after the tone, with normal voice at normal speed.
- Do not speak while the system is replying (the system cannot understand commands during this time).
- The car's doors, windows and sunroof* must be closed.
- Avoid background noise in the passenger compartment.

NOTE

If the driver is unsure of which command to use, he (she) can say "Help" - the system then responds with a few different commands which can be used in the current situation.

Voice commands can be disabled by:

- saying "Cancel"
- not speaking
- a long press on the steering wheel button for Voice recognition
- Press **EXIT** or another main source button (e.g. **MEDIA**).

Help functions for voice recognition

- Instructions:** A function that helps you get familiar with the system and the procedure for giving commands.
- Voice training:** A function that enables the voice recognition system to learn to know your voice and your accent. The function provides an opportunity to voice train two user profiles.

The help functions can be accessed by pressing the **MY CAR** button on the control panel in the centre console and then turning **TUNE** to the desired menu option.

Instructions

The instructions can be started in two ways:

NOTE

This instruction and voice training can only be started when the car is parked.

- Press the button for Voice recognition and say "Voice tutorial".
- Activate the instructions in the menu system **MY CAR** under **Settings** → **Voice settings** → **Voice tutorial**. For a description of the menu system, see page 211.

The instructions are divided into 3 lessons, which take around 5 minutes in total to complete. The system starts with the first lesson.

* Option/accessory, for more information, see Introduction.



Voice recognition* mobile phone

To skip a lesson and go to the next one, press the button for voice recognition and say "Next". Go back to the previous lesson by saying "Previous".

Exit the instructions by means of a long press on the button for voice recognition.

Voice training

The system displays up to fifteen phrases for you to say. Voice training can be started in the menu system **MY CAR** under **Settings** →

Voice settings → **Voice training**. Choose between **User 1** or **User 2**. For a description of the menu system, see page 211.

After voice training has been completed, remember to set your user profile under **Voice user setting**.

Additional settings in MY CAR

- **User setting** - Two user profiles can be set, the function is activated in the menu system **MY CAR** under **Settings** → **Voice settings** → **Voice user setting**. Choose between **User 1** or **User 2**. For a description of the menu system, see page 211.
- **Voice output volume** - Can be changed in the menu system **MY CAR** under **Settings** → **Voice settings** → **Voice output volume**. For a description of the menu system, see page 211.

Using voice commands

The driver initiates a dialogue with the voice commands by pressing the button for voice recognition (see illustration on page 291).

Once a dialogue has been started, commonly used commands will be shown in the screen. Greyed-out text or text within brackets is not included in the spoken command.

When the driver becomes accustomed to the system, he/she can speed up the command dialogue and skip the prompts from the system, by briefly pressing the button for voice recognition.

Commands can be given in several ways

The command "Phone call contact" can be pronounced as e.g.:

- "Phone > Call contact" - Say "Phone", wait for the system's reply, and then continue by saying "Call contact."

or

- "Phone call contact" - Say the whole command in one sequence.

Quick commands

Quick commands for the phone can be found in the menu system **MY CAR** under **Settings** → **Voice settings** → **Voice command list** → **Phone commands** and **General**

commands. For a description of the menu system, see page 211.

Dial a number

The system understands the numbers **0** (zero) to **9** (nine). These numbers can be pronounced individually, in groups of several numbers at a time, or the whole number all at once. Numbers greater than **9** (nine) cannot be handled by the system, e.g. **10** (ten) or **11** (eleven) are not possible.

The following is an example of a dialogue with voice commands. The system's reply will vary depending on the situation.

The user starts the dialogue by saying:

Phone > dial number

or

Phone dial number

System reply

Number?

User action

Start saying the numbers (as individual units, i.e. six-eight-seven, etc.) in the phone number. If you say several numbers and pause, the system will repeat them, and then say "Continue".

Continue to say the numbers. When finished, finish the command by saying "Call".

**Voice recognition* mobile phone**

- You can also change the number by saying the commands "Correct" (which deletes the last spoken group of numbers) or "Delete" (which deletes the whole spoken phone number).
- If there are several contacts with similar names, they will be presented in the screen in the numbered rows and the system prompts you to select a row number.
- If there are more rows in the list than can be displayed simultaneously, saying "Down" allows you to scroll down in the list (and saying "Up" allows you to scroll up in the list).

Dialling from the call register

The following dialogue allows you to make a phone call from one of your mobile phone's call registers.

The user starts the dialogue by saying:

Phone > call from the call register

or

Phone call from the call register

Continue by responding to the system's prompts.

Call a contact

The following dialogue allows you to call your pre-defined contacts in the mobile phone.

The user starts the dialogue by saying:

Phone > call contact

or

Phone call contact

Continue by responding to the system's prompts.

Consider the following when you call a contact:

Calling voice mailbox

The following dialogue allows you to call your voice mailbox to check if you have received any messages. The phone number for your voice mailbox must be registered in the Bluetooth® function, see page 284.

The user starts the dialogue by saying:

Phone > call voice mailbox

or

Phone call voice mailbox

Continue by responding to the system's prompts.



TV*

General

i NOTE

This system only supports TV broadcasts in the countries that broadcast in MPEG-2 or MPEG-4 format and follow the DVB-T standard. The system does not support analogue broadcasts.

i NOTE

The TV picture is only shown when the car is stationary. When the car is moving at a speed over about 6 km/h the picture disappears, **No visual media available while driving** appears on the display screen, although the audio is heard during this time. The picture reappears when the car has stopped.

Cars with RSE do not shut off the rear screens.

i NOTE

The reception is dependent both on how good the signal strength and signal quality are. The transmission may be disturbed by various factors such as tall buildings or the TV transmitter being far away. Coverage level can also vary depending on where in the country you are located.


! IMPORTANT

A TV licence is required for this product in some countries.

Menus

The menus in **MEDIA** are controlled from the centre console and the steering wheel keypad*. For general information on menu navigation, see page 255 and menu overview, see page 259.

Overview

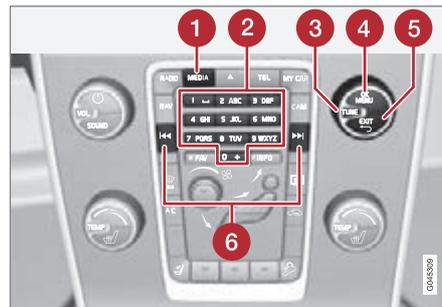

Centre console control panel.

- 1** **MEDIA** button. Last active source (e.g. iPod® or TV) is activated. If a source is activated and you press **MEDIA** then a

shortcut menu is shown with commonly used menu options.

- 2** Station presets, numeric input.
- 3** Navigate in channel lists or menus by turning **TUNE**.
- 4** Confirm your selection or go to the menu by pressing **OK/MENU**.
- 5** **EXIT** - leads up in the menu system, stops the function in progress.
- 6** The next available channel is shown by pressing **◀** / **▶**.

i NOTE

If the car is equipped with a steering wheel keypad* and/or remote control* then in many cases these can be used instead of the buttons in the centre console. For a description of the buttons in the steering wheel, see page 253. For a description of the remote control, see page 298.



Watch TV

- Press **MEDIA**, turn **TUNE** until **TV** is shown in the screen, press **OK/MENU**.
 - > A search starts and after a short while the most recently used channel is shown.

Changing channel

It is possible to change channel as follows:

- Turn **TUNE**, a list of all available channels in the area is shown. If any of these channels is already saved as a preset then its preset number is shown to the right of the channel name. Continue turning **TUNE** to reach the desired channel and press **OK/MENU**.
- By pressing the preset buttons (0-9).
- Via a short press on the **◀** / **▶** buttons the next available channel in the area is shown.

NOTE

If the car has been moved within the country, for example, from one city to another, it is not certain that the presets are available at the new location as the frequency range may have changed. In which case, carry out a new search and save a new preset list, see the function "Save the available TV channels as presets", page 296.

NOTE

If no reception is available on the preset buttons, it may be because the car is at a location other than where the scan of TV channels was run, for example, if the car was driven from Germany to France. A new selection of country and a new search may then need to be carried out.

Searching TV channels/Preset list

1. Press TV mode on **OK/MENU**.
2. Turn **TUNE** to **TV menu** and press **OK/MENU**.
3. Turn **TUNE** to **Select country** and press **OK/MENU**.
 - > If one or more countries have previously been selected then they are shown in a list.

4. Turn **TUNE** to either **Other countries** or one of the previously selected countries. Press **OK/MENU**.
 - > A list of all available countries is shown.
5. Turn **TUNE** to the desired country (e.g. Sweden) and press **OK/MENU**.
 - > An automatic scan for available TV channels starts, this scan takes a little while. During this time the figure for each channel found and added as a preset is shown. When the scan is complete a message is shown and the picture is shown. A preset list (max. 30 presets) has now been created and is available. To change channel, see page 295.

The scan and preset storage can be cancelled with **EXIT**.

Channel management

The preset list can be edited. You can change the order of the channels that are shown in the preset list. A TV channel can have more than one place in the preset list. The TV channel positions can also vary in the preset list.

To change the order in the preset list, go in TV mode to **TV menu** → **Reorganise presets**.



TV*

1. Turn **TUNE** to the channel you want to move in the list and confirm with **OK/MENU**.
 - > The selected channel is highlighted.
2. Turn **TUNE** to the new location in the list and confirm with **OK/MENU**.
 - > The channels change places with each other.

After the preset channels (max. 30) come all the other channels available in the area. It is possible to move a channel up to a place in the preset list.

Save the available TV channels as presets

If the car has been moved within the country, for example, from one city to another, it is not certain that the presets are available at the new location as the frequency range may have changed. In which case, carry out another scan and save a new preset list.

1. Press TV mode on **OK/MENU**.
2. Turn **TUNE** to **TV menu** and press **OK/MENU**.
3. Turn **TUNE** to **Autostore** and press **OK/MENU**.
 - > An automatic scan for available TV channels starts, this scan takes a little while. During this time the figure for

each channel found and added as a preset is shown. When the scan is complete a message is shown and the picture is shown. A preset list (max. 30 presets) has now been created and is available. To change channel, see page 295.

Scanning the TV channels

This function automatically scans through the frequency range for all channels available in the area where you are. When a channel is found, it is shown for approx. 10 seconds before scanning is resumed. Scanning is stopped with **EXIT**, then the channel that you just watched continues to be shown. Scanning does not affect the preset list.

Activate scanning in TV mode under **TV menu** → **Scan**.

Teletext

It is possible to read Teletext. Follow these steps:

1. Press the  button on the remote control.
2. Enter the page number (3 digits) with the number keys (0-9) to select page.
 - > The page is shown automatically.

Enter new page number, or press the remote control buttons  /  to go to the next page.

Return to TV screen with **EXIT** or by pressing the  button on the remote control.

It is also possible to control the teletext with the coloured buttons on the remote control.

Information about the current programme

Press the **INFO** button in order to display the information about the current programme, the next programme and its start time. If the **INFO** button is pressed once more then additional information on the current programme can sometimes be displayed, such as start and end times and a brief description of the current programme. For more information on the **INFO** button, see page 253.

To return to the TV picture, wait several seconds or press **EXIT**.



Picture settings

The settings for brightness and contrast can be adjusted. For more information, see page 274.

The reception is lost

If the reception for the TV channel that is being shown disappears then the picture will freeze. Shortly after this a message appears informing that the reception has been lost for the current TV channel, and a new search for the channel continues. When the reception returns the display of the TV channel starts immediately. It is possible to change channel at any time when the message is shown.

If the message **Reception lost, searching** is shown then this is because the system has detected that there is no reception for all TV channels. One possible reason may be that a border has been crossed and that the system is set to the wrong country. In which case, change to the right country in accordance with "Searching TV channels/Preset list", see page 295.



Remote control*

General*



1 Corresponds to **TUNE** in the centre console.

The remote control can be used for all functions in the infotainment system. The remote control's buttons have the same functions as the buttons in the centre console or steering wheel keypad*.

When using the remote control, first press the remote control's button $\text{L} \begin{matrix} \text{F} \\ \text{R} \end{matrix}$ to position **F**. Then aim the remote control at the IR receiver, which is located to the right of the **INFO** button (see page 253) in the centre console.

If the car is fitted with rear TV screens* and you want to operate one of these, select the required TV screen with the button $\text{L} \begin{matrix} \text{F} \\ \text{R} \end{matrix}$ on the remote control. Then aim the remote control at the IR receiver for the TV screen to be operated, see page 300.

WARNING

Keep loose objects such as mobile phones, cameras, remote controls for accessories, etc. in the glove compartment or other compartments. Otherwise they may injure people in the car in the event of sudden braking or a collision.

NOTE

Do not expose the remote control to direct sunlight (e.g. on the instrument panel) - otherwise problems may arise with the batteries.

Functions

| Key | Function |
|---|---|
| $\text{L} \begin{matrix} \text{F} \\ \text{R} \end{matrix}$ | Change between: L = Rear left TV screen* F = Front TV screen R = Rear right TV screen* |
| NAV | Change to navigation* |
| RADIO | Change to radio source (e.g. FM1) |
| MEDIA | Change to media source (Disc , TV* etc.) |
| TEL | Change to Bluetooth® hands-free* |
|  | Scroll/fast rewind, change track/song |
|  | Play/pause |



Remote control*

| Key | Function |
|-----------------|--|
| | Stop |
| | Scroll/fast forward, change track/song |
| DVD MENU | Menu |
| EXIT | To previous, cancels function, deletes input characters |
| | Navigate up/down |
| | Navigate up/down |
| | Navigate right/left |
| | Navigate right/left |
| OK MENU | Confirm selection or go to the menu system for the selected source |
| | Volume, decrease |
| | Volume, increase |
| 0-9 | Preset channels, number and letter input |
| FAV * | Shortcuts for favourite setting. |

| Key | Function |
|---------------|---|
| INFO # | Information about the current programme, song, etc. Also used when there is more information available than can be shown in the display screen. |
| | Selection of language for sound-track |
| | Subtitles, selection of language for text |
| | Teletext*, On/Off |


Replacing the battery in the remote control

NOTE

Battery life is normally 1-4 years and depends on how much the remote control is used.

The remote control is powered by four batteries of the AA/LR6 type.

Take along extra batteries for a long journey.

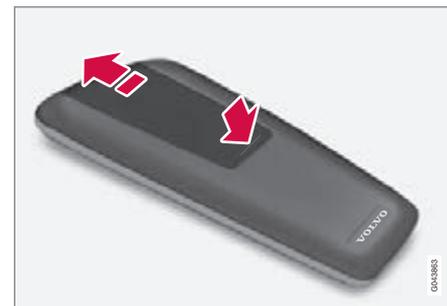

1. Push down the catch on the battery cover and slide the battery cover in the direction of the infrared lens.
2. Remove the used batteries, turn the new batteries in accordance with the symbols in the battery compartment and fit them.
3. Refit the cover.




NOTE

Be sure to dispose of the exhausted batteries in an environmentally safe manner.



RSE - Rear Seat Entertainment system*

Overview

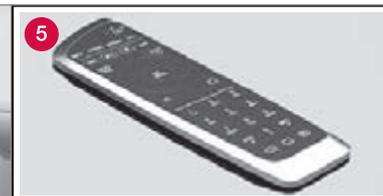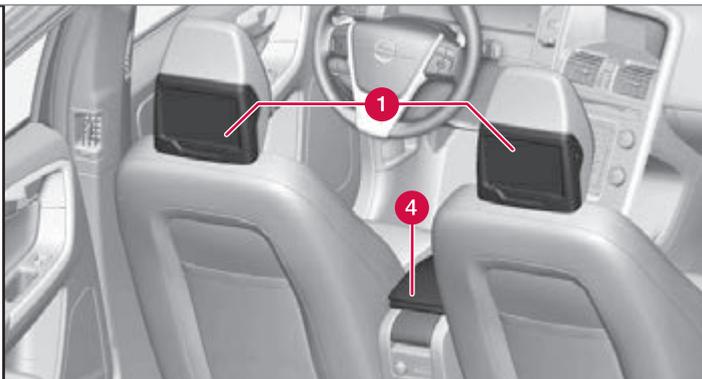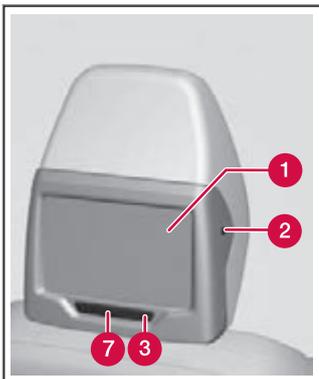

- 1 Screen
- 2 Headphones socket
- 3 On/Off button
- 4 A/V-AUX input
- 5 Remote control
- 6 Headphones
- 7 IR receiver/transmitter

General

The RSE system is a system for rear-seat entertainment that makes it possible to e.g. watch video, play music, listen to the radio, watch TV* or connect other external devices (e.g. a games console).

The RSE system is fully integrated with the car's infotainment system and can be used simultaneously with other functions of the infotainment system.

When the rear seat passengers are using e.g. A/V-AUX or watching TV* while listening with headphones, the driver and front seat passenger can still use the car's radio or media

player. However, only one disc at a time can be played in the media player. It is possible to play back music from e.g. an iPod® or steaming audio files via Bluetooth®.

The RSE system can be controlled from the front screen (parental control).

It is possible to display or play back various media from different sources on each screen. It is also possible to display or play back media from the same source on one or more of the screens (front, right rear and left rear). It is not possible to play back video from USB while a CD or DVD disc is being played back.



RSE - Rear Seat Entertainment system*

! IMPORTANT

When loading luggage and large objects in the vehicle, ensure that sufficient space is left for the TV screens in the head restraints, so that the TV screens are not scratched or damaged. Cover the TV screens with appropriate covering material during loading.

i NOTE

The TV screens and remote control do not work at very low or high temperatures - they only "come alive" after the climate control system has created an acceptable operating temperature in the passenger compartment.

i NOTE

Clean the lens on the IR receiver regularly with a damp cloth, a dirty lens affects remote control function.

Power consumption, ignition positions

The system can be activated in ignition position **I** or **II** and while the engine is running. When the car is being started the film stops temporarily and continues when the engine has started.

i NOTE

For prolonged use (more than 10 minutes) with the engine switched off, the capacity of the vehicle's battery may fall to such a low level that it is not possible to start the engine.

In this case a message will be displayed on the screen.

Menus


The menus for RSE are controlled using the remote control. For general information on menu navigation and menu structures, see page 306.

Remote control

The RSE system is equipped with a remote control. Using this it is possible to control the functions for each screen. The remote control can also be used to control other functions in the infotainment system, even from the rear seat.

For information on the remote control, see page 298.

Wireless headphones

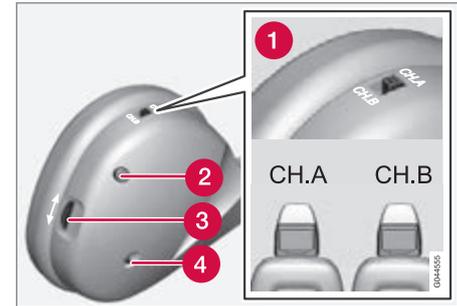

- 1 Control for channel A (**CH.A**) or channel B (**CH.B**)
- 2 On/Off button
- 3 Volume
- 4 Indicator lamp On/Off

The RSE system includes two wireless headphones.

The wireless headphones are activated with the On/Off button (2), an indicator lamp illuminates (4). Select **CH.A** (channel A) or **CH.B** (channel B) using the control (1). Adjust the volume using the volume control (3).

The headphones are automatically switched off after about 3 minutes if they are not used.




RSE - Rear Seat Entertainment system*

Battery replacement in wireless headphones

The headphones are powered by two batteries of the AAA model.

Take along extra batteries for a long journey.

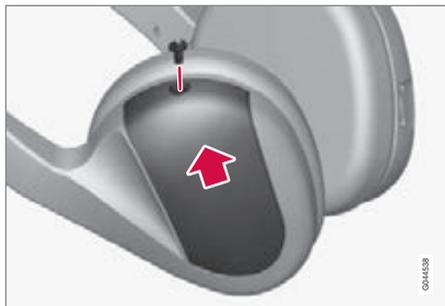

Wireless headphones.

1. Unscrew the screw and detach the battery cover.
2. Remove the used batteries, turn the new batteries in accordance with the symbols in the battery compartment and insert them.
3. Fit the cover and screw in the screw.

Environmental care

Be sure to dispose of the exhausted batteries in an environmentally safe manner.

Headphones socket

It is possible to connect external headphones via the headphones socket (3.5 mm) on the side of the head restraints, see the illustration on page 300. The volume is controlled using the remote control.

A/V-AUX input, Electrical socket 12 V

The input allows you to connect other equipment. Always follow the instructions included with the external equipment, or from the manufacturer or reseller, when connecting. Equipment connected via the A/V-AUX input can use the screens, wireless headphones, headphones sockets and the car's speakers.

NOTE

The customer is responsible that equipment connected to the A/V-AUX input or headphones socket does not cause interference in the vehicle's RSE system.

Connection of A/V-AUX input



The A/V-AUX input is located under the armrest in the tunnel console.

1. Connect the video cable to the yellow socket.
2. Connect the left-hand audio cable to the white socket and the right-hand one to the red socket.
3. Connect the power cable to the electrical socket if your equipment is designed for 12 V.

Always follow the instructions for the external equipment when connecting.

For electrical socket location, see page 247



RSE - Rear Seat Entertainment system*

Playing back audio/video via the A/V-AUX input

1. Switch on the rear screen by means pressing the On/Off button in the screen.
2. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to **A/V AUX**, confirm selection with **OK/MENU**.
3. Switch on the connected device and press **PLAY** or equivalent on the connected device.

Input volume

The input volume is adjusted in the menu under **A/V AUX input volume**.


To activate the system

The RSE system can be activated from either the front or rear screen.

From the front screen, press **MEDIA**, turn **TUNE** and select **RSE**, confirm with **OK/MENU**.

From the rear screen, by means of pressing the On/Off button on the rear screen and then pressing **MEDIA** or **RADIO** on the remote control, turn **TUNE** and select a source (e.g. Disc), confirm selection with **OK/MENU**.

Settings from the front screen

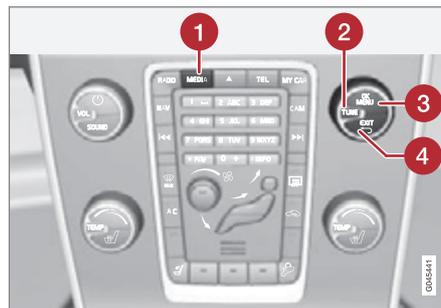

- 1 **MEDIA**
- 2 **TUNE**
- 3 **OK/MENU**
- 4 **EXIT**

Selection of source in the rear screens

From the front screen it is possible to select the source (what shall be displayed or played back) for the right and left-hand rear screens respectively. It is possible to select the same source for both or different sources for the right and left-hand screens respectively.

1. Press **MEDIA**, turn **TUNE** to scroll down to **RSE** in the screen, confirm selection with **OK/MENU**.
2. Turn **TUNE** to select the right, left-hand or both screens, and confirm with **OK/MENU**.
3. Turn **TUNE** to select **RADIO**, **MEDIA** (or **RSE settings**). Press **OK/MENU** to confirm.
4. Turn **TUNE** to the desired source (e.g. Disc) and confirm with **OK/MENU**. The selected source will start automatically (if e.g. a disc is in the media player).

Cancel and go back with **EXIT**.

The remote control can also be used for settings. For more information on the remote control, see page 298.

Parental control for the TV*

It is possible to set a permitted age limit for the TV, so that only programmes for the appropriate age can be viewed. The setting is activated for both screens.

Activate under **RSE settings** → **TV parental control**, in accordance with point 2-4 in the section "Selection of source in the rear screens", see page 303. Choose between **Age 0-6**, **Age 7-13**, **Age 14-18** and **No parental control**.

* Option/accessory, for more information, see Introduction.



RSE - Rear Seat Entertainment system*

Audio off

It is possible to mute the two rear screens from the front screen. The function is activated under **RSE settings** → **Mute**, in accordance with point 2-4 in the section "Selection of source in the rear screens", see page 303.

Screen off

It is possible to switch off the video for the two rear screens from the front screen. The function is activated under **RSE settings** → **Display off**, in accordance with point 2-4 in the section "Selection of source in the rear screens", see page 303.

Press one of the remote control's numeric keys (**0 - 9**) to switch on the screen again. The screen is also switched to the **On** mode when the ignition is switched on.

Switching off the remote control (front)

It is possible to switch off the IR receiver for the front screen, which means that the remote control cannot be used for the front screen. The function is activated under **RSE settings** → **Disable remote control (front)**, in accordance with point 2-4 in the section "Selection of source in the rear screens", see page 303.

Screen settings¹ rear screen

When playing back video files and displaying TV* a pop-up menu is available by means of pressing **OK MENU** on the remote control. The pop-up menu has different content depending on what is being played back or displayed.

Day/Night mode

The screen can be set in three different modes for different light conditions. Choose between **Auto**, **Day** and **Night**.

Press **OK MENU** on the remote control and change the mode under **Day/Night mode** in the screen. For general information on menu navigation and menu structures, see page 306.

Picture settings

You can adjust the settings for brightness, contrast, shade and colour.

Press **OK MENU** on the remote control and change the mode under **Image settings** in the screen. For general information on menu navigation and menu structures, see page 306.

Display format

It is possible to choose between display formats **Normal**, **Zoom** and **Screen fit**.

Normal - The image is shown in its normal mode (normally 4:3 or 16:9 format).

Zoom - Full screen used but parts of the image are cut off.

Screen fit - Full screen used but image proportions may be slightly distorted.

Unless otherwise stated the image is displayed in the screen format **Normal**.

Press **OK MENU** on the remote control and change the mode under **Screen format** in the screen. For general information on menu navigation and menu structures, see page 306.

Source menu

What is shown in the pop-up menu for the source menu depends on what is being played back or displayed, it can be e.g. **CD/DVD data menu** or **USB menu**. For general information on menu navigation and menu structures, see page 306.

DVD disc's menu²

If a DVD video disc is played back then this menu option is shown in the pop-up menu.

¹ Only available for playing back video files and displaying TV*.

² Only applies to DVD video discs.

**RSE - Rear Seat Entertainment system***

For general information on menu navigation and menu structures, see page 306.

Menu settings from the rear screen

For general information on menu navigation and menu structures, see page 306.

Random³

See page 273.

Repeat folder⁴

See page 273.

DivX® Video On Demand⁴

The media player can be registered in order to play DivX VOD type files from burned discs or USB. The code for registration is available in disc mode or USB mode under **DivX® VOD code**. For more information visit www.divx.com/vod.

USB hub

It is possible to connect a USB hub to the USB connection, see page 277.

TV settings***Searching TV channels/Preset list**

See page 295.

Save the available TV channels as presets

See page 296.

Scanning the TV channels

See page 296.

Music, video, radio and TV***Playing back music**

It is possible to play back music from disc tracks/audio files via the car's media player, USB port/AUX input or via streaming audio files from a Bluetooth®-connected phone.

 NOTE

The system only supports one iPod® user at a time in the navigation mode (playlist).

For more information about media players, USB/AUX and Media Bluetooth®, see the pages 271, 275 and 278.

1. Switch on the wireless headphones, select **CH.A** for left-hand screen or **CH.B** for right-hand screen.
2. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to desired source (**Disc**, **USB**, **AUX** etc.), confirm selection with .
3. Insert a CD disc in the car's media player or connect an external audio source via the car's USB port/AUX input or via Bluetooth®.

Playback and navigation in playlists

Rotate the scroll wheel on the remote control to access the playlist/folder structure.  either gives confirmation of subfolder selection or starts playing back the selected disc track/audio file. It is also possible to play back the disc track/audio file using  on the remote control and change the disc tracks/audio file using  / . Stop playback using .

For more information, see page 272.

Watching video

It is possible to watch video from disc tracks/video files via the car's media player or USB port.

³ Applies to CD-Audio, CD/DVD discs, USB and iPod®.

⁴ Applies to CD/DVD discs and USB.



RSE - Rear Seat Entertainment system*

For more information about media players and USB, see the pages 271 and 275.

1. Switch on the wireless headphones, select **CH.A** for left-hand screen or **CH.B** for right-hand screen.
2. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to desired source (**Disc** or **USB**), confirm selection with .
3. Insert a DVD disc in the car's media player or connect an external source via the car's USB port.

Playback and navigation

Play back disc track/video file using on the remote control and change disc track/video file using / . Stop playback using . For more information about playback and navigation of DVD video discs, see page 273 and for video files, see page 272.

Fast forward/reverse

Start fast forward/rewind by means of a long press on the buttons / . Then increase fast forward/rewind speed by short presses the buttons. Audio files are fast forwarded/rewound at one speed, while video files can be fast forwarded/rewound at four different speeds. Fast forward/rewind is stopped by pressing -, - or the equivalent opposite / button.

Listening to radio

It is possible to listen to radio via the car's radio.

1. Switch on the wireless headphones, select **CH.A** for left-hand screen or **CH.B** for right-hand screen.
2. Aim the remote control at the IR receiver on the screen and press **RADIO**, turn **TUNE** to desired source (**AM**, **FM1**, **DAB1*** etc.), confirm selection with .
3. Select a station with one of the preset buttons (**0 - 9**) on the remote control or press / , the radio will search for the next/previous available station.

For more information on the radio, see page 264.

Watching TV*

It is possible to watch TV via the car's media player.

1. Switch on the wireless headphones, select **CH.A** for left-hand screen or **CH.B** for right-hand screen.
2. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to **TV**, confirm selection with .
3. Select a channel with one of the preset buttons (**0 - 9**) on the remote control or

press / , the next/previous channel available in the area is displayed.

For more information on the TV, see page 294.

Menu navigation RSE

General

The RSE menus are operated both from the front screen, and from either of the rear screens. From the front screen it is possible to both activate a source for a rear screen, and to make certain settings for the two rear screens.

RSE menus front screen

To access the menu **RSE** must first be selected under **MEDIA** via the front screen. Then press **OK/MENU** to access the menu. Turn **TUNE** to the desired selection and confirm with **OK/MENU**. The remote control and steering wheel keypad can also be used.

It is possible to make settings for either right or left-hand screen or both screens.

Left RSE screen menu, Right RSE screen menu and Both RSE screen menus:

Power off/Power on
RADIO

**RSE - Rear Seat Entertainment system*****MEDIA****RSE settings**

- Mute
- Display off
- Disable remote control (front)
- TV parental control
- Reset all RSE settings

Pop-up menu RSE⁵

Press  on the remote control when a video file is being played back or the TV* is being displayed in order to access the pop-up menu. Menu selections are made using the scroll wheel and the buttons on the remote control. For information on the remote control, see page 298.

- Screen format
- Image settings
- Day/Night mode
- Source menu⁶
- DVD disc menu⁷

RSE menus rear screens

Press  on the remote control when a source (e.g. **Disc**) is selected in order to access the RSE menus for the rear screen.

Menu selections are made using the scroll wheel and the buttons on the remote control. For information on the remote control, see page 298.

RADIO

Menu valid for **AM, FM1, FM2, DAB1*** and **DAB2***:

- Day/Night mode
- Display off
- Reset all RSE settings

MEDIA**RSE CD Audio menu
Disc menu**

- Random
- Day/Night mode
- Display off

Reset disc settings

**RSE CD/DVD Data menu
Disc menu**

- Random
- Repeat folder
- DivX® VOD code
- Day/Night mode
- Display off
- Reset disc settings

**RSE DVD Video menu
DVD Video Menu**

- DVD disc menu
- Subtitles
- Audio tracks
- Advanced settings
- Day/Night mode
- Display off
- Reset disc settings

⁵ Only applies when playing back videos or displaying TV*.

⁶ What is shown in the pop-up menu for the source menu depends on what is being played back or displayed, it can be e.g. CD/DVD data menu or USB menu.

⁷ Only applies to DVD video discs.





RSE - Rear Seat Entertainment system*

RSE USB menu

USB menu

- Random
- Repeat folder
- DivX® VOD code
- Select USB device
- Day/Night mode
- Display off
- Reset USB settings

RSE AUX menu

AUX menu

- AUX input volume
- Day/Night mode
- Display off
- Reset AUX settings

RSE A/V-AUX menu

A/V AUX menu

- A/V AUX input volume
- Day/Night mode
- Display off
- Reset AUX settings

RSE iPod menu

iPod menu

- Random
- Day/Night mode
- Display off
- Reset iPod settings

RSE Bluetooth® menu

Bluetooth menu

- Random
- Day/Night mode
- Display off
- Reset Bluetooth settings

RSE TV menu*

TV menu

- Select country
- Autostore
- Scan
- Day/Night mode
- Display off
- Reset TV settings



| | |
|-------------------------------------|-----|
| Recommendations during driving..... | 312 |
| Refuelling..... | 315 |
| Fuel..... | 316 |
| Loading..... | 319 |
| Cargo area..... | 322 |
| Driving with a trailer..... | 325 |
| Towing and recovery..... | 331 |



07

DURING YOUR JOURNEY





Recommendations during driving

General

Economical driving

Driving economically means driving smoothly while thinking ahead and adjusting your driving style and speed to the prevailing conditions.

- Drive in the highest gear possible, adapted to the current traffic situation and road - lower engine speeds result in lower fuel consumption.
- Avoid driving with open windows.
- Avoid sudden unnecessary acceleration and heavy braking.
- Drive with the correct tyre pressure, see page 408.
- Remove unnecessary items from the car - the greater the load the higher the consumption.
- Use engine braking to slow down, when it can take place without risk to other road users.
- A roof load and ski box increase air resistance, leading to higher consumption - remove the load carriers when not in use.
- Do not run the engine to operating temperature at idling speed, but rather drive with a light load as soon as possible - a cold engine consumes more fuel than a warm one.

- A car with D4 AWD or D5 AWD engine in combination with a 6-speed manual gearbox is started in 2nd gear.

For more information and further advice, see the pages 11 and 406.

WARNING

Never switch off the engine while moving, such as downhill, this deactivates important systems such as the power steering and brake servo.

Driving in water

The car can be driven through water at a maximum depth of 25 cm at a maximum speed of 10 km/h. Extra caution should be exercised when passing through flowing water.

During driving in water, maintain a low speed and do not stop the car. When the water has been passed, depress the brake pedal lightly and check that full brake function is achieved. Water and mud for example can make the brake linings wet resulting in delayed brake function.

- Clean the electric contacts of the electric engine block heater and trailer coupling after driving in water and mud.
- Do not let the car stand with water over the sills for any long period of time - this could cause electrical malfunctions.

IMPORTANT

Engine damage can occur if water enters the air filter.

In depths greater than 25 cm, water could enter the transmission. This reduces the lubricating ability of the oils and shortens the service life of these systems.

In the event of the engine stalling in water, do not try restart - tow the car from the water to a workshop - an authorised Volvo workshop is recommended. Risk of engine breakdown.

Engine, gearbox and cooling system

Under special conditions, for example hard driving in hilly terrain and hot climate, there is a risk that the engine and drive system may overheat - in particular with a heavy load.

For information about overheating when driving with a trailer, see page 326.



Recommendations during driving

- Remove any auxiliary lamps from in front of the grille when driving in hot climates.
- If the temperature in the engine's cooling system is too high then a warning symbol is illuminated in the combined instrument panel and its display shows the text message **High engine temp Stop safely** - stop the car in a safe way and allow the engine to run at idling speed for several minutes in order to cool down.
- If the text message **High engine temp Stop engine** or **Coolant level low, Stop engine** is shown then the engine must be switched off after stopping the car.
- In the event of overheating in the gearbox a built-in protection function is activated which, amongst other things, illuminates a warning symbol in the combined instrument panel, and its display shows the text message **Transmission hot Reduce speed** or **Transmission hot Stop safely** - follow the recommendation given and lower the speed and stop the car in a safe way and allow the engine to run at idling speed for a few minutes in order to allow the gearbox to cool down.
- If the car overheats, the air conditioning may be switched off temporarily.
- Do not turn the engine off immediately you stop after a hard drive.

NOTE

It is normal for the engine's cooling fan to operate for a while after the engine has been switched off.

Open tailgate

WARNING

Do not drive with the tailgate open. Toxic exhaust fumes could be drawn into the car through the cargo area.

Do not overload the starter battery

The electrical functions in the car load the battery to varying degrees. Avoid using the key position **II** when the engine is switched off. Instead use the **I** mode - which uses less power.

For more information on key position, see page 81.

Also, be aware of different accessories that load the electrical system. Do not use functions which use a lot of power when the engine is switched off. Examples of such functions are:

- ventilation fan
- headlamps
- windscreen wiper

- audio system (high volume).

If the starter battery voltage is low then the combined instrument panel's information display shows the text **Low battery Power save mode**. The energy-saving function then shuts down certain functions or reduces certain functions such as the ventilation fan and/or audio system.

- In which case, charge the starter battery by starting the engine and then running it for at least 15 minutes - charging the starter battery is more effective during driving than running the engine at idling speed while stationary.

Before a long journey

- Check that the engine is working normally and that fuel consumption is normal.
- Make sure that there are no leaks (fuel, oil or other fluid).
- Check all bulbs and tyre tread depths.
- Carrying a warning triangle is a legal requirement in certain countries.

Winter driving

Check the following in particular before the cold season:

- The engine coolant must contain at least 50% glycol. This mixture protects the engine against frost erosion down to approximately -35°C . To achieve opti-



Recommendations during driving

mum antifreeze protection, different types of glycol must not be mixed.

- The fuel tank must be kept filled to prevent condensation.
- Engine oil viscosity is important. Oils with lower viscosity (thinner oils) facilitate starting in cold weather and also reduce fuel consumption while the engine is cold. For more information on suitable oils, see page 403.

IMPORTANT

Low viscosity oil must not be used for hard driving or in hot weather.

- The condition of the starter battery and charge level must be inspected. Cold weather places great demands on the starter battery and its capacity is reduced by the cold.
- Use washer fluid to avoid ice forming in the washer fluid reservoir.

To achieve optimum roadholding Volvo recommends using winter tyres on all wheels if there is a risk of snow or ice.

NOTE

The use of winter tyres is a legal requirement in certain countries. Studded tyres are not permitted in all countries.

Slippery driving conditions

Practise driving on slippery surfaces under controlled conditions to learn how the car reacts.



Refuelling

Refuelling

Opening/closing the fuel filler flap




Open the fuel filler flap using the button on the lighting panel - the flap opens when the button is released.

 In the combined instrument panel's display the arrow on the symbol indicates which side of the car the fuel cap is located.

- Close the fuel filler flap by pressing it in until a click confirms that it is closed.

Opening the fuel filler flap manually

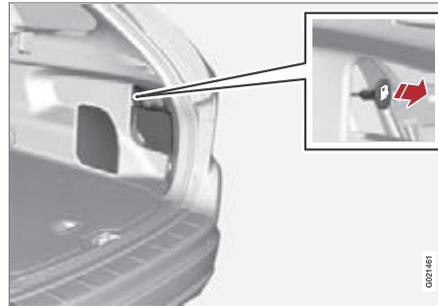

The fuel filler flap can be opened manually when electric opening from the passenger compartment is not possible.

1. Open/remove the side hatch in the cargo area (same side as fuel filler flap) and locate the green cord with handle.
2. Pull the cord gently straight back until the fuel filler flap folds out with a "click".

IMPORTANT

Pull the wire gently - minimal force is required to disengage the hatch lock.

Opening/closing the fuel cap



A certain overpressure may arise in the tank in the event of high outside temperatures. Open the cap slowly.

- After refuelling - refit the cap and turn it until one or more clicking sounds are heard.

Filling up with fuel

- Do not overfill the tank but fill until the pump nozzle cuts out.

NOTE

Excess fuel in the tank can overflow in hot weather.



Fuel

General information on fuel

Fuel of a lower quality than that recommended by Volvo must not be used as engine power and fuel consumption is negatively affected.

WARNING

Always avoid inhaling fuel vapour and getting fuel splashes in the eyes.

In the event of fuel in the eyes, remove any contact lenses and rinse the eyes in plenty of water for at least 15 minutes and seek medical attention.

Never swallow fuel. Fuels such as petrol, bioethanol and mixtures of them and diesel are highly toxic and could cause permanent injury or be fatal if swallowed. Seek medical attention immediately if fuel has been swallowed.

WARNING

Fuel which spills onto the ground can be ignited.

Switch off the fuel-driven heater before starting to refuel.

Never carry an activated mobile phone when refuelling. The ring signal could cause spark build-up and ignite petrol fumes, leading to fire and injury.

IMPORTANT

Mixing different types of fuel or the use of fuel not recommended invalidates Volvo's guarantees, and any associated service agreement. This applies to all engines. NOTE: It does not apply to cars with engines that are adapted to run on ethanol fuel (E85).

NOTE

Extreme weather conditions, driving with a trailer or driving at high altitudes in combination with fuel grade are factors that could affect the car's performance.

Catalytic converters

The purpose of the catalytic converters is to purify exhaust gases. They are located close to the engine so that operating temperature is reached quickly.

The catalytic converters consist of a monolith (ceramic or metal) with channels. The channel walls are lined with a thin layer of platinum/rhodium/palladium. These metals act as catalysts, i.e. they participate in and accelerate a chemical reaction without being used up themselves.

Lambda-sond™ oxygen sensor

The Lambda-sond is part of a control system intended to reduce emissions and improve fuel economy.

An oxygen sensor monitors the oxygen content of the exhaust gases leaving the engine. This value is fed into an electronic system that continuously controls the injectors. The ratio of fuel to air directed to the engine is continuously adjusted. These adjustments create optimal conditions for efficient combustion, and together with the three-way catalytic converter reduce harmful emissions (hydrocarbons, carbon monoxide and nitrous oxides).

Petrol

Petrol must fulfil the EN 228 standard. Most engines can be run with octane ratings of 95 and 98 RON. Only in exceptional cases should 91 RON be used.

- 95 RON can be used for normal driving.
- 98 RON is recommended for optimum performance and minimum fuel consumption.

When driving in temperatures above +38 °C, fuel with the highest possible octane rating is recommended for optimum performance and fuel economy.

**! IMPORTANT**

- Always refuel with unleaded petrol so as not to damage the catalytic converter.
- Do not use additives not recommended by Volvo.

Diesel

Only use diesel fuel from well-known producers. Never use diesel of dubious quality. Diesel should fulfil the EN 590 or JIS K2204 standards. Diesel engines are sensitive to contaminants in the fuel, such as excessively high volumes of sulphur particles for example.

At low temperatures (-6 °C to -40 °C), a paraffin precipitate may form in the diesel fuel, which may lead to ignition problems. Special diesel fuel designed for low temperatures around freezing point is available from the major oil companies. This fuel is less viscous at low temperatures and reduces the risk of paraffin precipitate.

The risk of condensation in the fuel tank is reduced if the tank is kept well filled. When refuelling, check that the area around the fuel

filler pipe is clean. Avoid spilling fuel onto the paintwork. Wash off any spillage with detergent and water.

! IMPORTANT

Only ever use fuel that fulfils the European diesel standard.

The sulphur content must be a maximum of 50 ppm.

! IMPORTANT

Diesel type fuels that must not be used:

- Special additives
- Marine diesel fuel
- Heating oil
- FAME¹ (Fatty Acid Methyl Ester) and vegetable oil.

These fuels do not fulfil the requirements in accordance with Volvo recommendations and generate increased wear and engine damage that is not covered by the Volvo warranty.

Empty tank

The design of the fuel system in a diesel engine means that if the vehicle runs out of fuel, the tank may need to be vented in the

workshop in order to restart the engine after fuelling.

Once the engine has stopped due to fuel starvation, the fuel system needs a few moments to carry out a check. Do this before starting the engine, once the fuel tank has been filled with diesel:

1. Insert the remote control key in the ignition switch and push it in to the end position (see page 81).
2. Press the **START** button **without** depressing the brake and/or clutch pedal.
3. Wait approx. 1 minute.
4. To start the engine: Depress the brake and/or clutch pedal and then press the **START** button again.

i NOTE

Before filling with fuel in the event of fuel shortage:

- Stop the car on as flat/level ground as possible - if the car is tilting there is a risk of air pockets in the fuel supply.

¹ Diesel fuel may contain a certain amount of FAME, but further amounts must not be added.



Fuel

Draining condensation from the fuel filter

The fuel filter separates condensation from the fuel. Condensation can disrupt engine operation.

The fuel filter must be drained at the intervals specified in the Service and Warranty Booklet or if you suspect that the car has been filled with contaminated fuel.

IMPORTANT

Certain special additives remove the water separation in the fuel filter.

Diesel particle filter (DPF)

Diesel cars are equipped with a particle filter, which results in more efficient emission control. The particles in the exhaust gases are collected in the filter during normal driving. So-called "regeneration" is started in order to burn away the particles and empty the filter. This requires the engine to have reached normal operating temperature.

Regeneration of the particle filter is automatic and normally takes 10-20 minutes. It may take a little longer at a low average speed. Fuel consumption may increase slightly during regeneration.

Regeneration in cold weather

If the car is frequently driven short distances in cold weather then the engine does not reach normal operating temperature. This means that regeneration of the diesel particle filter does not take place and the filter is not emptied.

When the filter has become approx. 80% full of particles, a yellow warning triangle is shown in the combined instrument panel, and the message **Soot filter full** See manual is shown in its display.

Start regeneration of the filter by driving the car until the engine reaches normal operating temperature, preferably on a main road or motorway. The car should then be driven for approximately 20 minutes more.

NOTE

The following may arise during regeneration:

- a smaller reduction of engine power may be noticed temporarily
- fuel consumption may increase temporarily
- a smell of burning may arise.

When regeneration is complete the warning text is cleared automatically.

Use the parking heater* in cold weather - the engine then reaches normal operating temperature more quickly.

IMPORTANT

If the filter fills up with particles then it can be difficult to start the engine and the filter will be incapable of functioning. Then there is a risk that the filter will have to be replaced.

Fuel consumption and emissions of carbon dioxide

Fuel consumption figures may change if the car is equipped with extra equipment that affects the car's weight. See information on weights page 398 and table page 406.

The manner in which the car is driven, and other non-technical factors can also affect fuel consumption.

Consumption is higher and power output lower for fuel with an octane rating of 91 RON.

NOTE

Extreme weather conditions, driving with a trailer or driving at high altitudes in combination with fuel grade are factors that could affect the car's performance.



General information on loading

Payload depends on the car's kerb weight. The total of the weight of the passengers and all accessories reduces the car's payload by a corresponding weight. For more detailed information on weights, see page 398.



The tailgate is opened via a button on the lighting panel or the remote control key, see page 58.

WARNING

The car's driving characteristics change depending on the weight and distribution of the load.

To bear in mind when loading

- Position the load firmly against the rear seat's backrest.

Note that objects must not prevent the function of the WHIPS system for the front seats if any of the rear seat's backrests is folded down, see page 26.

- Centre the load.
- Heavy objects should be placed as low as possible. Avoid placing heavy loads on lowered backrests.
- Cover sharp edges with something soft to avoid damaging the upholstery.

- Secure all loads to the load retaining eyelets with straps or web lashings.

WARNING

A loose object weighing 20 kg can, in a frontal collision at a speed of 50 km/h, carry the impact of an item weighing 1000 kg.

WARNING

The protection provided by the inflatable curtain in the headlining may be compromised or eliminated by high loads.

- Never load cargo above the backrest.

WARNING

Always secure the load. During heavy braking the load may otherwise shift, causing injury to the car's occupants.

Cover sharp edges and sharp corners with something soft.

Switch off the engine and apply the parking brake when loading/unloading long items. Otherwise you may accidentally knock the gear lever or gear selector with the load into a drive position - and the car could then move off.

Front seat

The passenger seat backrest can also be folded for an extra long load, see page 83.

Roof load

Using load carriers

To avoid damaging the car and for maximum possible safety while driving, the load carriers designed by Volvo are recommended.

Carefully follow the installation instructions supplied with the carriers.

- Check periodically that the load carriers and load are properly secured. Lash the load securely with retaining straps.
- Distribute the load evenly over the load carriers. Put the heaviest objects at the bottom.
- The size of the area exposed to the wind, and therefore fuel consumption, increase with the size of the load.
- Drive gently. Avoid quick acceleration, heavy braking and hard cornering.

WARNING

The car's centre of gravity and driving characteristics are altered by roof loads. For information on maximum permitted roof load, including load carriers and any space box, see page 398.




Loading

Lowering the rear seat backrest

To simplify loading in the cargo area, the rear seat backrest can be folded down, see page 85.

Load retaining eyelets

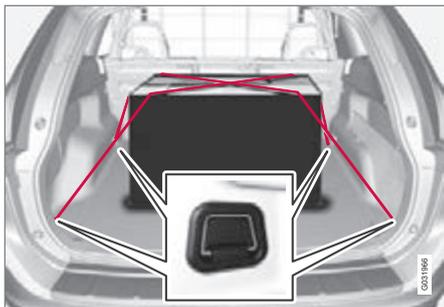

The folding load retaining eyelets are used to fasten straps in order to anchor items in the cargo area.

WARNING

Hard, sharp and/or heavy objects that are loose or protrude could cause injury during heavy braking.

Always secure large and heavy objects with a seatbelt or cargo retaining straps.

Bag holder*



Bag holder under folding hatch in the floor.

1. Fold up the holder, which is part of the floor hatch.
2. Fasten the bags with strap and secure the carrying handle in the hooks.

12 V electrical socket*



Lower the cover to access the electrical socket.

- The socket also provides voltage when the remote control key is not in the ignition switch.

IMPORTANT

Max. power takeoff is 10 A (120 W).

NOTE

Remember that using the electrical socket with the engine switched off involves the risk of discharging the car's battery.

**NOTE**

The compressor for temporary emergency puncture repair has been tested and approved by Volvo. For information on the use of Volvo's recommended temporary emergency puncture repair (TMK), see page 346.



Cargo area

Safety net



The safety net is fitted into four mounting points.

A safety net prevents loads or pets from being thrown forward in the passenger compartment in the event of sudden braking. For safety reasons, the safety net must always be correctly fastened and secured.

The net is made of a strong nylon fabric and can be secured two different locations in the car:

- Rear fitting - Behind the rear seat backrest
- Front fitting - Behind the front seat backrests.

WARNING

Loads in the cargo area must be firmly secured, even if the safety net is correctly fitted.

Attaching

NOTE

The safety net is most easily fitted via one of the rear doors.


WARNING

Make sure that the upper mountings of the safety net are correctly fitted and that the anchoring straps are securely fastened.

Do not use a damaged net.

1. Unfold the safety net and make sure that the split upper rod is locked in extended position.
2. Hook one end of the rod into the front or rear roof mounting with the anchoring strap locks turned towards you.
3. Hook the other end of the rod into the roof mounting on the opposite side - the telescopic spring-loaded retaining hooks facilitate alignment.

Take care to press forward the rod's retaining hooks for each respective roof mounting's front end position.

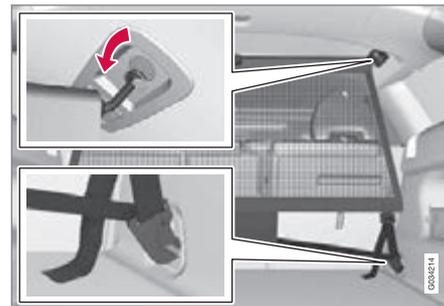

Rear fitting.

4. Rear fitting: With the net fitted in the rear roof mountings, hook the safety net's anchoring straps into the front floor eyes in the cargo area.



Cargo area



Front fitting.

Front fitting: With the net fitted in the front roof mountings, hook the safety net's anchoring straps into the eyes on the rear of the seat slide rails - it is easier if the backrests are straightened and the seats are moved forward slightly.


Pay attention to make sure that you do not press the seat/backrest hard against the net when the seat/backrest is moved back again - only adjust until the seat/backrest makes contact with the net.

! IMPORTANT

If the seat/backrest is pressed hard backwards against the safety net then the net and/or its roof mountings could be damaged.

5. Tension the safety net with the anchoring straps.

Removal and storage

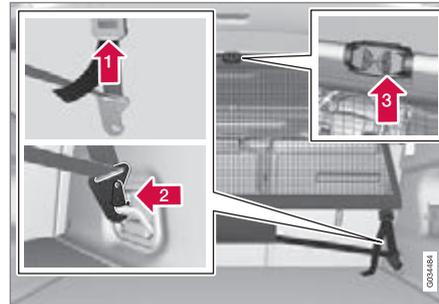

The safety net can be easily removed and folded up.

- ➦ Release the tension in the net by pressing in the button on the anchoring strap's lock and feeding out part of the strap.
- ➦ Press in the catch and detach both of the anchoring strap's hooks.
- ➦ Break the rod in the centre, fold it together and roll up the net.

The folded safety net can be stored under the cargo compartment floor.

Safety grille*



A safety grille prevents loads or pets from being thrown forward in the passenger compartment in the event of sudden braking.

Folding up

Take hold of the bottom of the safety grille and pull back/up.

! IMPORTANT

The safety grille cannot be folded up or down when a cargo cover is fitted.

Fitting/removal

The safety grille is normally permanently installed in the car because it can easily be folded up in the roof and so be out of the way if a longer cargo area is required. However, if

* Option/accessory, for more information, see Introduction.




Cargo area

desired, the safety grille can be dismantled and removed from the car.

For information about the tools required and methods for fitting/removal, see the installation instructions¹ that were included with the initial purchase.

For safety reasons, the safety grille must always be correctly fastened and secured when being refitted.

Cargo cover*

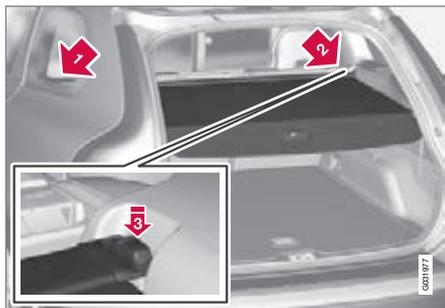

Pull the cargo cover over the load and hook it into the recesses at the cargo area's rear posts.



IMPORTANT

The safety grille cannot be folded up or down when the cargo cover is fitted.

Attaching the cargo cover

- Move one end piece of the cover into the recess on the side panel.
- Move the other end piece into the corresponding recess.
- Press both sides in. A "click" should be audible and the red marking should disappear.
 - > Check that both end pieces are locked.

Removing the cargo cover

1. Press in one end piece button and lift it out.
2. Carefully angle the cover up/out and the other end piece loosens automatically.

Lowering the cargo cover's rear sealing disc

In its rolled-in position, the cargo cover's rear sealing disc protrudes horizontally into the cargo area when it is fitted.

- Pull the sealing disc back gently, free from its support shelves, and lower.

¹ Installation instructions no. 30715972.

**Driving with a trailer****General**

Payload depends on the car's kerb weight. The total of the weight of the passengers and all accessories, e.g. towbar, reduces the car's payload by a corresponding weight. For more detailed information on weights, see page 398.

If the towing bracket is mounted by Volvo, then the car is delivered with the necessary equipment for driving with a trailer.

- The car's towing bracket must be of an approved type.
- If the towbar is retrofitted, check with your Volvo dealer that the car is fully equipped for driving with a trailer.
- Distribute the load on the trailer so that the weight on the towing bracket complies with the specified maximum towball load.
- Increase the tyre pressure to the recommended pressure for a full load. For tyre pressure label location, see page 344.
- The engine is loaded more heavily than usual when driving with a trailer.
- Do not tow a heavy trailer when the car is brand new. Wait until it has been driven at least 1000 km.
- The brakes are loaded much more than usual on long and steep downhill slopes.

Downshift to a lower gear and adjust your speed.

- For safety reasons, the maximum permitted speed for the car when coupled with a trailer should not be exceeded. Follow the regulations in force for the permitted speeds and weights.
- Maintain a low speed when driving with a trailer up long, steep ascents.
- Avoid driving with a trailer on inclines of more than 12%.

Trailer cable

An adapter is required if the car's towing bracket has 13 pin electrics and the trailer has 7 pin electrics. Use an adapter cable approved by Volvo. Make sure the cable does not drag on the ground.

Direction indicators and brake lights on the trailer

If any of the trailer's lamps for direction indicators are broken, then the combined instrument panel's symbol for direction indicators flashes faster than normal and the information display shows the text **Bulb fail - Ind. signal trailer**.

If any of the trailer's lamps for the brake light are broken then the **Bulb fail - Stop lamp trailer** text is shown.

Level control*

The rear shock absorbers maintain a constant height irrespective of the car's load (up to the maximum permissible weight). When the car is stationary the rear of the car lowers slightly, which is normal.

Trailer weights

For information on Volvo's permitted trailer weights, see page 399.

**NOTE**

The stated maximum permitted trailer weights are those permitted by Volvo. National vehicle regulations can further limit trailer weights and speeds. Towbars can be certified for higher towing weights than the car can actually tow.

**WARNING**

Follow the stated recommendations for trailer weights. Otherwise, the car and trailer may be difficult to control in the event of sudden movement and braking.



Driving with a trailer

Manual gearbox

Overheating

When driving with a trailer in hilly terrain in a hot climate there may be a risk of overheating.

- Do not run the engine at higher revolutions than 4500 rpm (diesel engines: 3500 rpm) - otherwise the oil temperature may become too high.

Diesel engine 5-cyl

- In the event of a risk of overheating the optimal speed for the engine is 2300-3000 rpm for optimal circulation of the coolant.

Automatic gearbox

Overheating

When driving with a trailer in hilly terrain in a hot climate there may be a risk of overheating.

- An automatic gearbox selects the optimum gear related to load and engine speed.
- In the event of overheating a warning symbol is illuminated in the combined instrument panel with a message that is shown in the information display - follow the recommendation given.

Steep inclines

- Do not lock the automatic transmission in a higher gear than the engine "can cope with" - it is not always a good idea to drive at a high gear with low engine revolutions.



IMPORTANT

See also the specific information on slow driving with trailer for cars with the Powershift automatic transmission on page 128.

Parking on a hill

- Depress the foot brake.
 - Activate the parking brake.
 - Move the gear selector to position **P**.
 - Release the foot brake.
- Move the gear selector to park position **P** when parking an automatic car with a hitched trailer. Always use the parking brake.
 - Block the wheels with chocks when parking a car with hitched trailer on a hill.

Starting on a hill

- Depress the foot brake.
- Move the gear selector to driving position **D**.

- Release the parking brake.
- Release the foot brake and start driving off.

Towing bracket

If the car is equipped with a detachable towbar, the installation instructions for the loose section must be followed carefully, see page 328.



WARNING

If the car is fitted with a Volvo detachable towbar:

- Follow the installation instructions carefully.
- The detachable section must be locked with the key before setting off.
- Check that the indicator window shows green.

Important checks

- The towbar's towball must be cleaned and greased regularly.




NOTE

If a towball hitch with vibration damper is used, it is not necessary to grease the towball.



Driving with a trailer

Storing the detachable towbar


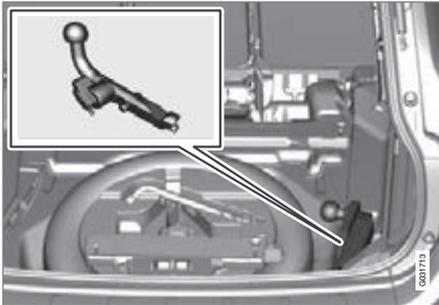


Towbar storage space.

! **IMPORTANT**

Always remove the towbar after use and store it in the appointed location in the car, firmly fastened with its strap.

Specifications

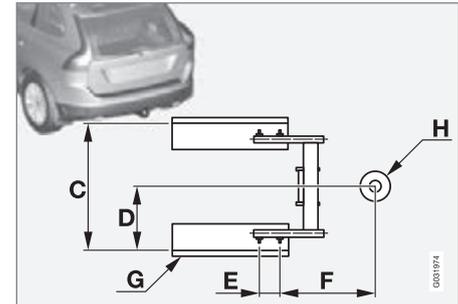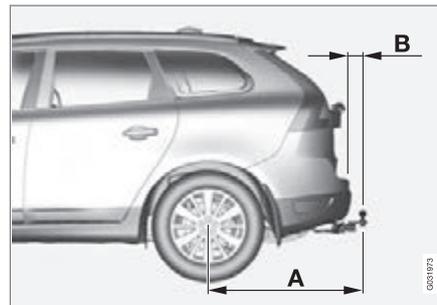

Dimensions, mounting points (mm)

| | |
|---|-------------|
| A | 1013 |
| B | 69 |
| C | 855 |
| D | 428 |
| E | 109 |
| F | 296 |
| G | Side member |
| H | Ball centre |



Driving with a trailer


Attaching the towbar



1 Remove the protective cover by first pressing in the catch  and then pulling the cover straight back .




2 Ensure that the mechanism is in the unlocked position by turning the key clockwise.

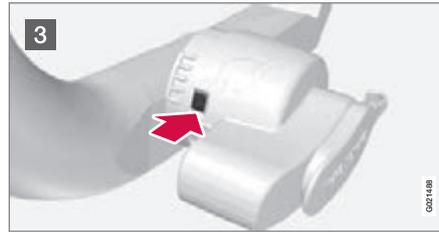


3 The indicator window must show red.



4 Insert the towbar until you hear a click.

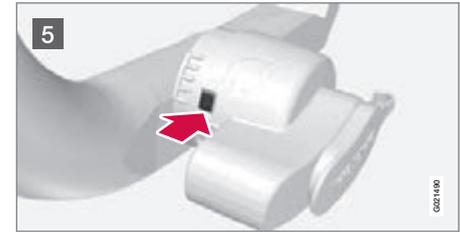

5 The indicator window must show green.

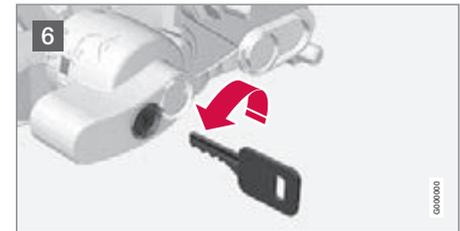

6 Turn the key anticlockwise to locked position. Remove the key from the lock.



Driving with a trailer



- 7** Check that the towbar is secure by pulling it up, down and back.

! WARNING

If the towbar is not fitted correctly then it must be detached and reattached in accordance with the previous instructions.

! IMPORTANT

Only grease in the ball for the towing hitch, the remainder of the towbar should be clean and dry.



- 8** Safety cable.


! WARNING

Be sure to attach the trailer's safety cable to the correct place.

Removing the towbar



- 1** Insert the key and turn it clockwise to the unlocked position.

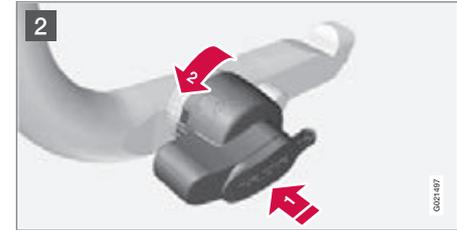

- 2** Push in the locking wheel **1** and turn it anticlockwise **2** until you hear a click.



- 3** Turn the locking wheel down fully, until it comes to a stop. Hold it in this position while pulling the towbar rearward and upward.

! WARNING

Secure the towbar safely if it is stored in the car, see page 327.



Driving with a trailer



4 Push the protective cover until it snaps tight.

Trailer stabiliser - TSA¹

The TSA system (Trailer Stability Assist) serves to stabilise the car and trailer combination if it begins to snake.

The TSA function is part of the **DSTC** system (Dynamic Stability and Traction Control), see page 152.

Function

The snaking phenomenon can occur with any car/trailer combination. Snaking normally occurs at high speed. But, there is a risk of it occurring at lower speeds (70-90 km/h) if the trailer is overloaded or the load is improperly distributed, e.g. too far back.

In order for snaking to occur, there must be a triggering factor, e.g.:

- Car with trailer subjected to a sudden and powerful side wind.
- Car with trailer drives on an uneven road surface or in a pothole.
- Sweeping steering wheel movements.

Operation

If snaking has started, it could be difficult or even impossible to suppress. This makes the car/trailer combination difficult to control and there is a risk that you could, for example, end up in the wrong lane or leave the carriageway.

TSA system continually monitors car movements, particularly lateral movements. If snaking is detected, the front wheels are individually braked. This serves to stabilise the car/trailer combination. This is often enough to help the driver regain control of the car.

If snaking is not eliminated the first time the TSA system comes into action, the car/trailer combination is braked with all wheels and engine power is reduced. Once snaking has been gradually suppressed and the car/trailer combination is once again stable, the TSA system stops regulating and the driver once again has full control of the car.

Miscellaneous

The TSA system can engage within the speed interval 60 to 160 km/h.

NOTE

TSA function is switched off if the driver selects **Sport** mode, see page 152.

TSA may fail to engage if the driver uses severe steering wheel movements to try to rectify the snaking because in such a situation the TSA system cannot determine whether it is the trailer or the driver that is causing the snaking.



The **DSTC** symbol in the combined instrument panel flashes when the TSA system is working.

¹ Included in the installation of Volvo genuine towbar.

**Towing and recovery****Towing**

Find out the statutory maximum speed limit for towing before towing begins.

1. Unlock the steering lock by inserting the remote control key in the ignition switch and giving a long press on the **START/STOP ENGINE** button - key position **II** is activated, see page 81 for more information on key positions.
2. The remote control key must remain in the ignition switch while the car is being towed.
3. Keep the towline taut when the towing vehicle reduces speed by holding your foot gently pressed on the brake pedal - thereby avoiding unnecessary jerking.
4. Be prepared to brake to stop.

WARNING

- Check that the steering lock is unlocked before towing.
- The remote control key must be in key position **II** - in position **I** all airbags are deactivated.
- Never remove the remote control key from the ignition switch when the car is being towed.

WARNING

The brake servo and power steering do not work when the engine is switched off - the brake pedal needs to be depressed about 5 times more heavily and the steering is considerably heavier than normal.

Manual gearbox

Prior to towing:

- Move gear lever into neutral and release the parking brake.

Automatic gearbox Geartronic**IMPORTANT**

Note that the car must always be towed with the wheels rolling forward.

- Do not tow cars with automatic transmission at speeds higher than 80 km/h or for distances in excess of 80 km.

Prior to towing:

- Move the gear selector to position **N** and release the parking brake.

Automatic gearbox Powershift

The model with Powershift transmission should not be towed as it is dependent on the engine running in order to receive sufficient

lubrication. If towing still has to take place, the route must be as short as possible and then with very low speed.

In the event of uncertainty as to whether or not the car is equipped with Powershift transmission, this can be verified by checking the designation on the transmission's label under the bonnet - see page 396. The designation "MPS6" means that it is Powershift - transmission otherwise it is Geartronic automatic transmission.

IMPORTANT

Avoid towing.

- However, the car can be towed for a short distance at low speed to move it from a dangerous position - not further than 10 km and not faster than 10 km/h. Note that the car must always be towed with the wheels rolling forward.
- In the event of moving a longer distance than 10 km, the car must be transported with the drive wheels raised from the road - professional recovery is recommended.

Prior to towing:

- Move the gear selector to position **N** and release the parking brake.



Towing and recovery

Jump starting

Do not tow the car to bump start the engine. Use a donor battery if the battery is discharged and the engine does not start, see page 121.



! IMPORTANT

The catalytic converter may be damaged during attempts to tow-start the engine.

Towing eye

The towing eye is screwed into a threaded socket behind a cover on the right-hand side of the bumper, front or rear.

Attaching the towing eye

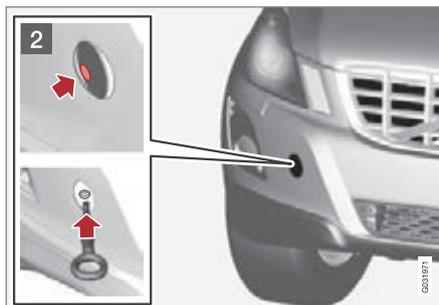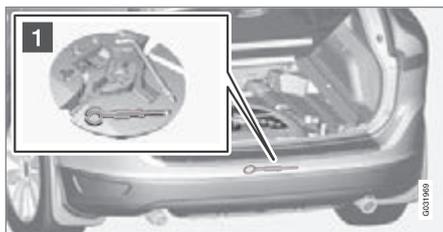

- 1 Take out the towing eye that is located under the floor hatch in the cargo area - in some cases it may be hidden under the sill.
- 2 The cover for the towing eye's attachment point is available in two variants which must be opened in different ways:
 - Open the variant with a recess using a coin or similar inserted in the recess, turning it outwards. Then turn out the cover completely and remove it.
 - The second variant has a marking along one side or in a corner: Press the marking with a finger and fold out the opposite side/corner at the same time using a coin or similar - the cover turns around its axis and can then be removed.

Screw the towing eye right in up to its flange. Turn in the towing eye firmly e.g. using the wheel wrench.

After use, unscrew the towing eye and return it to its place.

Finish by refitting the cover onto the bumper.

Recovery

Call a recovery service for recovery assistance.

The towing eye must be used to pull the car up onto a recovery vehicle with a flatbed platform if:

- The slope of the recovery vehicle's ramp does not exceed 12 degrees from a horizontal plane
- The car's wheels rotate freely and roll straight forward.



WARNING

No one/nothing is allowed to remain behind the recovery vehicle while the car pulled up onto the flatbed platform.

**Towing and recovery****! IMPORTANT**


The towing eye is only designed for towing on roads - **not** for pulling the car unstuck or out of a ditch. Call a recovery service for recovery assistance.

! IMPORTANT

Note that the car must always be transported with the wheels rolling forward.


- An All Wheel Drive car (AWD) with raised front suspension must not be towed at speeds above 70 km/h. It should not be towed further than 50 km.

| | |
|---|-----|
| General | 336 |
| Changing wheels | 341 |
| Tyre pressure | 344 |
| Warning triangle and first-aid kit* | 345 |
| Emergency puncture repair (TMK)* | 346 |

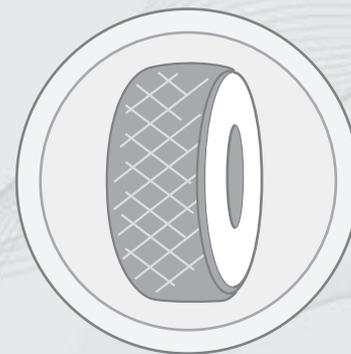

08

WHEELS AND TYRES

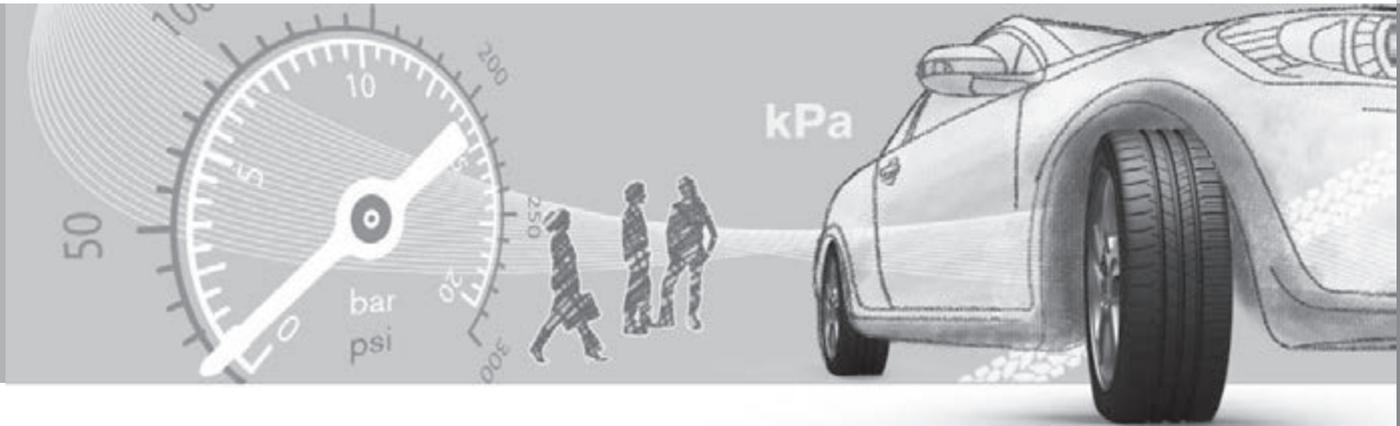




General

Driving characteristics

Tyres greatly affect the car's driving characteristics. The type of tyre, dimensions, tyre pressure and speed rating are important for how the car performs.

Direction of rotation

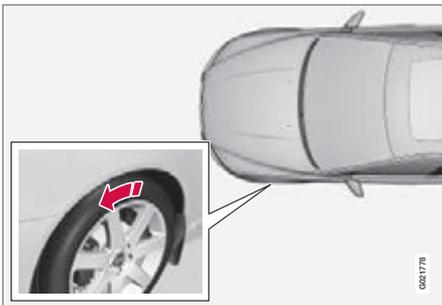

The arrow shows the tyre's direction of rotation.

Tyres with a tread pattern which are designed to only turn in one direction have the direction of rotation marked with an arrow. The tyre must always rotate in the same direction throughout its lifespan. Tyres should only be switched between front and rear positions, never between left and right-hand sides, or vice versa. If the tyres are fitted incorrectly, the car's braking characteristics and capacity to force rain and slush out of the way are adversely affected.

Tyres with the greatest tread depth should always be fitted to the rear of the car (to decrease the risk of skidding).

i NOTE

Ensure that tyres of the same type and dimensions, and also the same make, are fitted to all four wheels.

Follow the recommended tyre pressures specified in the tyre pressure table, see page 408.

Tyre care

Tyre age

All tyres older than 6 years old should be checked by an expert even if they seem undamaged. Tyres age and decompose, even if they are hardly ever or never used. The function can therefore be affected. This applies to all tyres that are stored for future use. Examples of external signs which indicate that the tyre is unsuitable for use are cracks or discoloration.

New tyres



Tyres are perishable. After a few years they begin to harden at the same time as the friction capacity/characteristics gradually deteriorate. For this reason, aim to get as fresh tyres as possible when you replace them. This is especially important with regard to winter tyres. The last four digits in the sequence mean the week and year of manufacture. This is the tyre's DOT marking (Department of Transportation), and this is stated with four digits, for example 1510. The tyre in the illustration was manufactured in week 15 of 2010.

Summer and winter tyres

When summer and winter wheels are changed the wheels should be marked with



which side of the car they were mounted on, for example **L** for left and **R** for right.

Wear and maintenance


The correct tyre pressure results in more even wear, see page 344. Driving style, tyre pressure, climate and road condition affect how quickly your tyres age and wear. To avoid differences in tread depth and to prevent wear patterns arising, the front and rear wheels can be switched with each other. A suitable distance for the first change is approx. 5000 km and then at 10 000 km intervals. Volvo recommends that you contact an authorised Volvo workshop for checking if you are uncertain about tread depth. If significant differences in wear (>1 mm difference in tread depth) between tyres have already occurred, the least worn tyres must always be placed on the rear. Understeer is normally easier to correct than oversteer, and leads to the car continuing forwards in a straight line rather than having the rear end skidding to one side, resulting in possible complete loss of control over the car. This is why it is important for the rear wheels never to lose grip before the front wheels.

Wheels should be stored lying down or hanging up - and not standing up.

WARNING

A damaged tyre can lead to loss of control of the car.

Tyres with tread wear indicators

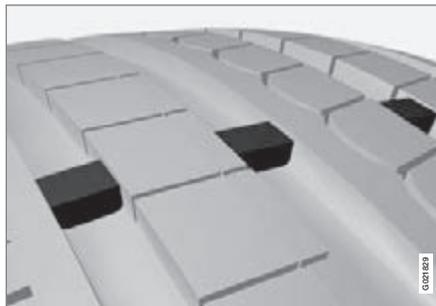

Tread wear indicators.

Tread wear indicators are narrow treadless bands across the width of the tread. On the side of the tyre are the letters **TWI** (Tread Wear Indicator). When the tyre's tread depth is down to 1.6 mm, the tread depth will be level in height with the tread wear indicators. Change to new tyres as soon as possible. Remember that tyres with little tread depth provide very poor grip in rain and snow.

Rims and wheel bolts

IMPORTANT

The wheel bolts must be tightened to 140 Nm. Overtightening can damage the nuts and the bolts.

Only use rims that are tested and approved by Volvo and which are Volvo genuine accessories. Check the torque with a torque wrench.

Locking wheel bolts*


Locking wheel bolts* can be used on both aluminium and steel rims. Under the cargo area floor there is space for the sleeve for the lockable wheel bolts.

* Option/accessory, for more information, see Introduction.



General

Tools

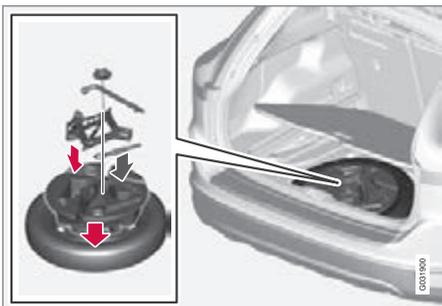


Located under the cargo area floor are the car's towing eye, jack* and wheel wrench*. There is also space for the sleeve for the lockable wheel bolts.

Jack*

The original jack should only be used for changing to the spare wheel. The jack's thread must always be well greased.

Tools - returning into place

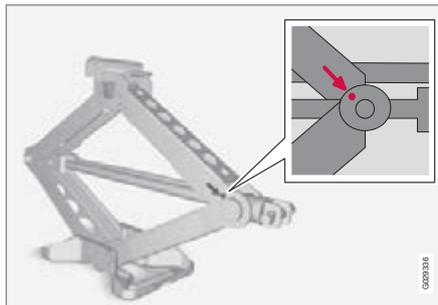

The tools and jack* must be returned to their correct places after use. The jack needs to be cranked together to the correct position in order to have space.

The foam block and spare wheel are replaced in the reverse order to taking out.

Note that there is an arrow on the upper foam block. It must point forwards in the car.

! IMPORTANT

The tools and jack* must be stored in the intended location in the car's cargo area when not in use.

Winter tyres

Volvo recommends winter tyres with particular dimensions. Tyre dimensions are dependent on engine variant. When driving on winter tyres, the correct type of tyres must be fitted to all four wheels.

i NOTE

Volvo recommends that you consult a Volvo dealer about which wheel rim and tyre types are most suitable.

Studded tyres

Studded winter tyres should be run in gently for 500-1000 km so the studs settle properly into the tyres. This gives the tyre, and especially the studs, a longer service life.

i NOTE

The legal provisions for the use of studded tyres vary from country to country.

Tread depth

Road conditions with ice, slush and low temperatures place considerably higher demands on tyres than summer conditions. Volvo therefore recommends not to drive on winter tyres that have a tread depth of less than 4 millimetres.



General

Using snow chains

Snow chains may only be used on the front wheels (also applies to all-wheel drive cars).

Never drive faster than 50 km/h with snow chains. Avoid driving on bare ground as this wears out both the snow chains and tyres.

WARNING

Use Volvo genuine snow chains or equivalent chains designed for the car model, and tyre and rim dimensions. In the event of uncertainty Volvo recommends that you consult an authorised Volvo workshop. The wrong snow chains may cause serious damage to your car and lead to an accident.

IMPORTANT

Only **single-sided** snow chains are permitted. Use Volvo genuine snow chains or similar that are properly suited to the car model, tyre size and wheel rim size. In the event of uncertainty Volvo recommends that you consult an authorised Volvo workshop.

Specifications

The car has whole vehicle approval. This means that certain combinations of wheels

and tyres are approved. For the permissible combinations, see page 408

Wheel (rim) dimensions

Wheels (rims) have a designation of dimensions, for example: 7Jx16x50.

| | |
|----|---|
| 7 | Rim width in inches |
| J | Rim flange profile |
| 16 | Rim diameter in inches |
| 50 | Off-set in mm (distance from wheel centre to wheel contact surface against the hub) |

Tyre dimensions

The dimensions are stated on all car tyres. **Example of designation:**

235/60 R18 103 V.

| | |
|-----|---|
| 235 | Tyre width (mm) |
| 60 | Ratio between tyre wall height and tyre width (%) |
| R | Radial ply |
| 18 | Rim diameter in inches |

| | |
|-----|---|
| 103 | Codes for the maximum permitted tyre load, tyre load index (LI) |
| V | Speed rating for maximum permitted speed, speed rating (SS). (In this case 240 km/h). |

Load index

Each tyre has a certain capacity to carry a load, a load index (LI). The car's weight determines the load capacity required of the tyres. Minimum permitted index is specified in the table, see page 408.

Speed ratings

Each tyre can withstand a certain maximum speed, a speed rating (Speed Symbol; SS).

Tyre speed class must at least correspond with the car's top speed. Minimum permitted speed rating is specified in the table, see page 408.

The only exception to these conditions is winter tyres (both those with metal studs and those without), where a lower speed rating may be used. If such a tyre is chosen, the car must not be driven faster than the speed rating of the tyre (for example, class Q can be driven at a maximum of 160 km/h).



08 Wheels and tyres

General

Traffic regulations determine how fast a car can be driven, not the speed rating of the tyres.

NOTE

It is the maximum permitted speed that is stated in the table.

| | |
|---|--------------------------------------|
| Q | 160 km/h (used only on winter tyres) |
| T | 190 km/h |
| H | 210 km/h |
| V | 240 km/h |
| W | 270 km/h |
| Y | 300 km/h |

WARNING

The car must be fitted with tyres which have the same or a higher load index (LI) and speed rating (SS) than specified. If a tyre with too low a load index or speed rating is used, it may overheat.



Changing wheels

Spare wheel*

The spare wheel (Temporary spare) is only intended for use temporarily and must be replaced by an ordinary wheel as soon as possible. The car's handling may be altered by the use of the spare wheel. The spare wheel is smaller than the normal wheel. The car's ground clearance is affected accordingly. Pay attention to high kerbs and do not machine wash the car. If the spare wheel is fitted on the front axle, you cannot use snow chains at the same time. On all-wheel drive cars the drive on the rear axle can be disconnected. The spare wheel must not be repaired. The correct tyre pressure for the spare wheel is stated in the tyre pressure table, see page 408.

! IMPORTANT

Never drive faster than 80 km/h with a spare wheel on the car.

! IMPORTANT

The car must never be driven fitted with more than one temporary spare wheel.

The spare wheel is located in the spare wheel well with the outside down. The same bolt runs through to secure the spare wheel and

the foam block. The foam block contains all the tools.

Taking out the spare wheel

1. Fold up the cargo area floor, from the rear and forwards.
2. Undo the retaining screw.
3. Lift out the foam block with its tools.
4. Lift out the spare wheel.

Removing

Set up the warning triangle, see page 345 if a wheel must be replaced at a busy location. The car and jack* must be on a firm horizontal surface.

1. Apply the parking brake and engage reverse gear, or position **P** if the car has an automatic gearbox.

! WARNING

Check that the jack is not damaged, that the threads are thoroughly lubricated and that it is free from dirt.

i NOTE

Volvo recommends only using the jack* that belongs to the car model in question, which is indicated on the jack's label.

The label also indicates the jack's maximum lift capacity at a specified minimum lifting height.

2. Take out the jack*, wheel wrench* and removal tool for wheel covers* located under the cargo floor in the cargo area. If another jack is selected, see page 354.
3. Place chocks in front of and behind the wheels which will remain on the ground. Use heavy wooden blocks or large stones for example.
4. Screw together the towing eye with the wheel wrench* until the stop position as illustrated below.



Changing wheels



! IMPORTANT

The towing eye must be screwed into all threads in the wheel bolt wrench.


5. Loosen the wheel bolts ½-1 turn anti-clockwise with the wheel wrench.

! WARNING

Never position anything between the ground and the jack, nor between the jack and the car's jacking point.

6. There are two jacking points on each side of the car. There is a recess in the plastic cover at each point. Crank the foot of the

jack down so it is pressed squarely on the ground.

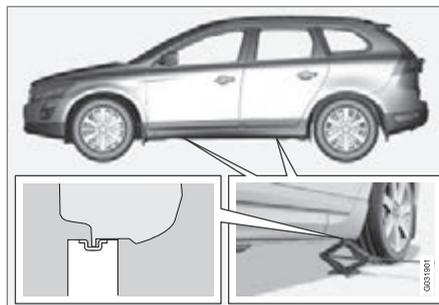

! IMPORTANT

The ground must be firm, smooth and level.

- 7.



Check that the jack sits in the anchorage as illustrated and that the foot is positioned vertically under the anchorage.

! IMPORTANT

The jack mounting point is the rearmost of the two rear recesses.

8. Lift the car so that the wheel is free. Remove the wheel bolts and lift off the wheel.

Installation

1. Clean the contact surfaces between wheel and hub.



Changing wheels

- Put on the wheel. Tighten the wheel bolts thoroughly.
- Lower the car so that the wheels cannot rotate.



- Tighten the wheel bolts crosswise. It is important that the wheel bolts are tightened properly. Tighten to 140 Nm. Check the torque with a torque wrench.
- Refit any full wheel covers.

i NOTE

The wheel cover outlet for the valve must be positioned over the valve on the wheel rim during fitting.

⚠ WARNING

Never crawl under the car when it is raised on the jack.

Passengers must leave the car when it is raised on the jack.

Park the car so that passengers have the car - or preferably a crash barrier - between them and the road.

i NOTE

The car's regular jack is designed only for use occasionally and for a short time, such as when changing a wheel with a punctured tyre, switching between summer tyres and winter tyres, etc. Only the jack belonging to the specific model is to be used to jack up the car. If the car is to be jacked up more often, or for a longer time than is required just to change a wheel, use of a garage jack is recommended. In this instance, follow the instructions for use that come with the equipment.



Tyre pressure

Tyre pressure



The tyre pressure decal on the driver's side door pillar (between frame and rear door) shows which pressures the tyres should have at different loads and speed conditions. This is also specified in the tyre pressure table, see page 408.

- Tyre pressure for the car's recommended tyre dimension
- ECO pressure¹
- Spare wheel tyre pressure (Temporary Spare)

i NOTE

Temperature differences change the tyre pressure.

¹ ECO pressure results in improved fuel economy.

Fuel economy, ECO pressure

In order to obtain optimum fuel economy at speeds below 160 km/h an ECO pressure is recommended (applies to both full and light load - see page 408).

Checking the tyre pressure

The tyre pressures must be checked every month.

This also applies to the car's spare wheel.

Check tyre pressures on cold tyres. "Cold tyres" means the tyres are the same temperature as the ambient temperature. After several few kilometres of driving, the tyres warm up and the pressure increases.

Inadequate tyre pressure increases fuel consumption, shortens tyre lifespan and impairs the car's roadholding. Driving on tyres with tyre pressure that is too low could result in the tyres overheating and being damaged. Tyre pressure affects travelling comfort, road noise and steering characteristics.



i NOTE

Tyre pressure decreases over time, this is a natural phenomenon. Tyre pressure also varies depending on ambient temperature.



Warning triangle and first-aid kit*

Warning triangle

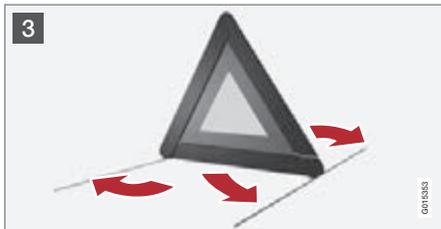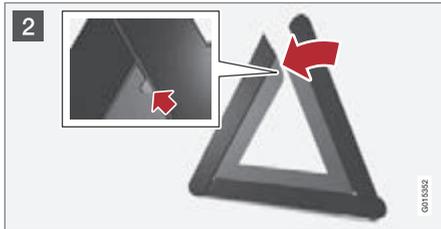


- 1 Lift the floor hatch and take out the warning triangle.
- 2 Take the warning triangle from the case, fold out and assemble the two loose sides.
- 3 Fold out the warning triangle's support legs.

Follow the regulations for the use of a warning triangle. Position the warning triangle in a suitable place with regard to traffic.

Ensure the warning triangle and its case are properly secured in the cargo area after use.

First aid kit*

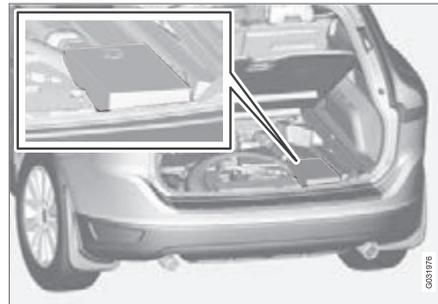


A case with first aid equipment is located under the floor in the cargo area.

* Option/accessory, for more information, see Introduction.



Emergency puncture repair (TMK)*

General

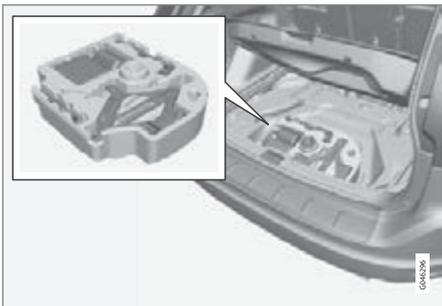

Emergency puncture repair (TMK; Temporary Mobility Kit)¹ is used to seal a puncture and check and adjust tyre pressure. It consists of a compressor and a bottle with sealing fluid. The kit works as a temporary repair. The sealing fluid bottle must be replaced before its expiration date and after use.

The sealing fluid effectively seals tyres punctured in the tread.

i NOTE

The emergency puncture repair kit is only intended for sealing tyres with a puncture in the tread.

The emergency puncture repair kit has limited capacity to seal tyres which have punctures in the wall. Do not seal tyres with the emergency puncture repair kit if they have larger slits, cracks or similar damage.

Connect the compressor to one of the car's 12 V sockets. Choose the socket that is near to the punctured tyre.

! IMPORTANT

If the compressor for emergency puncture repair is connected to one of the two sockets in the tunnel console, see page 247, no other current consumer must be connected to the other one.

i NOTE

The compressor for temporary emergency puncture repair has been tested and approved by Volvo.


Location of the emergency puncture repair kit

Set up the warning triangle (see page 345) if a tyre is being sealed in a trafficked location. The emergency puncture repair kit is located under the floor in the cargo area.

! WARNING

You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Volvo recommends that you visit an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

Overview

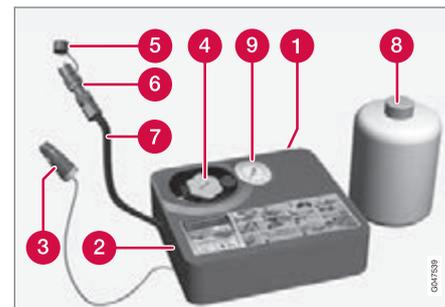

- 1** Label, maximum permitted speed
- 2** Switch
- 3** Cable

¹ Option only in certain markets.


* Option/accessory, for more information, see Introduction.



Emergency puncture repair (TMK)*

- 4 Bottle holder (orange cap)
- 5 Protective cap
- 6 Pressure reducing valve
- 7 Air hose
- 8 Sealing fluid bottle
- 9 Pressure gauge

Sealing punctured tyres

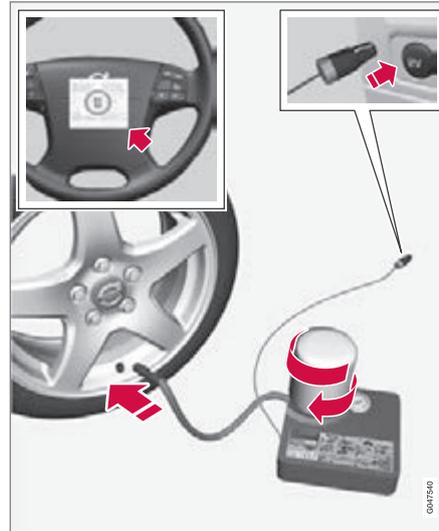

For information on the function of the parts, see preceding illustration.

1. Detach the label for maximum permitted speed (which is fitted on one side of the compressor) and affix it to the steering wheel.

! WARNING

You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Volvo recommends that you visit an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

! WARNING

The sealing fluid can irritate the skin. In the case of contact with skin, wash away the fluid with soap and water.

2. Check that the switch is in position **0** and locate the cable and the air hose.

i NOTE

Do not break the bottle's seal before use. The seal is broken automatically when the bottle is screwed in.

3. Unscrew the orange cap and unscrew the bottle's stopper.
4. Screw the bottle into its holder.



Emergency puncture repair (TMK)*

WARNING

Do not unscrew the bottle, it is equipped with a reverse catch to prevent leakage.

5. Connect the hose from the compressor to the valve.
6. Plug the cable into the 12 V socket and start the car.

NOTE

If the compressor is connected to one of the two 12 V sockets, in the tunnel console, no other current consumer must be connected to the other one.

WARNING

Do not leave children in the car without supervision when the engine is running.

7. Flick the switch to position I.

WARNING

Never stand next to the tyre when the compressor is running. If cracks or unevenness arise then the compressor must be switched off immediately. The journey should not be continued. Contacting an authorised tyre centre is recommended.

NOTE

When the compressor starts, the pressure can increase up to 6 bar but the pressure drops after approximately 30 seconds.

8. Inflate the tyre for 7 minutes.

IMPORTANT

Risk of overheating. The compressor must not run for more than 10 minutes.

9. Switch off the compressor to check the pressure on the pressure gauge. Minimum pressure is 1.8 bar and maximum 3.5 bar. (Release air with the pressure reducing valve if the tyre pressure is too high.)

WARNING

If the pressure is below 1.8 bar then the hole in the tyre is too big. The journey should not be continued. Contacting an authorised tyre centre is recommended.

10. Switch off the compressor and unplug the cable from the 12 V socket.
11. Detach the hose from the tyre valve and fit the valve cap.
12. As soon as possible, drive approximately 3 km at a maximum speed of 80 km/h so that the sealing fluid can seal the tyre.

Rechecking the repair and pressure

1. Reconnect the equipment.
2. Read the tyre pressure on the pressure gauge.
 - If it is below 1.3 bar then the tyre is insufficiently sealed. The journey should not be continued. Contact a tyre centre.
 - If the tyre pressure is higher than 1.3 bar, the tyre must be inflated to the pressure specified in accordance with the tyre pressure table, see page 408 (1 bar=100 kPa). Release air using the



Emergency puncture repair (TMK)*

pressure reducing valve if the tyre pressure is too high.

WARNING

Do not unscrew the bottle, it is equipped with a reverse catch to prevent leakage.

3. Make sure the compressor is switched off. Detach the air hose and cable.

Fit the valve cap.

NOTE

The sealing fluid bottle and the hose must be replaced after use. Volvo recommends that this replacement is performed by an authorised Volvo workshop.

WARNING

Check the tyre pressure regularly.

Volvo recommends that you drive to the nearest authorised Volvo workshop for the replacement/repair of the damaged tyre. Advise the workshop that the tyre contains sealing fluid.

WARNING

You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Volvo recommends that you visit an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

Inflating the tyres

The car's original tyres can be inflated by the compressor.

1. The compressor must be switched off. Make sure that the switch is in position **0** and locate the cable and air hose.
2. Unscrew the wheel's dust cap and screw in the air hose valve connection to the bottom of the thread on the tyre's air valve.

WARNING

Inhaling car exhaust fumes can result in danger to life. Never leave the engine running in sealed areas or areas that lack sufficient ventilation.

WARNING

Do not leave children in the car without supervision when the engine is running.

3. Connect the cable to one of the car's 12 V sockets and start the car.
4. Start the compressor by flicking the switch to position **I**.

IMPORTANT

Risk of overheating. The compressor must not run for more than 10 minutes.

5. Inflate the tyre to the pressure specified in accordance with the tyre pressure table, see page 408. (Release air using the pressure reducing valve if the tyre pressure is too high.)
6. Switch off the compressor. Detach the air hose and cable.
7. Refit the dust cap.



Emergency puncture repair (TMK)*

Replacing the sealing fluid canister

Replace the bottle when the expiration date has passed. Treat the old bottle as environmentally hazardous waste.

WARNING

The bottle contains 1.2-Ethanol and natural rubber-latex.

Harmful if ingested. Could result in allergic reaction in the event of skin contact.

Avoid contact with the skin and eyes.

Store out of the reach of children.




| | |
|------------------------------------|-----|
| Engine compartment..... | 354 |
| Lamps..... | 362 |
| Wiper blades and washer fluid..... | 368 |
| Battery..... | 371 |
| Fuses..... | 376 |
| Car care..... | 387 |



09

MAINTENANCE AND SERVICE

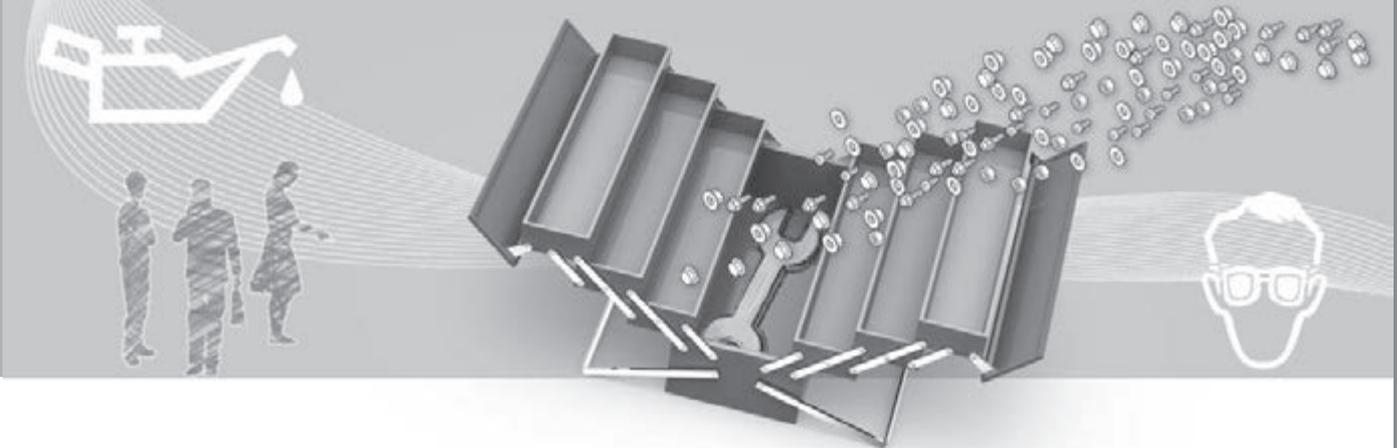



Engine compartment

General

Volvo service programme

To keep the car as safe and reliable as possible, follow the Volvo service programme as specified in the Service and Warranty Booklet. Volvo recommends engaging an authorised Volvo workshop to perform the service and maintenance work. Volvo workshops have the personnel, special tools and service literature to guarantee the highest quality of service.

! IMPORTANT

For the Volvo warranty to apply, check and follow the instructions in the Service and Warranty Booklet.

Check regularly

Check the following oils and fluids at regular intervals, e.g. when refuelling:

- Coolant
- Engine oil
- Power steering fluid
- Washer fluid

! WARNING


Remember that the radiator fan (located at the front of the engine compartment, behind the radiator) may start automatically some after the engine has been switched off.

Always have the engine cleaned by a workshop. There is a risk of fire if the engine is hot.

Raising the car

i NOTE

Volvo recommends only using the jack that belongs to the car model in question. If a jack is selected other than the one recommended by Volvo, follow the instructions for use supplied with the equipment.

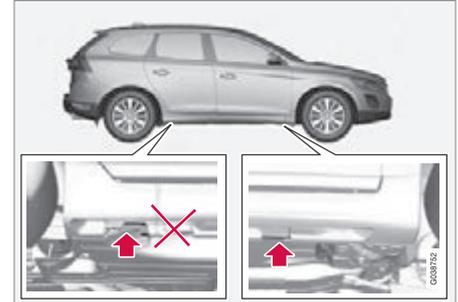

If the car is raised with a workshop jack; position the jack against the front edge on the engine's subframe.

Do not damage the splashguard under the engine. Ensure that the workshop jack is positioned so that the car cannot slide off the jack. Always use axle stands or similar.

If you raise the car using a two-pillar workshop lift, ensure that the front and rear lift arms are fixed under the lifting points. See preceding illustration.

Engine compartment

Opening and closing the bonnet




- 1 Pull the handle by the pedals. An information symbol lights when the bonnet is open, see page 75.
- 2 Move the catch to the left and open the bonnet. (The catch hook is located between the headlamp and grille, see illustration.)

WARNING

Check that the bonnet locks properly when closed.

Engine compartment, overview

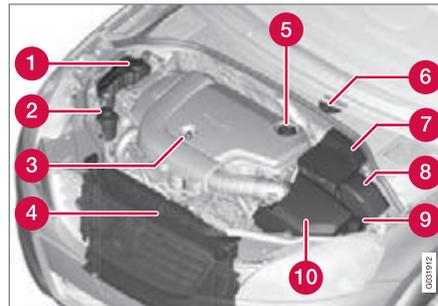

The appearance of the engine compartment may vary depending on engine variant.

- 1 Coolant expansion tank
- 2 Power steering fluid reservoir
- 3 Engine oil dipstick¹
- 4 Radiator
- 5 Filling engine oil

- 6 Reservoir for brake and clutch fluid (located on the driver's side)
- 7 Battery
- 8 Relay and fuse box
- 9 Filling washer fluid
- 10 Air filter

WARNING

The ignition system has very high voltage and output. The voltage in the ignition system is highly dangerous. The remote control key must always be in **0** position when work is being done in the engine compartment, see page 81.


Do not touch the spark plugs or ignition coil when the remote control key is in **II** position or when the engine is hot.

¹ Engines with electronic oil level sensor have no dipstick (5-cyl. diesel).



Engine compartment

Checking the engine oil

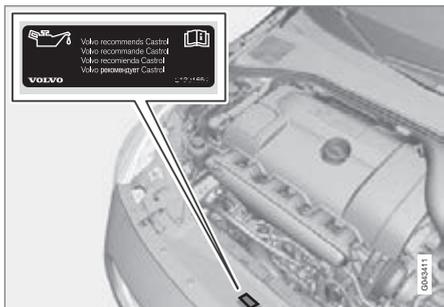

Volvo recommends Castrol oil products.

When driving under adverse conditions, see page 402.

! IMPORTANT

In order to fulfil the requirements for the engine's service intervals all engines are filled with a specially adapted synthetic engine oil at the factory. The choice of oil has been made very carefully with regard to service life, starting characteristics, fuel consumption and environmental impact.

An approved engine oil must be used in order that the recommended service intervals can be applied. Only use a prescribed grade of oil for both filling and oil change, otherwise you will risk affecting service life, starting characteristics, fuel consumption and environmental impact.

Volvo Car Corporation disclaims all warranty liability if engine oil of the prescribed grade and viscosity is not used.

Volvo recommends that oil changes are carried out at an authorised Volvo workshop.

Volvo uses different systems for warning of low/high oil level or low/high oil pressure. Certain variants have an oil pressure sensor, and then the combined instrument panel's warning symbol for low oil pressure is used. Other variants have an oil level sensor, when the driver is informed via the instrument's


warning symbol  and display texts. Certain variants have both systems. Contact a Volvo dealer for more information.

Change the engine oil and oil filter in accordance with the intervals specified in the Service and Warranty Booklet.

Using oil of a higher than specified grade is permitted. If the car is driven in adverse conditions, Volvo recommends using an oil of a higher grade, see page 402.

For capacities, see page 403 and onwards.

Engine with oil dipstick²

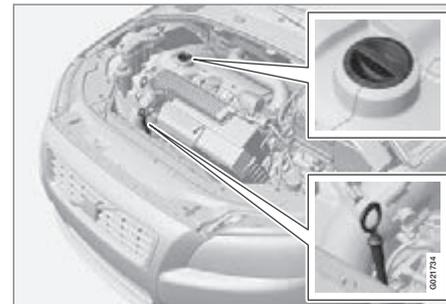

Dipstick and filler pipe.


² Only applies to petrol and 4-cyl. diesel.



Engine compartment

Checking the oil level in a new car is especially important before the first scheduled oil change.

Volvo recommends checking the oil level every 2 500 km. The most accurate measurements are made on a cold engine before starting. The measurement will be inaccurate if taken immediately after the engine is switched off. The dipstick will indicate that the level is too low because the oil has not had time to flow down into the oil sump.

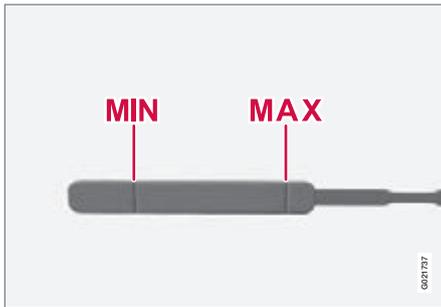

The oil level must be between the **MIN** and **MAX** marks.

Measurement and filling if required

1. Ensure that the car is level. After switching off the engine it is important to wait 5 minutes to allow the oil time to run back to the sump.
2. Pull up and wipe the dipstick.
3. Re-insert the dipstick.
4. Pull it out and check the level.
5. If the level is close to **MIN** then 0.5 litres should be added. If the level is significantly below, then an additional amount is required.
6. If required, check the level again, do it after driving a short distance. Then repeat steps 1 - 4.



WARNING


Never fill above the **MAX** mark. The level should never be above **MAX** or below **MIN** as this could lead to engine damage.



WARNING

Do not spill oil onto the hot exhaust manifold due to the risk of fire.

Engine with electronic oil level sensor³

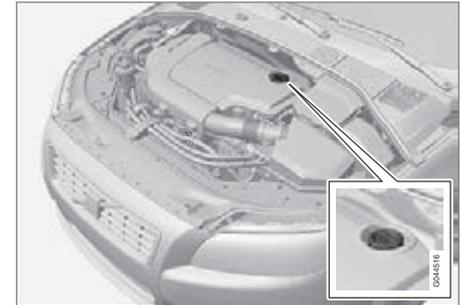

Filler pipe.⁴


You do not need to take action with respect to the engine oil level before a message is shown in the combined instrument panel's information display, see the illustration below.

³ Only applies to 5-cyl. diesel.

⁴ Engines with electronic oil level sensor have no dipstick (5-cyl. diesel).



Engine compartment

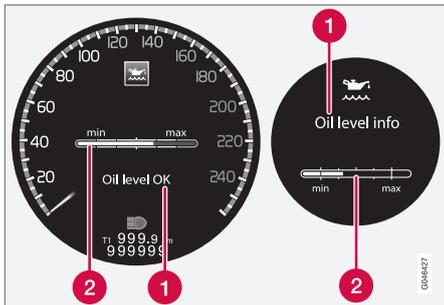

Message and graph in the display. The left-hand display shows the digital combined instrument panel and the right-hand the analogue.

- 1 Message
- 2 Engine oil level

The oil level is checked using the electronic oil level gauge with the thumbwheel when the engine is switched off, see page 358.

WARNING

If the message **Oil service required** is shown, visit a workshop. The oil level may be too high.

IMPORTANT

In the event of the message **Oil level low Refill 0.5 litre**, only fill with 0.5 litres.

NOTE

The oil level is only detected by the system during driving. The system cannot directly detect changes when the oil is filled or drained. The car must be driven about 30 km before the oil level display is correct.

WARNING

Do not fill more oil if filling level (3) or (4) appears as shown in the illustration below. The level must never be above **MAX** or below **MIN**, as this could lead to engine damage.

WARNING


Do not spill oil onto the hot exhaust manifold due to the risk of fire.

Measuring the oil level

If the oil level needs to be checked then it should be carried out in accordance with the sequence below.

1. Activate key position **II**, see page 81.
2. Rotate the thumbwheel on the left-hand stalk filling switch to position **Oil level**.
 - > You will then see information displayed about the engine oil level.

For more information on menu management, see page 208.

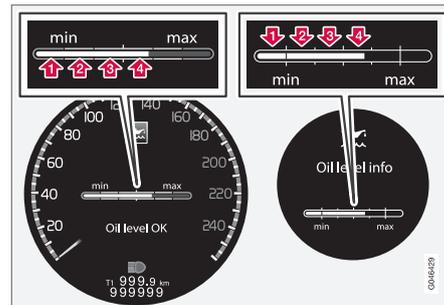

The figures 1-4 represent filling level. Do not fill more oil if filling level (3) or (4) is shown. Recommended filling level is 4. Message and graph in the display. The left-hand display shows the digital combined instrument panel and the right-hand the analogue.



Engine compartment

Coolant**Checking the level and topping up**

When topping up the coolant, follow the instructions on the packaging. It is important that the mixture of coolant concentrate and water is correct for the prevailing weather conditions. Never top up with water only. The risk of freezing increases with both too little and too much coolant concentrate.

⚠ WARNING

Coolant can be very hot. If the coolant requires topping up when the engine is at operating temperature, unscrew the expansion tank cap slowly to gently release the overpressure.

For capacities and for standards regarding water quality, see page 404.

Check the coolant regularly

The level must lie between the **MIN** and **MAX** marks on the expansion tank. If the system is not filled sufficiently, high temperatures could occur, causing a risk of damage to the engine.

**IMPORTANT**

- A high content of chlorine, chlorides and other salts may cause corrosion in the cooling system.
- Always use coolant with anti-corrosion agent as recommended by Volvo.
- Ensure that the coolant mixture is 50% water and 50% coolant.
- Mix the coolant with approved quality tap water. In the event of any doubt about water quality, used ready-mixed coolant in accordance with Volvo recommendations.
- When changing coolant/replacing cooling system components, flush the cooling system clean with approved quality tap water or flush with ready-mixed coolant.
- The engine must only be run with a well-filled cooling system. Otherwise, temperatures that are too high may occur resulting in the risk of damage (cracks) in the cylinder head.



Engine compartment

Brake and clutch fluid

Checking the level

Brake and clutch fluid have a common reservoir. The level must be between the **MIN** and **MAX** marks that are visible inside the reservoir. Check the level regularly.


Change the brake fluid every other year or at every other regular service.

For capacities and recommended fluid grade, see page 404. The fluid should be changed annually on cars driven in conditions requiring hard, frequent braking, such as driving in mountains or tropical climates with high humidity.

WARNING

If the brake fluid is under the **MIN** level in the brake fluid reservoir, do not drive further before topping up the brake fluid. Volvo recommends that the reason for the loss of brake fluid is investigated by an authorised Volvo workshop.

Filling

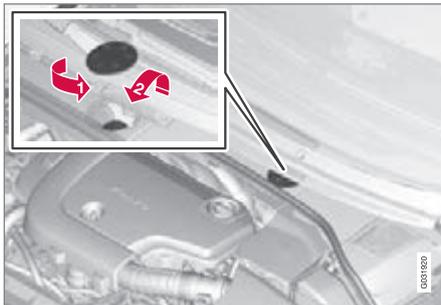

The fluid reservoir is located on the driver's side.


The fluid reservoir is protected under the cover over the cold zone in the engine compartment. The round cover must be removed first before the reservoir cap can be reached.

1. Turn and open the cover located on the covering.
2. Unscrew the reservoir cap and fill the fluid. The level must be between the **MIN** and **MAX** marks, which are located on the inside of the reservoir.

IMPORTANT

Do not forget to refit the cap.

Power steering fluid

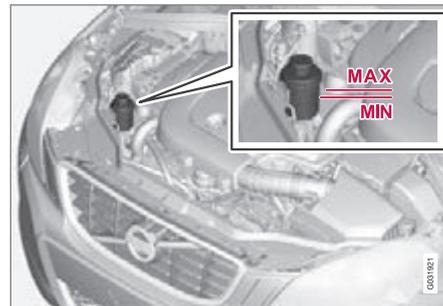

IMPORTANT

Keep the area around the power steering fluid reservoir clean when checking. The cover must not be opened.

Check the level frequently. The fluid does not require changing. The fluid level must be between the **MIN** and **MAX** marks. For capacities and recommended fluid grade, see page 404.

NOTE

If a fault should arise in the power steering system or if the engine is switched off and the car must be towed, it can still be steered.



Air conditioning system

Troubleshooting and repair

The air conditioning system contains fluorescent tracing agents. Use ultraviolet light when looking for leaks.

Volvo recommends that you contact an authorised Volvo workshop.



WARNING

The air conditioning system contains pressurised refrigerant R134a. This system must only be serviced and repaired by an authorised workshop.



Lamps

General

The bulbs are specified, see page 367. The following list contains locations of bulbs and other light sources that are specialised, such as LED¹ lamps, or are unsuitable for changing for some other reason, except at a workshop:

- Active Xenon headlamps - ABL (Xenon lamps)
- Daytime running lights/Position/parking lamps front
- Side marker lamps front
- Cornering lights
- Side direction indicators, door mirrors
- Approach lighting, door mirrors
- Interior lighting apart from Courtesy lighting front
- Glovebox lighting
- Position/parking lamps rear
- Side marker lamps rear
- Direction indicators, rear.

WARNING

On cars with Xenon headlamps, the replacement of Xenon lamps must be carried out at a workshop - an authorised Volvo workshop is recommended. Working with Xenon lamps demands extreme caution because the headlamp is equipped with a high voltage unit.

WARNING

The car's electrical system must be in key position **0** when replacing bulbs, see page 81

IMPORTANT

Never touch the glass part of the bulbs with your fingers. Grease and oils from your fingers are vaporised by the heat, coating the reflector and then causing damage.

NOTE

If an error message remains after the broken bulb has been replaced then we recommend that you visit an authorised Volvo workshop.

NOTE

Outside lighting such as headlamps, fog lamps and rear lamps may temporarily have condensation on the inside of the lens. This is normal, all exterior lighting is designed to withstand this. Condensation is normally vented out of the lamp housing when the lamp has been switched on for a time.

Headlamps front

All of the headlamp bulbs are replaced via the engine compartment. Loosen and remove the whole headlamp.

Removing the headlamp

Set the car's electrical system in key position **0**, see page 81.



¹ LED (Light Emitting Diode)




Lamps


- 1 Pull out the headlamp's locking pins.
- 2 Pull the headlamp straight forward.

! IMPORTANT

Do not pull the electrical cable, only the connector.

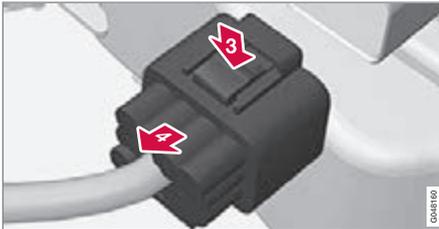


- 3 Detach the headlamp connector by pressing down the clip with your thumb.
- 4 At the same time, guide out the connector with your other hand.
5. Lift out the headlamp and place it on a soft surface to avoid scratching the lens.
6. Replace the bulb in question.

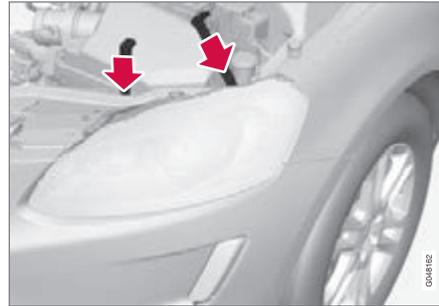Securing the headlamp


When securing, check that the long lock pin is engaged - it should be engaged in both eyes.

1. Plug in the connector, a clicking sound should be heard.
2. Reinstall the headlamp and locking pins. Check that they are correctly inserted.
3. Check the lighting.

The headlamp must be mounted and the connector correctly installed before the lighting is switched on or the remote control key is inserted into the ignition switch.

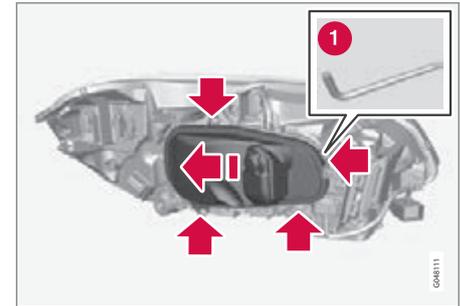Removing the cover


Before starting to replace a bulb, see page 362.


1. Unscrew the cover's four screws using a Torx tool, size T20 (1). They should not be loosened completely. (3 - 4 turns are sufficient.)
2. Slide the cover to one side.
3. Remove the cover.

Reinstall the cover in reverse order.



Lamps


Dipped beam, halogen

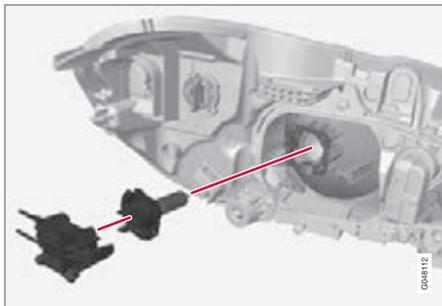

1. Detach the headlamp, see page 362.
2. Remove the cover.
3. Unplug the connector from the bulb.
4. Detach the bulb by pressing the holder downwards.
5. Fit the new bulb in the socket and snap it in. It can be secured in one position.

Reinstall the parts in reverse order.


Main beam, Halogen

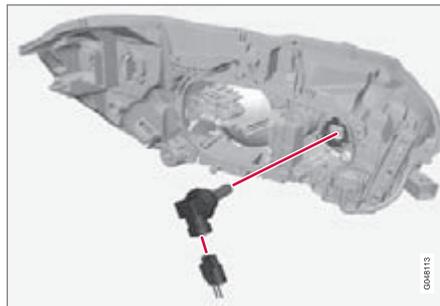

1. Detach the headlamp.
2. Remove the cover, see page 363.
3. Detach the bulb by turning anticlockwise and then pulling straight out.
4. Unplug the connector from the bulb.
5. Replace the bulb and align it in the socket and turn clockwise in order to secure it. It can be secured in one position.

Reinstall the parts in reverse order.

Extra main beam, ABL headlamps*

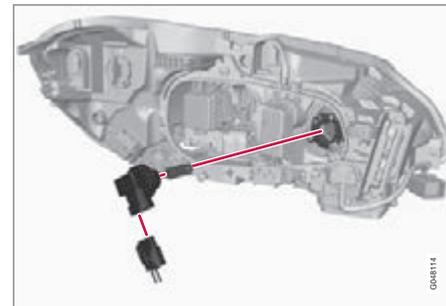


1. Detach the headlamp.
2. Remove the cover, see page 363.
3. Unplug the connector from the bulb.
4. Detach the bulb holder by pulling it straight out.
5. Replace the bulb and fit the new one in the socket. It can only be secured in one position.

Reinstall the parts in reverse order.



Lamps


Direction indicators

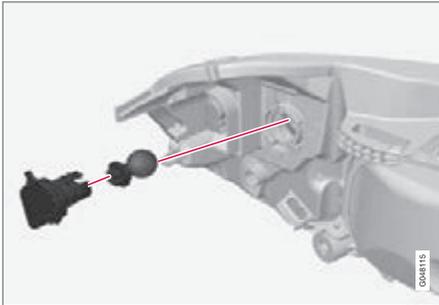

1. Detach the headlamp.
2. Detach the bulb holder by turning anti-clockwise.
3. Pull the bulb holder in order to extract the bulb.
4. Remove the blown bulb by pressing it in and turning anticlockwise.
5. Fit a new bulb, press down and turn clockwise.
6. Fit the bulb holder and turn clockwise.

Reinstall the parts in reverse order.


Rear fog lamp

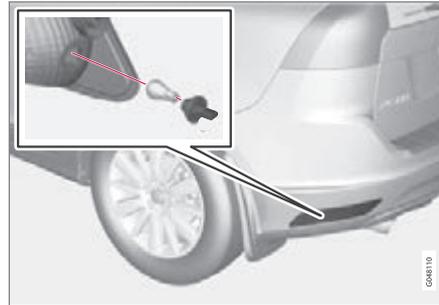

The rear fog lamp is accessed behind the bumper.

1. Detach the bulb holder by turning anti-clockwise.
2. Remove the blown bulb by pressing it in and turning the bulb anticlockwise.
3. Fit a new bulb, press down and turn clockwise.
4. Fit the bulb holder and turn clockwise.

Location of rear bulbs

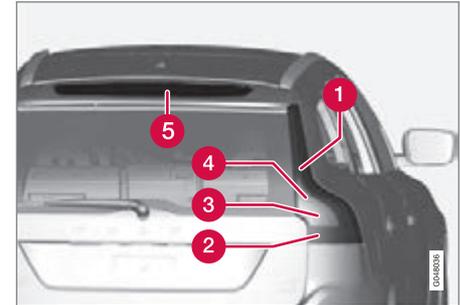


- 1 Position/parking lamps (LED)/Side marker lamps (LED)
- 2 Brake light
- 3 Reversing lamp
- 4 Indicator
- 5 Brake light (LED)



Lamps

Brake light and reversing lamp

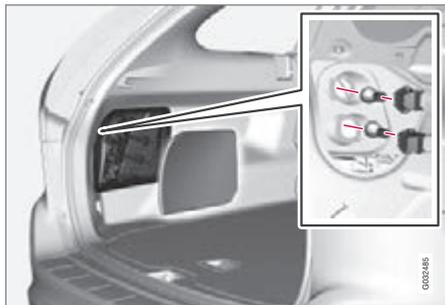

Both the brake light and the reversing lamp bulbs are replaced from inside the cargo area.


1. Open the panel.
2. Detach the bulb holder by turning anti-clockwise.
3. Remove the blown bulb by pressing it in and turning anticlockwise.
4. Fit a new bulb, press down and turn clockwise.
5. Fit the bulb holder and turn clockwise.

Number plate lighting



1. Remove the screws with a screwdriver.
2. Carefully detach the whole lamp housing and withdraw it.
3. Replace the bulb.
4. Refit the whole lamp housing and screw it into place.

Lighting in the cargo area

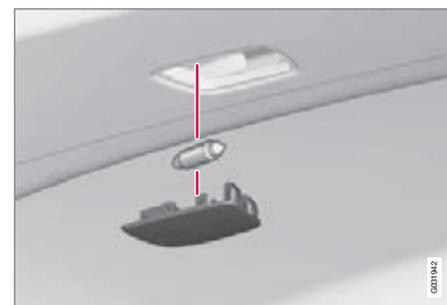

1. Insert a screwdriver and gently prize so that the lamp housing comes loose.
2. Replace the bulb.
3. Check that the bulb illuminates and press back the lamp housing.



Lamps

Vanity mirror lighting

Removal of lamp lens



1. Insert a screwdriver under the lamp lens and gently prize up the lock lugs on the edge.
2. Snap off the lamp lens.
3. Use needle-nose pliers to pull the bulb straight out to the side and replace with a new one. Note! - Do not pinch hard with the pliers. Otherwise the lamp lens could then be crushed.

Attaching the lamp lens

1. Refit the lamp lens.
2. Press it into place.

Specifications of bulbs

| Lighting | W ^A | Type |
|----------------------------|----------------|------------------------------|
| Dipped beam, halogen | 55 | H7 LL |
| Main beam, Halogen | 65 | H9 |
| Extra main beam, ABL | 65 | H9 |
| Front direction indicators | 24 | PY24W |
| Courtesy lighting front | 3 | T10 Socket W2.1x9.5d |
| Glovebox lighting | 5 | Socket SV8.5 Length 43 mm |
| Vanity mirror lighting | 2 | T5 Socket W2x4.6d |
| Cargo area lighting | 10 | Socket SV8.5 Length 43 mm |
| Number plate lighting | 5 | C5W LL |
| Brake light | 21 | P21W LL |

| Lighting | W ^A | Type |
|----------------|----------------|---------|
| Reversing lamp | 21 | P21W LL |
| Rear fog lamp | 21 | H21W LL |

^A Watt



Wiper blades and washer fluid

Wiper blades

Service position



Wiper blades in service position.

In order to change, clean or lift the wiper blades (for scraping off ice from the windscreen, for example) they must be in service position.

! IMPORTANT

Before placing the wiper blades in the service position, make sure that they are not frozen down.

1. Insert the remote control key in the ignition switch¹ and briefly press the **START/**

STOP ENGINE button to set the car's electrical system to key position I. (For detailed information on key positions, see page 81.)


2. Briefly press the **START/STOP ENGINE** button again to set the car's electrical system in key position 0.
3. Within 3 seconds, move the right stalk switch up and hold it in position for approx. 1 second.
 - > The wipers then move to standing straight up.

The wipers return to their starting position when you briefly press the **START/STOP ENGINE** button to set the car's electrical system to key position I (or when the car is started).

! IMPORTANT

If the wiper arms in service position have been folded up from the windscreen, they must be folded back down onto the windscreen before the wipers are allowed to return to their starting position. This is to avoid scraping the paint on the bonnet.

Replacing the wiper blades

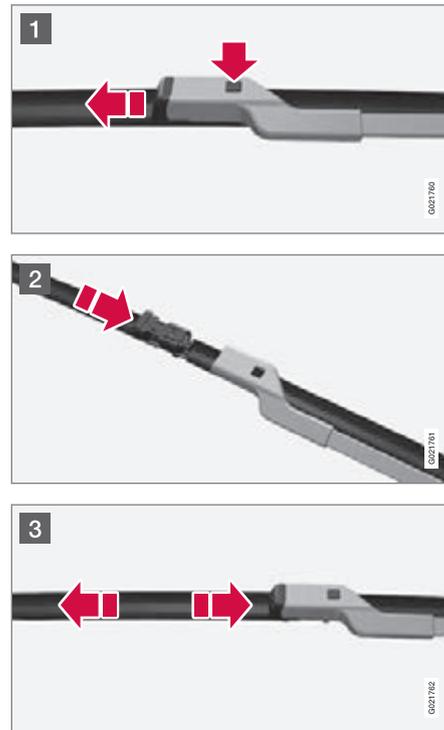


¹ Not necessary in cars with Keyless function.


**Wiper blades and washer fluid**

- 1 Fold up the wiper arm when it is in service position. Press the button located on the wiper blade mounting and pull straight out parallel with the wiper arm.
- 2 Slide in the new wiper blade until a "click" is heard.
- 3 Check that the blade is firmly installed.
4. Fold the wiper arm back towards the windscreen.

The wipers return from service position to their starting position when you briefly press the **START/STOP ENGINE** button to set the car's electrical system to key position **I** (or when the car is started).

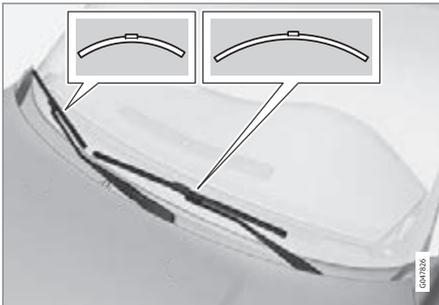**NOTE**

The wiper blades are different lengths. The blade on the driver's side is longer than the blade on the passenger side.

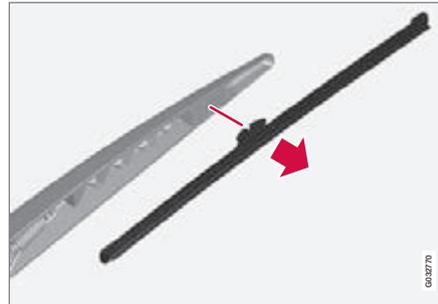Replacing the wiper blades, rear window


1. Fold out the wiper arm.
2. Grip the inner section of the blade (by the arrow).
3. Turn anticlockwise to use the blade's end position against the wiper arm as a lever to detach the blade more easily.
4. Press the new wiper blade into position. Check that it is firmly installed.
5. Lower the wiper arm.

Cleaning

For cleaning wiper blades and windscreen, see page 387 and onwards.

IMPORTANT

Check the wiper blades regularly. Neglected maintenance shortens the service life of the wiper blades.

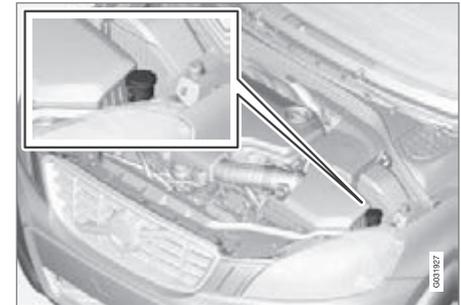Filling washer fluid

The windscreen and headlamp washers share a common reservoir.



Wiper blades and washer fluid

 **IMPORTANT**

Use washer fluid with antifreeze during the winter to avoid freezing in the pump, reservoir and hoses.

For capacities, see page 404.



Battery

Operation

The service life and function of the battery is influenced by factors such as the number of starts, discharging, driving style, driving conditions, climatic conditions etc.

- Never disconnect the battery when the engine is running.
- Check that the cables to the battery are correctly connected and properly tightened.

**WARNING**

- The battery can generate oxyhydrogen gas, which is highly explosive. A spark can be formed if a jump lead is connected incorrectly, and this can be enough for the battery to explode.
- The battery contains sulphuric acid, which can cause serious burns.
- If sulphuric acid comes into contact with eyes, skin or clothing, flush with large quantities of water. If acid splashes into the eyes - seek medical attention immediately.

**NOTE**

The life of the battery is shortened if it becomes discharged repeatedly.

The life of the battery is affected by several factors, including driving conditions and climate. Battery starting capacity decreases gradually with time and therefore needs to be recharged if the car is not used for a longer time or when it is only driven short distances. Extreme cold further limits starting capacity.

To maintain the battery in good condition, at least 15 minutes of driving/week is recommended or that the battery is connected to a battery charger with automatic trickle charging.

A battery that is kept fully charged has a maximum service life.

**IMPORTANT**

Never use a quick charger to charge the battery.

**IMPORTANT**

If the following instruction is not observed then the energy saving function for infotainment system may be temporarily disengaged, and/or the message in the combined instrument panel's information display about the starter battery's state of charge may be temporarily inapplicable, following the connection of an external battery or battery charger:

- The negative battery terminal on the car's starter battery must **never** be used for connecting an external battery or battery charger - only the **car chassis** may be used as the grounding point.

See the section "Start assistance" - for a description of how the cable clamps must be attached.



Battery

Symbols on the battery

| | |
|---|---|
|  | Use protective goggles. |
|  | Further information in the owner's manual. |
|  | Store the battery out of the reach of children. |
|  | The battery contains corrosive acid. |


| | |
|---|--------------------------------|
|  | Avoid sparks and naked flames. |
|  | Risk of explosion. |
|  | Must be taken for recycling. |

i NOTE
An expended battery must be recycled in an environmentally responsible manner - it contains lead.

Replacing the starter battery


Removal

First of all: Take the remote control key from the ignition switch and wait at least 5 minutes before any electrical connections are touched - this is because the car's electrical system needs to store the necessary information to control modules.

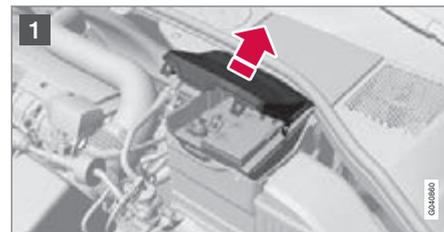



Battery

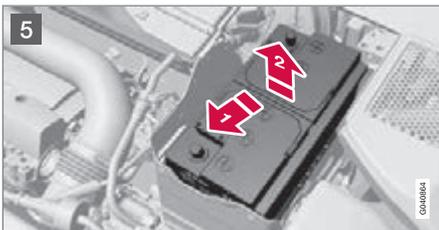

- 1 Open the clips on the front cover and remove the cover.

- 2 Release the rubber moulding so that the rear cover is free.
- 3 Remove the rear cover by screwing one quarter turn and lifting it away.




WARNING

Connect and remove the positive and negative cables in the correct order.

- 4
 - 1 Detach the black negative cable.
 - 2 Detach the red positive cable.
 - 3 Detach the ventilation hose from the battery.
 - 4 Loosen the screw holding the battery clamp.
- 5 Move the battery to the side and lift it up.

Fitting

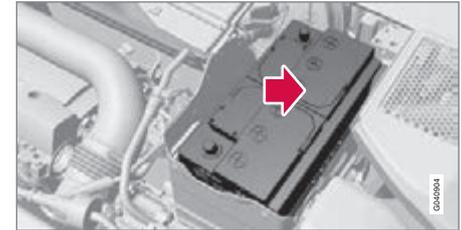

1. Lower the battery into the battery box.
2. Move the battery inward and to the side until it reaches the rear edge of the box.
3. Tighten the clamp that holds the battery.
4. Connect the ventilation hose.
 - > Check that it is correctly connected to both battery and outlet in the body.
5. Connect the red positive cable.
6. Connect the black negative cable.
7. Press in the rear cover. (See Removal.)
8. Fit the rubber moulding. (See Removal.)
9. Align the front cover and secure it with the clips. (See removal.)

For more information on the car's starter battery - see page 409.



Battery

Start/Stop

Cars with the Start/Stop function are equipped with two 12 V batteries - one extra powerful battery for starting and one support battery that helps during the Start/Stop function's starting sequence.

For more information on Start/Stop - see page 131.

For more information on the car's starter battery - see page 121 and 409.

| Battery | Start | Support |
|--|-------------|------------|
| Cold start capacity ^A , CCA (A) | 760 | 120 |
| Size ^B , L×W×H (mm) | 278×175×190 | 150×90×106 |
| Capacity (Ah) | 70 | 8 |

^A In accordance with the SAE standard.

^B Largest possible size.

! IMPORTANT

When replacing batteries in cars with the Start/Stop function, the AGM¹ type batteries must be fitted.


i NOTE

- The higher the current take-off in the car (extra cooling/heating, etc.) the more the batteries must be charged = increased fuel consumption.
- When the capacity of the battery has fallen below the lowest permissible level then the Start/Stop function is disengaged.

Temporarily reduced Start/Stop function due to high current take-off means:

- The engine starts automatically² without the driver depressing the clutch pedal (manual gearbox).
- The engine starts automatically without the driver lifting his/her foot off the foot brake pedal (automatic gearbox).

Location of the batteries

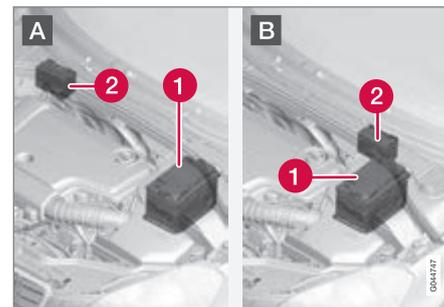

A: Left-hand drive car. B: Right-hand drive car. 1. Battery for starting³ 2. Support battery.

The support battery normally requires no more service than the normal battery that is used for starting. A workshop should be contacted in the event of questions or problems - an authorised Volvo workshop is recommended.

¹ Absorbed Glass Mat

² Automatic starting can only take place if the gear lever is in neutral position.

³ The battery for starting is described in detail on page 372.

**!** **IMPORTANT**

If the following instruction is not observed then the Start/Stop function may temporarily cease to work after the connection of an external battery or battery charger:

- The negative battery terminal on the car's main battery must **never** be used for connecting an external battery or battery charger - only the **car chassis** may be used as the grounding point.

See the section "Start assistance" - for a description of how the cable clamps must be attached.

i **NOTE**

If the battery has become so discharged that everything is "black" and in principle the car does not have all the normal electrical functions and the engine is subsequently started using an external battery or battery charger, then the Start/Stop function will be activated. It will then be possible for the engine to be auto-stopped but in the event of an auto-stop the Start/Stop function may fail to auto-start the engine due to inadequate capacity in the battery.

The battery must first be charged in order to ensure a successful auto-start after an auto-stop. At an outside temperature of +15 °C the battery needs to be charged for at least 1 hour. At a lower outside temperature a charging time of 3-4 hours is recommended. The recommendation is that the battery is charged using an external battery charger.

If this is not possible then the recommendation is to temporarily deactivate the Start/Stop function until the battery has been adequately recharged.

For more information about recharging the battery, see the section "Battery" in the chapter "Maintenance and service".



Fuses

General

All electrical functions and components are protected by a number of fuses in order to protect the car's electrical system from damage by short circuiting or overloading.

If an electrical component or function does not work, it may be because the component's fuse was temporarily overloaded and failed. If the same fuse fails repeatedly then there is a fault in the circuit. Volvo recommends that you visit an authorised Volvo workshop for checking.

Changing


1. Look in the fuse diagram to locate the fuse.
2. Pull out the fuse and check from the side to see whether the curved wire has blown.
3. If this is the case, replace it with a new fuse of the same colour and amperage.



WARNING

Never use a foreign object, or a fuse with an amperage higher than that specified when replacing a fuse. This could cause significant damage to the electrical system and possibly lead to fire.

Location of central electrical units

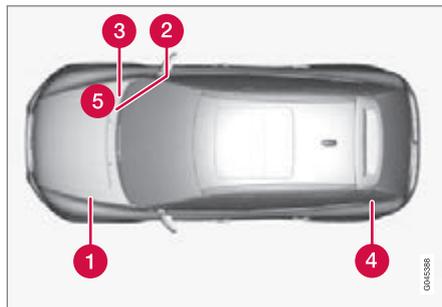


Central electrical unit locations in a left-hand drive car. In a right-hand drive car the central electrical units under the glovebox change sides.

- 1 Engine compartment
- 2 Under the glovebox
- 3 Under the glovebox
- 4 Cargo area
- 5 Engine compartment cold zone (only Start/Stop)



Engine compartment

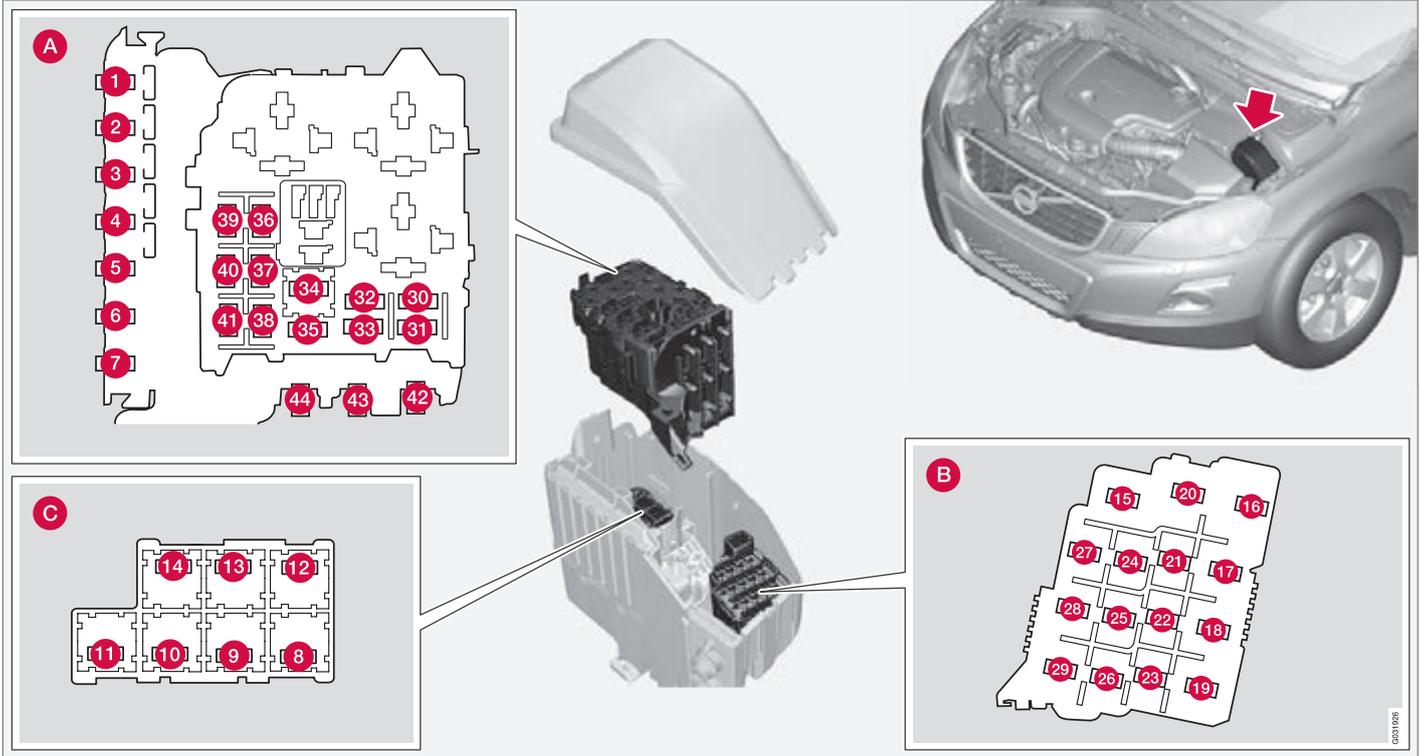

6031706



Fuses

General fuses, engine compartment

On the inside of the cover there are tweezers that facilitate the procedure for the removal and fitting of fuses.

Positions (see preceding illustration)

- A** Engine compartment, upper
- B** Engine compartment, front
- C** Engine compartment, lower

These fuses are all located in the engine compartment box. The fuses in (C) are located under (A).

On the inside of the cover is a label that shows the location of the fuses.

- Fuses 1-7 and 42-44 are of the "Midi Fuse" type and must only be replaced by a workshop¹.
- Fuses 8-15 and 34 are of the "JCASE" type and should be replaced by a workshop¹.
- Fuses 16-33 and 35-41 are of the "Mini Fuse" type.

| | Function | A |
|-----------|--|-----|
| 1 | Primary fuse for the central electronic module (CEM) under the glovebox ^A | 50 |
| 2 | Primary fuse for the central electronic module (CEM) under the glovebox | 50 |
| 3 | Primary fuse for central electrical unit in cargo area ^A | 60 |
| 4 | Primary fuse for relay/fuse box under the glovebox ^A | 60 |
| 5 | Primary fuse for relay/fuse box under the glovebox ^A | 60 |
| 6 | - | - |
| 7 | Electric additional heater ^{*A} | 100 |
| 8 | Heated windscreen*, left-hand side | 40 |
| 9 | Windscreen wipers | 30 |
| 10 | Parking heater* | 25 |
| 11 | Ventilation fan ^A | 40 |

| | Function | A |
|-----------|---|----|
| 12 | Heated windscreen*, right-hand side | 40 |
| 13 | ABS pump | 40 |
| 14 | ABS valves | 20 |
| 15 | Headlamp washers* | 20 |
| 16 | Headlamp levelling*; Active Xenon headlamps - ABL* | 10 |
| 17 | Primary fuse for the central electronic module (CEM) under the glovebox | 20 |
| 18 | ABS | 5 |
| 19 | Speed related power steering* | 5 |
| 20 | Engine control module; Transmission control module; Air-bags | 10 |
| 21 | Heated washer nozzles* | 10 |
| 22 | - | - |
| 23 | Headlamp control | 5 |

¹ An authorised Volvo workshop is recommended.



Fuses

| | Function | A |
|----|---|----|
| 24 | - | - |
| 25 | - | - |
| 26 | - | - |
| 27 | Relay coils | 5 |
| 28 | Auxiliary lamps* | 20 |
| 29 | Horn | 15 |
| 30 | Relay coil in main relay for engine management system; Engine control module (5, 6-cyl.) | 10 |
| 31 | Transmission control module | 15 |
| 32 | Solenoid clutch A/C (not 5-cyl. diesel) | 15 |
| 33 | Relay coil in relay for solenoid clutch A/C (not 5-cyl. diesel); Relay coil in relay for coolant pump (5-cyl. diesel Start/Stop); Relay coils in central electrical unit in engine compartment cold zone (Start/Stop) | 5 |
| 34 | Start relay ^A | 30 |

| | Function | A |
|----|--|----|
| 35 | Ignition coils (4-cyl. petrol); Glow control module (5-cyl. diesel) | 10 |
| | Ignition coils (5, 6-cyl. petrol); Capacitor (6-cyl.) | 20 |
| 36 | Engine control module (petrol) | 10 |
| | Engine control module (diesel) | 15 |
| 37 | Mass air flow sensor (5-cyl. diesel, 6-cyl.); Control valves (5-cyl. diesel); Injectors (5, 6-cyl. petrol); Engine control module (5-cyl. petrol, 6-cyl.) | 15 |
| 38 | Solenoid clutch A/C (5, 6-cyl.); Valves, Engine control module (6-cyl.) Solenoids (6-cyl. without turbo); Actuator motors, intake manifold (6-cyl. without turbo); Mass air flow sensor (4-cyl. 2.0 l petrol, 5-cyl. petrol); Oil level sensor (5-cyl. diesel) | 10 |

| | Function | A |
|----|---|-----|
| 39 | Lambda-sonds (4-cyl. petrol); Lambda-sond (diesel); Control module, radiator roller cover (5-cyl. 2.0 l diesel) | 10 |
| | EVAP valve (5, 6-cyl. petrol); Lambda-sonds (5, 6-cyl. petrol) | 15 |
| 40 | Diesel filter heater | 20 |
| 41 | Control module, radiator roller cover (5-cyl. petrol) | 5 |
| | Crankcase ventilation heater (5-cyl. diesel); Oil pump automatic gearbox (5-cyl. diesel Start/Stop) | 10 |
| 42 | Glow plugs (diesel) | 70 |
| 43 | Cooling fan (4-cyl., 5-cyl. petrol) | 60 |
| | Cooling fan (6-cyl., 5-cyl. diesel) | 80 |
| 44 | Electro-hydraulic power steering | 100 |

^A For cars with the Start/Stop function this fuse location is empty - see instead page 385.





Fuses

Under the glovebox - Relay/Fuse box



Positions

On the inside of the cover is a label that shows the location of the fuses.

| | Function | A |
|---|--|----|
| 1 | Primary fuse for audio control module*; Primary fuse for fuses 16-20: Infotainment | 40 |
| 2 | - | - |
| 3 | - | - |
| 4 | - | - |

| | Function | A |
|----|---|----|
| 5 | - | - |
| 6 | - | - |
| 7 | 12 V socket, cargo area* | 15 |
| 8 | Control panel, driver's door | 20 |
| 9 | Control panel, front passenger door | 20 |
| 10 | Control panel, rear passenger door, right | 20 |

| | Function | A |
|----|--|----|
| 11 | Control panel, rear passenger door, left | 20 |
| 12 | Keyless* | 20 |
| 13 | Power seat driver's side* | 20 |
| 14 | Power seat passenger side* | 20 |
| 15 | Windscreen washers; Rear window washer | 25 |
| 16 | Infotainment control module | 5 |



Fuses


| | Function | A |
|----|--|-----|
| 17 | Audio control unit (amplifier)*; Digital radio*; TV* | 10 |
| 18 | Audio | 15 |
| 19 | Telematics*; Bluetooth* | 5 |
| 20 | Multimedia system for rear seat (RSE)* | 7.5 |
| 21 | Sunroof*; Interior lighting roof; Climate sensor*; Damper motors, air intake | 5 |
| 22 | 12 V socket, tunnel console | 15 |
| 23 | Seat heating, rear right* | 15 |
| 24 | Seat heating, rear left* | 15 |
| 25 | Power lumbar support* | 15 |
| 26 | Seat heating (passenger side) | 15 |
| 27 | Seat heating (driver's side) | 15 |
| 28 | Parking assistance*; Parking camera*; Towbar control module * | 5 |

| | Function | A |
|----|------------------------|----|
| 29 | AWD control module* | 15 |
| 30 | Active chassis Four-C* | 10 |



Fuses

Under the glovebox - Central electronic module (CEM)

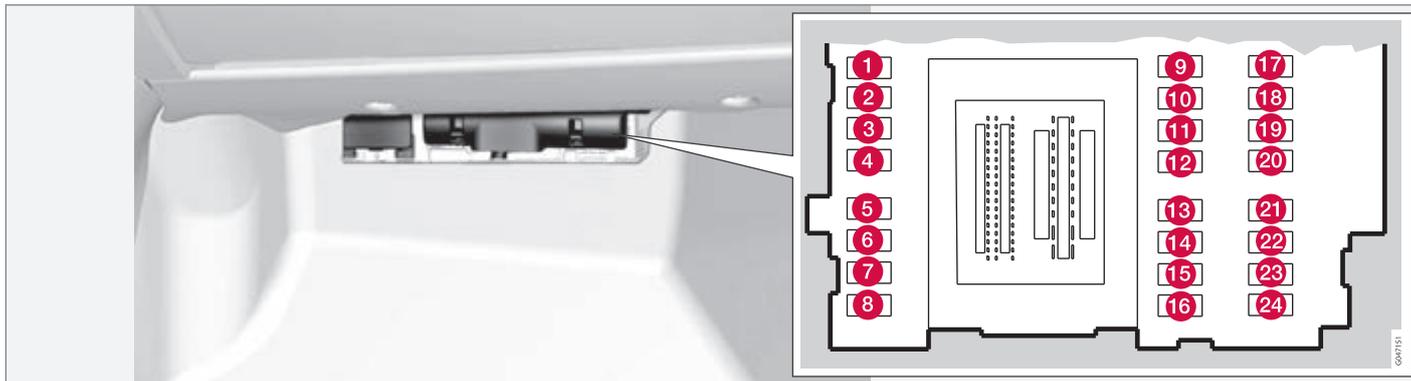

Positions

| | Function | A |
|---|---|-----|
| 1 | Rear window wiper | 15 |
| 2 | - | - |
| 3 | Interior lighting; Driver's door control panel, power windows; Power seats, front*; Remote controlled garage door opener* | 7.5 |
| 4 | Combined instrument panel | 5 |

| | Function | A |
|----|--|-----|
| 5 | Adaptive cruise control, ACC*; collision warning system* | 10 |
| 6 | Interior lighting; Rain sensor | 7.5 |
| 7 | Steering wheel module | 7.5 |
| 8 | Central locking system, fuel filler flap | 10 |
| 9 | Heated steering wheel* | 15 |
| 10 | Heated windscreen* | 15 |

| | Function | A |
|----|---|----|
| 11 | Unlocking, tailgate | 10 |
| 12 | Folding head restraint* | 10 |
| 13 | Fuel pump | 20 |
| 14 | Movement detector alarm*; Climate panel | 5 |
| 15 | Steering lock | 15 |
| 16 | Siren alarm*; Data link connector OBDII | 5 |



Fuses

09


| | Function | A |
|----|--|-----|
| 17 | - | - |
| 18 | Airbags | 10 |
| 19 | Collision warning system* | 5 |
| 20 | Accelerator pedal sensor; Dimming interior rearview mirror*; Seat heating, rear* Electric additional heater* | 7.5 |
| 21 | Infotainment control module (Performance); Audio (Performance) | 15 |
| 22 | Brake light | 5 |
| 23 | Sunroof* | 20 |
| 24 | Immobiliser | 5 |





Fuses

Cargo area

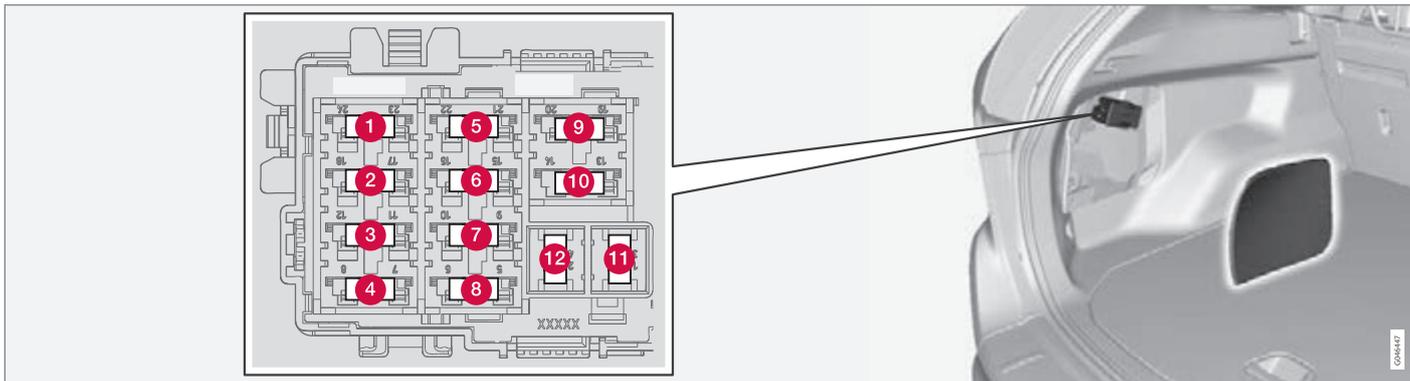

The fuse box is located behind the upholstery on the left-hand side.


Positions

| | Function | A |
|---|-------------------------------|----|
| 1 | Electric parking brake, left | 30 |
| 2 | Electric parking brake, right | 30 |
| 3 | Rear window defroster | 30 |
| 4 | Trailer socket 2* | 15 |
| 5 | Power operated tailgate* | 20 |
| 6 | - | - |

| | Function | A |
|----|-------------------|----|
| 7 | - | - |
| 8 | - | - |
| 9 | - | - |
| 10 | - | - |
| 11 | Trailer socket 1* | 40 |
| 12 | - | - |



Engine compartment, cold zone - Start/Stop

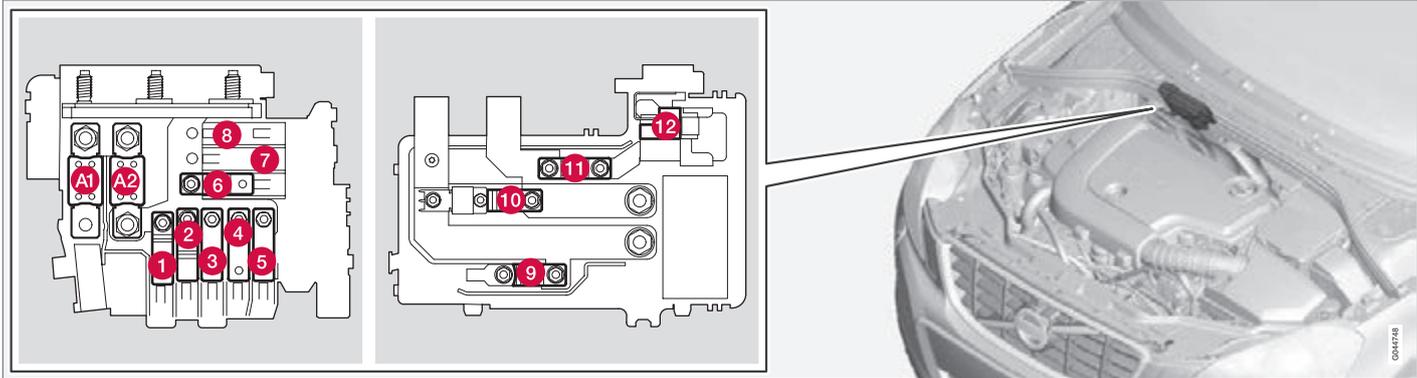

Location of fuses for the Start/Stop function.

- Fuses A1 and A2 are of the "MEGA Fuse" type and must only be replaced by a workshop².
- Fuses 1-11 are of the "Midi Fuse" type and must only be replaced by a workshop².
- Fuse 12 is of the "Mini Fuse" type.

For more information on Start/Stop - see page 131.

Positions

| | Function | A |
|----|--|-----|
| A1 | Main fuse for central electrical unit in the engine compartment | 175 |
| A2 | Main fuse for central electronic module (CEM) under the glovebox, relay/fuse box under the glovebox, central electrical unit in cargo area | 175 |

| | Function | A |
|---|---|-----|
| 1 | Electric additional heater* | 100 |
| 2 | Primary fuse for the central electronic module (CEM) under the glovebox | 50 |
| 3 | Primary fuse for relay/fuse box under the glovebox | 60 |
| 4 | Primary fuse for relay/fuse box under the glovebox | 60 |

² An authorised Volvo workshop is recommended.



Fuses

| | Function | A |
|----|---|----|
| 5 | Primary fuse for central electrical unit in cargo area | 60 |
| 6 | Ventilation fan | 40 |
| 7 | - | - |
| 8 | - | - |
| 9 | Start relay | 30 |
| 10 | Internal diode | 50 |
| 11 | Support battery | 70 |
| 12 | Central electronic module (CEM) - reference voltage support battery; Charging point support battery | 15 |



Washing the car

Wash the car as soon as it becomes dirty. Wash the car in a car wash with oil separator. Use car shampoo.

- Remove bird droppings from the paintwork as soon as possible. Bird droppings contain chemicals that affect and discolour paintwork very quickly. An authorised Volvo workshop is recommended for the removal of any discoloration.
- Hose down the underbody.
- Rinse the whole car until the loose dirt has been removed in order to reduce the risk of scratches from washing. Do not spray directly onto the locks.
- If necessary, use cold degreasing agent on very dirty surfaces. Note that the surfaces must not then be warmed up by the sun!
- Wash using a sponge, car shampoo and plenty of lukewarm water.
- Clean the wiper blades with a lukewarm soap solution or car shampoo.
- Dry the car using a clean, soft chamois or a water scraper. If you avoid allowing water droplets to dry in strong sunlight then the risk of water stains that may need to be polished away is reduced.

WARNING

Always have the engine cleaned by a workshop. There is a risk of fire if the engine is hot.

IMPORTANT

Dirty headlamps have impaired functionality. Clean them regularly, when refuelling for example.

Do not use any corrosive cleaning agents but use water and a non-scratching sponge instead.

NOTE

Outside lighting such as headlamps, fog lamps and rear lamps may temporarily have condensation on the inside of the lens. This is normal, all exterior lighting is designed to withstand this. Condensation is normally vented out of the lamp housing when the lamp has been switched on for a time.

Cleaning the wiper blades

Asphalt, dust and salt residue on wiper blades, as well as insects, ice etc. on the windscreen, impair the service life of wiper blades.

For cleaning:

- Set the wiper blades in service position, see page 368.

NOTE

Wash the wiper blades and windscreen regularly with lukewarm soap solution or car shampoo.

Do not use any strong solvents.

Automatic car washes

An automatic car wash is a simple and quick way of washing the car, but it cannot reach everywhere. Handwashing the car is recommended for achieving optimum results.

NOTE

During the first few months a new car must only be handwashed. This is because the paintwork is more sensitive when it is new.

High-pressure washing

When using high-pressure washing, use sweeping movements and make sure that the nozzle does not come closer than 30 cm to the surface of the car (the distance applies to all exterior parts). Do not spray directly onto the locks.



Car care

Testing the brakes

WARNING

Always test the brakes after washing the car, including the parking brake, to ensure that moisture and corrosion do not attack the brake linings and reduce braking performance.

Lightly depress the brake pedal now and then when driving long distances in rain or slush. The heat from the friction causes the brake linings to warm up and dry. Do the same thing after starting in very damp or cold weather.

Exterior plastic, rubber and trim components

A special cleaning agent available from Volvo dealers is recommended for the cleaning and care of coloured plastic parts, rubber and trim components, such as glossy trim mouldings. When using such a cleaning agent the instructions must be followed carefully.

IMPORTANT

Avoid waxing and polishing on plastic and rubber.

When using degreasant on plastic and rubber, only rub with light pressure if it is necessary. Use a soft washing sponge.

Polishing glossy trim mouldings could wear away or damage the glossy surface layer.

Polishing agent that contains abrasive must not be used.

Rims

Only use rim cleaning agent recommended by Volvo.

Strong rim cleaning agents can damage the surface and cause stains on chrome-plated aluminium rims.

Polishing and waxing

Polish and wax the car if the paintwork is dull or to give the paintwork extra protection.

The car does not need to be polished until it is at least one year old. However, the car can be waxed during this time. Do not polish or wax the car in direct sunlight.

Wash and dry the car thoroughly before you begin polishing or waxing. Clean off asphalt

and tar stains using tar remover or white spirit. More stubborn stains can be removed using fine rubbing paste designed for car paintwork.

Polish first with a polish and then wax with liquid or solid wax. Follow the instructions on the packaging carefully. Many preparations contain both polish and wax.

IMPORTANT

Only paint treatment recommended by Volvo should be used. Other treatment such as preserving, sealing, protection, lustre sealing or similar could damage the paintwork. Paintwork damage caused by such treatments is not covered by Volvo warranty.

Water-repellent coating*



Never use products such as car wax, degreaser or similar on glass surfaces as this could ruin their water-repellent properties.

Take care when cleaning so as not to damage the glass surface.

To avoid damaging glass surfaces when removing ice – only use plastic ice scrapers.

There is natural wear of the water-repellent coating.



Treatment with a special finishing agent available from Volvo dealers is recommended in order to maintain the water-repellent properties. This should be used first after three years and then each year.

Rustproofing – inspection and maintenance

The car received a thorough and complete rustproofing at the factory. Parts of the body are made of galvanised sheet metal. The underbody is protected by a wear-resistant anti-corrosion compound. A thin, penetrating rustproofing fluid was sprayed into the exposed members, cavities, closed sections and side doors.

Under normal conditions the rustproofing does not require treatment for approximately 12 years. After this period, it should be treated at three-year intervals. Volvo recommends that you engage an authorised Volvo workshop for assistance if the car needs further treatment.

Dirt and road salt can lead to corrosion so it is important to keep the car clean. The car's rustproofing needs to be checked regularly and touched-up if necessary in order for it to be maintained.

Cleaning the interior

Only use cleaning agents and car care products recommended by Volvo. Clean regularly and follow the instructions included with the car care product.

Vacuuming is important prior to using cleaning agents.

Carpets and cargo area

Remove inlaid carpets for separate cleaning of the floor carpet and the inlaid carpets. Use a vacuum cleaner to remove dust and dirt.

Each inlay mat is secured with pins.

- Take hold of the inlay mat at each pin and lift the mat straight up.

Fit the inlay mat in place by pressing it in at each pin.

WARNING

Before setting off check that the inlaid mat in the driver area is firmly affixed and secured in the pins in order to avoid getting caught adjacent to and under the pedals.

A special textile cleaner is recommended for stains on the floor mat after vacuuming. Floor mats should be cleaned with agents recommended by your Volvo dealer!

Stains on fabric upholstery and roof upholstery

A special fabric cleaning agent, available from authorised Volvo dealers, is recommended to avoid impairing the fire retardant qualities of the upholstery.

IMPORTANT

Sharp objects and Velcro may damage the fabric upholstery.

Treating stains on leather upholstery

Volvo's leather upholstery is chromium-free and is treated to preserve its original appearance.

Leather upholstery ages and acquires a beautiful patina over time. The leather is refined and processed so that it retains its natural characteristics. It is given a protective coating, but regular cleaning is required in order to maintain both characteristics and appearance. Volvo offers a comprehensive product for the cleaning and treatment of leather upholstery which, when used in accordance with the instructions, preserves the leather's protective coating. After a period of use the natural appearance of the leather will nevertheless emerge, depending more or less on the surface texture of the leather. This is a



Car care

natural maturing of the leather and shows that it is a natural product.

To achieve best results Volvo recommends cleaning and the application of protective cream once to four times per year (or more if necessary). The Volvo Leather Care kit is available from your Volvo dealer.

IMPORTANT

- Certain items of coloured clothing (for example, jeans and suede garments) may stain the upholstery.
- Never use strong solvents. Such products may damage fabric, vinyl and leather upholstery.

Washing instructions for leather upholstery

1. Pour the leather cleaner on the dampened sponge and squeeze out a strong foam.
2. Work the dirt away with gentle circular movements.
3. Dab accurately with the sponge on the stains. Allow the sponge to absorb the stain. Do not rub.
4. Wipe off with soft paper or a cloth and allow the leather to dry completely.

Protective treatment of leather upholstery

1. Pour a small amount of the protective cream on the felted cloth and massage in a thin layer of cream with gentle circular movements on the leather.
2. Allow the leather to dry for 20 minutes before use.

The leather has now been given improved protection against stains and improved UV protection.

Washing instructions for the leather steering wheel

- Remove dirt and dust with a soft pre-moistened sponge and neutral soap.
- Leather needs to breathe. Never cover the leather steering wheel with protective plastic.
- Use natural oils. Volvo's leather care agents are recommended for best results.

If the steering wheel has stains:

Group 1 (ink, wine, coffee, milk, sweat and blood)

- Use a soft cloth or sponge. Mix a 5% ammonia solution. (For blood stains, use a solution of 2 dl water and 25g salt.)

Group 2 (fats, oils, sauces and chocolate)

1. Same procedure as for group 1.
2. Polish with an absorbent paper or cloth.

Group 3 (dry dirt, dust)

1. Use a soft brush to remove the dirt.
2. Same procedure as for group 1.

Treating stains on interior plastic, metal and wood parts

A fibrillated fibre or microfibre cloth, lightly moistened with water, available from Volvo dealers, is recommended for cleaning interior parts and surfaces.

Do not scrape or rub stains. Never use strong stain removers. A special cleaning agent available from Volvo dealers can be used for more difficult cleaning.

Cleaning seatbelts

Use water and a synthetic detergent. A special textile cleaning agent is available from your Volvo dealer. Make sure the seatbelt is dry before allowing it to retract.




Touching up minor paintwork damage

Paint is an important part of the car's rust-proofing and should therefore be checked regularly. To avoid the onset of rust, damaged paintwork should be rectified immediately. The most common types of paintwork damage are stone chips, scratches, and marks on the edges of wings, doors and bumpers.

Materials

- primer¹ - for e.g. plastic-clad bumpers there are special adhesive primers available in spray cans
- base coat and clear coat - are available in spray cans or as touch-up pens/sticks²
- masking tape
- fine sand paper¹.


Colour code (Paint code)

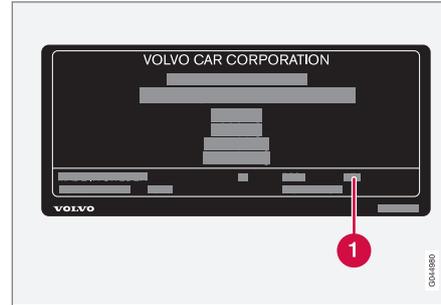

- 1 Code for car's colour

It is important that the correct colour is used. For product decal location, see page 396.

Repairing minor paint damage such as stone chips and scratches

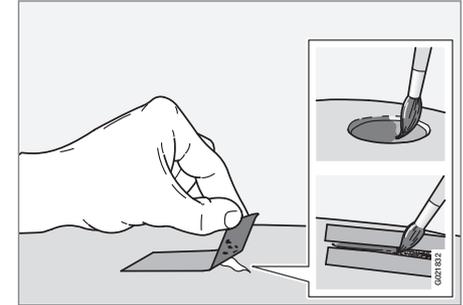

Before work is started, the car must be clean and dry as well as at a temperature above 15 °C.

1. Apply a piece of masking tape over the damaged surface. Then remove the tape to remove any loose paint.

If the damage has reached down to a metal surface (sheet steel), it is preferable to use a primer. In the event of damage to a plastic surface, an adhesive primer should be used for better results - spray into the spray can's cap and brush thinly.

¹ If required.

² Follow the instructions that are included with the package for the touch-up pen/stick.



Car care

2. A light sanding with very fine abrasive material can be performed locally before painting if necessary (e.g. if there are rough edges). Clean the surface thoroughly and allow to dry.
3. Stir the primer well and apply using a fine brush, matchstick or similar. Finish with base coat and clear coat once the primer has dried.
4. For scratches, proceed as above, but mask around the damaged area to protect the undamaged paintwork.



NOTE

If the stone chip has not penetrated down to the meal and an undamaged layer of paint remains in place, fill in with base coat and clear coat as soon as the surface has been cleaned.




| | |
|--|-----|
| Type designations..... | 396 |
| Dimensions and weights..... | 398 |
| Engine specifications..... | 401 |
| Engine oil..... | 402 |
| Fluids and lubricants..... | 404 |
| Fuel..... | 406 |
| Wheel and tyres, dimensions and pressure | 408 |
| Electrical system..... | 409 |
| Type approval..... | 410 |
| Licenses..... | 419 |
| Symbols in the display..... | 422 |




10

SPECIFICATIONS

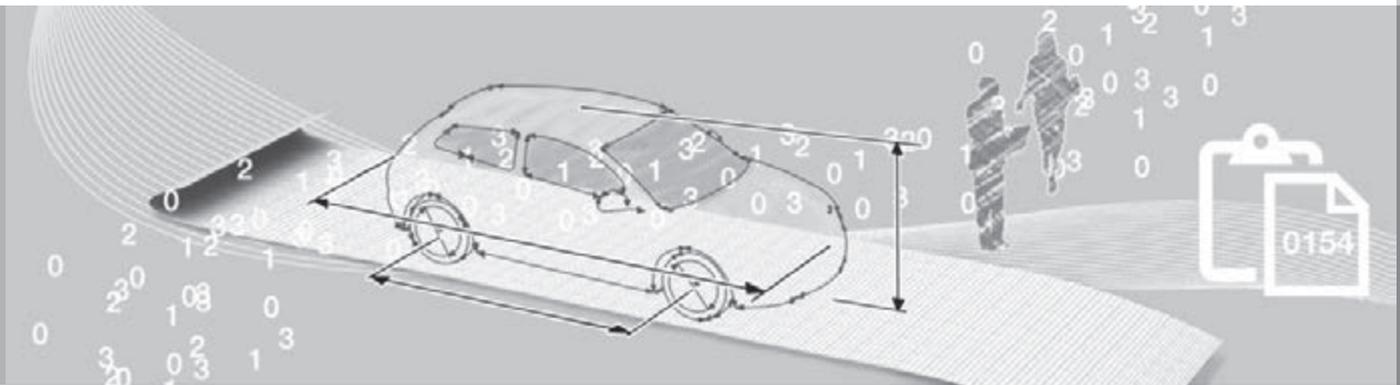

Type designations

Label location

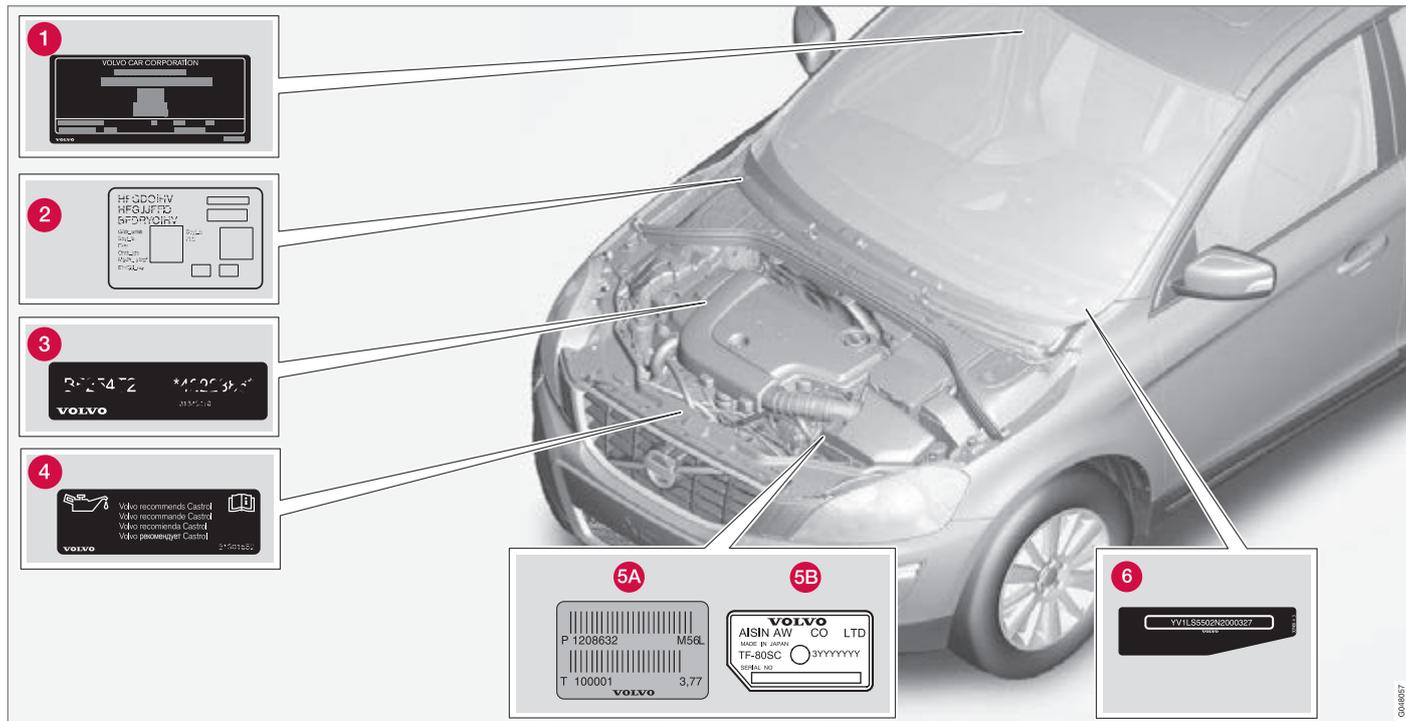

036857

Type designations

Knowing the car's type designation, vehicle identification and engine numbers can facilitate all contact with an authorised Volvo dealer regarding the car and when ordering spare parts and accessories.

- 1 Type designation, vehicle identification number, maximum permissible weights, codes for colour and upholstery and type approval number. The label is visible when the right rear door is opened.
- 2 Label for parking heater.
- 3 Engine code and engine serial number.
- 4 Label for engine oil.
- 5 Gearbox type designation and serial number.
 - A Manual gearbox
 - B Automatic gearbox
- 6 Car's identification number. (VIN Vehicle Identification Number)


Further information on the car is presented in the registration document.

i NOTE

The labels shown in the owner's manual are not provided as exact reproductions of those in the car. The purpose is to show their approximate appearance and location in the car. The information that applies to your car in particular is available on the label in question in your car.

Dimensions and weights

Dimensions

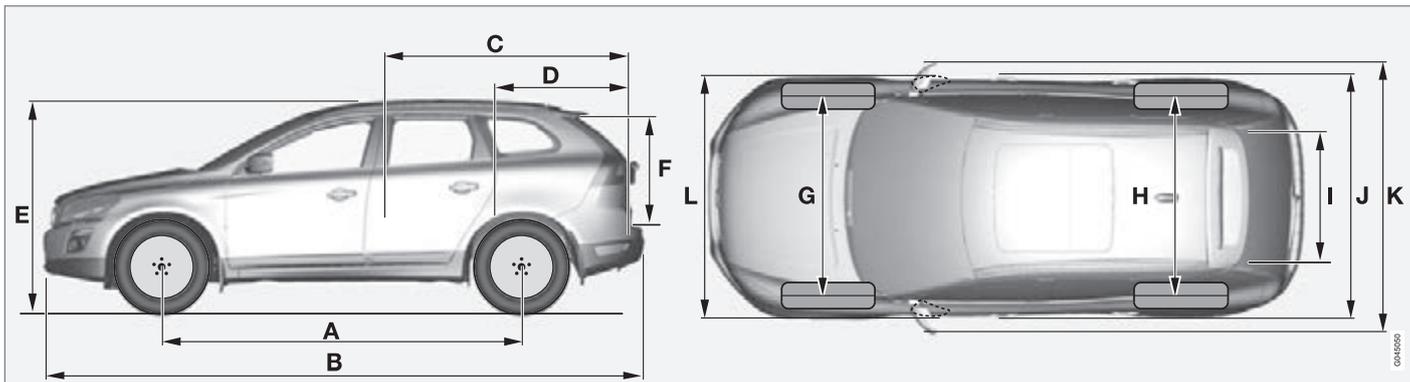

| | Dimensions | mm |
|---|--------------------------------------|------|
| A | Wheelbase | 2774 |
| B | Length | 4644 |
| C | Load length, floor, folded rear seat | 1789 |
| D | Load length, floor | 972 |
| E | Height | 1713 |
| F | Load height | 802 |
| G | Front track | 1632 |

| | Dimensions | mm |
|---|--|------|
| H | Rear track | 1586 |
| I | Load width, floor | 1090 |
| J | Width | 1891 |
| K | Width including door mirrors | 2120 |
| L | Width including folded-in door mirrors | 1891 |

Weights

Kerb weight includes the driver, the fuel tank 90% full and all fluids.

The weight of passengers and accessories, and towball load (when a trailer is hitched, see table page 399) influences the payload and is not included in the kerb weight.

Permitted max. load = Gross vehicle weight - Kerb weight.

Dimensions and weights

NOTE


The documented kerb weight applies to cars in the standard version - i.e. a car without extra equipment or accessories. This means that for every accessory added the loading capacity of the car is reduced correspondingly by the weight of the accessory.

Examples of accessories that reduce loading capacity are the Kinetic/Momentum/Summum equipment levels, as well as other accessories such as Towbar, Load carriers, Space box, Audio system, Auxiliary lamps, GPS, Fuel-driven heater, Safety grille, Carpets, Cargo cover, Power seats, etc.

Weighing the car is a certain way of ascertaining the kerb weight of your own particular car.

WARNING

The car's driving characteristics change depending on how heavily it is loaded and how the load is distributed.

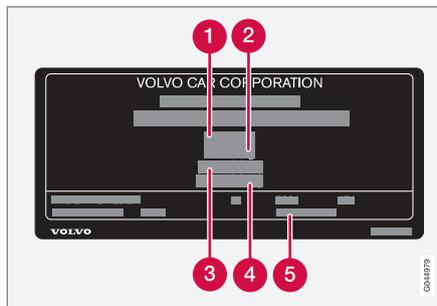

For information on decal location, see page 396.

- 1 Max. gross vehicle weight
- 2 Max. train weight (car+trailer)
- 3 Max. front axle load
- 4 Max. rear axle load
- 5 Equipment level

Max. load: See registration document.

Max. roof load: 100 kg.

Towing capacity and towball load**NOTE**

The use of a stabiliser hitch on the towing bracket is recommended for trailers heavier than 1800 kg.

Dimensions and weights

| Engine | Engine code ^A | Gearbox | Max. weight braked trailer (kg) | Max. towball load (kg) |
|---------|--------------------------|--------------------|---------------------------------|------------------------|
| All | All | All | 0–1200 | 50 |
| T5 | B4204T7 | Automatic, MPS6 | 1800 | 90 |
| 3.2 AWD | B6324S5 | Automatic, TF-80SC | 1800 | 90 |
| T6 AWD | B6304T4 | Automatic, TF-80SC | 2000 | 90 |
| D3 | D5204T7 | Manual, M66 | 1600 | 75 |
| D3 | D5204T7 | Automatic, TF-80SC | 1600 | 75 |
| D4 | D5204T3 | Manual, M66 | 1600 | 75 |
| D4 | D5204T3 | Automatic, TF-80SC | 1600 | 75 |
| D4 AWD | D5244T17 | Manual, M66 | 1800 | 90 |
| D4 AWD | D5244T17 | Automatic, TF-80SC | 2000 | 90 |
| D5 AWD | D5244T11 | Manual, M66 | 1800 | 90 |
| D5 AWD | D5244T15 | Automatic, TF-80SC | 2000 | 90 |

^A Engine code, component and serial number can be read on the engine, see page 396.

| Max. weight unbraked trailer (kg) | Max. towball load (kg) |
|-----------------------------------|------------------------|
| 750 | 50 |

Engine specifications

Engine specifications

 NOTE

Not all engines are available in all markets.

| Engine | Engine code ^A | Output (kW/rpm) | Output (hp/rpm) | Torque (Nm/rpm) | No. of cylinders | Bore (mm) | Stroke (mm) | Swept volume (litres) | Compression ratio |
|---------|--------------------------|-----------------|-----------------|-----------------|------------------|-----------|-------------|-----------------------|-------------------|
| T5 | B4204T7 | 177/5500 | 240/5500 | 320/1800-5000 | 4 | 87,5 | 83.1 | 1.999 | 10.0:1 |
| T6 AWD | B6304T4 | 224/5600 | 304/5600 | 440/2100-4200 | 6 | 82.0 | 93.2 | 2.953 | 9.3:1 |
| 3.2 AWD | B6324S5 | 179/6400 | 243/6400 | 320/3200 | 6 | 84 | 96 | 3.192 | 10.8:1 |
| D3 | D5204T7 | 100/3500 | 136/3500 | 350/1500-2250 | 5 | 81.0 | 77 | 1.984 | 16.5:1 |
| D4 | D5204T3 | 120/3500 | 163/3500 | 400/1500-2750 | 5 | 81.0 | 77 | 1.984 | 16.5:1 |
| D4 AWD | D5244T17 | 120/4000 | 163/4000 | 420/1500-2500 | 5 | 81.0 | 93.15 | 2.400 | 16.5:1 |
| D5 AWD | D5244T11 ^B | 158/4000 | 215/4000 | 420/1500-3250 | 5 | 81.0 | 93.15 | 2.400 | 16.5:1 |
| D5 AWD | D5244T15 ^C | 158/4000 | 215/4000 | 440/1500-3000 | 5 | 81.0 | 93.15 | 2.400 | 16.5:1 |

^A Engine code, component and serial number can be read on the engine, see page 396.

^B Manual gearbox

^C Automatic gearbox

Engine oil

Adverse driving conditions

Adverse driving conditions can lead to abnormally high oil temperature or oil consumption. Below are some examples of adverse driving conditions.

Check the oil level more frequently for long journeys:

- towing a caravan or trailer
- in mountainous regions
- at high speeds
- in temperatures colder than -30 °C or hotter than +40 °C

The above also apply to shorter driving distances at low temperatures.

Choose a fully synthetic engine oil for adverse driving conditions. It provides extra protection for the engine.

Volvo recommends Castrol oil products.



IMPORTANT

In order to fulfil the requirements for the engine's service intervals all engines are filled with a specially adapted synthetic engine oil at the factory. The choice of oil has been made very carefully with regard to service life, starting characteristics, fuel consumption and environmental impact.

An approved engine oil must be used in order that the recommended service intervals can be applied. Only use a prescribed grade of oil for both filling and oil change, otherwise you will risk affecting service life, starting characteristics, fuel consumption and environmental impact.

Volvo Car Corporation disclaims all warranty liability if engine oil of the prescribed grade and viscosity is not used.

Volvo recommends that oil changes are carried out at an authorised Volvo workshop.

Engine oil

Engine oil grade

| Engine | Engine code ^A | Recommended oil grade | Volume, incl. oil filter (litres) |
|---------|--------------------------|---|-----------------------------------|
| T6 AWD | B6304T4 | Oil grade: ACEA A5/B5 Viscosity: SAE 0W-30 | approx. 6.8 |
| 3.2 AWD | B6324S5 | | approx. 6.8 |
| D4 | D5204T3 | | approx. 5.9 |
| D3 | D5204T7 | | approx. 5.9 |
| D4 AWD | D5244T17 | | approx. 5.9 |
| D5 AWD | D5244T11 ^B | | approx. 5.9 |
| D5 AWD | D5244T15 ^C | | approx. 5.9 |
| T5 | B4204T7 | Oil grade: ACEA A5/B5 Viscosity: SAE 5W-30 When driving under adverse conditions, use ACEA A5/B5 SAE 0W-30. | approx. 5.4 |

^A Engine code, component and serial number can be read on the engine, see page 396.

^B Manual gearbox.

^C Automatic gearbox.

For filling engine oil, see page 356.

Fluids and lubricants

Coolant

Prescribed grade: Coolant recommended by Volvo mixed with 50% water¹, see the packaging.

| Engine ^A | | Volume (litres) |
|---------------------|----------|-----------------|
| 3.2 AWD | B6324S5 | 8.9 |
| T6 AWD | B6304T4 | |
| D4 | D5204T3 | |
| D3 | D5204T7 | |
| D4 AWD | D5244T17 | |
| D5 AWD | D5244T15 | |
| D5 AWD | D5244T11 | |
| T5 | B4204T7 | 10.5 |

^A Engine code, component and serial number can be read on the engine, see page 396.

Other fluids and lubricants

| Manual gearbox | Volume (litres) | Prescribed transmission fluid |
|----------------|-----------------|-------------------------------|
| M66 | 1.9 | BOT 350M3 |

¹ Water quality must fulfil the standard STD 1285.1.

Fluids and lubricants

| Automatic gearbox | Volume (litres) | Prescribed transmission fluid |
|-------------------|-----------------|-------------------------------|
| MPS6 | 7.3 | BOT 341 |
| TF-80SC | 7.0 | AW1 |

i NOTE

Under normal driving conditions, the gearbox oil does not need to be changed during its service life. However, it may be necessary under adverse driving conditions, see page 402.

| Fluid | System | Volume (litres) | Prescribed grade |
|----------------------|-------------------------------|-----------------|---|
| Brake fluid | Brake system | 0.6 | DOT 4 |
| Power steering fluid | Power steering | - | WSS M2C204-A2 or equivalent product. |
| Washer fluid | Cars with headlamp washing | 6.5 | Washer fluid recommended by Volvo - with frost protection during cold weather and below freezing point. |
| | Cars without headlamp washing | 4.5 | |
| Fuel | Petrol engine | approx. 70 | Petrol: see page 316 |
| | Diesel engine | approx. 70 | Diesel: see page 317 |

Fuel

CO₂ emissions and fuel consumption

| | | | | | | |
|---|---|---|---|--|---|---|
|  |  | |  | |  | |
| | CO ₂ |  | CO ₂ |  | CO ₂ |  |

Consumption and emission data are included in an enclosed supplement.

Explanation

| | |
|---|---------------------|
|  | gram/km |
|  | litre/100 km |
|  | Urban driving |
|  | Extra-urban driving |
|  | Combined driving |

NOTE

If the consumption and emission data is missing then it is included in the enclosed supplement.

Fuel consumption and emissions of carbon dioxide

Fuel consumption and emission values in the table above are based on specific EU cycles¹, that apply to cars with kerb weight in the basic version and without extra equipment. The car's weight may increase depending on equipment. This, as well as how heavily the car is loaded, increases fuel consumption and carbon dioxide emissions.

There are several reasons for increased fuel consumption compared with the table's values. Examples of this are:

- The driver's driving style.
- If the customer has specified wheels larger than those fitted as standard on the model's basic version, then resistance increases.
- High speed results in increased wind resistance.
- Fuel quality, road and traffic conditions, weather and the condition of the car.

Even a combination of the above-mentioned examples can result in significantly improved consumption. For further information, please refer to the regulations referred to ¹.

¹ Official fuel consumption figures are based on two standardised driving cycles in a laboratory environment ("EU driving cycles") all in accordance with EU Directive 80/1268/EEC (Euro 4), EU Regulation no 692/2008 and 715/2007 (Euro 5) and UN ECE Regulation no 101. The regulations cover the driving cycles for urban driving and extra-urban driving. - Urban driving - the measurement starts with cold starting the engine. The driving is simulated. - Extra-urban driving - the car is accelerated and braked at speeds between 0 and 120 km/h. The driving is simulated. - A car with D4 AWD or D5 AWD engine and 6-speed manual gearbox is started in 2nd gear. The combined driving value given in the table is a combination of urban driving and extra-urban driving, in accordance with applicable legislation. CO₂ emissions - the exhaust gases are collected in order to calculate the carbon dioxide emissions during the two driving cycles. These are then analysed and give the value for CO₂ emissions.

Fuel

Large deviations in fuel consumption may arise in a comparison with the EU driving cycles¹ which are used in the certification of the car and on which the consumption figures in the table are based.

To bear in mind

Tips that the driver can use in order to reduce consumption:

- Drive gently and avoid unnecessary acceleration as well as braking too hard.
- Drive with the correct air pressure in the tyres and check this regularly - select ECO tyre pressure for best results, see the tyre pressure table on page 408.
- Choice of tyres can affect fuel consumption - seek advice on suitable tyres from a dealer.

See further information and more advice on pages 11 and 312.

See page 316 for general information on fuel.

¹ Official fuel consumption figures are based on two standardised driving cycles in a laboratory environment ("EU driving cycles") all in accordance with EU Directive 80/1268/EEC (Euro 4), EU Regulation no 692/2008 and 715/2007 (Euro 5) and UN ECE Regulation no 101. The regulations cover the driving cycles for urban driving and extra-urban driving. - Urban driving - the measurement starts with cold starting the engine. The driving is simulated. - Extra-urban driving - the car is accelerated and braked at speeds between 0 and 120 km/h. The driving is simulated. - A car with D4 AWD or D5 AWD engine and 6-speed manual gearbox is started in 2nd gear. The combined driving value given in the table is a combination of urban driving and extra-urban driving, in accordance with applicable legislation. CO₂ emissions - the exhaust gases are collected in order to calculate the carbon dioxide emissions during the two driving cycles. These are then analysed and give the value for CO₂ emissions.

Wheel and tyres, dimensions and pressure

Approved tyre pressures

NOTE

The table with information about approved tyre pressures and speed rating is included in an enclosed supplement.

Electrical system

Electrical system

The car has a voltage-regulated AC alternator. The electrical system is single-pole and uses the chassis and engine casing as a conductor.

Starter battery capacity is dependent upon the equipment level in the car.

**IMPORTANT**

If the battery is replaced, replace it with a battery of the same cold start capacity and reserve capacity as the original (see the decal on the battery).

10

Battery

| Engine | Voltage (V) | Cold start capacity, CCA - Cold Cranking Amperes (A) | Reserve capacity (minutes) |
|--|-------------|---|-------------------------------|
| Petrol (Ethanol) | 12 | 520–800 | 100–160 |
| Diesel | 12 | 700–800 | 135–160 |
| Petrol/Diesel with Start/Stop function | 12 | 760 ^A | 135 |

^A Battery type AGM (Absorbed Glass Mat) must be used in cars with the Start/Stop function.

**NOTE**

- The starter battery's container size should be consistent with the original battery's dimensions.
- The starter battery's height is different depending on size.

Start/Stop*

For information on batteries in cars with Start/Stop, see page 374.


Type approval

Remote control key system

Lock system, standard

| Country | |
|-----------|---|
| EU, China |  <p>Continental FCC ID: KRB599462264 IC:2017-091462264 CCAB06LP1840T4 GET8777C0308R TRCPLP0200022 CMI ID:2008DJ1121 Complies with IDA Standards D801782 TA-2008/469 RLV8T09-248 Made in Cz</p> |

Keyless lock system (Keyless drive)
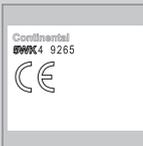
| Country | |
|---------|---|
| EU |  <p>Continental SWK 4 9265</p> |
| Korea |  <p>Continental SIE-SWK 49268 Made in Cz</p> |

| Country | |
|-----------|--|
| China |  <p>Continental SWK4 9269 FCC ID: KRB599462264 TRCPLP0200022 CMI ID:2008DJ1121 Complies with IDA Standards D801782 TA-2008/469 Made in Cz</p> |
| Hong Kong |  <p>Continental SWK4 9209</p> |

Radar system

| Country | |
|-----------|--|
| Singapore | <div style="border: 1px solid black; padding: 5px; display: inline-block;">Complies with IDA standards DA105753</div> IDA: Infocomm Development Authority of Singapore. |
| Brazil |  |
| Europe | <p>CE Delphi Electronics & Safety hereby declares that L2C0038TR and L2C0049TR are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This declaration of conformity may, if necessary, be consulted with Delphi Electronics & Safety / One Corporate Center / Kokomo, Indiana 46904-9005 USA.</p> |

Type approval

Bluetooth®


Declaration of Conformity (Declaration of Conformity)

| Country | |
|----------------------|---|
| Countries in the EU: |  <p>Exporting country: Japan Manufacturer: Alpine Electronics Inc. Type of equipment: Bluetooth® device For further information visit http://ec.europa.eu/enterprise/rte/faq.htm #informing</p> |

10

Type approval

Country

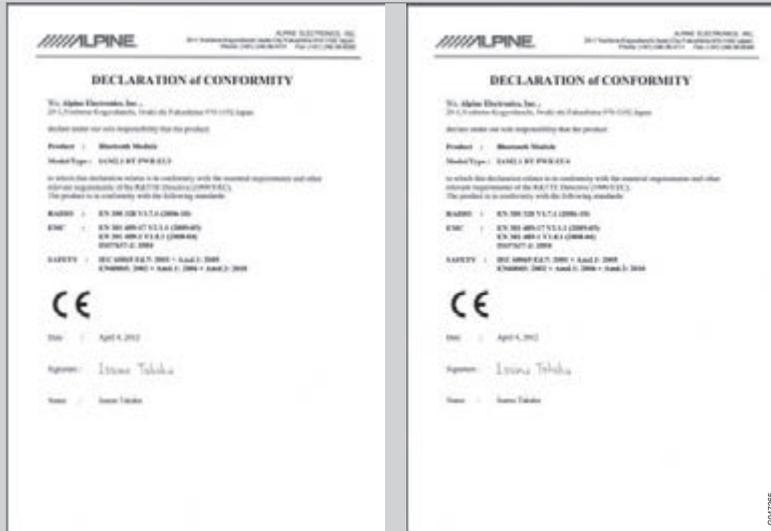

04N1205

| | |
|-----------------|---|
| Czech Republic: | Alpine Electronics, Inc. tímto prohlašuje, že tento Bluetooth® Module je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES. |
| Denmark: | Undertegnede Alpine Electronics, Inc. erklærer herved, at følgende udstyr Bluetooth® Module overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF. |
| Germany: | Hiermit erklart Alpine Electronics, Inc., dass sich das Gerät Bluetooth® Module in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet. |

Type approval

| Country | |
|--------------|--|
| Estonia: | Käesolevaga kinnitab Alpine Electronics, Inc. seadme Bluetooth ® Module vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele. |
| UK | Hereby, Alpine Electronics, Inc., declares that this Bluetooth ® Module is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. |
| Spain: | Por medio de la presente Alpine Electronics, Inc. declara que el Bluetooth ® Module cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE. |
| Greece: | ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Alpine Electronics, Inc. ΔΗΛΩΝΕΙ ΟΤΙ Bluetooth ® Module ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ. |
| France: | Par la présente Alpine Electronics, Inc. déclare que l'appareil Bluetooth ® Module est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE. |
| Italy: | Con la presente Alpine Electronics, Inc. dichiara che questo Bluetooth ® Module è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE. |
| Latvia: | Ar šo Alpine Electronics, Inc. deklarē, ka Bluetooth ® Module atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem. |
| Lithuania: | Šiuo Alpine Electronics, Inc. deklaruoja, kad šis Bluetooth ® Module atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas. |
| Netherlands: | Hierbij verklaart Alpine Electronics, Inc. dat het toestel Bluetooth ® Module in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG. |
| Malta: | Hawnhekk, Alpine Electronics, Inc., jiddikjara li dan Bluetooth ® Module jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC. |
| Hungary: | Alulírott, Alpine Electronics, Inc. nyilatkozom, hogy a Bluetooth ® Module megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak. |

Type approval

| Country | |
|-----------|--|
| Poland: | Niniejszym Alpine Electronics, Inc. oświadcza, że Bluetooth ® Module jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC. |
| Portugal: | Alpine Electronics, Inc. declara que este Bluetooth ® Module está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE. |
| Slovenia: | Alpine Electronics, Inc. izjavlja, da je ta Bluetooth ® Module v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES. |
| Slovakia: | Alpine Electronics, Inc. týmto vyhlasuje, že Bluetooth ® Module spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES. |
| Finland: | Alpine Electronics, Inc. vakuuttaa täten että Bluetooth ® Module tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen. |
| Sweden: | Härmed intygar Alpine Electronics, Inc. att denna Bluetooth ® Module står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG. |
| Iceland: | Alpine Electronics, Inc. hereby certifies that this Bluetooth ® Module conforms to the essential characteristic requirements and other relevant regulations of directive 1999/5/EC. |
| Norway: | Alpine Electronics, Inc. erklærer herved at utstyret Bluetooth ® Module er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF. |

Type approval

| Country | |
|---------|---|
| China: | <p>第十三条 进口和生产厂商在其产品的说明书或使用手册中，应刊印下述有关内容：</p> <ol style="list-style-type: none"> 1. 标明附件中所规定的技术指标和使用范围，说明所有控制、调整及开关等使用方法； <ul style="list-style-type: none"> ■ 使用频率：2.4 - 2.4835 GHz ■ 等效全向辐射功率 (EIRP)：天线增益 < 10dBi 时：≤100 mW 或 ≤20 dBm ① ■ 最大功率谱密度：天线增益 < 10dBi 时：≤20 dBm / MHz (EIRP) ① ■ 载频容限：20 ppm ■ 杂散发射 (辐射) 功率 (对应载波 ±2.5 倍信道带宽以外)： <ul style="list-style-type: none"> • ≤-36 dBm / 100 kHz (30 - 1000 MHz) • ≤-33 dBm / 100 kHz (2.4 - 2.4835 GHz) • ≤-40 dBm / 1 MHz (3.4 - 3.53 GHz) • ≤-40 dBm / 1 MHz (5.725 - 5.85 GHz) • ≤-30 dBm / 1 MHz (其它 1 - 12.75 GHz) 2. 不得擅自更改发射频率、加大发射功率 (包括额外加装射频功率放大器)，不得擅自外接天线或改用其它发射天线； 3. 使用时不得对各种合法的无线电通信业务产生有害干扰；一旦发现有干扰现象时，应立即停止使用，并采取措施消除干扰后方可继续使用； 4. 使用微功率无线电设备，必须忍受各种无线电业务的干扰或工业、科学及医疗应用设备的辐射干扰； 5. 不得在飞机和机场附近使用。 |

Type approval

| Country | |
|---------|---|
| Taiwan: | <p data-bbox="240 244 608 266">低效率電波輻射性電機管理辦法第十條</p> <p data-bbox="240 281 328 303">第十二條</p> <p data-bbox="240 318 1469 340">經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自 變更頻率、加大功率或變更原設計之特性及功能。</p> <p data-bbox="240 355 328 377">第十四條</p> <p data-bbox="240 392 1485 465">低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定 作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波 輻射性電機設備之干擾。</p> <div data-bbox="240 482 1002 624">The logo consists of a stylized graphic of four curved lines on the left, followed by the alphanumeric string "CCAB11LP4080T3" in a bold, sans-serif font.</div> <div data-bbox="240 647 1002 789">The logo consists of a stylized graphic of four curved lines on the left, followed by the alphanumeric string "CCAB11LP4070T0" in a bold, sans-serif font.</div> |

Type approval

Country

South
Korea:

제품 정보

Volvo Car Korea

신청자 코드: KCC-CMM-N25-IAM21L3, KCC-CMM-N25-IAM21L2 and KCC-CMM-N25-IAM21L1

제품 명: Bluetooth Audio Navigation Radio

모델 명: IAM2.1

산 날짜: March/2010

Alpine Electronics, Inc

Made in Japan

고객 정보

Volvo Car Korea

볼보자동차코리아

서울시 용산구 한남 2 동 726-173 볼보빌딩 4 층

볼보자동차 고객센터 1588-1777

<http://www.volvocars.com/kr>

사용자 주의사항

※당해 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다



Type approval

| Country | | | |
|--|--|--|--|
| The United Arab Emirates: | <table border="1"> <tr> <td data-bbox="244 249 416 389"> TRA REGISTERED No: ER0071020/11 DEALER No: DA0042125/10 </td> <td data-bbox="416 249 592 389"> TRA REGISTERED No: ER0071017/11 DEALER No: DA0042125/10 </td> </tr> </table> | TRA REGISTERED No: ER0071020/11 DEALER No: DA0042125/10 | TRA REGISTERED No: ER0071017/11 DEALER No: DA0042125/10 |
| TRA REGISTERED No: ER0071020/11 DEALER No: DA0042125/10 | TRA REGISTERED No: ER0071017/11 DEALER No: DA0042125/10 | | |
| South Africa: |  | | |
| Jamaica: | Approved for use in Jamaica SMA EI: IAM2.1 | | |
| Thailand: | This telecommunication equipment conforms to NTC technical requirement. | | |
| Oman | <table border="1"> <tr> <td data-bbox="244 680 395 753"> OMAN - TRA E/0261/11 D090258 </td> <td data-bbox="395 680 555 753"> OMAN - TRA E/0262/11 D090258 </td> </tr> </table> | OMAN - TRA E/0261/11 D090258 | OMAN - TRA E/0262/11 D090258 |
| OMAN - TRA E/0261/11 D090258 | OMAN - TRA E/0262/11 D090258 | | |

Licenses

Sensus software

This software uses parts of sources from clib2 and Prex Embedded Real-time OS - Source (Copyright (c) 1982, 1986, 1991, 1993, 1994), and Quercus Robusta (Copyright (c) 1990, 1993), The Regents of the University of California. All or some portions are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. Neither the name of the <ORGANIZATION> nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES,

INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This software is based in part on the work of the Independent JPEG Group.

This software uses parts of sources from "libtess". The Original Code is: OpenGL Sample Implementation, Version 1.2.1, released January 26, 2000, developed by Silicon Graphics, Inc. The Original Code is Copyright (c) 1991-2000 Silicon Graphics, Inc. Copyright in any portions created by third parties is as indicated elsewhere herein. All Rights Reserved. Copyright (C) [1991-2000] Silicon Graphics, Inc. All Rights Reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions: The above copyright notice including the dates of first publication and either this permission notice or a reference to <http://oss.sgi.com/projects/FreeB/> shall be included in all copies or substantial portions of the Software. THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL SILICON GRAPHICS, INC. BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE. Except as contained in this notice, the name of Silicon Graphics, Inc. shall not be used in advertising or otherwise

Licenses

to promote the sale, use or other dealings in this Software without prior written authorization from Silicon Graphics, Inc.

This software is based in parts on the work of the FreeType Team.

This software uses parts of SSLeay Library: Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com). All rights reserved

Combined Instrument Panel Software Open Source Software Notice

This product uses certain free / open source and other software originating from third parties, that is subject to the GNU General Public License version 2 and 3 (GPLv2/ GPLv3), GNU Lesser General Public License version 3 (LGPLv3), The FreeType Project License ("FreeType License") and other different and/or additional copyright licenses, disclaimers and notices. The links how to access the exact terms of GPLv2, GPLv3, LGPLv3, and the other open source software licenses, disclaimers, acknowledgements and notices are provided to you below. Please refer to the exact terms of the relevant License, regarding your rights under said licenses. Volvo Car Corporation (VCC) offers to provide the source code of said free/open source software to you for a charge covering the cost of performing such distribution, such

as the cost of media, shipping and handling, upon written request. Please contact your nearest Volvo Dealer.

This offer is valid for a period of at least three (3) years from the date of the distribution of this product by VCC / or for as long as VCC offers spare parts or customer support.

Portions of this product uses software copyrighted © v2.4.3/2010 The FreeTypeProject (www.freetype.org). All rights reserved.

This product includes software under following licenses:

GPL v2 : <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html>

- Linux kernel (merge between MontaVista 2.6.31 kernel and kernel from L2.6.31_MX51_ER_1007 BSP)
- uBoot (based on v2009.08)
- busybox (based on version 1.13.2)

GCC runtime library exception: <http://www.gnu.org/licenses/gcc-exception.html>

- libgcc_s.so.1

LGPL v3: <http://www.gnu.org/licenses/lgpl.html>

- Libc.so.6, libpthread.so.0, Librt.so.1

The FreeType Project License: <http://www.freetype.org/FTL.TXT>

- libfreetype.so.6 (version 2.4.3)

DivX®



DivX Certified® to play DivX® video. DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license. ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device

Licenses

setup menu. Go to <http://vod.divx.com> with this code to complete the registration process and learn more about DivX VOD. Covered by one or more of the following U.S. Patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274.

Symbols in the display

General

There are a variety of different symbols in the display in the car. The symbols are divided into warning, indicator and information symbols. Shown below are the most common symbols with their meanings and a reference to where in the manual further information can be found. For more information on symbols and text messages, see pages 75, 77 and 209.

 - Red warning symbol, illuminates when a fault has been indicated which could affect the safety and/or driveability of the car. An explanatory text is shown in the combined instrument panel at the same time.

 - Yellow information symbol, comes on and a text appears on the combined instrument panel when one of the car's systems does not behave as intended. The yellow symbol information can also illuminate in combination with other symbols.

Symbols in the display

Warning symbols in the combined instrument panel

| Symbol | Meaning | Page |
|---|---|---------------------|
|  | Low oil pressure | 77 |
|  | Parking brake | 77, 142, 144 |
|  | Parking brake applied, alternative symbol | 77 |
|  | Airbags - SRS | 19, 77 |
|  | Seatbelt reminder | 16, 77 |
|  | Alternator not charging | 77 |
|  | Fault in the brake system | 77, 139 |
|  | Warning, safety mode | 19, 30, 77, 78, 129 |

Control symbols in the combined instrument panel

| Symbol | Meaning | Page |
|---|--|-------------------|
|  | Fault in the ABL system* | 75, 95 |
|  | Emissions system | 75 |
|  | Fault in the ABS system | 75, 139 |
|  | Rear fog lamp on | 75, 96 |
|  | Stability system, DSTC, Hill descent control, Trailer stability assist | 75, 140, 153, 330 |
|  | Stability system, sport mode | 75, 153 |
|  | Engine preheater (diesel) | 75 |
|  | Low level in fuel tank | 75, 231 |
|  | Information, read display text | 75 |
|  | Main beam on | 75, 93 |

Symbols in the display

| Symbol | Meaning | Page |
|---|---------------------------------|---------|
|  | Left-hand direction indicators | 75 |
|  | Right-hand direction indicators | 75 |
|  | DRIVE - Start/Stop* | 75, 131 |
|  | Not used | - |

Information symbols in the combined instrument panel

| Symbol | Meaning | Page |
|---|--|----------|
|  | Cruise control*, Adaptive cruise control* | 157, 167 |
|  | Adaptive cruise control* | 161, 167 |
|  | Adaptive cruise control* | 161, 167 |
|  | Adaptive cruise control*, Distance Warning* (Distance Alert) | 162, 170 |

| Symbol | Meaning | Page |
|---|--|--------------------|
|  | Radar sensor* | 167, 172, 185 |
| - | - | - |
|  | Camera sensor*, Laser sensor* | 177, 185, 190, 193 |
|  | Auto Brake*, Distance Warning* (Distance Alert), City Safety™, Collision warning system* | 172, 177, 185 |
|  | ABL system* | 95 |
|  | Driver Alert System*, Time for a break | 188 |
|  | Driver Alert System*, Time for a break | 190 |
| (P)! | Parking brake | 144 |

| Symbol | Meaning | Page |
|---|---|----------|
|  | Rain sensor* | 100 |
|  | Active high beam, AHB (Active High Beam)* | 93 |
|  | Windscreen sensor* | 93 |
|  | Start/Stop* | 135 |
|  | Start/Stop* | 135 |
|  | Start/Stop* | 135 |
|  | Driver Alert System* | 190, 193 |
|  | Driver Alert System*, Lane Departure Warning* | 192 |

Symbols in the display

| Symbol | Meaning | Page |
|---|---|------|
|  | Driver Alert System*, Lane Departure Warning* | 193 |
|  | Recorded speed information* | 154 |
|  | Engine block heater and passenger compartment heater* | 231 |
|  | Activated timer* | 231 |
|  | Activated timer* | 231 |
|  | Low battery | 231 |
|  | Fuel filler flap, right-hand side | 315 |

Information symbols in the roof console display

| Symbol | Meaning | Page |
|---|-------------------------------------|--------|
|  | Seatbelt reminder | 17 |
|  | Airbag, passenger seat, activated | 22, 23 |
|  | Airbag, passenger seat, deactivated | 23 |

A

| | | | | | |
|--|-----|---|----------|--|----------|
| A/V-AUX input..... | 302 | Air conditioning system | | Audio system..... | 252 |
| ACC – Adaptive cruise control..... | 159 | repair..... | 361 | functions..... | 257 |
| Active Bending Lights (ABL)..... | 95 | Air distribution..... | 220, 229 | overview..... | 252 |
| Active chassis – FOUR-C..... | 244 | Air quality system IAQS | 228 | Audio volume | 253 |
| Active Xenon headlamps..... | 95 | Air vents..... | 221 | phone..... | 284 |
| Adapting driving characteristics..... | 244 | Alarm..... | 64 | phone/media player..... | 284 |
| Adaptive cruise control..... | 159 | alarm indicator..... | 64 | ring signal, phone..... | 284 |
| fault tracing..... | 167 | alarm signals..... | 65 | speed/noise compensation..... | 258 |
| radar sensor..... | 165 | arming..... | 65 | Auto | |
| Additional heater (Diesel)..... | 234 | checking the alarm..... | 49 | climate control settings..... | 225 |
| Adjusting headlamp pattern..... | 99 | deactivate..... | 65 | Automatic car washes..... | 387 |
| Adjusting the steering wheel..... | 88 | deactivating a triggered alarm..... | 65 | Automatic gearbox..... | 124 |
| Airbag | | reduced alarm level..... | 65 | manual gear positions (Geartronic).... | 125 |
| activating/deactivating, PACOS..... | 22 | Alcolock..... | 113 | towing and recovery..... | 331 |
| driver's and front passenger side..... | 20 | Allergy and asthma inducing substances. | 220 | trailer..... | 326 |
| key switch off..... | 22 | All-wheel drive, AWD..... | 137 | Automatic locking..... | 58 |
| AIRBAG | 20 | All Wheel Drive (AWD)..... | 137 | Automatic relocking..... | 57 |
| Airbag system | 19 | Approach light, duration..... | 48, 99 | Auxiliary heater..... | 234 |
| Air conditioning..... | 226 | Audio | | AUX input..... | 252, 275 |
| general..... | 219 | headphones socket..... | 256 | AWD, All-wheel drive..... | 137 |
| Air conditioning, AC..... | 226 | rear control panel..... | 256 | | |
| | | settings..... | 257, 258 | | |
| | | surround..... | 252, 258 | | |
| | | audio system | 252 | | |

B

| | | | | | |
|-----------------------------------|----------|-------------------------------------|----------|--|-----|
| Backrest..... | 83 | Brakes..... | 138 | safety grille..... | 323 |
| front seat, lowering..... | 83 | anti-lock braking system, ABS..... | 138 | safety net..... | 322 |
| Backrest rear seat, lowering..... | 86 | brake light..... | 96 | Cargo cover..... | 324 |
| Bag holder | 320 | brake system..... | 138 | Car upholstery..... | 389 |
| Battery..... | 371, 409 | electric parking brake..... | 142 | Car wash..... | 387 |
| headphones..... | 302 | Emergency Brake Assistance, EBA ... | 138 | Catalytic converter..... | 316 |
| maintenance..... | 371 | emergency brake lights..... | 96 | recovery..... | 332 |
| remote control | 299 | filling brake fluid..... | 360 | CD | 271 |
| remote control key/PCC..... | 52 | handbrake..... | 142 | Centre console..... | 211 |
| start assistance..... | 121 | symbols in the combined instrument | | Chassis settings..... | 244 |
| symbols on the battery..... | 372 | panel..... | 139 | Checking and topping up the coolant.... | 359 |
| warning symbols..... | 372 | Bulbs, see Lighting..... | 362 | Checking the engine oil level..... | 356 |
| Blind spot (BLIS)..... | 202 | [| | Children..... | 31 |
| BLIS..... | 201 | incoming..... | 283 | child safety locks..... | 38 |
| Bluetooth® | | operation..... | 283 | child seats and side airbags..... | 24 |
| handsfree | 281 | Camera sensor..... | 175, 184 | location in the car..... | 31 |
| media | 278 | Car care..... | 387 | safety..... | 31 |
| microphone off | 284 | Car care, leather upholstery..... | 389 | Child safety locks..... | 63 |
| streaming audio | 278 | Cargo area | | Child seat..... | 31 |
| transfer call to mobile | 284 | cargo cover..... | 324 | Child seats..... | 31 |
| Bonnet, opening..... | 355 | lighting..... | 98 | integrated two-stage booster cushion. | 36 |
| Brake and clutch fluid..... | 360 | loading..... | 319 | ISOFIX fixture system for child seats... | 39 |
| Brake light..... | 96 | mounting points..... | 320 | recommended..... | 32 |

- size classes for child seats with the
ISOFIX fixture system..... 39
upper mounting points for child seats.. 42
- Cigarette lighter socket..... 246
- City Safety™..... 173
- Cleaning
automatic car washes..... 387
car wash..... 387
rims..... 388
seatbelts..... 390
upholstery..... 389
- Clean Zone Interior Package (CZIP)..... 220
- Climate control..... 219
general..... 219
sensors..... 219
- Clock, setting..... 79
- CO₂ emissions 406
- Collision..... 30
- Collision warning..... 179, 180
- Collision warning system
radar sensor..... 165, 174, 179
- Collision Warning with Auto Brake*..... 179
- Colour code, paint..... 391
- Combined instrument panel..... 71, 208
- Comfort inside the passenger compart-
ment..... 245
- Compass..... 108
calibration..... 108
- Condensation in headlamps..... 387
- controls
centre console 253
- Controls
centre console..... 211
- Controls, lights..... 90
- Control symbols..... 75
- Cooling system..... 312
- Cornering lights..... 95
- Corner Traction Control 152
- Crash, see Collision..... 30
- Cruise control..... 157
- Curtain
panorama roof..... 110
- CZIP (Clear Zone Interior Package)..... 220
- D**
- DAB Radio..... 268
- Daytime running lights..... 92
- Deadlock
deactivation..... 61
temporary deactivation..... 61
- Deadlocks..... 61
- Defroster..... 226
- Diesel..... 317
- Diesel particle filter..... 318
- Dipstick, electronic..... 357
- Direction indicators..... 96
- Disengaging the gear selector inhibitor... 127
- Display lighting..... 91
- Distance Warning..... 170
- Dolby Surround Pro Logic II..... 252
- Door mirrors..... 105
automatic dimming..... 106
- Driver Alert Control..... 188
- Driver Alert System..... 187
- Driving..... 312
cooling system..... 312
with the tailgate open..... 313
with trailer..... 325
- Driving in water..... 312

| | | | |
|---|----------|--|--|
| Driving with a trailer | | | |
| towball load..... | 398 | | |
| towing capacity..... | 398 | | |
| DSTC, see also Stability control system.. | 153 | | |
| DVD | 271 | | |
| E | | | |
| ECC, electronic climate control..... | 222 | | |
| EcoGuide..... | 73 | | |
| Economical driving..... | 312 | | |
| ECO pressure..... | 344, 408 | | |
| Eco Start/Stop DRIVE..... | 131 | | |
| Electrical socket..... | 247 | | |
| cargo area..... | 320 | | |
| front seat..... | 247 | | |
| Electric parking brake..... | 142 | | |
| low battery voltage..... | 142 | | |
| releasing automatically..... | 143 | | |
| releasing manually..... | 143 | | |
| Emergency equipment | | | |
| warning triangle..... | 345 | | |
| Emergency puncture repair..... | 346 | | |
| Emissions of carbon dioxide..... | 318 | | |
| Engine | | | |
| overheating..... | 325 | | |
| starting..... | 117 | | |
| Engine block heater | | | |
| fuel-driven..... | 230 | | |
| Engine braking, automatic..... | 140 | | |
| Engine compartment | | | |
| coolant..... | 359 | | |
| oil..... | 356 | | |
| overview..... | 355 | | |
| power steering fluid..... | 360 | | |
| Engine drag control | 152 | | |
| Engine oil..... | 356, 402 | | |
| adverse driving conditions..... | 402 | | |
| capacities..... | 402 | | |
| filter..... | 356 | | |
| oil grade..... | 402 | | |
| Engine specifications..... | 401 | | |
| Environmental labelling, FSC, owner's manual..... | 11 | | |
| Error messages | | | |
| Adaptive Cruise Control..... | 167 | | |
| Driver Alert Control..... | 190 | | |
| Lane Departure Warning..... | 193 | | |
| see Messages and symbols..... | 144, 167 | | |
| Error messages in BLIS..... | 204 | | |
| Engine | | | |
| overheating..... | 325 | | |
| starting..... | 117 | | |
| Engine block heater | | | |
| fuel-driven..... | 230 | | |
| Engine braking, automatic..... | 140 | | |
| Engine compartment | | | |
| coolant..... | 359 | | |
| oil..... | 356 | | |
| overview..... | 355 | | |
| power steering fluid..... | 360 | | |
| Engine drag control | 152 | | |
| Engine oil..... | 356, 402 | | |
| adverse driving conditions..... | 402 | | |
| capacities..... | 402 | | |
| filter..... | 356 | | |
| oil grade..... | 402 | | |
| Engine specifications..... | 401 | | |
| Environmental labelling, FSC, owner's manual..... | 11 | | |
| Error messages | | | |
| Adaptive Cruise Control..... | 167 | | |
| Driver Alert Control..... | 190 | | |
| Lane Departure Warning..... | 193 | | |
| see Messages and symbols..... | 144, 167 | | |
| Error messages in BLIS..... | 204 | | |
| Error messages in Distance Alert..... | 172 | | |
| ERS - Remote Start..... | 118 | | |
| ETC, electronic temperature control | 223 | | |
| Expectant mothers, seatbelt..... | 17 | | |
| External dimensions..... | 398 | | |
| F | | | |
| Fan..... | 225 | | |
| Fault tracing for the camera sensor. | 175, 184 | | |
| First aid equipment..... | 345 | | |
| First aid kit | 345 | | |
| Fluids, capacities..... | 404 | | |
| Fluids and oils..... | 404 | | |
| Fog lamps | | | |
| rear..... | 96 | | |
| Foot brake..... | 138 | | |
| FOUR-C – Active chassis..... | 244 | | |
| FSC, environmental labelling..... | 11 | | |
| Fuel..... | 316 | | |
| fuel consumption..... | 406 | | |
| fuel economy..... | 344 | | |
| fuel filter..... | 318 | | |

| | |
|--|----------|
| Fuse box..... | 376 |
| glovebox..... | 380, 382 |
| Fuses..... | 376 |
| box in cargo area..... | 384 |
| changing..... | 376 |
| cold zone..... | 385 |
| general..... | 376 |
| relay/fuse box in engine compartment..... | 377 |
| Start/Stop..... | 385 |
| Fuse table | |
| fuses in engine compartment..... | 378 |

G

| | |
|---|-----|
| Gearbox..... | 123 |
| automatic..... | 124 |
| manual..... | 123 |
| Gear selector inhibitor..... | 127 |
| Gear selector inhibitor, mechanical disen- gagement..... | 127 |
| Geartronic..... | 125 |
| Glass | |
| laminated/reinforced..... | 103 |
| Global opening..... | 219 |

| | |
|-------------------------------------|-----|
| Glovebox..... | 246 |
| locking..... | 58 |
| Gross vehicle weight..... | 398 |
| GSI - Gear selector assistance..... | 124 |

H

| | |
|----------------------------------|---------------|
| Handbrake..... | 142 |
| Hazard warning flashers..... | 96 |
| HDC..... | 140 |
| Headlamp levelling..... | 91 |
| Headlamp pattern, adjusting..... | 99 |
| Headlamps..... | 362 |
| Headphones | |
| battery replacement..... | 302 |
| wireless..... | 301 |
| Headphones socket..... | 256, 300, 302 |
| Head restraint | |
| centre seat, rear..... | 85 |
| lowering..... | 86, 87 |
| Heated washer nozzles..... | 101 |
| Heating..... | 226 |
| rearview and door mirrors..... | 106 |

| | |
|-------------------------------------|-----|
| rear window..... | 106 |
| seats..... | 223 |
| Heat-reflecting windscreen..... | 103 |
| High engine temperature..... | 325 |
| High-pressure headlamp washing..... | 101 |
| Hill Descent Control..... | 140 |
| HomeLink® | 146 |
| Home safe lighting..... | 99 |
| Hoot..... | 88 |
| Horn..... | 88 |

I

| | |
|---|-----|
| IAQS – Interior Air Quality System..... | 220 |
| IC – Inflatable Curtain..... | 25 |
| Ignition keys..... | 81 |
| Ignition positions..... | 81 |
| Immobiliser..... | 47 |
| Indicator lamps, PCC..... | 49 |
| Inflatable curtain..... | 25 |
| Information button, PCC..... | 49 |
| Information display..... | 71 |

| | |
|--|-----|
| Infotainment system | 252 |
| menus | 255 |
| overview | 252 |
| source buttons | 253 |
| voice control..... | 290 |
| Inlaid mats..... | 247 |
| Instrument lighting, see Lighting..... | 91 |
| Instrument overview | |
| left-hand drive..... | 68 |
| right-hand drive..... | 70 |
| Instruments and controls..... | 68 |
| Interior lighting, see Lighting..... | 97 |
| Interior rearview mirror..... | 107 |
| automatic dimming..... | 107 |
| Intermittent wiping..... | 100 |
| iPod®, connection..... | 275 |

J

| | |
|-------------------------|-----|
| Jack..... | 341 |
| Journey statistics..... | 243 |

K

| | |
|------------------------------------|-------------------|
| Kerb weight..... | 398 |
| Key..... | 46 |
| Key blade..... | 50 |
| Keyless drive..... | 54, 117 |
| Keyless start (keyless drive)..... | 54, 117 |
| Keypad in the steering wheel..... | 88, 157, 212, 253 |
| Key positions..... | 81 |

L

| | |
|--|--------|
| Labels..... | 396 |
| Laminated glass..... | 103 |
| Lamps, see Lighting..... | 362 |
| Lane Departure Control..... | 192 |
| Laser sensor..... | 176 |
| Leather upholstery, washing instructions | 389 |
| Lighting..... | 362 |
| Active Xenon headlamps..... | 95 |
| approach light, duration..... | 48, 99 |
| automatic lighting, passenger compartment..... | 98 |

| | |
|-------------------------------|-----|
| bulbs, specifications..... | 367 |
| controls..... | 97 |
| cornering lights..... | 95 |
| daytime running lights..... | 92 |
| display lighting..... | 91 |
| headlamp levelling..... | 91 |
| home safe lighting..... | 99 |
| in passenger compartment..... | 97 |
| instrument lighting..... | 91 |
| main/dipped beam..... | 92 |
| position/parking lamps..... | 91 |
| rear fog lamp..... | 96 |
| tunnel detection..... | 92 |

| | |
|---------------------------------|-----|
| Lighting, bulb replacement..... | 362 |
| cargo area..... | 366 |
| dipped beam halogen..... | 364 |
| direction indicators..... | 365 |
| main beam, Xenon lamp..... | 364 |
| main beam halogen..... | 364 |
| number plate lighting..... | 366 |
| vanity mirror..... | 367 |
| Light switches..... | 90 |

Loading

| | |
|----------------------|-----|
| cargo area..... | 319 |
| general..... | 319 |
| mounting points..... | 320 |
| roof load..... | 319 |

| | | | |
|-----------------------------------|-----|---------------------------------|----------|
| Paddle on the steering wheel..... | 88 | PCC – Personal Car Communicator | |
| Paintwork | | functions..... | 47 |
| colour code..... | 391 | range..... | 48, 49 |
| damage and touch-up..... | 391 | Pedestrian protection..... | 179 |
| Panel lighting..... | 91 | Petrol grade..... | 316 |
| Panic function..... | 48 | Phone | |
| Panorama roof | | connect..... | 282 |
| curtain..... | 110 | handsfree..... | 281 |
| opening and closing..... | 110 | incoming calls..... | 283 |
| ventilation position..... | 111 | making calls..... | 283 |
| Park assist camera..... | 198 | phone book..... | 285 |
| Parking assistance..... | 195 | phone book, shortcut..... | 285 |
| parking assistance sensors..... | 197 | receiving a call..... | 284 |
| Parking brake..... | 142 | register phone..... | 282 |
| Parking heater | | voice control..... | 290 |
| battery and fuel..... | 230 | Polishing..... | 388 |
| general..... | 230 | Position/parking lamps..... | 91 |
| parking on a hill..... | 230 | Power guide..... | 73 |
| time setting..... | 233 | Power panorama roof..... | 110 |
| Passenger compartment..... | 245 | Power seat..... | 84 |
| Passenger compartment filter..... | 219 | Powershift gearbox..... | 128, 331 |
| Passenger compartment heater | | Power windows..... | 103 |
| fuel-driven..... | 230 | Puncture, see Tyres..... | 341 |

| | |
|----------------------|-----|
| Q | |
| Queue Assist..... | 164 |
| Queue Assistant..... | 164 |

| | |
|-------------------------------|-----|
| R | |
| Radar sensor..... | 159 |
| limitations..... | 165 |
| Radio | 264 |
| AM/FM | 264 |
| DAB | 268 |
| Rain sensor..... | 100 |
| Rear bulbs | |
| location..... | 365 |
| Rear control panel | |
| audio system..... | 256 |
| Rear-seat entertainment..... | 300 |
| Rear TV screens..... | 300 |
| Rearview and door mirrors | |
| compass..... | 108 |
| door..... | 105 |
| electrically retractable..... | 106 |
| heating..... | 106 |
| interior..... | 107 |

- Stains..... 389
- Start assistance..... 121
- Steering force, speed related..... 244
- Steering force level, see Steering force... 244
- Steering lock..... 118
- Steering wheel..... 88
- keypad..... 88, 157, 212, 253
- keypad, adaptive cruise control..... 161
- paddle..... 88
- steering wheel adjustment..... 88
- Stone chips and scratches..... 391
- Storage spaces in the passenger compartment..... 245
- Surround..... 252, 258
- Symbols..... 153
- indicator symbols..... 75
- warning symbols..... 75
- Symbols and messages
- Adaptive Cruise Control..... 167
- Collision Warning with Auto
- Brake..... 177, 185
- Distance Alert..... 172
- Driver Alert Control..... 190
- Lane Departure Warning..... 193
- T**
-
- Tailgate..... 59
- locking/unlocking..... 58
- open..... 60
- Temperature
- actual temperature..... 219
- Temperature control..... 226
- Timer..... 227
- Tools..... 341
- Total airing function..... 58, 219
- Towbar
- detachable, attachment 328
- detachable, removal 329
- Towbar, see Towing equipment..... 326
- Towing..... 331
- towing eye..... 332
- Towing capacity..... 398
- Towing equipment..... 326
- specifications..... 327
- Towing eye..... 332
- Trailer..... 325
- cable..... 325
- driving with a trailer..... 325
- snaking..... 330
- Trailer stability assist 152
- Trailer Stability Assist..... 330
- Transmission..... 123
- Transponder..... 103
- Trip computer..... 236
- Trip meter..... 78
- Trip meter, resetting..... 238, 241, 242
- Troubleshooting
- Adaptive Cruise Control..... 167
- TSA - trailer stability assist 152, 330
- Tunnel detection..... 92
- TV..... 294
- Type approval, remote control key system..... 410
- Type designation..... 396
- Tyres
- direction of rotation..... 336
- driving characteristics..... 336
- maintenance..... 336
- pressure..... 344, 408
- puncture repair..... 346
- specifications..... 339, 408
- speed ratings..... 339
- tread wear indicators..... 337
- winter tyres..... 338

U

Unlocking

| | |
|-----------------------|-----|
| from the inside..... | 57 |
| from the outside..... | 57 |
| USB, connection..... | 275 |

V

| | |
|----------------------------------|---------|
| Vanity mirror..... | 98, 247 |
| Ventilation..... | 220 |
| Vibration damper..... | 326 |
| Voice control, mobile phone..... | 290 |
| Volvo Sensus..... | 80 |

W

Warning lamp

| | |
|---|-----|
| adaptive cruise control..... | 159 |
| collision warning system..... | 181 |
| stability and traction control system.. | 152 |
| Warning lamps | |
| airbags SRS..... | 77 |
| alternator not charging..... | 77 |
| fault in brake system..... | 77 |

| | |
|----------------------------|----|
| low oil pressure..... | 77 |
| parking brake applied..... | 77 |
| seatbelt reminder..... | 77 |
| warning..... | 77 |

Warning sound

| | |
|-------------------------------|-----|
| collision warning system..... | 181 |
|-------------------------------|-----|

| | |
|------------------------------------|----|
| Warning symbol, airbag system..... | 19 |
|------------------------------------|----|

| | |
|----------------------|----|
| Warning symbols..... | 75 |
|----------------------|----|

| | |
|-----------------------|-----|
| Warning triangle..... | 345 |
|-----------------------|-----|

| | |
|----------------------------|-----|
| Washer fluid, filling..... | 369 |
|----------------------------|-----|

| | |
|-----------------------------|-----|
| Washer nozzles, heated..... | 101 |
|-----------------------------|-----|

Washers

| | |
|----------------------------|-----|
| rear window..... | 101 |
| washer fluid, filling..... | 369 |
| windscreen..... | 101 |

| | |
|---------------------------------------|-----|
| Water and dirt-repellent coating..... | 103 |
|---------------------------------------|-----|

| | |
|--|-----|
| Water-repellent surface, cleaning..... | 388 |
|--|-----|

| | |
|-------------|-----|
| Waxing..... | 388 |
|-------------|-----|

Weights

| | |
|------------------|-----|
| kerb weight..... | 398 |
|------------------|-----|

Wheels

| | |
|-------------------|-----|
| changing..... | 341 |
| installation..... | 342 |
| rims..... | 337 |

| | |
|------------------|-----|
| snow chains..... | 339 |
| spare wheel..... | 341 |

| | |
|-----------------------|-----|
| Wheels and tyres..... | 336 |
|-----------------------|-----|

| | |
|-----------------------------|----|
| Whiplash injury, WHIPS..... | 26 |
|-----------------------------|----|

WHIPS

| | |
|---------------------------------|----|
| child seat/booster cushion..... | 26 |
| whiplash injury..... | 26 |

| | |
|---|-----|
| Windows, rearview and door mirrors..... | 103 |
|---|-----|

Windscreen

| | |
|--------------|----------|
| Heating..... | 106, 226 |
|--------------|----------|

| | |
|-------------------------|-----|
| Windscreen washing..... | 101 |
|-------------------------|-----|

| | |
|------------------------|-----|
| Windscreen wipers..... | 100 |
|------------------------|-----|

| | |
|------------------|-----|
| rain sensor..... | 100 |
|------------------|-----|

| | |
|---------------------|-----|
| Winter driving..... | 313 |
|---------------------|-----|

| | |
|-------------------|-----|
| Winter tyres..... | 338 |
|-------------------|-----|

| | |
|-------------------|-----|
| Wiper blades..... | 368 |
|-------------------|-----|

| | |
|---------------|-----|
| changing..... | 368 |
|---------------|-----|

| | |
|---------------|-----|
| cleaning..... | 369 |
|---------------|-----|

| | |
|-----------------------------|-----|
| replacing, rear window..... | 369 |
|-----------------------------|-----|

| | |
|-----------------------|-----|
| service position..... | 368 |
|-----------------------|-----|

| | |
|-------------------------|-----|
| Wipers and washing..... | 100 |
|-------------------------|-----|

| | |
|--------------------------|-----|
| Wireless headphones..... | 301 |
|--------------------------|-----|

